

ご使用前に、必ず「安全上の注意」、「取扱説明書」をよくお読みの上、ディスプレイを安全に正しくお取り扱いください。

取扱説明書とソフトウェアをダウンロードしてください

1. Web ページにアクセスしてください。


<http://www.sii-ps.com/dspa01/>




2. 取扱説明書をダウンロードして必ずお読みください。
3. 上記 Web ページにて各種ソフトウェアをダウンロードできます。

ディスプレイをプリンタに接続して使用する場合（一体型）

1. ディスプレイとプリンタのネジ穴位置をあわせ、4本のディスプレイ取り付けねじでしっかりと固定してください。

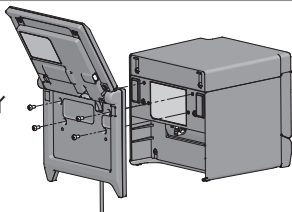

2. USB ケーブルをプリンタ（背面のUSB ホスト用コネクタ）に接続してください。

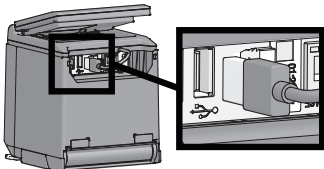


ディスプレイを独立して使用する場合（独立型）

ディスプレイを独立して置く場合は、表示向きを変更する必要があります。

1. USB ケーブルをプリンタまたはホスト装置に接続して、プリンタまたはホスト装置の電源をオンにしてください。
2. 図の矢印で示す切替スイッチを1秒以上押して、機能設定操作表示に切り替えてください。

縦置き 横置き




“—” マークの移動：
切替スイッチを1秒未満押してください。
設定の決定・保存：
切替スイッチを1秒以上押してください。

3. 設置姿勢により、以下のように設定してください。

設置姿勢	設定項目	設定
縦置き	Display Direction / 表示向き選択	No Rotate / 回転なし
	Guide Display / ガイド表示選択	No Rotate / 回転なし
横置き	Display Direction / 表示向き選択	Rotate 180deg. / 180度回転
	Guide Display / ガイド表示選択	Rotate 180deg. / 180度回転





プリンタエラーの内容表示方法

1. 図の矢印で示す切替スイッチを1秒未満押してください。プリンタエラーの内容や解除方法を表示するガイド表示に切り替わります。プリンタエラー解除後は自動で表示は戻ります。
2. ガイド表示は、ディスプレイをプリンタに接続して使用する場合にのみ表示されます。

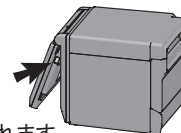

ディスプレイのUSB ケーブルを市販のケーブルに変更する場合

1. USB ケーブルを USB ケーブル這い回し用溝から矢印方向に引き出し、ディスプレイを裏返してください。
2. LCD ユニッツを開いてください。
3. ケーブルカバー取り外し用ノブを a の矢印方向に押してから、b の矢印方向に上げてケーブルカバーを外してください。
4. USB ケーブルのプラグを USB コネクタから抜いてください。
5. USB ケーブルを USB ケーブル通し用穴から抜いてください。

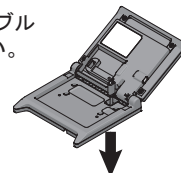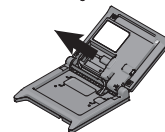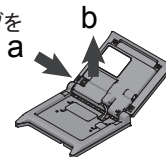

6. 変更する USB ケーブルを取り付けてください。取り付け方法は手順の5から手順の1へ、取り外しとは逆の手順を実施してください。

Read through the Safety precautions and the User's guide carefully before using Display, and handle it safely and properly.

Download User's guide and software

1. Visit our web site.


<http://www.sii-ps.com/dspa01/>




2. Download the User's guide and be sure to read it.
3. Appropriate software can be downloaded from the above web site.

When Display is used by connecting with the printer (Integrated type)

1. Match the screw holes on Display and the printer, and tighten them with 4 Display attachment screws.

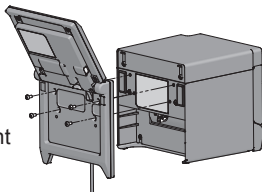


2. Connect the USB cable to the printer (the USB host connector on the back).

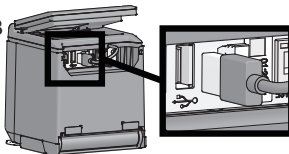

When Display is used alone (Stand-alone type)

It is need to change the display orientation when Display is placed alone.

1. Connect the USB cable to the printer or the host device, and turn on the printer or the host device.
2. Press the switch indicated by the arrow in the figure for 1 second or more, and change to the function setting operation display.

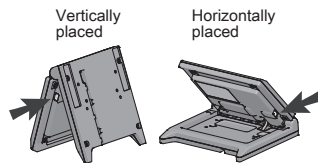

Movement of "→" mark:

Press the switch for less than 1 second.

Determination and save of settings:


Press the switch for 1 second or more.

3. Set as follows according to the installation type.

Installation Type	Setting Items	Setting
Vertically Placed	Display Direction / 表示向き選択	No Rotate / 回転なし
	Guide Display / ガイド表示選択	No Rotate / 回転なし
Horizontally Placed	Display Direction / 表示向き選択	Rotate 180deg. / 180度回転
	Guide Display / ガイド表示選択	Rotate 180deg. / 180度回転





Display method of printer error contents

1. Press the switch indicated by the arrow for less than 1 second.
The screen is changed to the guide display that indicates the printer error contents and error clearing method.
After the printer error is cleared, the previous screen is displayed automatically.
2. The guide display is shown only when Display is used by connecting with the printer.

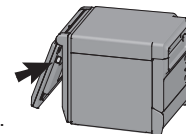

When the USB cable of Display is exchanged to commercially available cable

1. Pull out the USB cable from the USB cable wiring groove in the direction of the arrow, and turn over Display.
2. Open the LCD unit.
3. Push the cable cover removal knob in the direction of a, then raise it in the direction of b, and remove the cable cover.
4. Unplug the USB cable plug from the USB connector.
5. Remove the USB cable from the USB cable through hole.

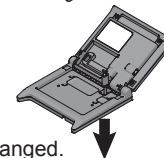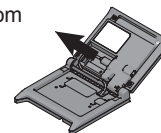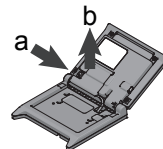

6. Attach the USB cable to be changed.
For the attachment method, follow the procedure in the reverse order of removal (from step 5 to step 1).