



SII OPOS

Application Programmer's Guide

Rev.01

[Products]

RP-F10 Series

RP-G10 Series

RP-E10 Series

Seiko Instruments Inc.


Copyright© 2024 by Seiko Instruments Inc.
All rights reserved.

Microsoft® and Windows® are registered trademarks of Microsoft Corporation in the U.S., Japan, and other countries.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

Seiko Instruments Inc. (hereinafter referred to as "SII") has prepared this manual for use by SII personnel, licensees, and customers. The information contained herein is the property of SII and shall not be reproduced in whole or in part without the prior written approval of SII.

SII reserves the right to make changes without notice to the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical, arithmetic, or listing errors.

SII  is a trademark of Seiko Instruments Inc.

Introduction

This manual describes "SII OPOS" (hereinafter referred to as the "software") provided by Seiko Instruments Inc. (hereinafter referred to as "SII").

This software is OpenPOS control based on UnifiedPOS Retail Peripheral Architecture Version 1.14.1 for controlling printers, cash drawers and scanners (barcodes) connected to the printers.

Target Products

This section lists the products supported by the software.

	Device Name	Description in This Manual
POSPrinter	RP-F10/G10 RP-E10	Printer
CashDrawer	RP-F10/G10_x ^{*1} RP-E10_x	Drawer
Scanner	RP-F10	Scanner

*1: The device name is automatically set from the selected printer.

See "UnifiedPOS Retail Peripheral Architecture Version 1.14.1" (hereinafter referred to as "UPOS V 1.14.1") before using this software.

Notation in This Manual

The notation in this manual is described.

Operation and Display

In principle, this manual is written on the basis of the following conditions:

- Screenshots and display layouts of Windows 10
- Operating instructions with a mouse and a keyboard

Terms

The terms used in this manual are defined as below.

Definition	Description
UPOS V1.14.1	"UnifiedPOS Retail Peripheral Architecture Version 1.14.1"
OPOS specification	Specification of the POS device interface defined in UPOS V1.14.1.
OPOS Control	The device driver which conforms to the ActiveX Control and provides the function to easily integrate the POS device (POS peripheral equipment) into the POS system built on Windows. The OPOS Control described in this manual supports the API defined in the OPOS specification.
Device class	A category of POS devices that share a set of properties, methods, and events defined in the OPOS specification. In this manual, the device class of POS printer, cash drawer and scanner is used.
Device name	Name for identifying the POS device targeted for control which is specified when the OPOS Control is used. It is impossible to create the duplicated device name in the same device class.
Configuration program	The program that executes addition and setting change of devices for PosPrinter and CashDrawer provided by this software. When installing this software, it will be installed as [SIIOPOSSettingUtility] on the computer.
Logical device name	Alias of device name. Arbitrary name which is set in the configuration program.
Control Object	Provides a set of properties, methods, and events to an application for each device class.
Service Object	This is called by the Control Object to execute the OPOS prescribed function for each device.
POS Printer Control	OPOS Control of the POS Printer device class. Controlled device is the printer.
Cash Drawer Control	OPOS Control of the Cash Drawer device class. Controlled device is the cash drawer which is connected to the printer.
Scanner Control	OPOS Control of the Scanner device class. Controlled device is the barcode scanner which is connected to the printer.
Default	The value immediately after satisfying the availability condition.

Definition	Description
Line spacing	The height of each print line (total value of the printed line height and the whitespace between each pair of lines).
Technical Reference	Technical Reference shown as follows: <ul style="list-style-type: none"> · RP-F10 SERIES THERMAL PRINTER TECHNICAL REFERENCE · RP-G10 SERIES THERMAL PRINTER TECHNICAL REFERENCE · RP-E10 SERIES THERMAL PRINTER TECHNICAL REFERENCE
User's Guide	User's Guide shown as follows: <ul style="list-style-type: none"> · RP-F10 SERIES Thermal Printer USER'S GUIDE · RP-G10 SERIES Thermal Printer USER'S GUIDE · RP-E10 SERIES Thermal Printer USER'S GUIDE
Printer command	Command for controlling the printer described in "Technical Reference".

Table of Contents

Chapter 1 Overview 1-1

1.1	Configuratioin.....	1-2
1.1.1	Structural Diagram.....	1-2
1.2	Operating Environment	1-3
1.2.1	System Environment.....	1-3
1.3	Printer Settings	1-4
1.4	Limitations	1-5
1.4.1	General	1-5
1.4.2	POS Printer Control.....	1-5
1.4.3	Cash Drawer Control	1-6
1.4.4	Scanner Control	1-6

Chapter 2 Installation 2-1

Chapter 3 How to Operate Configuration Program 3-1

3.1	Screen Layout.....	3-2
3.1.1	Menu Bar	3-2
3.1.2	Device View	3-3
3.1.3	Setting View	3-3
3.2	Functions	3-13
3.2.1	Addition of Device.....	3-13
3.2.2	Changing Device Settings.....	3-34
3.2.3	Deletion of Device	3-35
3.2.4	Adding and Deleting Logical Device Name.....	3-36
3.2.5	Device Interactive Test	3-40
3.2.6	Memory settings of printer (PrinterUtility)	3-42

Chapter 4 OPOS Control 4-1

4.1	General.....	4-1
4.2	POS Printer Control	4-2
4.3	Cash Drawer Control.....	4-2
4.4	Scanner Control	4-2

Chapter 5 POS Printer Control Interface Specifications 5-1

5.1	Summary	1
5.1.1	Common Properties.....	1
5.1.2	Specific Properties.....	2
5.1.3	Common Methods	6
5.1.4	Specific Methods	7
5.1.5	Events	7
5.2	Data Characters and Escape Sequences	8
5.2.1	Escape Sequence Operated when Specified	8
5.2.2	Escape Sequence Valid Until Changed.....	11
5.2.3	Escape Sequence Reset by End of Print Method or "Normal" Escape Sequence ...	11
5.3	Common Properties	13
	BinaryConversion Property R/W	13
	CapCompareFirmwareVersion Property.....	14
	CapPowerReporting Property	14
	CapStatisticsReporting Property	14
	CapUpdateFirmware Property	15
	CapUpdateStatistics Property	15
	CheckHealthText Property.....	15
	Claimed Property.....	16
	ControlObjectDescription Property.....	16
	ControlObjectVersion Property	16
	DeviceDescription Property	16
	DeviceEnabled Property R/W	17
	DeviceName Property.....	17
	FreezeEvents Property R/W	18
	OpenResult Property	18
	OutputID Property.....	19
	PowerNotify Property R/W	19
	PowerState Property.....	20
	ResultCode Property	20
	ResultCodeExtended Property.....	21
	ServiceObjectDescription Property	22
	ServiceObjectVersion Property	22
	State Property	22
5.4	Specific Properties	23
	AsyncMode Property R/W.....	23
	CapCharacterSet Property.....	23

CapCoverSensor Property.....	23
CapMapCharacterSet Property.....	24
CapRec2Color Property.....	24
CapRecBarCode Property	24
CapRecBitmap Property	24
CapRecBold Property	25
CapRecCartridgeSensor Property.....	25
CapRecColor Property.....	25
CapRecDhigh Property	25
CapRecDwide Property	26
CapRecDwideDhigh Property	26
CapRecEmptySensor Property	26
CapRecItalic Property.....	26
CapRecLeft90 Property	27
CapRecMarkFeed Property	27
CapRecNearEndSensor Property	27
CapRecPageMode Property	27
CapRecPapercut Property	28
CapRecPresent Property.....	28
CapRecRight90 Property	28
CapRecRotate180 Property.....	28
CapRecRuledLine Property	29
CapRecStamp Property.....	29
CapRecUnderline Property	29
CapTransaction Property.....	29
CartridgeNotify Property R/W.....	30
CharacterSet Property R/W	30
CharacterSetList Property.....	31
CoverOpen Property.....	31
ErrorLevel Property	31
ErrorStation Property.....	32
ErrorString Property.....	32
FlagWhenIdle Property R/W	33
FontTypefaceList Property.....	33
MapCharacterSet Property R/W.....	33
MapMode Property R/W	34
PageModeArea Property	35
PageModeDescriptor Property.....	35
PageModeHorizontalPosition Property R/W.....	36
PageModePrintArea Property R/W	36
PageModePrintDirection Property R/W	37
PageModeStation Property R/W	39
PageModeVerticalPosition Property R/W.....	39
RecBarCodeRotationList Property	40
RecBitmapRotationList Property	41
RecCartridgeState Property.....	41

	RecCurrentCartridge Property R/W.....	41
	RecEmpty Property	42
	RecLetterQuality Property R/W.....	42
	RecLineChars Property R/W.....	43
	RecLineCharsList Property	44
	RecLineHeight Property R/W	44
	RecLineSpacing Property R/W	45
	RecLinesToPaperCut Property	46
	RecLineWidth Property	46
	RecNearEnd Property.....	47
	RecSidewaysMaxChars Property.....	47
	RecSidewaysMaxLines Property.....	47
	RotateSpecial Property R/W	47
5.5	Common Methods.....	49
	CheckHealth Method	49
	ClaimDevice Method.....	50
	ClearOutput Method	50
	Close Method	51
	CompareFirmwareVersion Method	51
	DirectIO Method	51
	Open Method.....	54
	ReleaseDevice Method.....	54
	ResetStatistics Method	55
	RetrieveStatistics Method	55
	UpdateFirmware Method	58
	UpdateStatistics Method	58
5.6	Specific Methods.....	59
	BeginInsertion Method.....	59
	BeginRemoval Method	59
	ChangePrintSide Method.....	59
	ClearPrintArea Method	59
	CutPaper Method	60
	DrawRuledLine Method	61
	EndInsertion Method.....	62
	EndRemoval Method	63
	MarkFeed Method	63
	PageModePrint Method	63
	PrintBarCode Method	65
	PrintBitmap Method.....	78
	PrintImmediate Method.....	80
	PrintMemoryBitmap Method.....	81
	PrintNormal Method.....	82
	PrintTwoNormal Method	83
	RotatePrint Method.....	84
	SetBitmap Method	85
	SetLogo Method	87

	TransactionPrint Method.....	88
	ValidateData Method	89
5.7	Events	92
	DirectIOEvent Event	92
	ErrorEvent Event	92
	OutputCompleteEvent Event.....	93
	StatusUpdateEvent Event.....	93

Chapter 6	Cash Drawer Control Interface Specifications	6-1
------------------	---	------------

6.1	Summary	6-1
6.1.1	Common Properties.....	6-1
6.1.2	Specific Properties.....	6-2
6.1.3	Common Methods	6-2
6.1.4	Specific Methods	6-2
6.1.5	Events	6-2
6.2	Common Properties	6-3
	BinaryConversion Property R/W	6-3
	CapCompareFirmwareVersion Property.....	6-3
	CapPowerReporting Property	6-3
	CapStatisticsReporting Property	6-4
	CapUpdateFirmware Property	6-4
	CapUpdateStatistics Property	6-4
	CheckHealthText Property.....	6-4
	Claimed Property.....	6-5
	ControlObjectDescription Property	6-5
	ControlObjectVersion Property	6-5
	DeviceDescription Property	6-5
	DeviceEnabled Property R/W	6-6
	DeviceName Property.....	6-6
	FreezeEvents Property R/W	6-7
	OpenResult Property	6-7
	PowerNotify Property R/W	6-8
	PowerState Property.....	6-8
	ResultCode Property	6-9
	ResultCodeExtended Property.....	6-9
	ServiceObjectDescription Property	6-10
	ServiceObjectVersion Property	6-10
	State Property	6-10
6.3	Specific Properties	6-11
	CapStatus Property	6-11
	CapStatusMultiDrawerDetect Property.....	6-11
	DrawerOpened Property.....	6-11
6.4	Common Methods.....	6-12
	CheckHealth Method	6-12
	ClaimDevice Method.....	6-12

	Close Method	6-13
	CompareFirmwareVersion Method	6-13
	DirectIO Method	6-14
	Open Method.....	6-14
	ReleaseDevice Method.....	6-15
	ResetStatistics Method	6-15
	RetrieveStatistics Method	6-15
	UpdateFirmware Method	6-15
	UpdateStatistics Method	6-16
6.5	Specific Methods.....	6-17
	OpenDrawer Method	6-17
	WaitForDrawerClose Method.....	6-17
6.6	Events	6-18
	DirectIOEvent Event	6-18
	StatusUpdateEvent Event.....	6-18

Chapter 7 Scanner (Barcode) Control Interface Specifications 7-1

7.1	Summary	7-1
7.1.1	Common Properties.....	7-1
7.1.2	Specific Properties.....	7-2
7.1.3	Common Methods	7-2
7.1.4	Events	7-2
7.2	Common Properties	7-3
	AutoDisable Property R/W	7-3
	BinaryConversion Property R/W	7-4
	CapCompareFirmwareVersion Property.....	7-5
	CapPowerReporting Property	7-5
	CapStatisticsReporting Property	7-5
	CapUpdateFirmware Property	7-5
	CapUpdateStatistics Property	7-6
	CheckHealthText Property.....	7-6
	Claimed Property.....	7-6
	ControlObjectDescription Property	7-6
	ControlObjectVersion Property	7-7
	DataCount Property.....	7-7
	DataEventEnabled Property R/W.....	7-7
	DeviceDescription Property	7-8
	DeviceEnabled Property R/W	7-8
	DeviceName Property.....	7-8
	FreezeEvents Property R/W	7-9
	OpenResult Property	7-9
	PowerNotify Property R/W	7-10
	PowerState Property.....	7-10
	ResultCode Property	7-11
	ResultCodeExtended Property.....	7-11

	ServiceObjectDescription Property	7-12
	ServiceObjectVersion Property	7-12
	State Property	7-12
7.3	Specific Properties	7-13
	DecodeData Property R/W	7-13
	ScanData Property	7-13
	ScanDataLabel Property	7-13
	ScanDataType Property	7-14
7.4	Common Methods.....	7-15
	CheckHealth Method	7-15
	ClaimDevice Method.....	7-15
	ClearInput Method	7-16
	ClearInputProperties Method	7-16
	Close Method	7-17
	CompareFirmwareVersion Method	7-17
	DirectIO Method	7-17
	Open Method.....	7-17
	ReleaseDevice Method.....	7-18
	ResetStatistics Method	7-18
	RetrieveStatistics Method	7-19
	UpdateFirmware Method	7-19
	UpdateStatistics Method	7-19
7.5	Events	7-20
	DataEvent Event	7-20
	DirectIOEvent Event.....	7-20
	ErrorEvent Event	7-20
	OutputCompleteEvent Event.....	7-20
	StatusUpdateEvent Event.....	7-20

Chapter 8	Registry Used by this Software	8-1
------------------	---------------------------------------	------------

8.1	POS Printer Control	8-1
8.2	Cash Drawer Control.....	8-3
8.3	Scanner Control	8-5

Chapter 9	Header File	9-1
------------------	--------------------	------------

9.1	POS Printer Header File.....	9-1
-----	------------------------------	-----

Chapter 1 Overview

This chapter describes the overview of the software.

This software is based on ActiveX control specifications. This software provides the properties, methods and events to the applications. This software is not seen on UI at an application execution; only the application using those executes processing requests through the methods and the properties. The application receives processing result through the return values of methods, parameters, properties and events. This software is implemented as in-process server.

For the contents of the header file used by the control, see the "OPOS Internal Header Files" of "Appendix A OLE FOR RETAIL POS - OPOS IMPLEMENTATION REFERENCE" in UPOS V1.14.1.


In addition, the additional specific values of the OPOS Control are defined. For these values, refer to "Chapter 9 Header File" in this manual.

1.1 Configuration


1.1.1 Structural Diagram

The structure of the software is as follows, and the scope of this manual is indicated by broken lines.

- RP-F10, RP-G10

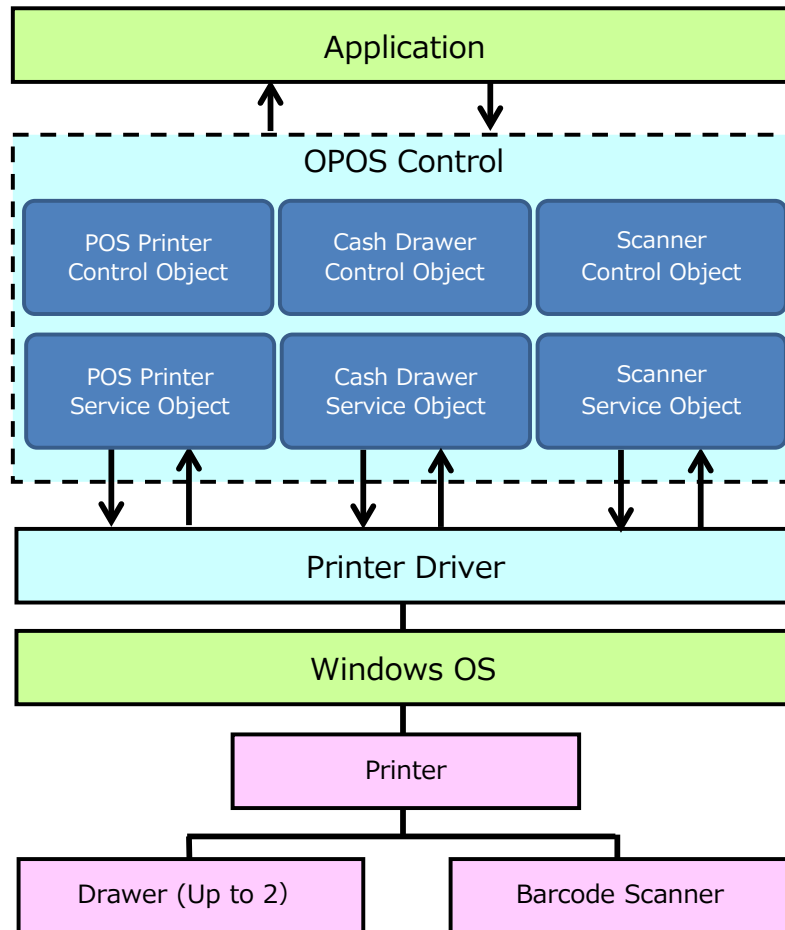

- RP-E10

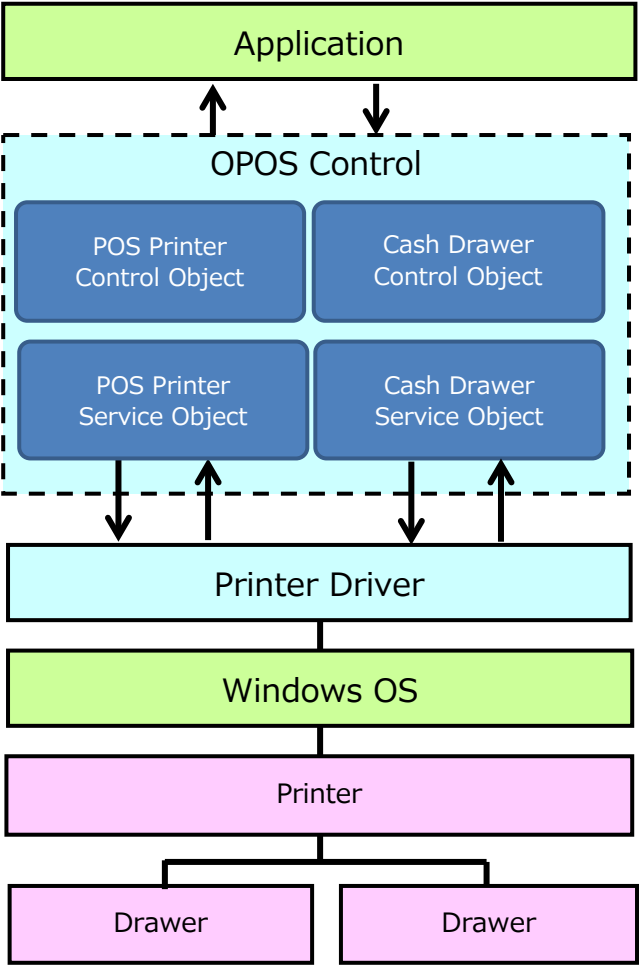

1.2 Printer Settings

The memory switches of the printer are set to [Value] in the following table when using the software. See "User's Guide" for details about the memory switches.

- RP-F10, RP-G10

• POS Printer Control

MS	Function	Value	Note
4-4	Paper Width Selection (Paper Width)	0 : 58 mm 1 : 80 mm	Either one [Value] on the left can be set by [PaperSize] in the configuration program.
4-5	Number of Effective Dots Selection (Number of Effective Dots)	0 : 360 dots / 512 dots 1 : 432 dots / 576 dots	
4-7 to 4-8	Maximum Print Speed Selection (Print Speed)	01B : Middle (Quality) 10B : Middle (Silent) 11B : High	Any one of [Value] on the left can be set by [PrintSpeed] in the configuration program.
5-1	Automatic Status Response Selection (Auto Status Back)	0 : Enable	The execution of ClaimDevice sets [Value] on the left forcibly.
5-2	Initialized Response Selection (Init. Response)	0 : Enable	
5-3	Data Discard Selection When Error Occurs (Error Through)	0 : Enable 1 : Disable	When adding a device in the configuration program, if PrinterDriver is specified, it will be set to "1: Disable". If anything else is specified, it will be set to "0: Enable".

• Cash Drawer Control

MS	Function	Value	Note
5-1	Automatic Status Response Selection (Auto Status Back)	0 : Enable	By setting TRUE in DeviceEnabled , [Value] on the left is set forcibly.
5-2	Initialized Response Selection (Init. Response)	0 : Enable	
5-3	Data Discard Selection When Error Occurs (Error Through)	0 : Enable 1 : Disable	When adding a device in the configuration program, if PrinterDriver is specified, it will be set to "1: Disable". If anything else is specified, it will be set to "0: Enable".
13-3	Realtime Command Selection (Realtime Command)	1 : Enable	By setting TRUE in DeviceEnabled , [Value] on the left is set forcibly.

- **Scanner Control**

MS	Function	Value	Note
38-1	Scanner Automatic Status Response Selection (Scanner Auto Status Back)	0 : Enable	By setting TRUE in DeviceEnabled , [Value] on the left is set forcibly.

Caution

- ◆ Connect it to the drawer kick connector of the printer when using the cash drawer.
- ◆ The firmware of the printer to support the barcode scanner is Ver.1.10 or later.
- ◆ See "RP-F10 SERIES Thermal Printer USER'S GUIDE" for details of the recommended barcode scanner and the barcode scanner setting.

Reference

- See "RP-F10 SERIES Thermal Printer USER'S GUIDE" for details about the combination of peripherals.

- RP-E10

- POS Printer Control

MS	Function	Value	Note
1-3	Mark Mode Selection (Mark Mode)	0 : Disable	The execution of ClaimDevice method sets [Value] on the left forcibly.
1-6	Near-end Sensor Function Selection (Near End Sensor)	0 : Disable 1 : Enable	Either one [Value] on the left can be set by [NearEndSensor] in the configuration program.
4-4	Paper Width Selection (Paper Width)	0 : 58 mm 1 : 80 mm	Either one [Value] on the left can be set by [PaperSize] in the configuration program.
4-5	Number of Effective Dots Selection (Number of Effective Dots)	0 : 360dots/512dots 1 : 432dots/576dots	
4-7	Maximum Print Speed Selection (Print Speed)	00B : Low 01B : Middle (Quality) 10B : Middle (Silent) 11B : High	Any one of [Value] on the left can be set by [PrintSpeed] in the configuration program.
5-1	Automatic Status Response Selection (Auto Status Back)	0 : Enable	The execution of ClaimDevice method sets [Value] on the left forcibly.
5-2	Initialized Response Selection (Init. Response)	0 : Enable	
5-3	Data Discard Selection When Error Occurs (Error Through)	0 : Enable 1 : Disable	When adding a device in the configuration program, if PrinterDriver is specified, it will be set to "1: Disable". If anything else is specified, it will be set to "0: Enable".

MS	Function	Value	Note
5-5	Paper-near-end Sensor Error Selection (Near End Error)	1 : Disable	The execution of ClaimDevice method sets [Value] on the left forcibly.

- Cash Drawer Control

MS	Function	Value	Note
5-1	Automatic Status Response Selection (Auto Status Back)	0 : Enable	By setting TRUE in DeviceEnabled property, [Value] on the left is set forcibly.
5-2	Initialized Response Selection (Init. Response)	0 : Enable	
5-3	Data Discard Selection When Error Occurs (Error Through)	0 : Enable 1 : Disable	When adding a device in the configuration program, if PrinterDriver is specified, it will be set to "1: Disable". If anything else is specified, it will be set to "0: Enable".

1.3 Limitations

The limitations of this software are described.

1.3.1 General

When using 1 printer simultaneously from multiple computers via TCP/IP connections, use **TransactionPrint** to prevent print data from other computers from interrupting.

1.3.2 POS Printer Control

All interfaces of POSPrinter Device Class defined by OPOS specifications are provided, with the following limitations.

- (a) The method and property settings related to journal and slip printing are not supported.
- (b) The following functions are not supported.
 - Feed, Paper cut and Stamp
 - Stamp
 - Feed reverse
 - Font typeface selection
 - Italic
 - Alternate color (Custom)
 - Shading
 - RGB Color
 - Sub Script

- Super Script
 - Strike-through
- (c) All the following methods always return OPOS_E_ILLEGAL(106) after they are enabled.
- **BeginInsertion**
 - **EndInsertion**
 - **BeginRemoval**
 - **EndRemoval**
 - **ChangePrintSide**
 - **MarkFeed**
 - **PrintTwoNormal**
- (d) The **DirectIOEvent** event (device-specific event) is not supported.
- (e) When the printer setting item [ProcessCompletionTiming] is set to "Printed" in the configuration program, the printer command "Execution Response Request" is used to control the print operation. Therefore, unexpected behavior may occur when the printer command "Execution Response Request" is transmitted by the "Pass through embedded data" escape sequence (ESC|#E).
- (f) When an error occurs, the printer command "Hardware Reset" is transmitted by the POS Printer Control to cancel printing in the printer. However, printing may be performed a bit before POS Printer stops printing in the printer.
- (g) For Bluetooth connection, when the device becomes a recoverable error during printing, it may take some time to return to normal status from the error cancellation. The first processing after error cancelation should be done after about 10 seconds from the error cancellation.

1.3.3 Cash Drawer Control

All interfaces of Cash Drawer Device Class defined by the OPOS specifications are provided, with the following limitations.

- (a) The following method always returns OPOS_E_ILLEGAL(106) after it is enabled.
- **DirectIO**
 - **WaitForDrawerClose** (supported only by RP-E10)
- (b) The **DirectIOEvent** event (device-specific event) is not supported.

1.3.4 Scanner Control

All interfaces of Scanner Device Class defined by the OPOS specifications are provided, with the following limitations.

Supported only by RP-F10.

- (a) 0 is always placed in **ScanDataType**.
- (b) The following method always returns OPOS_E_ILLEGAL(106) after it is enabled.
- **DirectIO**
- (c) The **DirectIOEvent** event (device-specific event) is not supported.

Chapter 2 Installation

For the installation, see "SII Software Package for Windows Installation Guide".

Chapter 3 How to Operate Configuration Program


This chapter describes the configuration program provided by this software.

Caution

- ◆ Using this software requires logon to the computer with administrator privileges.

3.1 Screen Layout

The screen layout of the configuration program is described.

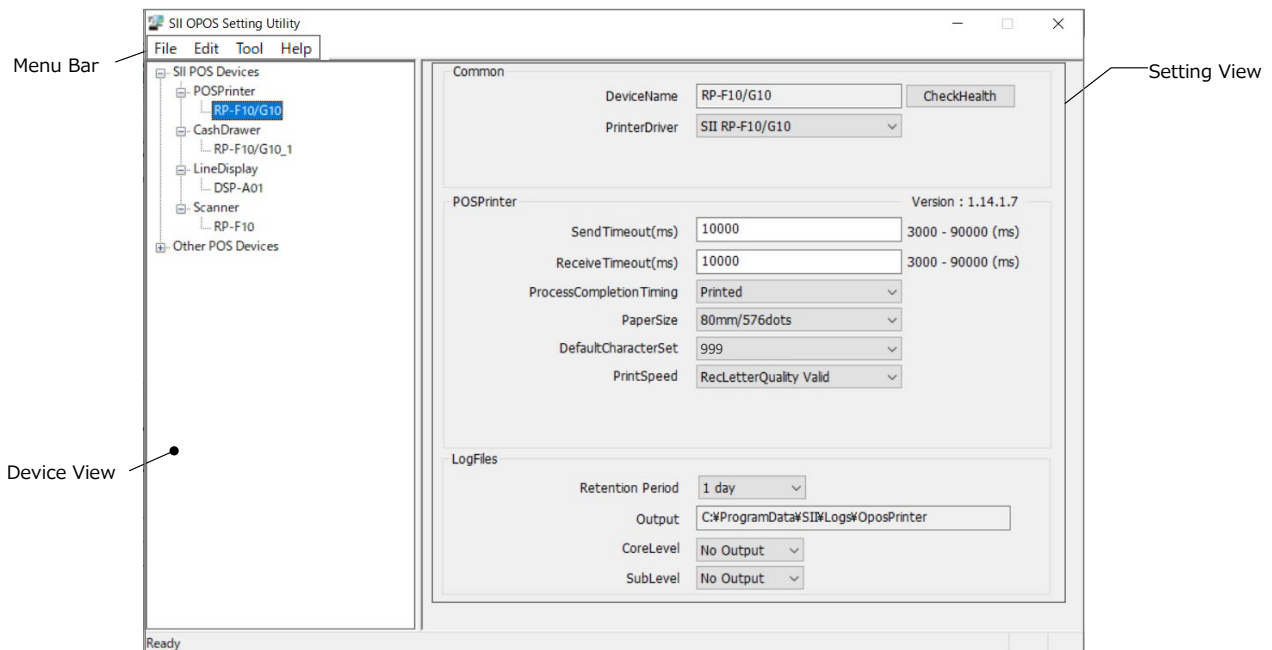

Item	Description
Menu Bar	The menu bar of the configuration program. See "3.1.1 Menu Bar" for items in the menu bar.
Device View	The type, the name, and the logical name of the device registered in the system are displayed in a tree.
Setting View	Displays setting contents of the device selected in "Device View". See "3.1.3(1) POSPrinter", "3.1.3(2) Cash Drawer" or "3.1.3(3) Scanner" for items of each device.

3.1.1 Menu Bar

Item		Description
File	Exit	Ends the configuration program.
Edit	Add Device...	Adds a new device.
	Add Logical Device Name...	Adds a new logical device name.
	Delete	Deletes the selected device.
Tool	CheckHealth	Executes an interactive test for the selected device.
Help	About SII OPOS Utility...	Displays the version information of the configuration program.

3.1.2 Device View

Name	Description
SII POS Devices	Displays SII devices. When a device name is selected in "Device View", the device can be deleted and the logical device name can be added.
Other POS Devices	Displays devices other than SII devices. Device settings cannot be changed or deleted.

3.1.3 Setting View

(1) POSPrinter

- Setting items when selecting the printer driver

The items and their setting contents of the "Setting View" displayed by selecting a printer driver when adding a device are described below.

The figure shows RP-F10/G10 selected in the initial setting.

The screenshot shows the "SII OPOS Setting Utility" window. On the left is a tree view under "SII POS Devices" with "POSPrinter" expanded, and "RP-F10/G10" selected. The main area is divided into three sections: "Common", "POSPrinter", and "LogFiles".

Common

DeviceName	RP-F10/G10	CheckHealth
PrinterDriver	SII RP-F10/G10	

POSPrinter (Version : 1.14.1.7)

SendTimeout(ms)	10000	3000 - 90000 (ms)
ReceiveTimeout(ms)	10000	3000 - 90000 (ms)
ProcessCompletionTiming	Printed	
PaperSize	80mm/576dots	
DefaultCharacterSet	999	
PrintSpeed	RecLetterQuality Valid	

LogFiles

Retention Period	1 day
Output	C:\ProgramData\SII\Logs\OposPrinter
CoreLevel	No Output
SubLevel	No Output

Ready

Reference

- The items supported by the printer are displayed.

Item	Description	Setting Content (" " : Default)
Common		
DeviceName	Device name	Device name of POSPrinter selected in "Device View".
CheckHealth	Executes an interactive test for the selected device.	-
PrinterDriver	Printer driver used for communication with the printer	-
POSPrinter		
SendTimeout(ms)	Send timeout value in communication with the printer (milliseconds)	RP-F10, RP-G10: 3000 to 90000 (10000) RP-E10: 1 to 90000 (10000)
ReceiveTimeout (ms)	Receive timeout value in communication with the printer (milliseconds)	RP-F10, RP-G10: 3000 to 90000 (10000) RP-E10: 1 to 90000 (10000)
ProcessCompletion Timing	Timing of method completion	Data transmitted (Completion of data transmission) Printed (Completion of printing)
PaperSize	Paper width / Number of effective dots	58mm/360 dots 58mm/432 dots 80mm/512 dots 80mm/576 dots
DefalutCharacterSet	Character set type CharacterSet is initialized with this value. See CharacterSet for details.	437 737*1 850 852 855*1 857*1 858 860 863 865 866*1 932*2 999*3 1250 1251 1252 1253 1254
PrintSpeed	Print speed of the printer It is decided by RecLetterQuality when selecting RecLetterQuality Valid.	RecLetterQuality Valid: Enabled RecLetterQuality High: High speed*4 Middle (Quality): Middle speed (quality)*4 Middle (Silent): Middle speed (silent)*4 Low: Low speed*4*5
NearEndSensor	Function of near end sensor	Enable: Valid Disable: Invalid

Item	Description	Setting Content (" " : Default)
LogFiles		
RP-F10, RP-G10		
Retention Period	Retention period for log files Log files past the retention period are deleted when logs are output. The actual retention period may be longer by 1 day at maximum.	1 day 3 days 10 days 30 days 90 days
Output	Log output directory (Unchangeable) The log output directory and the file name are as follows. Output Directory: <System Drive>:\ProgramData\SI\Logs\OposPrinter The output directory cannot be changed. File Name: <yyyyMMdd>.log The maximum size of the log file is 32 MB. When the log file exceeds the maximum size, the file name is changed to <yyyyMMdd_hhmmssfff>.log, and a new <yyyyMMdd>.log is created.*6	
CoreLevel	Log output level of POS Printer service object	No Output: No logs are output. Error: Error logs at execution are output. Trace: Detailed operation history and dump logs are output.
SubLevel	Log output level of dedicated POS Printer service object for RP-F10/G10	No Output: No logs are output. Error: Error logs at execution are output. Trace: Detailed operation history and dump logs are output.
RP-E10		
LogLevelCore	Log output level of POS Printer Service Object	No Output: No output Output(Lv.1): Error Output(Lv.5): Trace
LogFileSizeCore	Maximum log file size of POS Printer Service Object (KB)	"0"
LogFileNameCore	Log file name of POS Printer Service Object (Full path)	"
LogLevelSub	Log output level of dedicated POS Printer Service Object for RP-E10	No Output: No output Output(Lv.1): Error Output(Lv.5): Trace
LogFileSizeSub	Maximum log file size of dedicated POS Printer Service Object for RP-E10 (KB)	"0"
LogFileNameSub	Log file name of dedicated POS Printer Service Object for RP-E10 (Full path)	"

*1: Not supported in RP-E10.

*2: Default for Japanese

*3: Default for English

*4: See "Technical Reference" for details of the print speed.

*5: Supported only by RP-E10.


*6: The symbols used for the file name mean as follows. Each value comes from the Windows system clock.

yyyy : Year
MM : Month
dd : Day

hh : Hour
mm : Minute
ss : Second
fff : Millisecond

- Setting items when selecting the port

The items and their setting contents of the "Setting View" displayed by selecting the port when adding a device are described below.

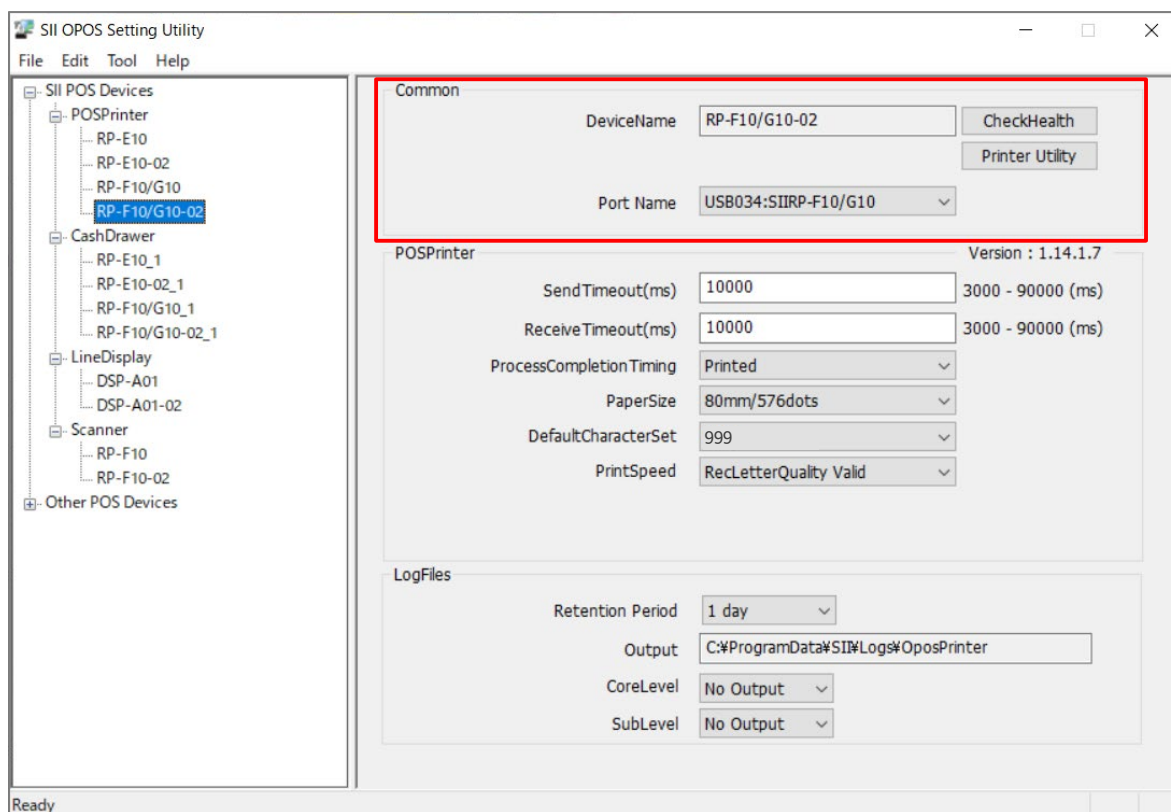

The difference between the settings in the "Settings View" when the port is selected and the setting items displayed when the printer driver is selected is only Common.

This section describes the items of Common and their settings.


Item	Description	Setting Content (" " : Default)
Common		
DeviceName	Device name	Device name of POSPrinter selected in "Device View".
CheckHealth	Executes an interactive test for the selected device.	-
Printer Utility	Starts up Printer Setting Utility that can set the memory switches.	-
PortName	Port name for the selected device.	-

(2) Cash Drawer

- CashDrawer setting items

The items displayed in "Setting View" when the Cash Drawer is selected and setting contents are described below.

The figure shows RP-F10/G10 selected in the initial setting.

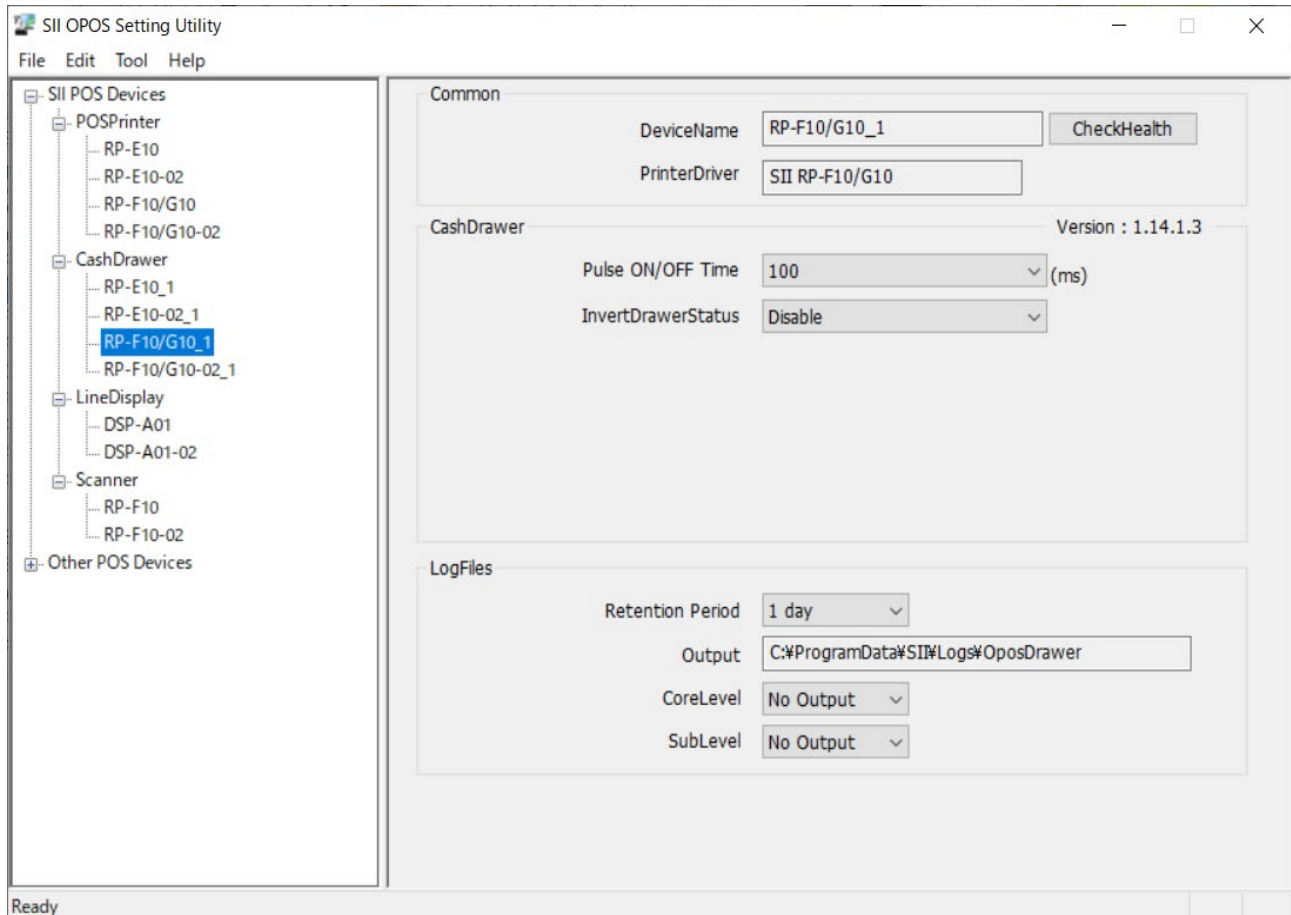

Reference

- The items supported by the printer are displayed.

Item	Description	Setting Content (" " : Default)
Common		
DeviceName	Device name	Device name of CashDrawer selected in "Device View".
CheckHealth	Executes an interactive test for the selected device.	-
PrinterDriver	It is set automatically. It cannot be changed.	-

Item	Description	Setting Content (" " : Default)
CashDrawer		
Pulse ON/OFF Time	Pulse time of the drawer signal (milliseconds) Specifies ON/OFF time of the pulse. The same time is specified for the ON time and the OFF time.	100 to 800 (100)
InvertDrawerStatus	Notification method of drawer open/close state	Disable: Reversal is not active. The drawer is open when the drawer switch input status is "Low". Enable: Reversal is active. The drawer is open when the drawer switch input status is "High".
LogFiles		
RP-F10, RP-G10		
Retention Period	Retention period for log files Log files past the retention period are deleted when logs are output. The actual retention period may be longer by 1 day at maximum.	1 day 3 days 10 days 30 days 90 days
Output	Log output directory (Unchangeable) The log output directory and the file name are as follows. Output Directory: <System Drive>:\ProgramData\SII\Logs\OposDrawer The output directory cannot be changed. File Name: <yyyyMMdd>.log The maximum size of the log file is 32 MB. When the log file exceeds the maximum size, the file name is changed to <yyyyMMdd_hhmmssfff>.log, and a new <yyyyMMdd>.log is created.*1	
CoreLevel	Log output level of Cash Drawer service object	No Output: No logs are output. Error: Error logs at execution are output. Trace: Detailed operation history and dump logs are output.
SubLevel	Log output level of dedicated Cash Drawer service object for RP-F10/G10	No Output: No logs are output. Error: Error logs at execution are output. Trace: Detailed operation history and dump logs are output.
RP-E10		
LogLevelCore	Log output level of Cash Drawer Service Object	No Output: No output Output(Lv.1): Error Output(Lv.5): Trace
LogFileSizeCore	Maximum log file size of Cash Drawer Service Object (KB)	"0"
LogFileNameCore	Log file name of Cash Drawer Service Object (Full path)	"
LogLevelSub	Log output level of dedicated Cash Drawer Service Object for RP-E10	No Output: No output Output(Lv.1): Error Output(Lv.5): Trace


Item		Description	Setting Content (" " : Default)
	LogFileSizeSub	Maximum log file size of dedicated Cash Drawer Service Object for RP-E10 (KB)	"0"
	LogFileNameSub	Log file name of dedicated Cash Drawer Service Object for RP-E10 (Full path)	" "

*1: The symbols used for the file name mean as follows. Each value comes from the Windows system clock.

yyyy : Year
 MM : Month
 dd : Day
 hh : Hour
 mm : Minute
 ss : Second
 fff : Millisecond

- Setting items when selecting the port

The items and their setting contents of the "Setting View" displayed by selecting the port when adding a device are described below.

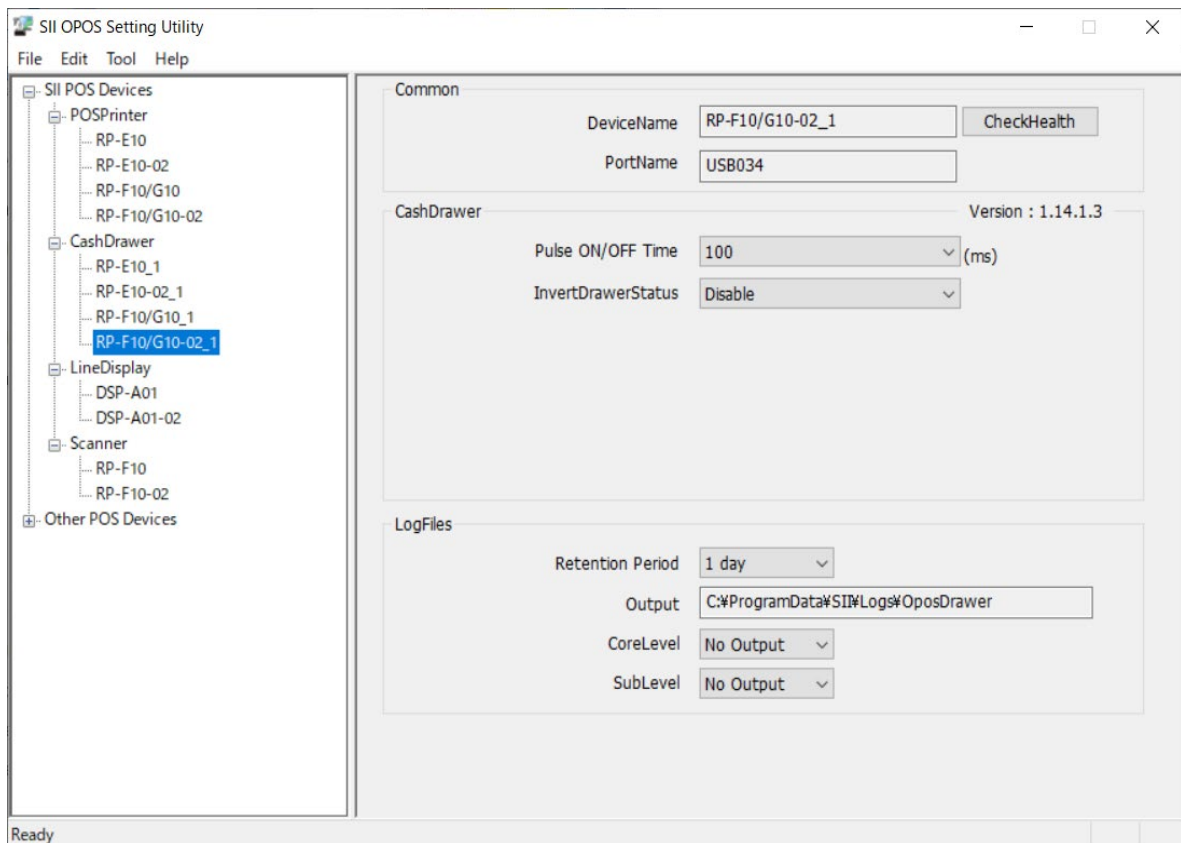

The difference between the settings in the "Settings View" when the port is selected and the setting items displayed when the Cash Drawer is selected is only Common. This section describes the items of Common and their settings.


Item	Description	Setting Content (" " : Default)
Common		
DeviceName	Device name	Device name of POSPrinter selected in "Device View".
CheckHealth	Executes an interactive test for the selected device.	-
PortName	Port name for the selected device.	-

(3) Scanner

- Scanner setting items

The items displayed in "Setting View" when the Scanner is selected and setting contents are described below.

Supported only by RP-F10.

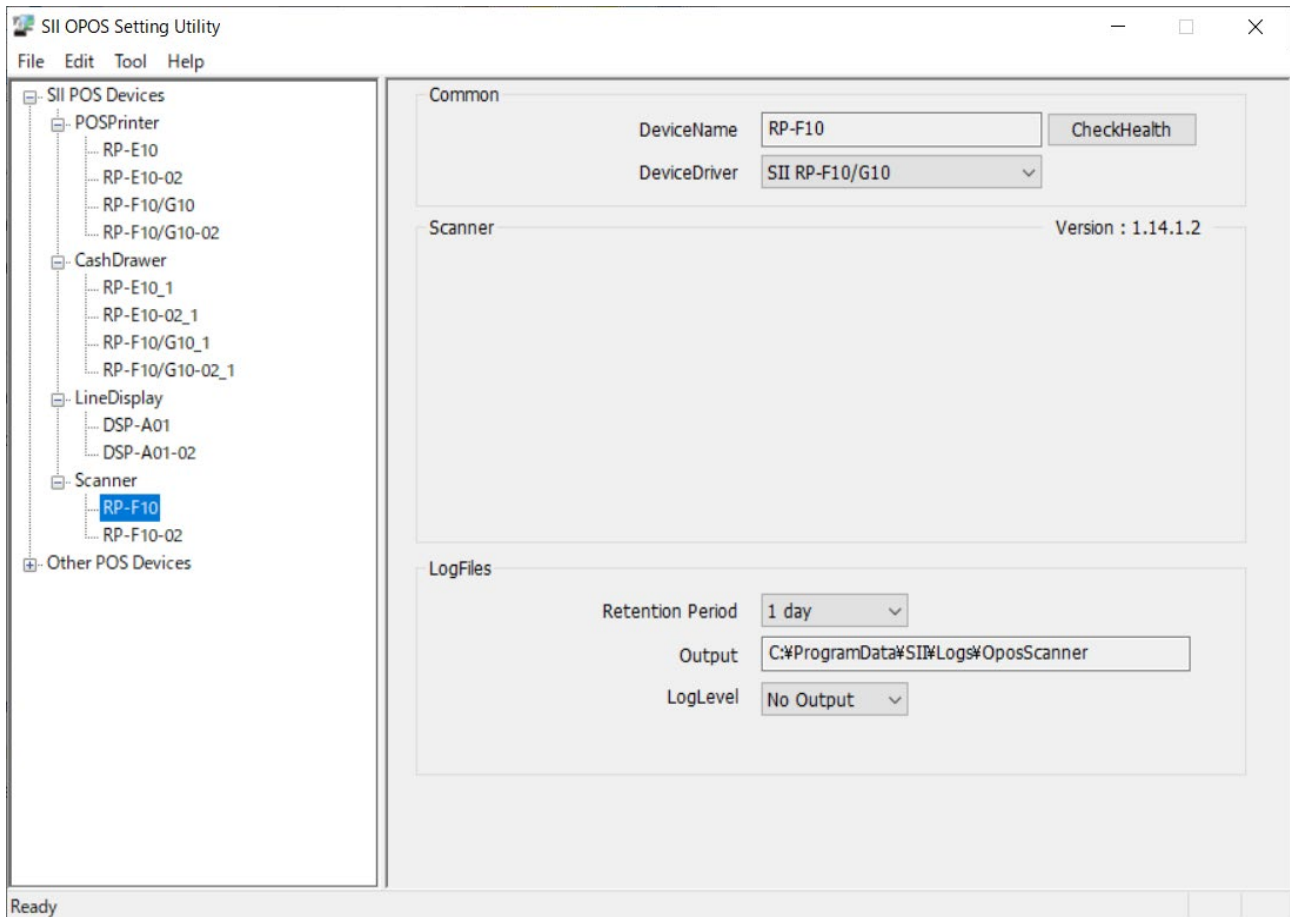


Item	Description	Setting Content (" " : Default)
Common		
DeviceName	Device name	Device name of Scanner selected in "Device View".
CheckHealth	Executes an interactive test for the selected device.	-
DeviceDriver	It is set automatically. It cannot be changed.	-
Scanner		
-		
LogFiles		
Retention Period	Retention period for log files Log files past the retention period are deleted when logs are output. The actual retention period may be longer by 1 day at maximum.	1 day 3 days 10 days 30 days 90 days
Output	Log output directory (Unchangeable) The log output directory and the file name are as follows. Output Directory: <System Drive>:\ProgramData\SII\Logs\OposScanner The output directory cannot be changed. File Name: <yyyyMMdd>.log The maximum size of the log file is 32 MB. When the log file exceeds the maximum size, the file name is changed to <yyyyMMdd_hhmmssfff>.log, and a new <yyyyMMdd>.log is created.*1	
LogLevel	Log output level of Scanner service object	No Output: No logs are output. Error: Error logs at execution are output. Trace: Detailed operation history and dump logs are output.

*1: The symbols used for the file name mean as follows. Each value comes from the Windows system clock.

yyyy : Year
 MM : Month
 dd : Day
 hh : Hour
 mm : Minute
 ss : Second
 fff : Millisecond

- Setting items when selecting the port

The items and their setting contents of the "Setting View" displayed by selecting the port when adding a device are described below.

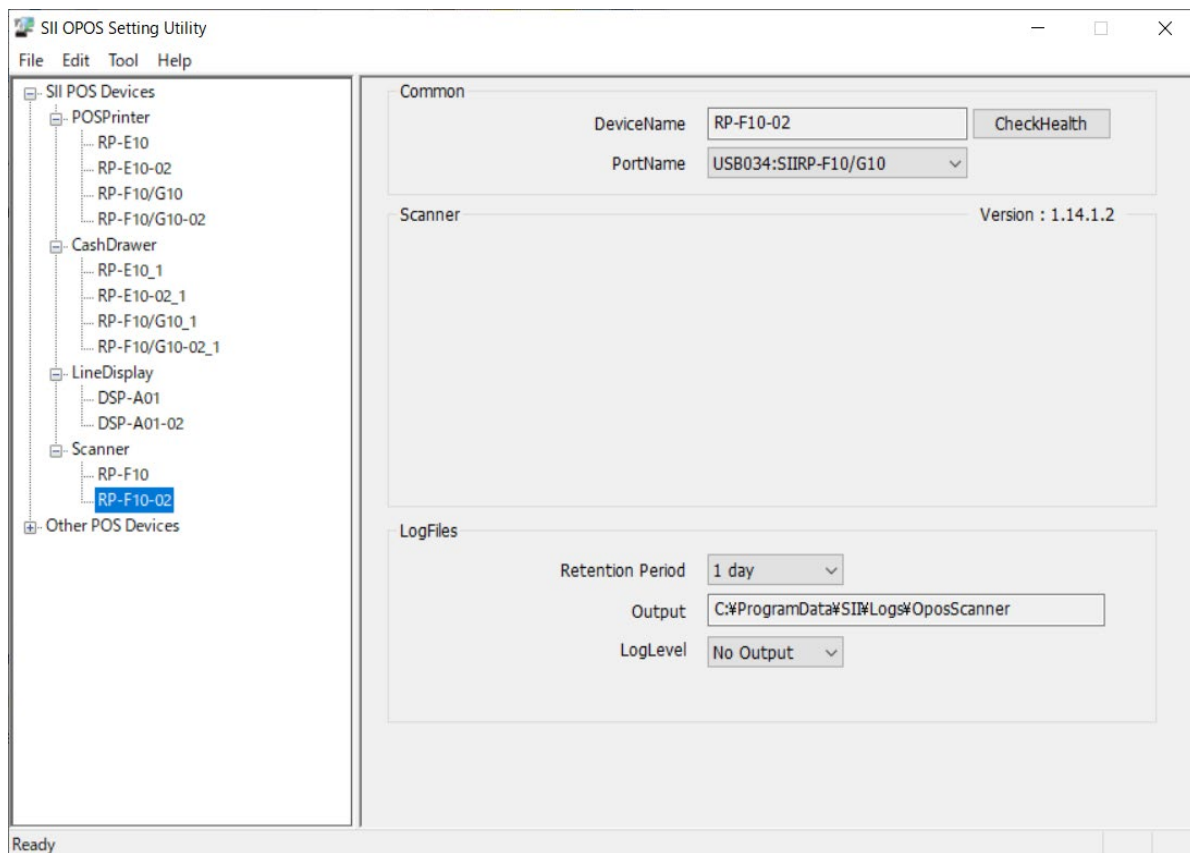

The difference between the settings in the "Settings View" when the port is selected and the setting items displayed when the Scanner is selected is only Common.

This section describes the items of Common and their settings.

Item	Description	Setting Content (" " : Default)
Common		
DeviceName	Device name	Device name of POSPrinter selected in "Device View".
CheckHealth	Executes an interactive test for the selected device.	-
PortName	Port name for the selected device.	-

3.2 Functions

The functions of the configuration program are described.
The procedure is described using RP-F10 as an example.

3.2.1 Addition of Device

The procedure for adding a device is described.

When the configuration program is started up immediately after installing this software, a device needs to be added since no device has been added.


Maximum 8 printers can be added. Up to 2 drawers and 1 scanner can be added for 1 printer.

Caution


- ◆ When selecting USB for the interface, connect to the port in advance before starting up the configuration program.
- ◆ When selecting Bluetooth for the interface, pair the printer in advance before starting up the configuration program.
- ◆ When selecting LAN/WLAN for the interface, create the LAN port in advance before starting up the configuration program.
- ◆ When selecting COM for the interface, connect to the port in advance before starting up the configuration program.
- ◆ The printer driver is required to be installed on the computer when selecting the PrinterDriver. See "SII Software Package for Windows Installation Guide" for installing the printer driver.

(1) Addition of Printer


- ① When the configuration program starts, the following window is displayed. Select [Edit] – [Add Device...] from "Menu Bar".

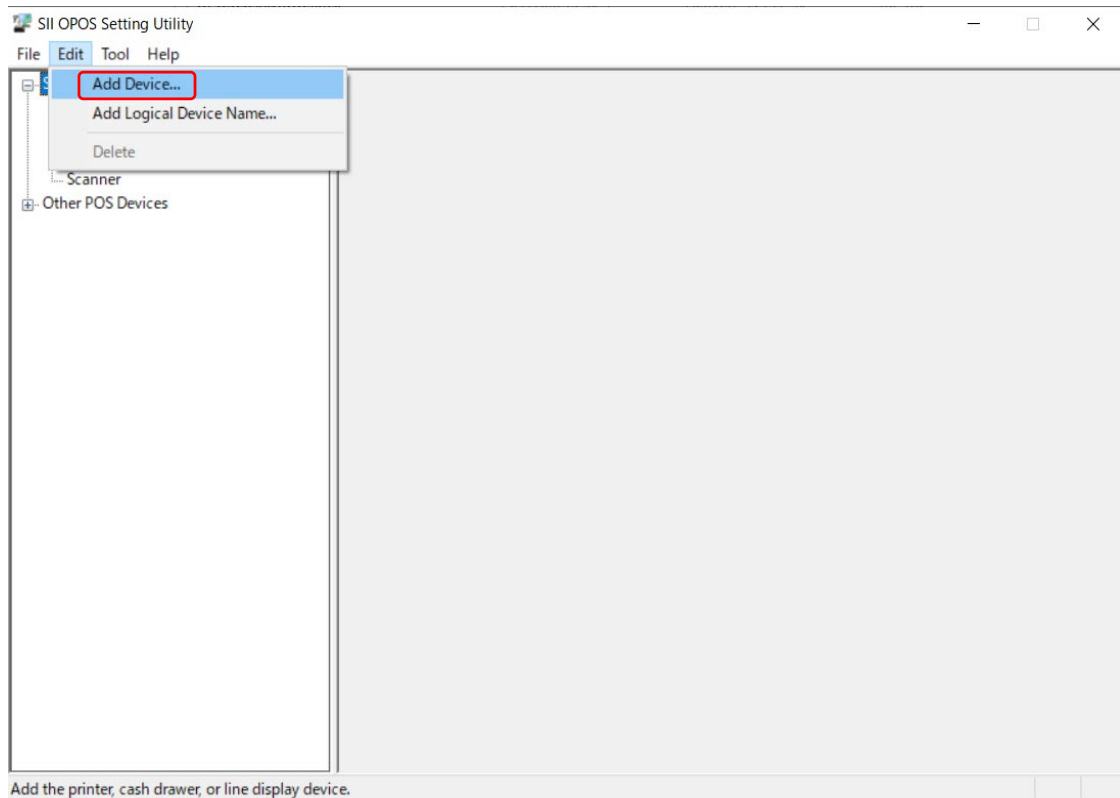

- ② Select "POSPrinter" for [DeviceClass], then click the [Next >] button.

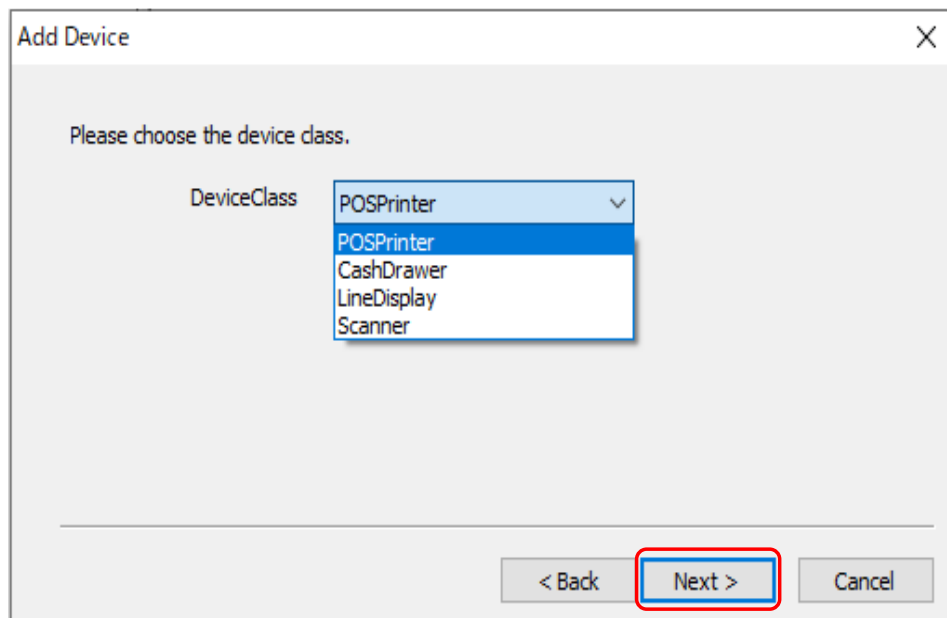

- ③ Select the printer to be added from [Printer Model], and click the [Next >] button. Select the printer driver or interface from [Interface] and click the [Next >] button.

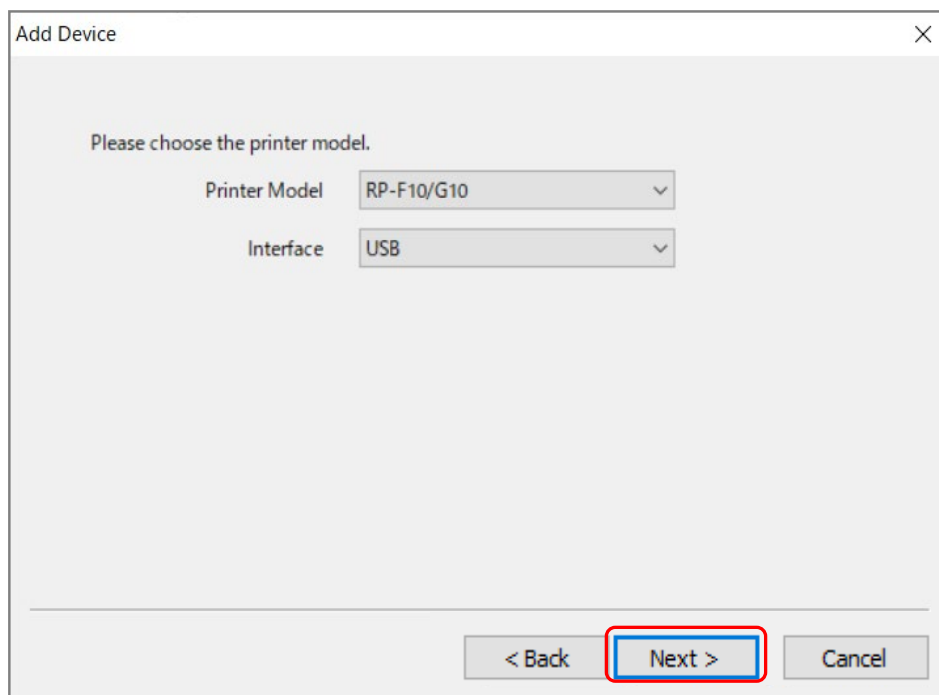


Add Device

Please choose the printer model.

Printer Model RP-F10/G10

Interface USB

< Back Next > Cancel

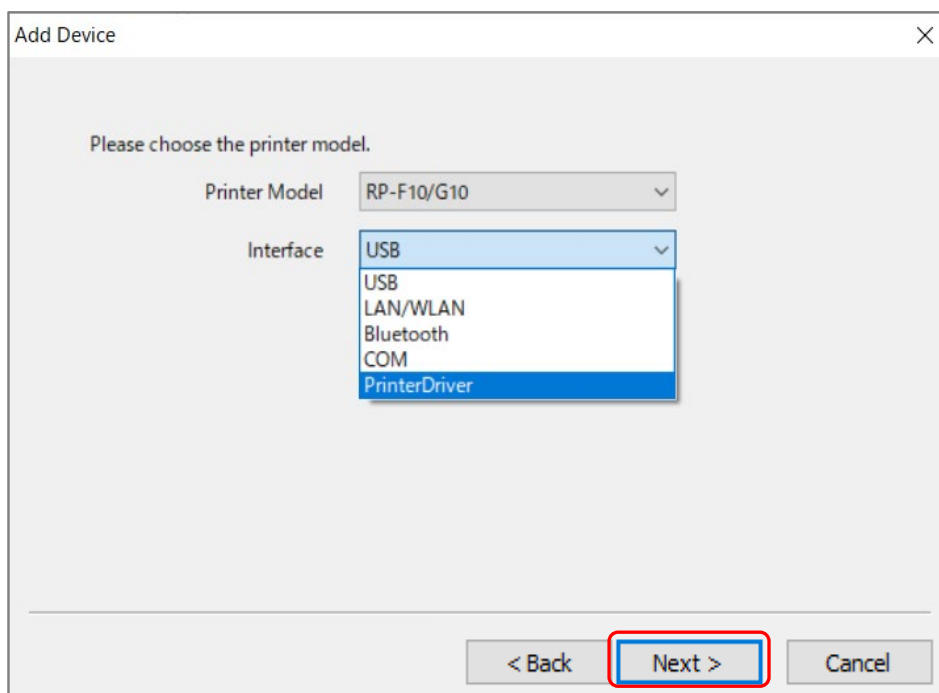

Add Device

Please choose the printer model.

Printer Model RP-F10/G10

Interface USB

USB
LAN/WLAN
Bluetooth
COM
PrinterDriver

< Back Next > Cancel

The following procedures vary depending on the selection of [Interface].

- Selecting USB: See "**When selecting the USB**".
- Selecting Bluetooth: See "**When selecting the Bluetooth**".
- Selecting LAN/WLAN: See "**When selecting the LAN/WLAN**".
- Selecting COM: See "**When selecting the COM**".
- Selecting printer driver: See "**When selecting the printer driver**".

Reference


- When adding the printer and the drawer at the same time, the printer will be displayed preferentially.

When selecting the USB

- ④ Select the printer driver to be used from [USB Port], and then click the [Next >] button. [New DeviceName] is set automatically.

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. Inside the dialog, there is a section titled "Please set the printer Port." with two input fields: "New DeviceName" and "USB Port". The "New DeviceName" field contains the text "RP-F10/G10". The "USB Port" field is a dropdown menu currently showing "USB034:SIIRP-F10/G10". At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangular border.

- ⑤ Enter or select the settings of the printer, and then click the [Next >] button.

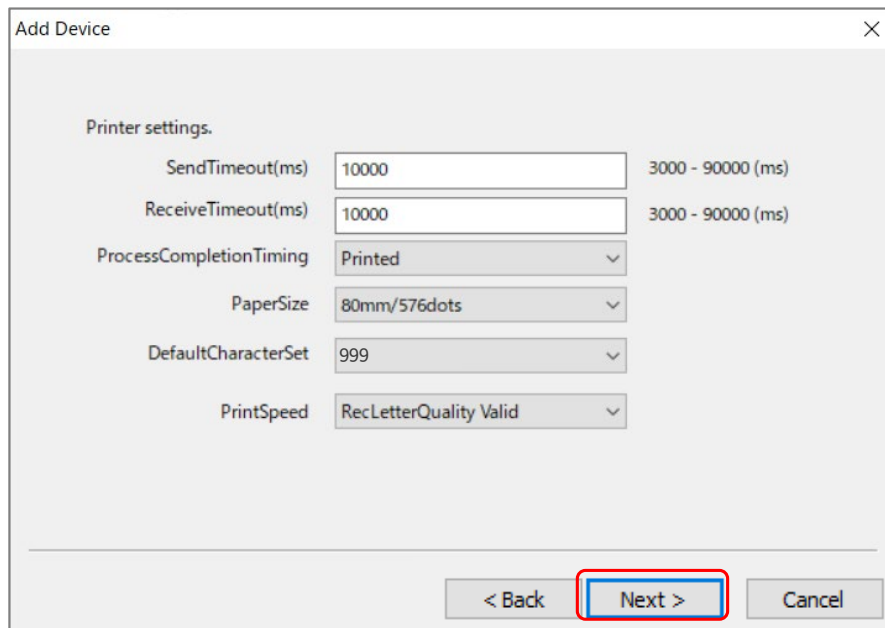


The 'Add Device' dialog box displays the following settings:

Setting	Value	Range/Options
SendTimeout(ms)	10000	3000 - 90000 (ms)
ReceiveTimeout(ms)	10000	3000 - 90000 (ms)
ProcessCompletionTiming	Printed	Dropdown
PaperSize	80mm/576dots	Dropdown
DefaultCharacterSet	999	Dropdown
PrintSpeed	RecLetterQuality Valid	Dropdown

At the bottom, there are three buttons: '< Back', 'Next >' (highlighted with a red box), and 'Cancel'.

- ⑥ Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding no drawer:
Select "0" for [The number of drawers], and click the [Next >] button.
 - When adding 1 drawer in addition to the printer:
Select "1" for [The number of drawers], and click the [Next >] button.
See the description ④ in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.
 - When adding 2 drawers in addition to the printer:
Select "2" for [The number of drawers], and click the [Next >] button.
See the description ④ in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.

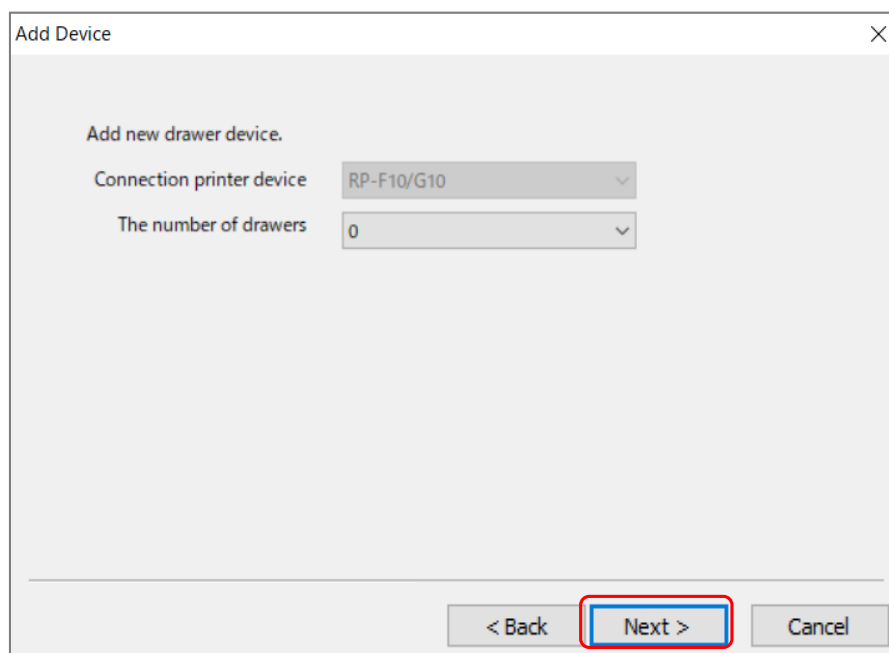


The 'Add Device' dialog box displays the following settings:

Setting	Value
Connection printer device	RP-F10/G10
The number of drawers	0

At the bottom, there are three buttons: '< Back', 'Next >' (highlighted with a red box), and 'Cancel'.

- ⑦ Click the [Finish] button.

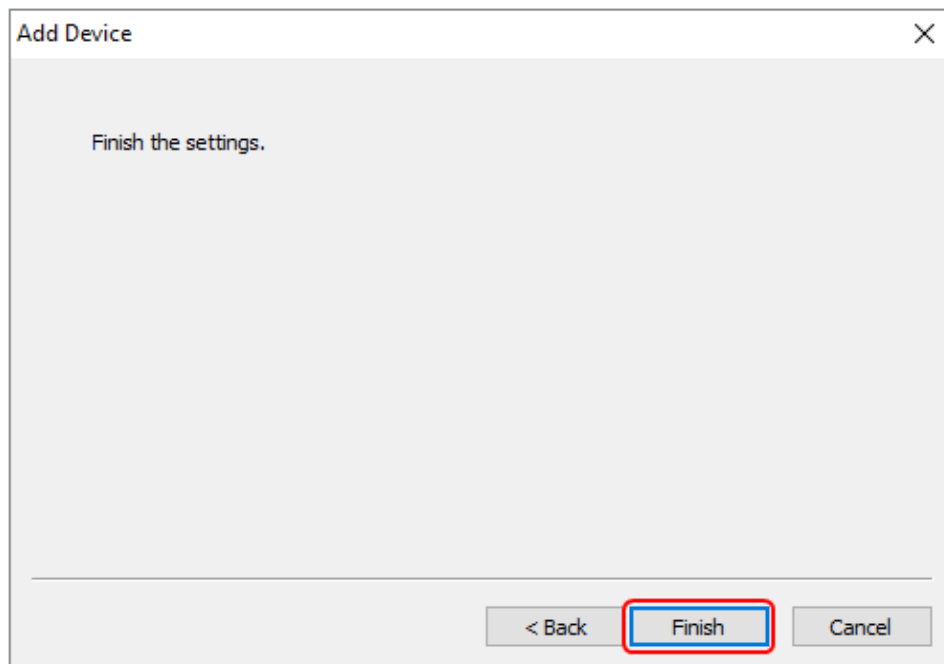

When selecting the Bluetooth

Caution

- ◆ Bluetooth connection cannot be used at the same time by multiple hosts.

- ④ Printers that have been paired once will be shown, select a printer and click the [Next >] button. The [New DeviceName] is set automatically.

Add Device

Please set the printer Port.

New DeviceName RP-F10/G10

COM6:RP-F10-5G-No2
COM9:RP-E10-5G-No7

< Back Next > Cancel

- ⑤ Enter or select the settings of the printer, and then click the [Next >] button.

Add Device

Printer settings.

SendTimeout(ms) 10000 3000 - 90000 (ms)

ReceiveTimeout(ms) 10000 3000 - 90000 (ms)

ProcessCompletionTiming Printed


PaperSize 80mm/576dots

DefaultCharacterSet 999

PrintSpeed RecLetterQuality Valid

< Back Next > Cancel

- ⑥ Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding no drawer:
Select "0" for [The number of drawers], and click the [Next >] button.
 - When adding 1 drawer in addition to the printer:
Select "1" for [The number of drawers], and click the [Next >] button.
See the description ④ in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.
 - When adding 2 drawers in addition to the printer:
Select "2" for [The number of drawers], and click the [Next >] button.
See the description ④ in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.

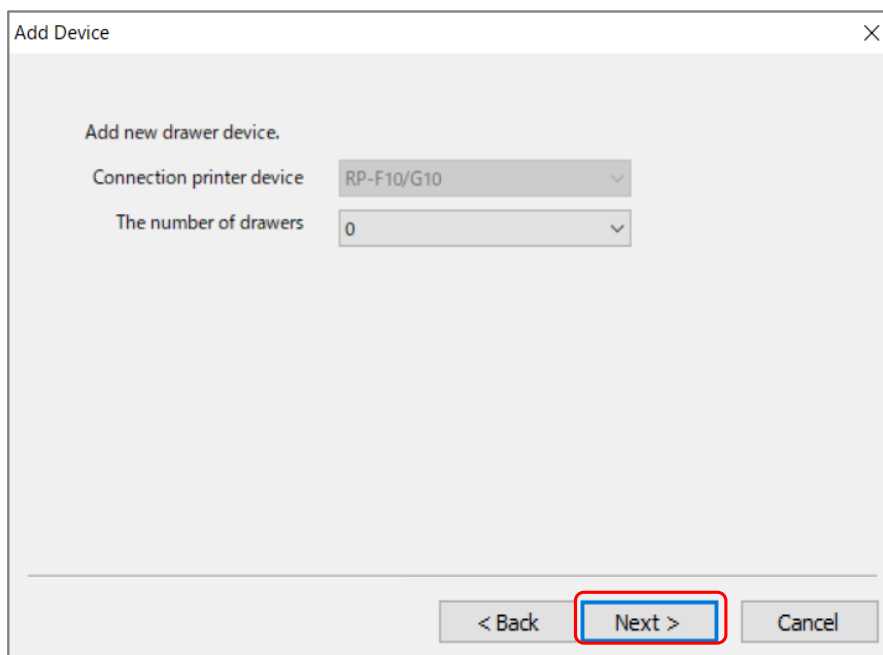

Add Device


Add new drawer device.

Connection printer device RP-F10/G10

The number of drawers 0

< Back Next > Cancel

- ⑦ Click the [Finish] button.

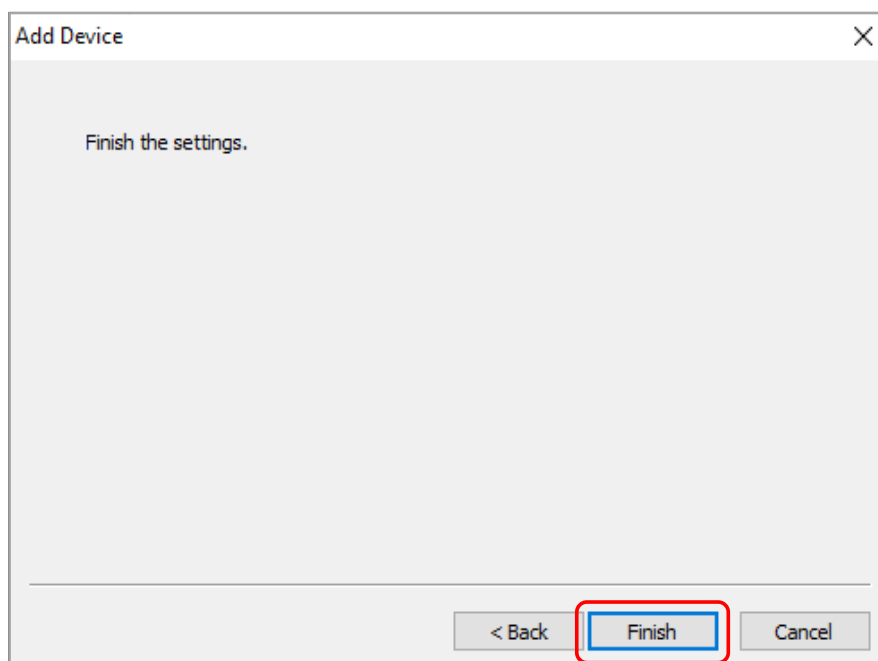

Add Device

Finish the settings.

< Back Finish Cancel

When selecting the LAN/WLAN

- ④ The printer will be shown, select the printer and click the [Next >] button. The [New DeviceName] is set automatically.

Add Device

Please set the printer Port.

New DeviceName RP-F10/G10

192.168.0.1:
192.168.0.190:
192.168.1.190:
192.168.129.12:
192.168.129.129:
192.168.129.162:
192.168.129.176:
192.168.129.33:
192.168.129.42:

< Back Next > Cancel

- ⑤ Enter or select the settings of the printer, and then click the [Next >] button.

Add Device

Printer settings.

SendTimeout(ms) 10000 3000 - 90000 (ms)

ReceiveTimeout(ms) 10000 3000 - 90000 (ms)

ProcessCompletionTiming Printed


PaperSize 80mm/576dots

DefaultCharacterSet 999

PrintSpeed RecLetterQuality Valid


< Back Next > Cancel

- ⑥ Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding no drawer:
Select "0" for [The number of drawers], and click the [Next >] button.
 - When adding 1 drawer in addition to the printer:
Select "1" for [The number of drawers], and click the [Next >] button.
See the description ④ in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.
 - When adding 2 drawers in addition to the printer:
Select "2" for [The number of drawers], and click the [Next >] button.
See the description ④ in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.

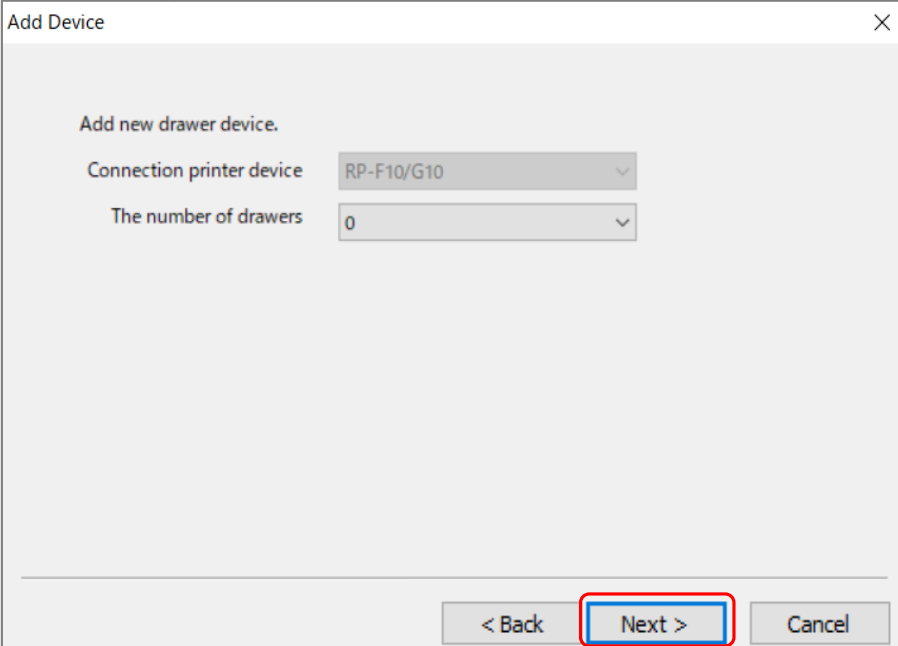

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. Inside the dialog, there is a section titled "Add new drawer device." Below this title, there are two dropdown menus. The first is labeled "Connection printer device" and has "RP-F10/G10" selected. The second is labeled "The number of drawers" and has "0" selected. At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangular box.


- ⑦ Click the [Finish] button.

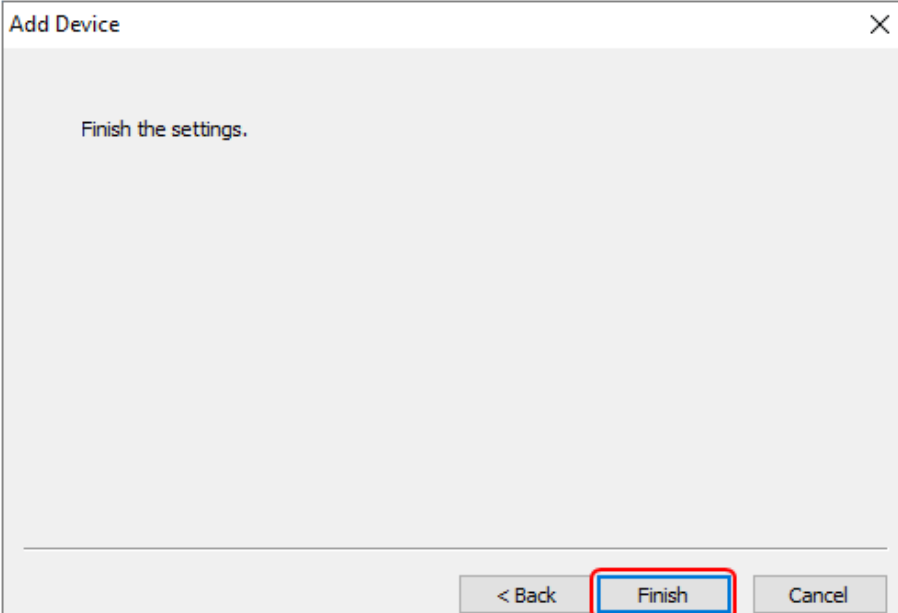

The screenshot shows the same "Add Device" dialog box, but the content has changed. The text "Finish the settings." is now displayed in the main area of the dialog. The buttons at the bottom are "< Back", "Finish", and "Cancel". The "Finish" button is highlighted with a red rectangular box.


When selecting the COM

- ④ When the serial port is displayed, select the port to be used, and then click the [Next >] button. [New DeviceName] is set automatically.

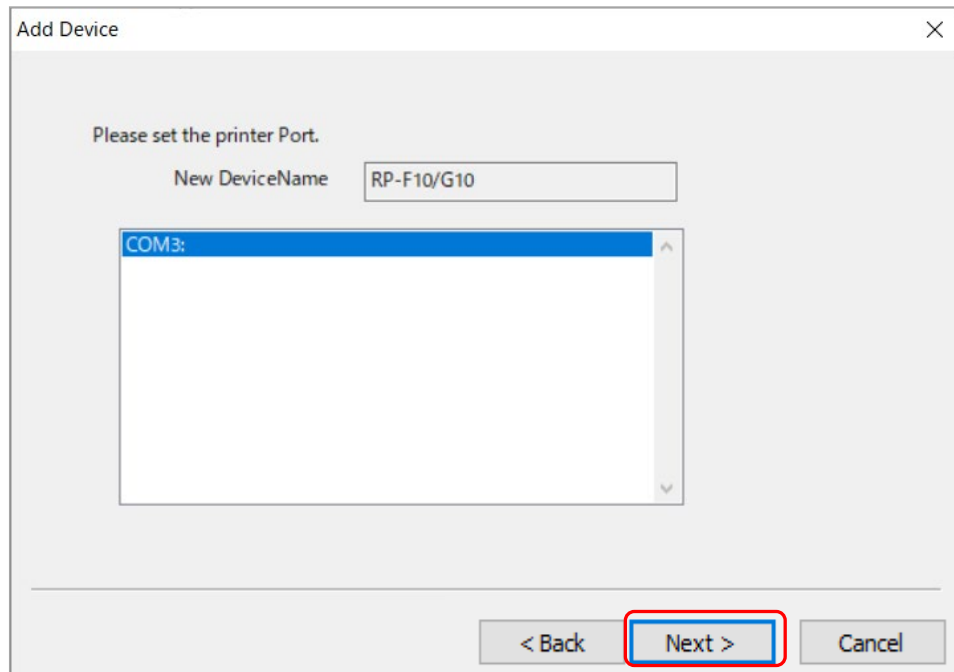

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. The main text says "Please set the printer Port." Below this, there is a label "New DeviceName" followed by a text box containing "RP-F10/G10". Underneath is a list box with "COM3:" selected and highlighted in blue. At the bottom of the dialog, there are three buttons: "< Back", "Next >" (which is highlighted with a red rectangle), and "Cancel".


- ⑤ Enter or select the settings of the printer, and then click the [Next >] button.

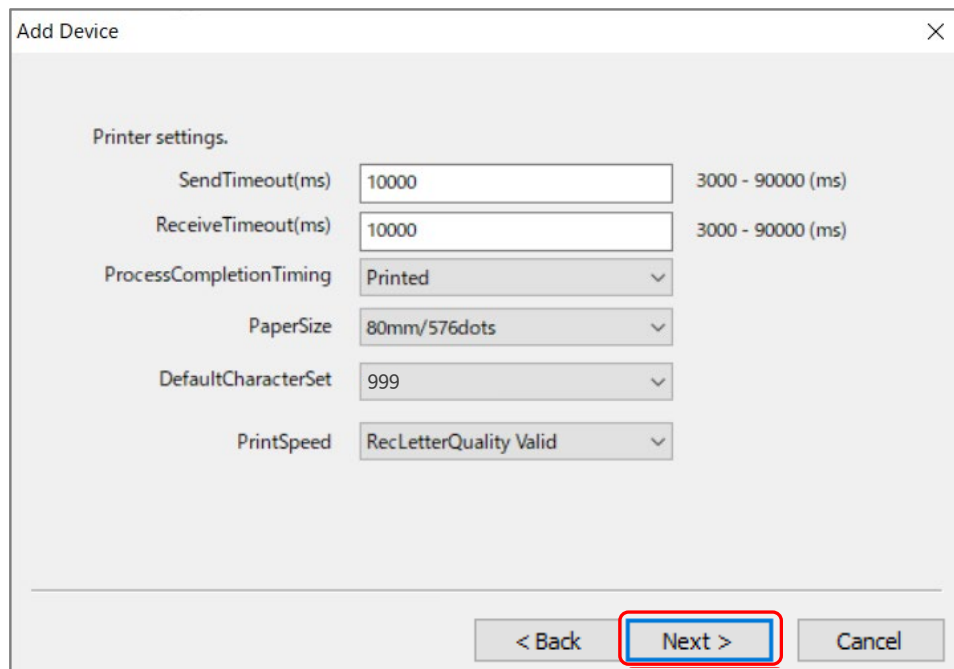


The screenshot shows the same "Add Device" dialog box, but now it displays "Printer settings." with several configuration options. Each option has a text box or dropdown menu. To the right of the timeout fields, the range "3000 - 90000 (ms)" is displayed. At the bottom, the "Next >" button is again highlighted with a red rectangle.

SendTimeout(ms)	<input type="text" value="10000"/>	3000 - 90000 (ms)
ReceiveTimeout(ms)	<input type="text" value="10000"/>	3000 - 90000 (ms)
ProcessCompletionTiming	<input type="text" value="Printed"/>	
PaperSize	<input type="text" value="80mm/576dots"/>	
DefaultCharacterSet	<input type="text" value="999"/>	
PrintSpeed	<input type="text" value="RecLetterQuality Valid"/>	

- ⑥ Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding no drawer:
Select "0" for [The number of drawers], and click the [Next >] button.
 - When adding 1 drawer in addition to the printer:
Select "1" for [The number of drawers], and click the [Next >] button.
See the description ④ in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.
 - When adding 2 drawers in addition to the printer:
Select "2" for [The number of drawers], and click the [Next >] button.
See the description ④ in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.

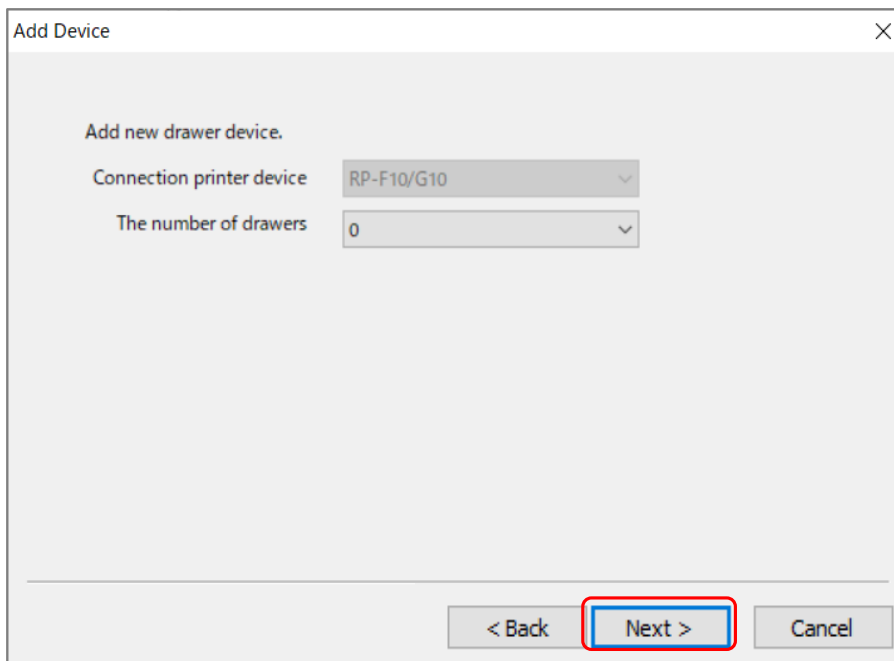


- ⑦ Click the [Finish] button.

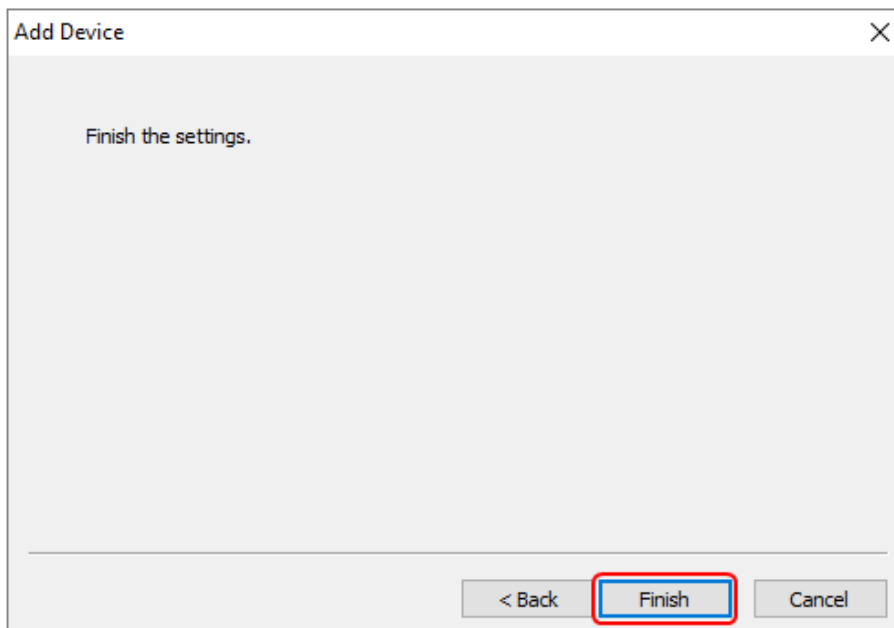

When selecting the printer driver

- ④ Select the printer driver from [Printer Driver], and then click the [Next >] button. [New DeviceName] is set automatically.

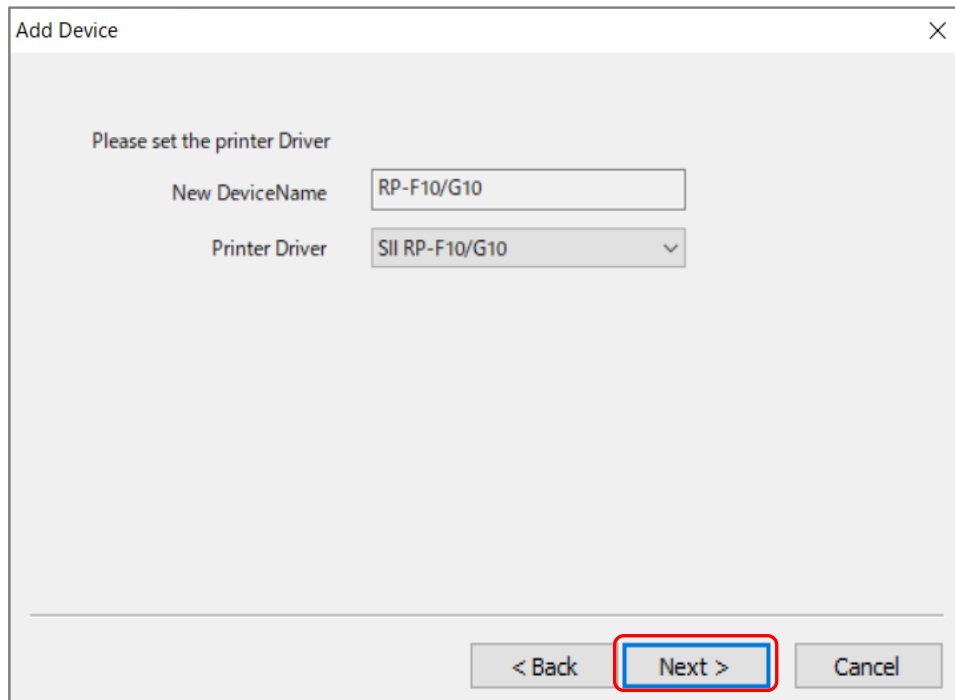

Add Device


Please set the printer Driver

New DeviceName RP-F10/G10

Printer Driver SII RP-F10/G10

< Back Next > Cancel

- ⑤ Enter or select the settings of the printer, and then click the [Next >] button.

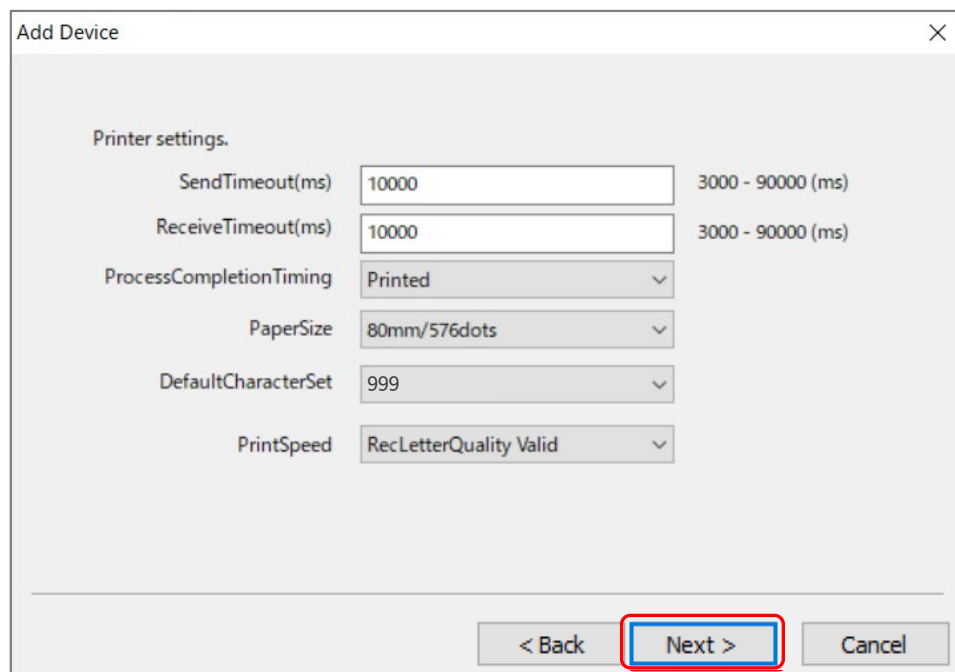

Add Device

Printer settings.

SendTimeout(ms) 10000 3000 - 90000 (ms)

ReceiveTimeout(ms) 10000 3000 - 90000 (ms)

ProcessCompletionTiming Printed


PaperSize 80mm/576dots

DefaultCharacterSet 999

PrintSpeed RecLetterQuality Valid


< Back Next > Cancel

- ⑥ Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding no drawer:
Select "0" for [The number of drawers], and click the [Next >] button.
 - When adding 1 drawer in addition to the printer:
Select "1" for [The number of drawers], and click the [Next >] button.
See the description ④ in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.
 - When adding 2 drawers in addition to the printer:
Select "2" for [The number of drawers], and click the [Next >] button.
See the description ④ in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.

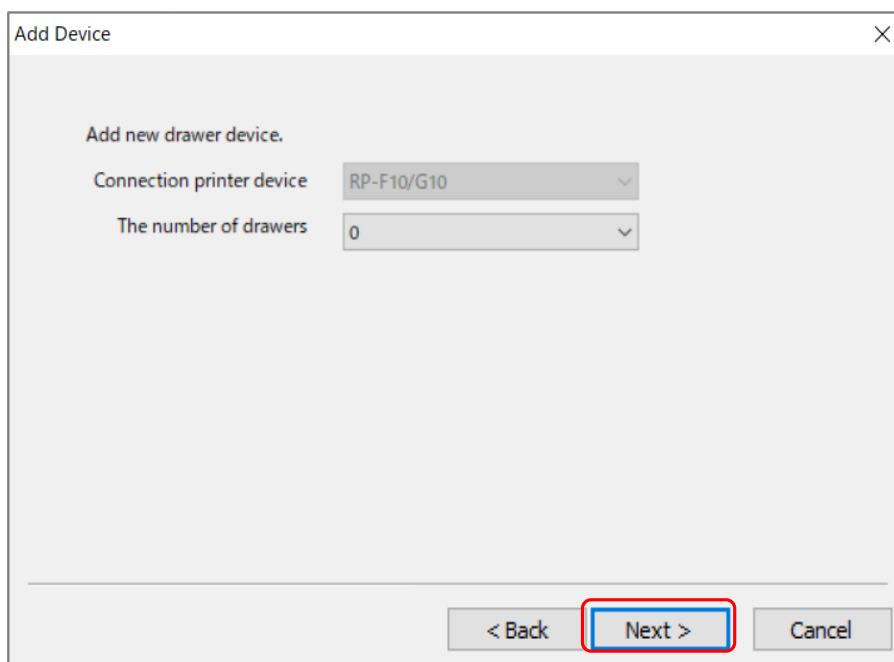

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. Inside the dialog, there is a section titled "Add new drawer device." Below this title, there are two dropdown menus. The first is labeled "Connection printer device" and has "RP-F10/G10" selected. The second is labeled "The number of drawers" and has "0" selected. At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangular box.


- ⑦ Click the [Finish] button.

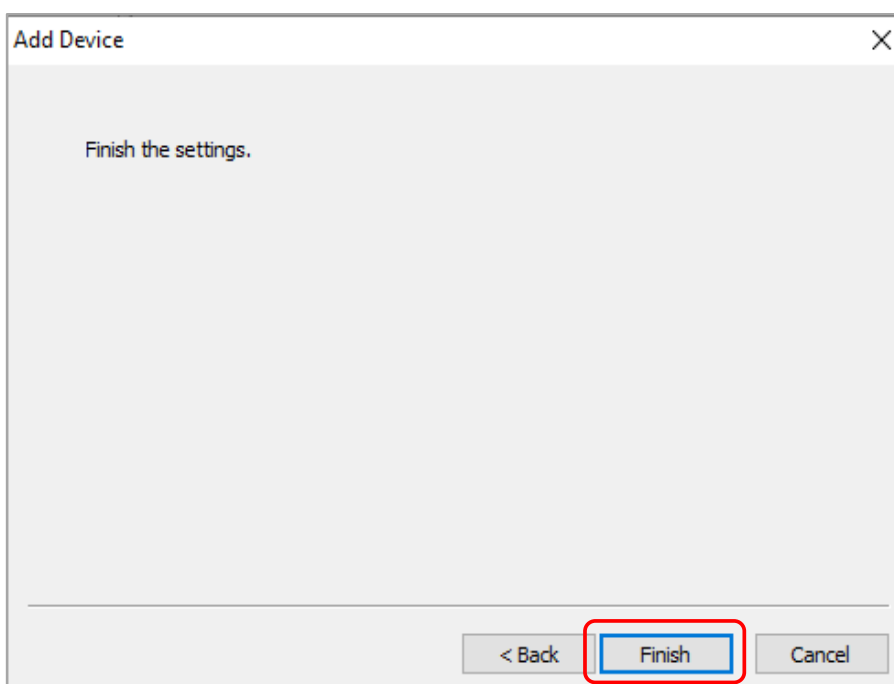


The screenshot shows the same "Add Device" dialog box, but now it displays the text "Finish the settings." in the main area. The buttons at the bottom are "< Back", "Finish", and "Cancel". The "Finish" button is highlighted with a red rectangular box.

(2) Addition of CashDrawer

- ① Start the configuration program, and select [Edit] – [Add Device...] from "Menu Bar".

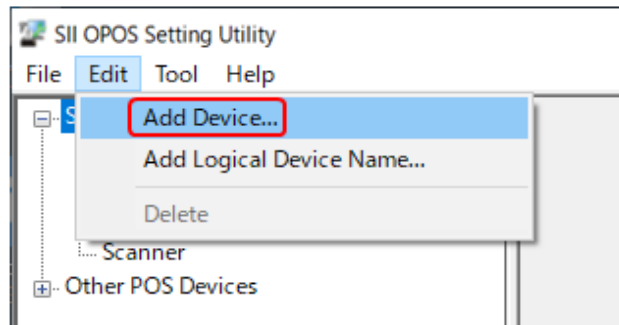

- ② Select "CashDrawer" for [DeviceClass], and then click the [Next >] button.

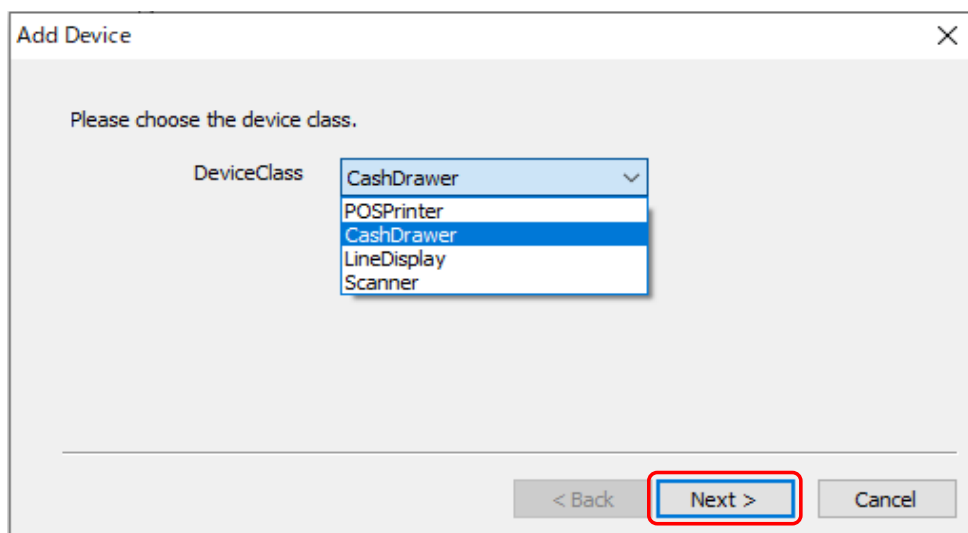

- ③ Select the printer to be connected from [Connection printer device].
Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding 1 drawer:
Select "1" in [The number of drawers], and click the [Next >] button.
 - When adding 2 drawers:
Select "2" in [The number of drawers], and click the [Next >] button.

Add Device

Add new drawer device.

Connection printer device RP-F10/G10

The number of drawers 2


0
1
2

< Back Next > Cancel

Reference


- Up to 2 drawers can be set for 1 printer.

- ④ Enter or select the settings of the first drawer, and click the [Next >] button.
When selecting "1" in [The number of drawers] of the description 3), see the description 6) for the subsequent setting.

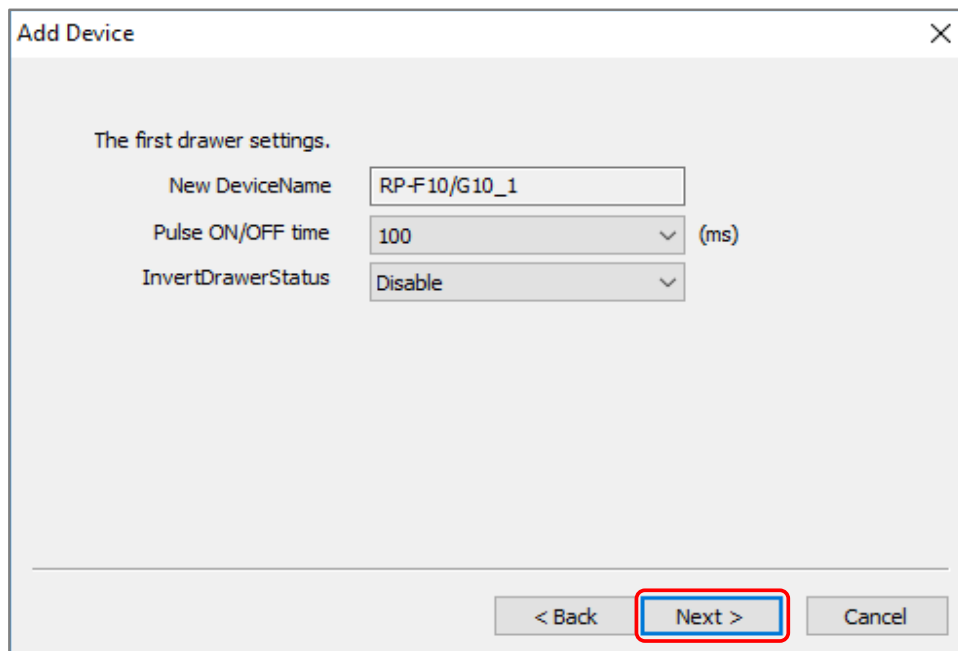


The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. The main content area is titled "The first drawer settings." and contains three input fields: "New DeviceName" with the value "RP-F10/G10_1", "Pulse ON/OFF time" with the value "100" and a "(ms)" label, and "InvertDrawerStatus" with the value "Disable". At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangular border.

- ⑤ Enter or select the settings of the second drawer, and click the [Next >] button.

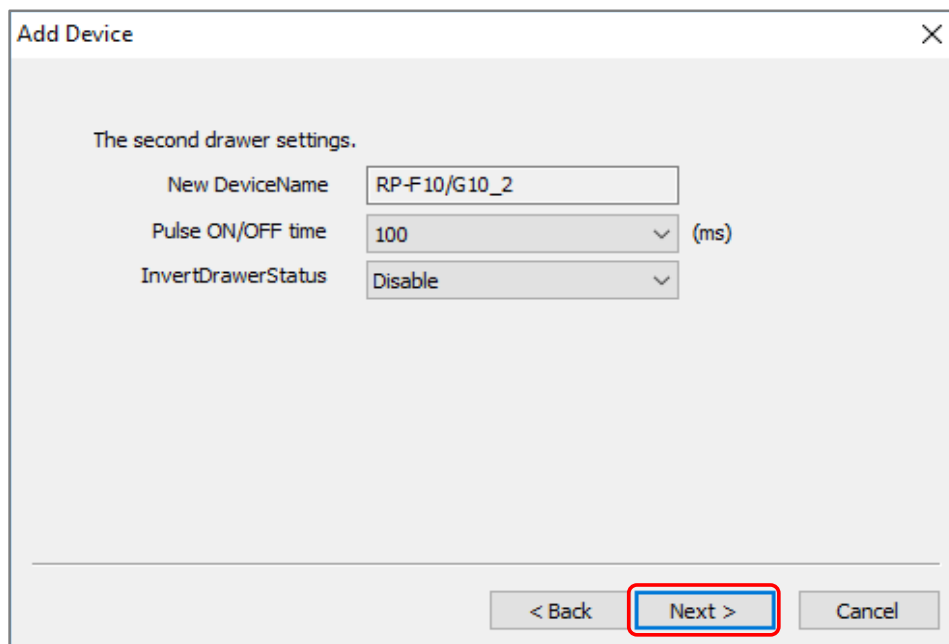

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. The main content area is titled "The second drawer settings." and contains three input fields: "New DeviceName" with the value "RP-F10/G10_2", "Pulse ON/OFF time" with the value "100" and a "(ms)" label, and "InvertDrawerStatus" with the value "Disable". At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangular border.

- ⑥ Click the [Finish] button.

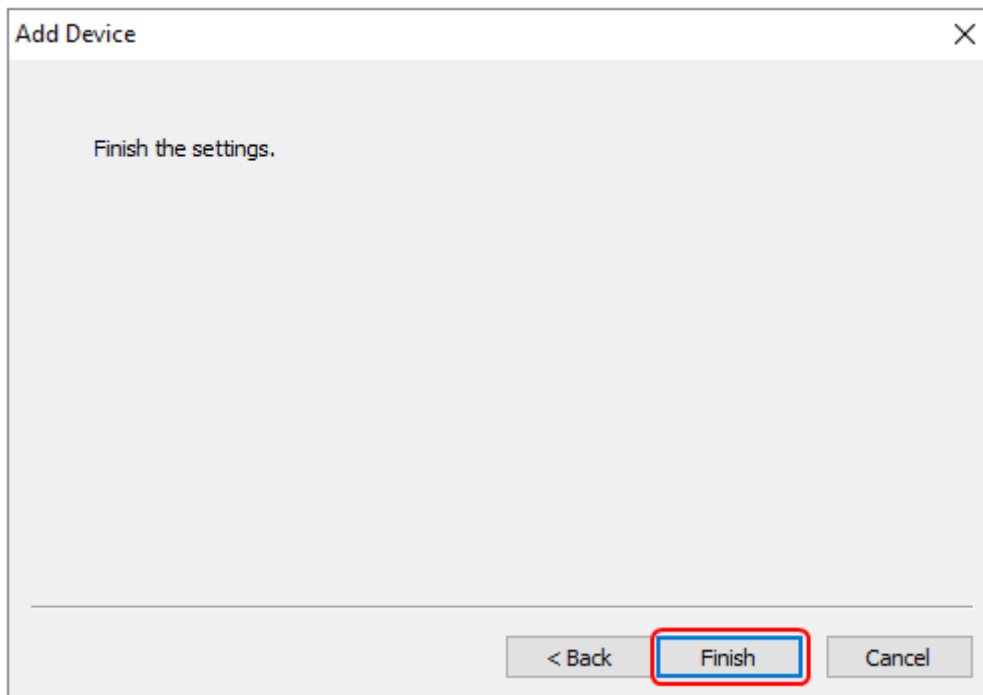


Reference

- When adding the printer and the drawer at the same time, the printer will be displayed preferentially.


(3) Addition of Scanner

Supported only by RP-F10.

- ① Start the configuration program, and select [Edit] – [Add Device...] from "Menu Bar".

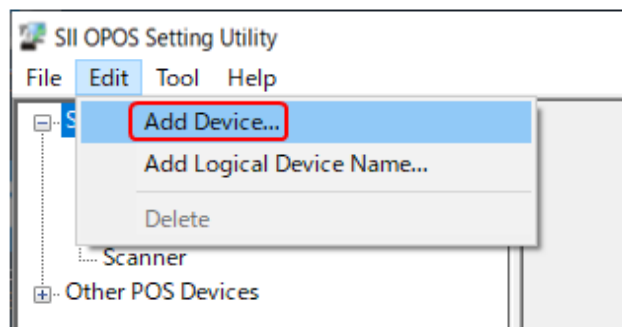

- ② Select "Scanner" for [DeviceClass], and then click the [Next >] button.

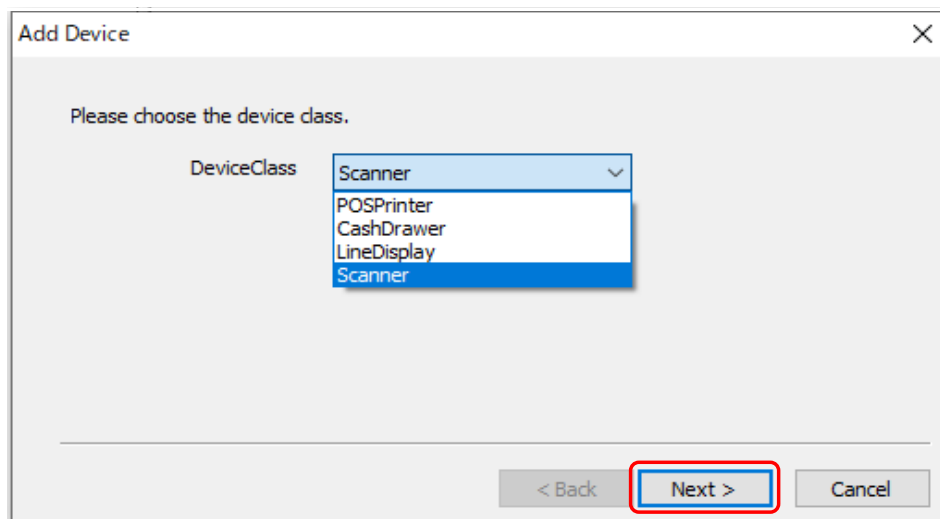


- ③ Select the device to be connected from [Device Model], and click the [Next >] button.

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. The main text inside the dialog is "Please choose the scanner model." Below this text is a label "Device Model" followed by a dropdown menu. The dropdown menu is open, showing "RP-F10" as the selected option. At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangular border.

- ④ Select the printer driver to be used for the scanner selected in the description 2) from [Connection printer device], and then click the [Next >] button. [New DeviceName] is set automatically.

The screenshot shows the same "Add Device" dialog box, but now the main text is "Please set connection printer device." There are two input fields. The first is labeled "New DeviceName" and contains the text "RP-F10". The second is labeled "Connection printer device" and is a dropdown menu with "RP-F10/G10" selected. At the bottom, the same three buttons are present: "< Back", "Next >", and "Cancel". The "Next >" button is again highlighted with a red rectangular border.


- ⑤ Click the [Finish] button.

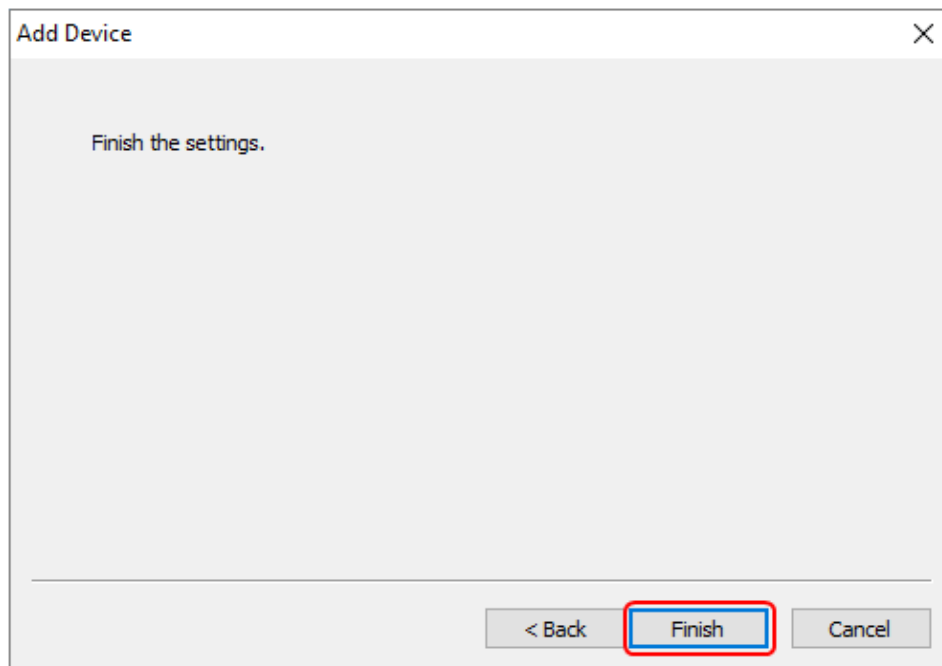


3.2.2 Changing Device Settings

The procedure for changing settings of the added device is described.

- ① Select the device name from "Device View".

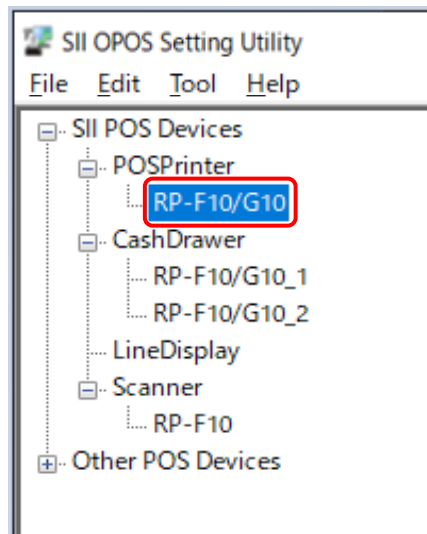

- ② "Setting View" is displayed in editable state. Change the contents.

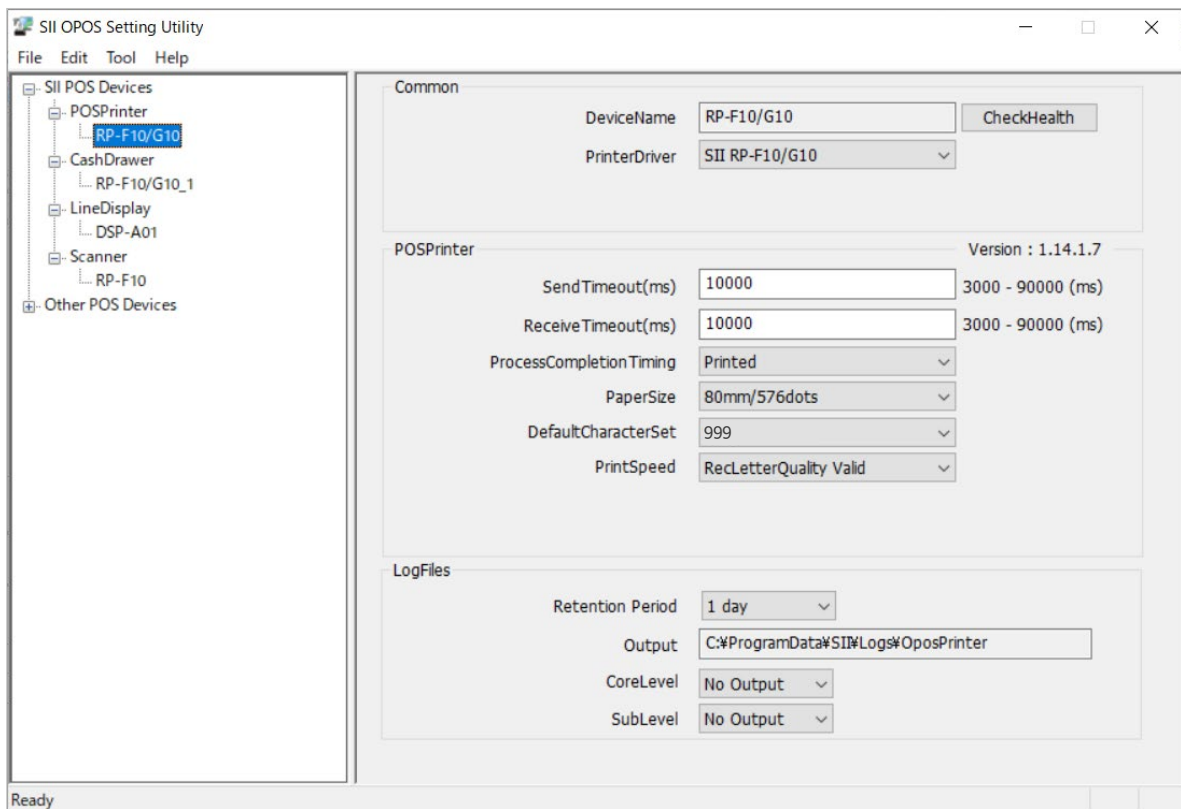


Reference

- When another device is selected or the configuration program is finished, the setting contents are saved in the registry.


3.2.3 Deletion of Device

The procedure for deleting the added device is described below.


- ① Select the device to be deleted from "Device View", and select [Delete] from the right-click menu.

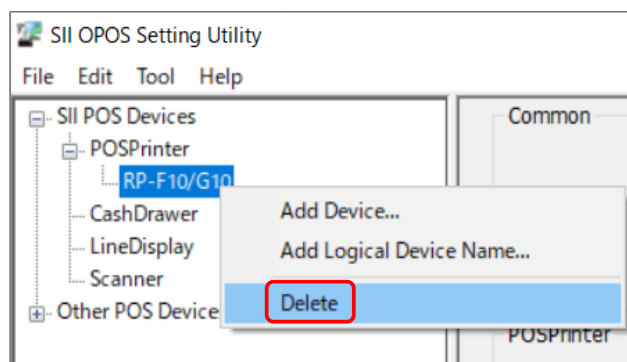

- ② Confirm the device name, and click the [OK] button.

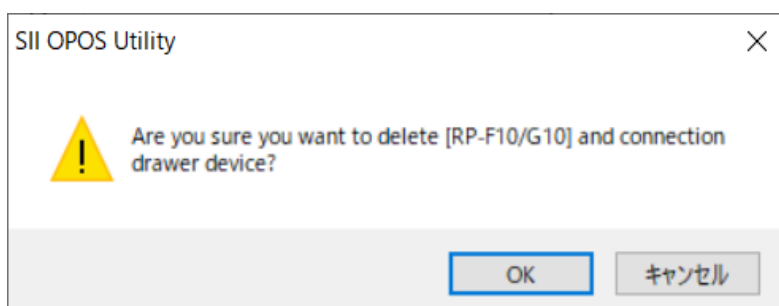

- ③ Confirm that the selected device has been deleted from the "Device View".

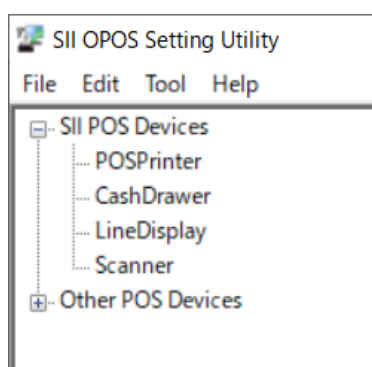

Caution


- ◆ When the POSPrinter device is selected, the selected POSPrinter device, the device which is connected to the printer and each logical device name are all deleted.
When the CashDrawer device is selected, only the selected CashDrawer device and the logical device name are deleted.
When the Scanner device is selected, only the selected Scanner device and the logical device name are deleted.

3.2.4 Adding and Deleting Logical Device Name


The procedures for adding and deleting the logical device name are described below.

(1) Addition of logical device name


- ① Start the configuration program, and select [Edit] – [Add Logical Device Name...] from "Menu Bar".

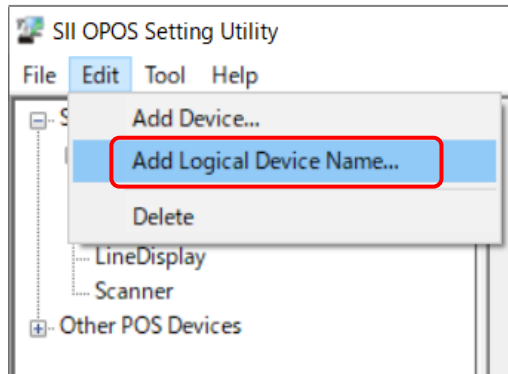

- ② Select the target device in [DeviceClass], and click the [Next >] button.

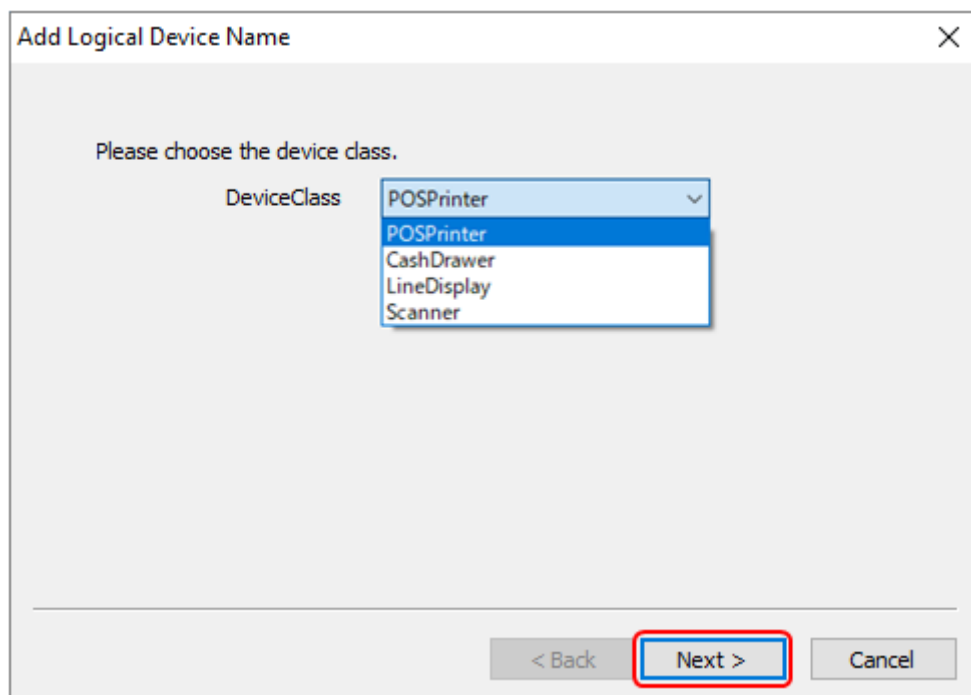

- ③ Select the target device name in [Device Name], and enter the [Logical Device Name]. Click the [Next >] button.

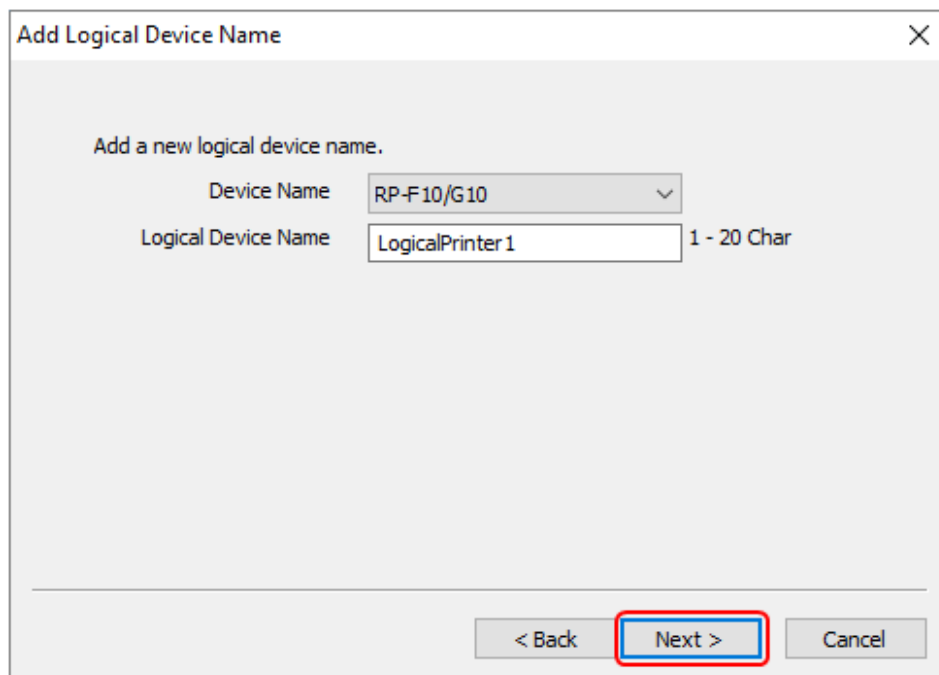

Add Logical Device Name


Add a new logical device name.

Device Name RP-F10/G10

Logical Device Name LogicalPrinter1 1 - 20 Char

< Back Next > Cancel

- ④ Click the [Finish] button.

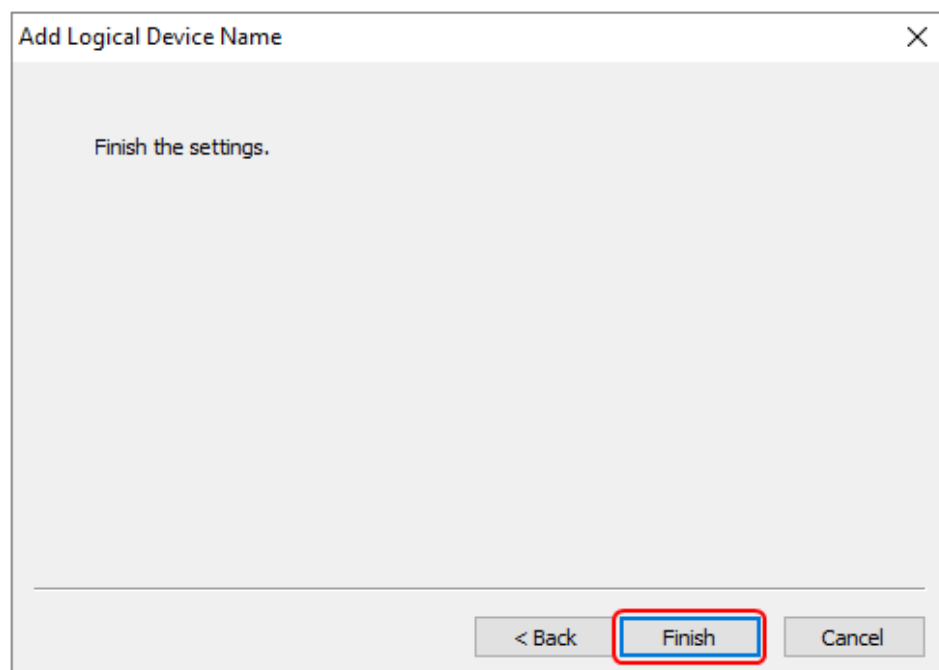


Add Logical Device Name

Finish the settings.


< Back Finish Cancel

- ⑤ Confirm the contents of "Device View".

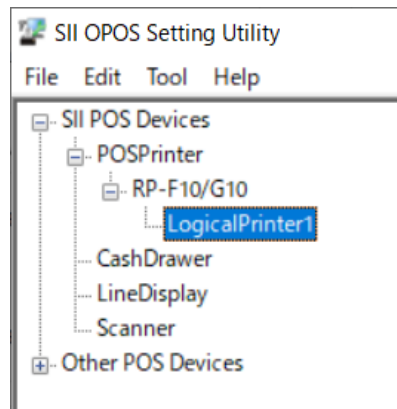


(2) Deletion of Logical Device Name


- ① Select the logical device name to be deleted from "Device View", and select [Delete] from the right-click menu.

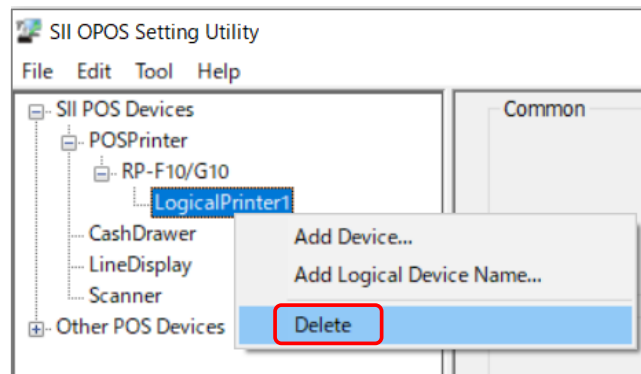

- ② Confirm the logical device name, and click the [OK] button.

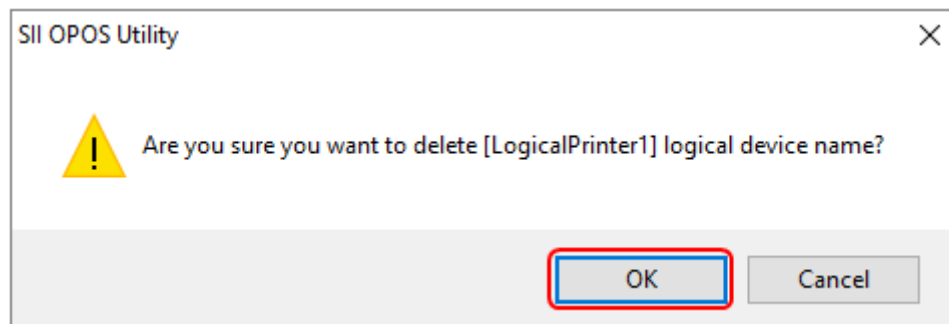


- ③ Confirm that the selected logical device name has been deleted from the "Device View".

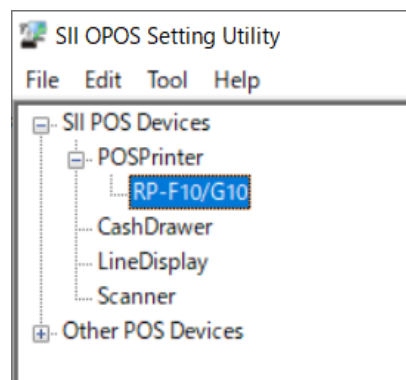


3.2.5 Device Interactive Test

In the configuration program, an interactive test can be performed for the device selected in "Device View". The procedure of the interactive test is described below.

- ① Select the device name or the logical device name for which the interactive test is performed from "Device View".

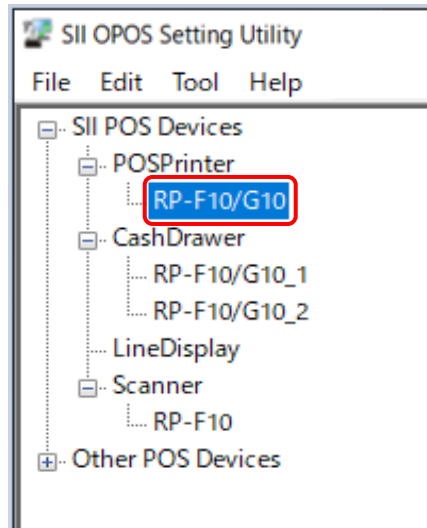

- ② Select [Tool] menu - [CheckHealth], or click [CheckHealth] button in "Setting View".

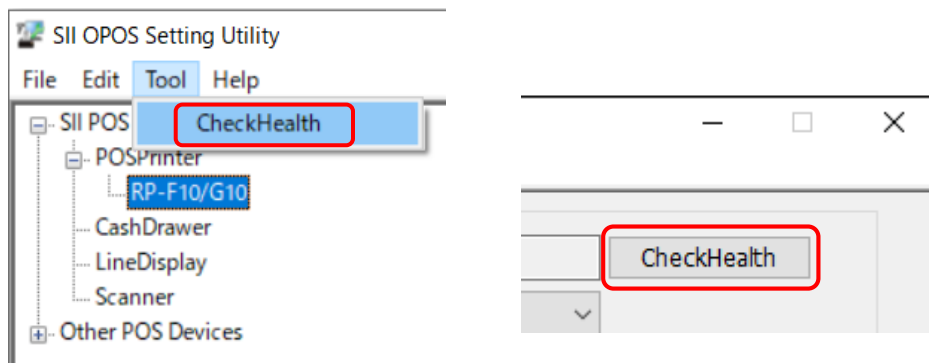


- ③ The preparation for the interactive test is started.

- **POSPrinter and CashDrawer**

[When the preparation for the interactive test succeeded]

- ④ The dialogue to perform the interactive test is displayed.

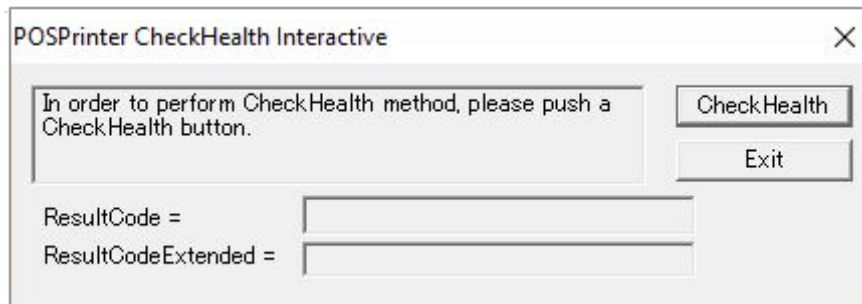

To start the interactive test, click the [CheckHealth] button.
To exit the interactive test, click the [Exit] button.

[When the preparation for the interactive test failed]


- ④ The error message is displayed.



See **ResultCode** for ResultCode.
Click the [OK] button after confirming ResultCode.

- **Scanner**

- ④ The result of interactive test is displayed.

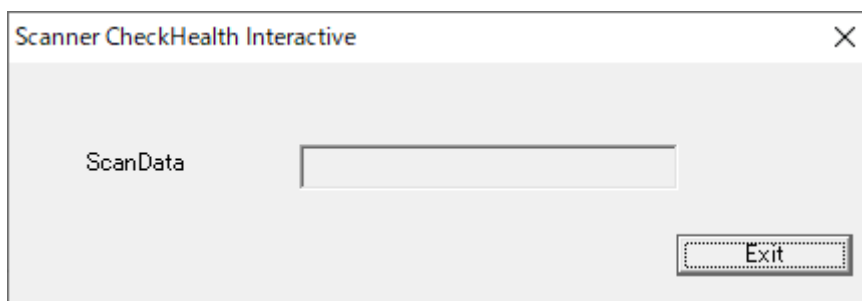

To exit the interactive test, click the [Exit] button.

3.2.6 Memory settings of printer (PrinterUtility)

In the configuration program, the settings of the memory switches connected to the printer can be confirmed and changed.

(1) When the port is selected in the configuration program

① Click the [Printer Utility] button in the "Setting View".



② SII Printer Setting Utility starts up.

(2) When the printer driver is selected in the configuration program

When selecting the printer driver, it is necessary to install the printer driver.

See "SII Software Package for Windows Installation Guide" for installation of the printer driver.

Start up SII Printer Setting Utility following the procedures below after installing the printer driver.

- For Windows 11:
Select [All apps] - [SII Printer Software] - [Printer Setting Utility] from the Start menu, and then the SII Printer Setting Utility starts up.
- For Windows 10:
Select [SII Printer Software] - [Printer Setting Utility] from the Start menu, and then the SII Printer Setting Utility starts up.

Chapter 4 OPOS Control

This chapter describes the use procedure of the OPOS control.

4.1 General

Use the software in the following procedure for the application.

- (1) **Open:** Link the Control Object to the Service Project.
- (2) **ClaimDevice:** Call to gain exclusive access to the device.*¹
- (3) **DeviceEnabled:** Set to TRUE to make the device operational.
- (4) Use the device (Properties, methods, and events).
- (5) **DeviceEnabled:** Set to FALSE to disable the device.
- (6) **ReleaseDevice:** Release exclusive access to the device.*¹
- (7) **Close:** Release the Service Object from the Control Object.

*1: This procedure is required for POS Printer Control.

It is not necessary when sharing Cash Drawer Control with multiple applications.

4.2 POS Printer Control

POS Printer Control supports only "Receipt".

The interfaces for the methods and properties related to "Journal" and "Slip" are provided but the operation is not supported.

POS Printer Control supports synchronous/asynchronous output following the general output model.

In addition, the printer controlled by the POS Printer Control is the device used exclusively.

4.3 Cash Drawer Control

The device controlled by the Cash Drawer Control can be shared with multiple applications.

In that case, set **DeviceEnabled** to TRUE after setting the Cash Drawer Control to **Open** from each application.

4.4 Scanner Control

Supported only by RP-F10.

Scanner Control reads the encoding data from the barcode label. Scanner Control follows the general input model of the event-driven input.

The scanner controlled by the Scanner Control is the device used exclusively.

Chapter 5 POS Printer Control Interface Specifications

This chapter describes the POS Printer Control properties, methods and events implemented in this software.

5.1 Summary

5.1.1 Common Properties

Property Name	Type	Access	Availability Condition	Default
BinaryConversion	Long	R/W	Open	OPOS_BC_NONE(0)
CapCompareFirmwareVersion	Boolean	R	Open	FALSE
CapPowerReporting	Long	R	Open	OPOS_PR_STANDARD(1)
CapStatisticsReporting	Boolean	R	Open	TRUE
CapUpdateFirmware	Boolean	R	Open	FALSE
CapUpdateStatistics	Boolean	R	Open	TRUE
CheckHealthText	String	R	Open	""
Claimed	Boolean	R	Open	FALSE
ControlObjectDescription	String	R	-	"OPOS POSPrinter Control 1.14.xxx [Public, by CRM/RCS-Dayton]"
ControlObjectVersion	Long	R	-	1014xxx
DeviceDescription	String	R	Open	"SII RP-x10 POS Printer"
DeviceEnabled	Boolean	R/W	Open & Claim	FALSE
DeviceName	String	R	Open	"RP-x10 POS Printer"
FreezeEvents	Boolean	R/W	Open	FALSE
OpenResult	Long	R	-	OPOS_SUCCESS(0)
OutputID	Long	R	Open	0
PowerNotify	Long	R/W	Open	OPOS_PN_DISABLED(0)
PowerState	Long	R	Open	OPOS_PS_UNKNOWN(2000)
ResultCode	Long	R	-	OPOS_SUCCESS(0)
ResultCodeExtended	Long	R	Open	0
ServiceObjectDescription	String	R	Open	"SII RP-x10 POS Printer Service Object, Copyright(C) 20xx Seiko Instruments Inc."
ServiceObjectVersion	Long	R	Open	1014xxx
State	Long	R	-	OPOS_S_CLOSED(1)

5.1.2 Specific Properties

(When RecLineWidth=576, RecLineChars=48, RecLineSpacing=30, CharacterSet=999)

Property Name	Type	Access	Availability Condition	Default
AsyncMode	Boolean	R/W	Open	FALSE
CapCharacterSet	Long	R	Open	PTR_CCS_KANJI(11)
CapCoverSensor	Boolean	R	Open	TRUE
CapMapCharacterSet	Boolean	R	Open	FALSE
CapRec2Color	Boolean	R	Open	FALSE
CapRecBarCode	Boolean	R	Open	TRUE
CapRecBitmap	Boolean	R	Open	TRUE
CapRecBold	Boolean	R	Open	TRUE
CapRecCartridgeSensor	Long	R	Open	0
CapRecColor	Long	R	Open	PTR_COLOR_PRIMARY (0x00000001)
CapRecDhigh	Boolean	R	Open	TRUE
CapRecDwide	Boolean	R	Open	TRUE
CapRecDwideDhigh	Boolean	R	Open	TRUE
CapRecEmptySensor	Boolean	R	Open	TRUE
CapRecItalic	Boolean	R	Open	FALSE
CapRecLeft90	Boolean	R	Open	TRUE
CapRecMarkFeed	Long	R	Open	0
CapRecNearEndSensor	Boolean	R	Open	FALSE
CapRecPageMode	Boolean	R	Open	TRUE
CapRecPapercut	Boolean	R	Open	TRUE
CapRecPresent	Boolean	R	Open	TRUE
CapRecRight90	Boolean	R	Open	TRUE
CapRecRotate180	Boolean	R	Open	TRUE
CapRecRuledLine	Long	R	Open	PTR_RL_HORIZONTAL(1) + PTR_RL_VERTICAL(2)
CapRecStamp	Boolean	R	Open	FALSE
CapRecUnderline	Boolean	R	Open	TRUE
CapTransaction	Boolean	R	Open	TRUE
CartridgeNotify	Long	R/W	Open	PTR_CN_DISABLED (0)
CharacterSet	Long	R/W	Open, Claim, & Enable	999*1
CharacterSetList	String	R	Open	"437,737*2,850,852,855*2,857*2,858,860, 863,865,866*2,932,999,1250,1251,1252, 1253,1254"
CoverOpen	Boolean	R	Open, Claim, & Enable	Depends on printer status
ErrorLevel	Long	R	Open	PTR_EL_NONE(1)
ErrorStation	Long	R	Open	0
ErrorString	String	R	Open	""

Property Name	Type	Access	Availability Condition	Default
FlagWhenIdle	Boolean	R/W	Open	FALSE
FontTypefaceList	String	R	Open	""
MapCharacterSet	Boolean	R/W	Open	FALSE
MapMode	Long	R/W	Open	PTR_MM_DOTS(1)
PageModeArea	String	R	Open	""
PageModeDescriptor	Long	R	Open	0
PageModeHorizontalPosition	Long	R/W	Open	0
PageModePrintArea	String	R/W	Open	""
PageModePrintDirection	Long	R/W	Open	0
PageModeStation	Long	R/W	Open	0
PageModeVerticalPosition	Long	R/W	Open	0
RecBarCodeRotationList	String	R	Open	"0,R90,L90,180"
RecBitmapRotationList	String	R	Open	"0,R90,L90,180"
RecCartridgeState	Long	R	Open, Claim, & Enable	PTR_CART_UNKNOWN (0x10000000)
RecCurrentCartridge	Long	R/W	Open, Claim, & Enable	PTR_COLOR_PRIMARY (0x00000001)
RecEmpty	Boolean	R	Open, Claim, & Enable	Depends on printer status
RecLetterQuality	Boolean	R/W	Open, Claim, & Enable	FALSE
RecLineChars	Long	R/W	Open, Claim, & Enable	48
RecLineCharsList	String	R	Open	"36,41,44,48,57,64,72"
RecLineHeight	Long	R/W	Open, Claim, & Enable	24
RecLineSpacing	Long	R/W	Open, Claim, & Enable	30
RecLinesToPaperCut	Long	Open, Claim, & Enable	Open, Claim, & Enable	3
RecLineWidth	Long	R	Open, Claim, & Enable	576*1
RecNearEnd	Boolean	R	Open, Claim, & Enable	FALSE
RecSidewaysMaxChars	Long	R	Open, Claim, & Enable	200
RecSidewaysMaxLines	Long	R	Open, Claim, & Enable	19
RotateSpecial	Long	R/W	Open	PTR_RP_NORMAL(1)

*1: Can be modified by the configuration program.

*2: Not supported in RP-E10.

The following specific properties are provided but the operation is not supported.

Property Name	Type	Access	Availability Condition	Default
CapConcurrentJrnRec	Boolean	R	Open	FALSE
CapConcurrentJrnSlp	Boolean	R	Open	FALSE
CapConcurrentPageMode	Boolean	R	Open	FALSE
CapConcurrentRecSlp	Boolean	R	Open	FALSE
CapJrn2Color	Boolean	R	Open	FALSE
CapJrnBold	Boolean	R	Open	FALSE
CapJrnCartridgeSensor	Long	R	Open	0
CapJrnColor	Long	R	Open	0
CapJrnDhigh	Boolean	R	Open	FALSE
CapJrnDwide	Boolean	R	Open	FALSE
CapJrnDwideDhigh	Boolean	R	Open	FALSE
CapJrnEmptySensor	Boolean	R	Open	FALSE
CapJrnItalic	Boolean	R	Open	FALSE
CapJrnNearEndSensor	Boolean	R	Open	FALSE
CapJrnPresent	Boolean	R	Open	FALSE
CapJrnUnderline	Boolean	R	Open	FALSE
CapSlp2Color	Boolean	R	Open	FALSE
CapSlpBarCode	Boolean	R	Open	FALSE
CapSlpBitmap	Boolean	R	Open	FALSE
CapSlpBold	Boolean	R	Open	FALSE
CapSlpBothSidesPrint	Boolean	R	Open	FALSE
CapSlpCartridgeSensor	Long	R	Open	0
CapSlpColor	Long	R	Open	0
CapSlpDhigh	Boolean	R	Open	FALSE
CapSlpDwide	Boolean	R	Open	FALSE
CapSlpDwideDhigh	Boolean	R	Open	FALSE
CapSlpEmptySensor	Boolean	R	Open	FALSE
CapSlpFullslip	Boolean	R	Open	FALSE
CapSlpItalic	Boolean	R	Open	FALSE
CapSlpLeft90	Boolean	R	Open	FALSE
CapSlpNearEndSensor	Boolean	R	Open	FALSE
CapSlpPageMode	Boolean	R	Open	FALSE
CapSlpPresent	Boolean	R	Open	FALSE
CapSlpRight90	Boolean	R	Open	FALSE
CapSlpRotate180	Boolean	R	Open	FALSE
CapSlpRuledLine	Long	R	Open	0
CapSlpUnderline	Boolean	R	Open	FALSE
JrnCartridgeState	Long	R	Open, Claim, & Enable	PTR_CART_UNKNOWN (0x10000000)

Property Name	Type	Access	Availability Condition	Default
JrnCurrentCartridge	Long	R/W	Open, Claim, & Enable	PTR_COLOR_PRIMARY (0x00000001)
JrnEmpty	Boolean	R	Open, Claim, & Enable	FALSE
JrnLetterQuality	Boolean	R/W	Open, Claim, & Enable	FALSE
JrnLineChars	Long	R/W	Open, Claim, & Enable	0
JrnLineCharsList	String	R	Open	""
JrnLineHeight	Long	R/W	Open, Claim, & Enable	0
JrnLineSpacing	Long	R/W	Open, Claim, & Enable	0
JrnLineWidth	Long	R	Open, Claim, & Enable	0
JrnNearEnd	Boolean	R	Open, Claim, & Enable	FALSE
SlpBarCodeRotationList	String	R	Open	""
SlpBitmapRotationList	String	R	Open	""
SlpCartridgeState	Long	R	Open, Claim, & Enable	PTR_CART_UNKNOWN (0x10000000)
SlpCurrentCartridge	Long	R/W	Open, Claim, & Enable	PTR_COLOR_PRIMARY (0x00000001)
SlpEmpty	Boolean	R	Open, Claim, & Enable	FALSE
SlpLetterQuality	Boolean	R/W	Open, Claim, & Enable	FALSE
SlpLineChars	Long	R/W	Open, Claim, & Enable	0
SlpLineCharsList	String	R	Open	""
SlpLineHeight	Long	R/W	Open, Claim, & Enable	0
SlpLinesNearEndToEnd	Long	R	Open, Claim, & Enable	0
SlpLineSpacing	Long	R/W	Open, Claim, & Enable	0
SlpLineWidth	Long	R	Open, Claim, & Enable	0
SlpMaxLines	Long	R	Open, Claim, & Enable	0
SlpNearEnd	Boolean	R	Open, Claim, & Enable	FALSE
SlpPrintSide	Long	R	Open, Claim, & Enable	0
SlpSidewaysMaxChars	Long	R	Open, Claim, & Enable	0

Property Name	Type	Access	Availability Condition	Default
SlpSidewaysMaxLines	Long	R	Open, Claim, & Enable	0

5.1.3 Common Methods

Method Name	Availability Condition
CheckHealth	Open, Claim, & Enable
ClaimDevice	Open
ClearOutput	Open, Claim, & Enable ^{*1}
Close	Open
CompareFirmwareVersion	Open, Claim, & Enable
DirectIO	Open, Claim, & Enable ^{*1}
Open	-
ReleaseDevice	Open & Claim
ResetStatistics	Open, Claim, & Enable
RetrieveStatistics	Open, Claim, & Enable
UpdateFirmware	Open, Claim, & Enable
UpdateStatistics	Open, Claim, & Enable

^{*1}: The availability condition differs from that of UPOS V 1.14.1.

5.1.4 Specific Methods

Method Name	Availability Condition
BeginInsertion	Open, Claim, & Enable
BeginRemoval	Open, Claim, & Enable
ChangePrintSide	Open, Claim, & Enable
ClearPrintArea	Open, Claim, & Enable
CutPaper	Open, Claim, & Enable
DrawRuledLine	Open, Claim, & Enable
EndInsertion	Open, Claim, & Enable
EndRemoval	Open, Claim, & Enable
MarkFeed	Open, Claim, & Enable
PageModePrint	Open, Claim, & Enable
PrintBarCode	Open, Claim, & Enable
PrintBitmap	Open, Claim, & Enable
PrintImmediate	Open, Claim, & Enable
PrintMemoryBitmap	Open, Claim, & Enable
PrintNormal	Open, Claim, & Enable
PrintTwoNormal	Open, Claim, & Enable
RotatePrint	Open, Claim, & Enable
SetBitmap	Open, Claim, & Enable
SetLogo	Open, Claim, & Enable
TransactionPrint	Open, Claim, & Enable
ValidateData	Open, Claim, & Enable

5.1.5 Events

Event Name	Occurrence Condition
DirectIOEvent	Open, Claim, & Enable ^{*1}
ErrorEvent	Open, Claim, & Enable
OutputCompleteEvent	Open, Claim, & Enable
StatusUpdateEvent	Open, Claim, & Enable

^{*1}: The availability condition differs from that of UPOS V 1.14.1.

5.2 Data Characters and Escape Sequences

5.2.1 Escape Sequence Operated when Specified

Name	Data	Remarks
Paper cut	ESC [#]P	<ul style="list-style-type: none"> Cuts receipt. The placeholder '#' is replaced by an ASCII decimal string indicating the cut percentage. If a value greater than 100 is specified for '#', then a full cut is executed. If a value from 1 to 99 is specified for '#', a partial cut is executed. If 0 is specified for '#', no cut is executed. If '#' is omitted, a full cut is executed. This is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Feed and Paper cut	ESC [#]fP	<ul style="list-style-type: none"> Cuts receipt after feeding the paper RecLinesToPaperCut lines. The placeholder '#' is defined by "Paper cut" escape sequence (ESC [#]P). This is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Feed, Paper cut, and Stamp	ESC [#]sP	Not supported.
Print bitmap	ESC #B	<ul style="list-style-type: none"> Prints the pre-stored bitmap. The placeholder '#' is replaced by the bitmap number. A value from 1 to 20 can be specified for '#'. If values other than 1 to 20 are specified for '#', they are ignored. If the character '#' is omitted, the data is regarded as print data instead of an escape sequence and OPOS_SUCCESS(0) is returned when the ValidateData is used.
Print top logo	ESC tL	<ul style="list-style-type: none"> Prints the pre-stored top logo.
Print bottom logo	ESC bL	<ul style="list-style-type: none"> Prints the pre-stored bottom logo.
Fire stamp	ESC sL	Not supported.
Feed lines ^{*1}	ESC [#]IF	<ul style="list-style-type: none"> Feeds the paper forward by lines. The placeholder '#' is replaced by an ASCII decimal string indicating the number of lines to be fed. A value from 0 to 255 can be specified for '#'. If '#' exceeds this range, the maximum supported number of 255 lines is fed. If '#' is omitted, then one line is fed. This is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Feed units ^{*1}	ESC [#]uF	<ul style="list-style-type: none"> Feeds the paper forward by units in MapMode. The placeholder '#' is replaced by an ASCII decimal string indicating the number of units to be fed. If '#' is omitted, then one unit is fed. If MapMode is set to PTR_MM_DOTS(1), a value from 0 to 255 can be specified for '#'. If '#' exceeds this range, the maximum supported number of 255 units is fed. This is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.

Name	Data	Remarks
Feed reverse	ESC [#]rF	Not supported.
Pass through embedded data	ESC [*]#E	<ul style="list-style-type: none"> Sends the characters following "#E" through to the printer without modifying any of them. The placeholder '#' is replaced by an ASCII decimal string indicating the number of bytes following the escape sequence that should be passed through as-is to the printer. A value from 0 to 65535 can be specified for '#'. If the '#' exceeds this range, transmission of embedded data is not executed. The ValidateData returns OPOS_E_ILLEGAL(106). If '#' is omitted, 0 is assumed to be specified, and OPOS_SUCCESS(0) is returned. If the print data for the number of bytes specified by '#' is not set after the escape sequence is specified, only the available print data to send is sent. (Example: IF ESC 2E"a" is specified, only "a" is sent since only one byte is set for the character string.) During rotated 90° right/left mode by RotatePrint, the width cannot be calculated exactly because data string specified by transmission of embedded data is not counted as character string. Therefore, make an appropriate adjustment by inserting blanks.
Print in-line barcode (See "In-Line Barcode Printing" below)	ESC [*]#R	<ul style="list-style-type: none"> Prints a barcode. The placeholder '#' is replaced by an ASCII decimal string indicating the number of characters of the string following R (definition of the barcode characteristics). If '#' is omitted, the data is regarded as print data instead of an escape sequence. If the number of characters specified by '#' does not match the number of bytes following R, all the data within the range specified by '#' is discarded. The ValidateData returns OPOS_E_ILLEGAL(106). During rotated 90° right/left mode by the RotatePrint, the width cannot be calculated exactly because data string specified by transmission of barcode printing is not counted as character string. Therefore, make an appropriate adjustment by inserting blanks.
Print in-line ruled line (See "Ruled Line Drawing Printing" below)	ESC *#dL	<ul style="list-style-type: none"> Prints ruled lines. The placeholder '#' is replaced by an ASCII decimal string indicating the number of characters of the string following dL (definition of the ruled line characteristics). If '#' is omitted, the data is regarded as print data instead of an escape sequence. If the number of characters specified by '#' does not match the number of bytes following dL, or if the string following dL is improper, all the data within the range specified by '#' is discarded. The ValidateData returns OPOS_E_ILLEGAL(106). This is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.

*1: Not supported in RP-E10.

In RP-F10 and RP-G10, the line spacing is reduced according to the setting value of the printer function setting "Paper Saving Setting (Paper Saving)". Therefore, the following printing processes are changed.

- The amount of feed specified by the "Feed lines" escape sequence (ESC[*#*]F) is smaller than the setting value of **RecLineSpacing**.
- The amount of feed specified by the "Feed units" escape sequence (ESC[*#*]uF) is processed on the basis of the setting value of the printer function setting "Paper Saving Setting (Paper Saving)" (When Mode1 is selected, paper is not fed at all).

However, the line spacing from last print line to cut position is not reduced because paper is cut after executing the paper feed for saved dot lines.

The cut operations in which the paper feed for saved dot lines is executed are "Paper cut" escape sequence (ESC[*#*]P), "Feed and Paper cut" escape sequence (ESC[*#*]fP), and **CutPaper**.

• In-Line Barcode Printing

The application can print barcodes along with other print data by using the "Print in-line barcode" escape sequence (ESC[***]#R). The placeholder '#' is replaced by the number of characters of the string (definition of the barcode characteristics) following R.

The string following R specifies the barcode characteristics using lowercase alphabet letters and numbers. The available numbers are the constant values defined for **PrintBarCode**.

The characters indicating the attributes are as follows:

- s: symbology (barcode type)
- h: height (barcode height)
- w: width (barcode width)
- a: alignment (position of barcode)
- t: text position (position of HRI string)
- d: start of data (start position of barcode data)
- e: end of data (end position of barcode data)

The attributes must be written in the above order. Every attribute is mandatory. If either of the two conditions, parameter range violation or unsupported parameter value, is satisfied, the barcode is not printed, and the data following R for the number of characters specified by '#' is discarded. For the range of supported parameter values, see **PrintBarCode**.

The following example prints UPC-A with the conditions of center, HRI string printed below the barcode, 200 dots height, and 400 dots width.

```
ESC[*]33Rs101h200w400a-2t-13d123456789012e
```

For the barcode quiet zone, see the description of **PrintBarCode**.

• Ruled Line Drawing Printing

The application can print ruled lines along with other print data by using the "Print in-line ruled line" escape sequence (ESC[***]#dL). The placeholder '#' is replaced by the number of characters of the string (definition of the ruled line characteristics) following dL.

The string following dL specifies the ruled line characteristics using lowercase alphabet letters and numbers. The available numbers are the constant values defined for **DrawRuledLine**.

The characters indicating the attributes are as follows:

- p: position (position of ruled line)
- d: direction (direction of ruled line)
- w: width (ruled line width)
- s: style (ruled line style)
- c: color (ruled line color)

The attributes must be written in the above order. Every attribute is mandatory. If either of the two conditions, parameter range violation and unsupported parameter value, is satisfied, the ruled line is not printed, and the data following dL for the number of characters specified by '#' is discarded. For the range of supported parameter values, see **DrawRuledLine**.

The following example prints a horizontal ruled line with the conditions of solid line, 300 dots long starting at the 0th dot, 1 dot width, and black (Primary color).

```
ESC|*14dLp0,300d1w1s1c1
```

5.2.2 Escape Sequence Valid Until Changed

Name	Data	Remarks
Font typeface selection	ESC #FT	Not supported.

5.2.3 Escape Sequence Reset by End of Print Method or "Normal" Escape Sequence

Name	Data	Remarks
Bold	ESC [!]bC	<ul style="list-style-type: none">Prints in bold.If '!' is specified, bold is disabled.
Underline	ESC [!][#]uC	<ul style="list-style-type: none">Prints with underline. The placeholder '#' is replaced by an ASCII decimal string indicating the thickness of the underline in printer dot units. The available thickness is from 0 to 2. If '#' is omitted, then a thickness of 1 is used for the underline. If '#' is 3 or larger, then a thickness of 2 is used.If '!' is specified, the underline mode is cleared.
Italic	ESC [!]iC	Not supported.
Alternate color (Custom)	ESC [#]rC	Not supported.
Reverse video	ESC [!]rvC	<ul style="list-style-type: none">Prints in a reverse video format.If '!' is specified, reverse video is disabled.
Shading	ESC [#]sC	Not supported.
Single high and wide	ESC 1C	<ul style="list-style-type: none">Prints normal size.
Double wide	ESC 2C	<ul style="list-style-type: none">Prints double-wide characters.
Double high	ESC 3C	<ul style="list-style-type: none">Prints double-high characters.

Name	Data	Remarks
Double high and wide	ESC 4C	<ul style="list-style-type: none"> Prints double-high/double-wide characters.
Scale horizontally	ESC #hC	<ul style="list-style-type: none"> A supported value for the placeholder '#' is 1 to 8. If '#' is 8 or larger, then the scale factor 8 is used. If '#' is omitted, the data is regarded as print data instead of escape sequence and ValidateData returns OPOS_E_FAILURE(111).
Scale vertically	ESC #vC	<ul style="list-style-type: none"> A supported value for the placeholder '#' is 1 to 8. If '#' is 8 or larger, then the scale factor 8 is used. If '#' is omitted, the data is regarded as print data instead of escape sequence and ValidateData returns OPOS_E_FAILURE(111).
RGB Color	ESC [#]fC	Not supported.
Center	ESC cA	<ul style="list-style-type: none"> Aligns the text after ESC cA in the center. This must be specified at the head of the line. If not, this is invalid. Also, if there is a linefeed on the print data, the center is valid after linefeed. This specification is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Right justify	ESC rA	<ul style="list-style-type: none"> Aligns the text after ESC rA to the right. This must be specified at the head of the line. If not, this is invalid. Also, if there is a line feed on the print data, the right justify is valid after linefeed. This specification is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Left justify	ESC lA	<ul style="list-style-type: none"> Aligns the text after ESC lA to the left. This must be specified at the head of the line. If not, this is invalid. Also, if there is a line feed on the print data, the left justify valid after line feed. This specification is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Normal	ESC N	<ul style="list-style-type: none"> Restores printer characteristics to normal condition.
SubScript	ESC [!]tbC	Not supported.
SuperScript	ESC [!]tpC	Not supported.
Strike-through	ESC [!][#]stC	Not supported.

5.3 Common Properties

BinaryConversion Property R/W

Syntax **LONG BinaryConversion;**

Remarks OPOS passes multi-character input and output using BStrings. BStrings may be safely used for text data. As the BStrings are passed between the application and the OPOS Control, OLE may execute language-specific translations to or from Unicode. When BStrings are used to pass binary data, then these translations may alter the data such that the data byte in a BString character at the application does not match the corresponding byte at the Control. This mismatch is more likely when BString pointers are used, since the Unicode characters are presented to the application and/or OPOS Control, and a language difference between them may cause misinterpretation.

Characters between 0x00 and 0x7F may be sent without fear of language-specific translation. Only characters between 0x80 and 0xFF sometimes cause incorrect translations.

The values of **BinaryConversion** are as follows.

Value	Meaning
OPOS_BC_NONE(0)	Data is placed one byte per BString character, with no conversion.
OPOS_BC_NIBBLE(1)	Each byte is converted into two characters (This option provides for the fastest conversion between binary and ASCII characters). First character = 0x30 + bits 7-4 of the data byte. Second character = 0x30 + bits 3-0 of the data byte. Example: Byte value 154 = 0x9A is converted to the characters 0x39 0x3A (= string "9:"). Note that this conversion is not the more common hexadecimal ASCII, which would have converted 154 to 0x39 0x41 (= string "9A").
OPOS_BC_DECIMAL(2)	Each byte is converted into three characters. VAL (string) may be used on each 3 characters to convert from ASCII to binary. RIGHT ("^^"+STR(byte),3) may be used to produce 3 ASCII characters from each byte, where '^' represents the space character. Example 1: Byte value 154 = 0x9A becomes the characters 0x31 0x35 0x34 (= string "154"). Example 2: Byte value 8 becomes the characters 0x30 0x30 0x38 (= string "008").

When **BinaryConversion** is on (that is, not OPOS_BC_NONE(0)) and the property or method parameter description specifies that **BinaryConversion** applies, before setting the property or passing the method parameter, convert the string data into the format specified by the **BinaryConversion** value.

This property is initialized to OPOS_BC_NONE(0) by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	An illegal value was specified.

CapCompareFirmwareVersion Property

Syntax **BOOL CapCompareFirmwareVersion;**

Remarks Indicates the function that compares firmware version.
The following table shows the valid property values.

Value	Meaning
FALSE	The function that compares firmware versions is not supported.

This property is initialized to FALSE by **Open**.

CapPowerReporting Property

Syntax **LONG CapPowerReporting;**

Remarks Identifies the reporting capabilities of the device.
The following table shows the valid property values.

Value	Meaning
OPOS_PR_STANDARD(1)	The following 2 types of power state can be determined and reported. <ul style="list-style-type: none">• OFF_OFFLINE (power off or offline)• ONLINE

This property is initialized to OPOS_PR_STANDARD(1) by **Open**.

CapStatisticsReporting Property

Syntax **BOOL CapStatisticsReporting;**

Remarks Indicates the statistics accumulation function of the device.
The following table shows the valid property values.

Value	Meaning
TRUE	The device accumulates and can provide various statistics regarding usage. The information accumulated and reported is device specific, and is retrieved using RetrieveStatistics .

This property is initialized to TRUE by **Open**.

CapUpdateFirmware Property

Syntax **BOOL CapUpdateFirmware;**

Remarks Indicates whether the device supports firmware updating.
The following table shows the valid property values.

Value	Meaning
FALSE	Firmware update is not supported.

This property is initialized to FALSE by **Open**.

CapUpdateStatistics Property

Syntax **BOOL CapUpdateStatistics;**

Remarks Indicates the function that some or all device statistics can be reset.
The following table shows the valid property values.

Value	Meaning
TRUE	The device statistics, or some of the statistics, can be reset to 0 using ResetStatistics .

This property is initialized to TRUE by **Open**.

CheckHealthText Property

Syntax **BSTR CheckHealthText;**

Remarks Holds the results of the immediately preceding call to the **CheckHealth**.
The following examples show the results of diagnosis.

Value	Meaning
"Internal HCheck: Successful"	Confirmed that the printer is in the printable state.
"Internal HCheck: Failure"	Unable to confirm that the printer is in the printable state.
"External HCheck: Successful"	Succeeded in the communication confirmation of the printer and printing test.
"External HCheck: Failure"	Failed in the communication confirmation of the printer and printing test using the device.
"Interactive HCheck: Successful"	Succeeded in the interactive test of the device.
"Interactive HCheck: Failure"	Failed in the interactive test of the device.
"Interactive HCheck: Canceled"	For the interactive test of the device, the dialog is closed without testing.

This value is initialized to an empty string before the first call to **CheckHealth**.

Claimed Property

Syntax **BOOL Claimed;**

Remarks Indicates whether the device is claimed for exclusive access.
The following table shows the valid property values.

Value	Meaning
TRUE	The device is claimed for exclusive access
FALSE	The device is released for sharing with other applications.

This property is initialized to FALSE by **Open**.

ControlObjectDescription Property

Syntax **BSTR ControlObjectDescription;**

Remarks Identifies the Control Object by this property.
"OPOS POSPrinter Control 1.14.xxx [Public, by CRM/RCS-Dayton" is set.

This property is always readable.

ControlObjectVersion Property

Syntax **LONG ControlObjectVersion;**

Remarks This property holds the Control Object version number.

This property is always readable.

DeviceDescription Property

Syntax **BSTR DeviceDescription;**

Remarks This property identifies devices and related information.
Depends on the printer, the default is different.

Printer	Default
RP-F10/G10	"SII RP-F10/G10 POS Printer"
RP-E10	"SII RP-E10 POS Printer"

This property is initialized by **Open**.

DeviceEnabled Property R/W

Syntax **BOOL DeviceEnabled;**

Remarks Indicates whether the device has been placed in an operational state.
The following table shows the valid property values.

Value	Meaning
TRUE	The device has been placed in an operational state. If changed to TRUE, then the device is brought to an operational state.
FALSE	The device has been disabled. If changed to FALSE, then the device is physically disabled.

The application must set this property to TRUE before using output devices.

This property is initialized to FALSE by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_NOTCLAIMED(103)	To enable an exclusive use device, its exclusive access must be obtained previously.
OPOS_E_NOHARDWARE(107)	The device is not connected to the system or is not powered on.
OPOS_E_FAILURE(111)	The device cannot be enabled. Setting information and the information from device may be different.
OPOS_E_TIMEOUT(112)	The Service Object timed out waiting for a response from the device, or the data was unable to be transmitted to the device within the timeout.
OPOS_E_BUSY(113)	Setting of property was failed due to processing. Set the property after process is completed.

DeviceName Property

Syntax **BSTR DeviceName;**

Remarks Identifies the device and any pertinent information about it.
Depends on the printer, the default is different.

Printer	Default
RP-F10/G10	"RP-F10/G10 POS Printer"
RP-E10	"RP-E10 POS Printer"

This property is initialized by **Open**.

FreezeEvents Property R/W

Syntax **BOOL FreezeEvents;**

Remarks Selects whether to notify events.
The following table shows the valid property values.

Value	Meaning
TRUE	Events are not delivered from the Control. Events will be held by the Control until events are unfrozen.
FALSE	Events are delivered from the Control. If some events have been held while events were frozen and all other conditions are correct for delivering the events, then changing FreezeEvents to FALSE will cause these events to be delivered.

An application may choose to freeze events for a specific sequence of code where interruption by an event is not desirable.

If an error occurs while the print method such as the **PrintNormal** is operated under the **AsyncMode** is TRUE, **ErrorEvent** is frozen and the **State** turns to OPOS_S_BUSY(3). In this case, clear the frozen event by the **ClearOutput**, or conduct the **Close** after **ErrorEvent** is occurred by setting FALSE since the control cannot be closed under this circumstance.

This property is initialized to FALSE by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.

OpenResult Property

Syntax **LONG OpenResult;**

Remarks Holds additional details about the most recent **Open**. The values of **OpenResult** are as follows.

Value	Meaning
OPOS_SUCCESS(0)	Successful open.
OPOS_OR_ALREADYOPEN(301)	The Control is already open.
OPOS_OR_REGBADNAME(302)	The registry does not contain a key for the specified device name. Or, the device name is not specified.
OPOS_OR_REGPROGID(303)	Could not read the device name key's default, or could not convert the Programmatic ID it holds into a valid Class ID.
OPOS_OR_CREATE(304)	Could not create a Service Object instance, or could not get its IDispatch interface.
OPOS_OR_BADIF(305)	The Service Object does not support one or more of the methods required by its release. The setting of device name may be different from the Service Object.

This property is initialized to OPOS_SUCCESS(0) by **Open**.

OutputID Property

Syntax **LONG OutputID;**

Remarks Holds the identifier of the most recently started asynchronous output (call to an asynchronous method when the **AsyncMode** is set to TRUE).

When a method successfully initiates an asynchronous output, the Control assigns an identifier to the request. When the output completes, the Control will fire an **OutputCompleteEvent** passing this output ID as a parameter.

Output ID is numbered from 1 to 2147483646 cyclically.

This property is initialized to 0 by **Open**.

PowerNotify Property R/W

Syntax **LONG PowerNotify;**

Remarks Contains the type of power notification selection made by the application. The following table shows the valid property values.

Value	Meaning
OPOS_PN_DISABLED(0)	The Control will not provide any power notifications to the application. No power notification StatusUpdateEvents will be fired, and PowerState is not set.
OPOS_PN_ENABLED(1)	The Control will fire power notification StatusUpdateEvents and update PowerState , beginning when DeviceEnabled is set to TRUE. The level of functionality depends upon CapPowerReporting .

PowerNotify may only be set while the device is disabled; that is, while **DeviceEnabled** is FALSE.

This property is initialized to OPOS_PN_DISABLED (0) by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	One of the following reasons: <ul style="list-style-type: none">• DeviceEnabled = TRUE• The setting range of property is improper.

PowerState Property

Syntax **LONG PowerState;**

Remarks Identifies the current power condition of the device.
The following table shows the valid property values.

Value	Meaning
OPOS_PS_UNKNOWN(2000)	Cannot determine the device's power state, for one of the following reasons: <ul style="list-style-type: none">• PowerNotify = OPOS_PN_DISABLED(0)• DeviceEnabled = FALSE
OPOS_PS_ONLINE(2001)	The device is powered on and ready.
OPOS_PS_OFF_OFFLINE(2004)	The device is powered off or offline.

This property is initialized to OPOS_PS_UNKNOWN(2000) by **Open**.

ResultCode Property

Syntax **LONG ResultCode;**

Remarks This property is set by each method. It is also set when a writable property is set.

This property is always readable. Before **Open** is called, it returns the value OPOS_E_CLOSED(101).

The following table shows the valid property values.

Value	Meaning
OPOS_SUCCESS(0)	Successful operation.
OPOS_E_CLOSED(101)	Attempt was made to access a closed device. This error is not mentioned in the description of property and method.
OPOS_E_NOTCLAIMED(103)* ¹	Attempt was made to access an exclusive-use device that must be claimed before the method or property set action can be used.
OPOS_E_NOSERVICE(104)	The Control cannot communicate with the Service Object. The software must be re-installed the software. See "SII Software Package for Windows Installation Guide" for the installation and uninstallation procedure.
OPOS_E_DISABLED(105)* ¹	Cannot execute operation while device is disabled.
OPOS_E_ILLEGAL(106)	Attempt was made to execute an illegal or unsupported operation with the device, or an invalid parameter value was used.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_NOEXIST(109)	The file name (or other specified value) does not exist.
OPOS_E_FAILURE(111)	The device cannot execute the requested procedure, even though the device is connected to the system, powered on, and on-line.

Value	Meaning
OPOS_E_TIMEOUT(112)	The Service Object timed out waiting for a response from the device, or the data was unable to be transmitted to the device within the timeout.
OPOS_E_BUSY(113)	The Service Object does not allow this request currently. For example, if asynchronous output is in progress, certain methods may not be allowed.
OPOS_E_EXTENDED(114)	A class-specific error condition occurred. The error condition code is available in ResultCodeExtended .

*1: When multiple values of OPOS_E_NOTCLAIMED(103) and OPOS_E_DISABLED(105) are valid, the value of OPOS_E_NOTCLAIMED(103) has the high priority.

ResultCodeExtended Property

Syntax **LONG ResultCodeExtended;**

Remarks When **ResultCode** is set to OPOS_E_EXTENDED(114), the following POS Printer Device class-specific error information value and this software-specific error information value are set. When **ResultCode** is set to other value, a value of 0 is set.

This software takes the following values.

Value	Meaning
OPOS_EPTR_COVER_OPEN (201)	The printer cover is open.
OPOS_EPTR_REC_EMPTY (203)	The receipt is out of paper.
OPOS_EPTR_TOOBIG(206)	The bitmap file is too wide to print without conversion or too big to convert. The maximum print width must be up to the value of RecLineWidth during normal and inversion mode and within the maximum value of the printer during the bitmap is rotated 90° to the right/left by the RotatePrint . For the height, the range not exceeding the maximum value of the printer is supported during normal and inversion mode and RecLineWidth dots is supported during rotated 90° right/left mode.
OPOS_EPTR_BADFORMAT(207)	The specified file is not a bitmap file or not a supported format.
OPOS_ESTATS_ERROR(280)	One or more of the specified statistics could not be reset.
OPOS_EPTR_VPPower(1001)	Vp voltage error has occurred. (Specific error)
OPOS_EPTR_AUTOCUTTER (1002)	Autocutter error has occurred. (Specific error)
OPOS_EPTR_HEAD_TEMP(1005)	Head-temperature error has occurred. (Specific error)
OPOS_EPTR_IMAGEAREA_FULL (1009)	No memory is available to register the image to the user area of the printer. (Specific error)
OPOS_EPTR_UNRECOVERABLE (1010)	A non-recoverable error (hardware error) has occurred. (Specific error)

ServiceObjectDescription Property

Syntax **BSTR ServiceObjectDescription;**

Remarks Contains a string for identifying the Service Object to this property.
Depends on the printer, the default is different.

Printer	Default
RP-F10/G10	"SII RP-F10/G10 POS Printer Service Object, Copyright (C) 20xx Seiko Instruments Inc."
RP-E10	"SII RP-E10 POS Printer Service Object, Copyright (C) 20xx Seiko Instruments Inc."

This property is initialized by **Open**.

ServiceObjectVersion Property

Syntax **LONG ServiceObjectVersion;**

Remarks This property holds the Service Object version number.

This property is initialized by **Open**.

State Property

Syntax **LONG State;**

Remarks Contains the current state of the Control.
The following table shows the valid property values.

Value	Meaning
OPOS_S_CLOSED(1)	The Control is closed.
OPOS_S_IDLE(2)	The Control is in a good state and is not busy.
OPOS_S_BUSY(3)	The Control is in a good state and is busy executing output.
OPOS_S_ERROR(4)	An error has been reported, and the application must recover the Control to a good state before normal I/O can resume. This state is only possible inside the ErrorEvent event handler.

This property is always readable.

This property returns OPOS_S_CLOSED(1) until **Open** is successfully completed.

5.4 Specific Properties

AsyncMode Property R/W

Syntax **BOOL AsyncMode;**

Remarks Indicates whether certain print methods will be performed asynchronously.
The following table shows the valid property values.

Value	Meaning
TRUE	PrintNormal , CutPaper , PageModePrint , PrintBarCode , PrintBitmap , PrintMemoryBitmap , DrawRuledLine , RotatePrint , and TransactionPrint print methods are executed asynchronously.
FALSE	The above methods are executed synchronously.

This property is initialized to FALSE by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.

CapCharacterSet Property

Syntax **LONG CapCharacterSet;**

Remarks Holds the printable character setting of the printer.
This property has the following value.

Value	Meaning
PTR_CCS_KANJI(11)	The character setting supports Code Page932, including ASCII characters 0x20 through 0x7F and the one-byte katakana characters 0xA1 through 0xDF. It also includes the Shift-JIS code characters defined in JIS 1st and 2nd levels.

This property is initialized to PTR_CCS_KANJI(11) by **Open**.

CapCoverSensor Property

Syntax **BOOL CapCoverSensor;**

Remarks Indicates whether the printer has a "cover open" sensor.
The following table shows the valid property values.

Value	Meaning
TRUE	The printer has a "cover open" sensor.

This property is initialized to TRUE by **Open**.

CapMapCharacterSet Property

Syntax **BOOL CapMapCharacterSet;**

Remarks Indicates that the Service Object is able to map the characters of the application to a character set.
The following table shows the valid property values.

Value	Meaning
FALSE	The Service Object cannot exactly map the characters to the character sets defined in CharacterSetList .

This property is initialized to FALSE by **Open**.

CapRec2Color Property

Syntax **BOOL CapRec2Color;**

Remarks Indicates whether the receipt can print dark plus an alternate color.
The following table shows the valid property values.

Value	Meaning
FALSE	The receipt cannot support 2 color printing.

This property is initialized to FALSE by **Open**.

CapRecBarCode Property

Syntax **BOOL CapRecBarCode;**

Remarks Indicates whether the receipt has barcode printing capability.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt has barcode printing capability.

This property is initialized to TRUE by **Open**.

CapRecBitmap Property

Syntax **BOOL CapRecBitmap;**

Remarks Indicates whether the receipt can print bitmaps.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt can print bitmaps.

This property is initialized to TRUE by **Open**.

CapRecBold Property

Syntax **BOOL CapRecBold;**

Remarks Indicates whether the receipt can print bold characters.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt can print bold characters.

This property is initialized to TRUE by **Open**.

CapRecCartridgeSensor Property

Syntax **LONG CapRecCartridgeSensor;**

Remarks Indicates the presence of receipt cartridge monitoring sensors.
The following table shows the valid property values.

Value	Meaning
0	Receipt cartridge monitoring sensors are not supported.

This property is initialized to 0 by **Open**.

CapRecColor Property

Syntax **LONG CapRecColor;**

Remarks Indicates the availability of receipt color cartridges.
The following table shows the valid property values.

Value	Meaning
PTR_COLOR_PRIMARY(0x00000001)	Receipt color cartridges are not supported.

This property is initialized to PTR_COLOR_PRIMARY(0x00000001) by **Open**.

CapRecDhigh Property

Syntax **BOOL CapRecDhigh;**

Remarks Indicates whether the receipt can print double high characters.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt can print double high characters.

This property is initialized to TRUE by **Open**.

CapRecDwide Property

Syntax **BOOL CapRecDwide;**

Remarks Indicates whether the receipt can print double wide characters.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt can print double wide characters.

This property is initialized to TRUE by **Open**.

CapRecDwideDhigh Property

Syntax **BOOL CapRecDwideDhigh;**

Remarks Indicates whether the receipt can print double high / double wide characters.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt can print double high / double wide characters.

This property is initialized to TRUE by **Open**.

CapRecEmptySensor Property

Syntax **BOOL CapRecEmptySensor;**

Remarks Indicates whether the receipt has an out-of-paper sensor.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt has an out-of-paper sensor.

This property is initialized to TRUE by **Open**.

CapRecItalic Property

Syntax **BOOL CapRecItalic;**

Remarks Indicates whether the receipt can print italic characters.
The following table shows the valid property values.

Value	Meaning
FALSE	The receipt cannot support Italic characters.

This property is initialized to FALSE by **Open**.

CapRecLeft90 Property

Syntax **BOOL CapRecLeft90;**

Remarks Indicates whether the receipt can print in a rotated 90° left mode.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt can print in a rotated 90° left mode.

This property is initialized to TRUE by **Open**.

CapRecMarkFeed Property

Syntax **LONG CapRecMarkFeed;**

Remarks Indicates the type of mark sensed paper handling available.
The following table shows the valid property values.

Value	Meaning
0	Control function for marked thermal paper is not supported.

This property is initialized to 0 by **Open**.

CapRecNearEndSensor Property

Syntax **BOOL CapRecNearEndSensor;**

Remarks Indicates whether the receipt has a low paper sensor.
The following table shows the valid property values.

Value	Meaning
FALSE	A low paper sensor is not supported.

This property is initialized to FALSE by **Open**.

CapRecPageMode Property

Syntax **BOOL CapRecPageMode;**

Remarks Indicates whether the printer can support Page Mode for the receipt station.
The following table shows the valid property values.

Value	Meaning
TRUE	The printer can support Page Mode for the receipt station.

This property is initialized to TRUE by **Open**.

CapRecPapercut Property

Syntax **BOOL CapRecPapercut;**

Remarks Indicates whether the receipt can perform paper cuts.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt can perform paper cuts.

This property is initialized to TRUE by **Open**.

CapRecPresent Property

Syntax **BOOL CapRecPresent;**

Remarks Indicates whether the receipt print station is present.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt station is present.

This property is initialized to TRUE by **Open**.

CapRecRight90 Property

Syntax **BOOL CapRecRight90;**

Remarks Indicates whether the receipt can print in a rotated 90° right mode.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt can print in a rotated 90° right mode.

This property is initialized to TRUE by **Open**.

CapRecRotate180 Property

Syntax **BOOL CapRecRotate180;**

Remarks Indicates whether the receipt can print in a rotated upside down mode.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt can print in a rotated upside down mode.

This property is initialized to TRUE by **Open**.

CapRecRuledLine Property

Syntax **LONG CapRecRuledLine;**

Remarks Indicates the printer has the ability to support the use of ruled lines in the receipt.
A logical OR of the following values is set.

Value	Meaning
PTR_RL_HORIZONTAL(1)	Able to print horizontal ruled lines.
PTR_RL_VERTICAL(2)	Able to print vertical ruled lines.

This property is initialized to a logical OR of the above values(3) by **Open**.

CapRecStamp Property

Syntax **BOOL CapRecStamp;**

Remarks Indicates whether the receipt has a stamp capability.
The following table shows the valid property values.

Value	Meaning
FALSE	The receipt cannot support stamp printing.

This property is initialized to FALSE by **Open**.

CapRecUnderline Property

Syntax **BOOL CapRecUnderline;**

Remarks Indicates whether the receipt can print underlined characters.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt can print underlined characters.

This property is initialized to TRUE by **Open**.

CapTransaction Property

Syntax **BOOL CapTransaction;**

Remarks Indicates whether receipt station supports printer transactions.
The following table shows the valid property values.

Value	Meaning
TRUE	The printer transactions are supported by each station.

This property is initialized to TRUE by **Open**.

CartridgeNotify Property R/W

Syntax **LONG CartridgeNotify;**

Remarks Contains the type of cartridge state notification selected by the application.
The following table shows the valid property values.

Value	Meaning
PTR_CN_DISABLED(0)	Cartridge state notification is not provided.

This property is initialized to PTR_CN_DISABLE(0) by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully. (Only when the default is set.)
OPOS_E_ILLEGAL(106)	Property setting is not supported.

CharacterSet Property R/W

Syntax **LONG CharacterSet;**

Remarks Holds the character set for printing characters.
One of the following values is set to this property:

Value	Meaning
437	Selects Code Page437 character set.
737 ^{*1}	Selects Code Page737 character set.
850	Selects Code Page850 character set.
852	Selects Code Page852 character set.
855 ^{*1}	Selects Code Page855 character set.
857 ^{*1}	Selects Code Page857 character set.
858	Selects Code Page858 character set.
860	Selects Code Page860 character set.
863	Selects Code Page863 character set.
865	Selects Code Page865 character set.
866 ^{*1}	Selects Code Page866 character set.
932	Selects Katakana as the Code Page932 character set (Shift-JIS Code).
PTR_CS_ANSI (999) / PTR_CS_WINDOWS (999)	Sets the Windows ANSI characters. ^{*2}
1250	Selects Code Page1250 character set.
1251	Selects Code Page1251 character set.
1252	Selects Code Page1252 character set. ^{*2}
1253	Selects Code Page1253 character set.
1254	Selects Code Page1254 character set.

^{*1}: Not supported in RP-E10.

^{*2}: Windows ANSI character set is equal to Code Page1252 character set.

For this property, the default can be changed by setting of the configuration program.
This property is initialized to the value of character set which is set in [DefaultCharacterSet] of the configuration program by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	An illegal value was specified.

CharacterSetList Property

Syntax **BSTR CharacterSetList;**

Remarks Holds the character set numbers.
"437,737*¹,850,852,855*¹,857*¹,858,860,863,865,866*¹,932,999,1250,1251,1252,1253,1254" is set.

*1: Not supported in RP-E10.

This property is initialized to the above value by **Open**.

CoverOpen Property

Syntax **BOOL CoverOpen;**

Remarks Indicates whether the printer cover is open.
The following table shows the valid property values.

Value	Meaning
TRUE	The printer cover is open.
FALSE	The printer cover is closed.

This property is initialized while the device is enabled and keeps the current state.

ErrorLevel Property

Syntax **LONG ErrorLevel;**

Remarks Holds the severity of the error condition.
One of the following values is set to this property:

Value	Meaning
PTR_EL_NONE(1)	No error condition is present.
PTR_EL_RECOVERABLE(2)	A recoverable error has occurred.

Value	Meaning
PTR_EL_FATAL(3)	A non-recoverable error has occurred. This error is set when ResultCode is OPOS_E_EXTENDED(114) and ResultCodeExtended is OPOS_EPTR_UNRECOVERABLE(1010).

This property is set by the Control just before the notification of **ErrorEvent**. When the error is cleared, then the property is changed to PTR_EL_NONE(1).

ErrorStation Property

Syntax **LONG ErrorStation;**

Remarks Holds the station that was printing when an error was detected. The following value is set to this property.

Value	Meaning
PTR_S_RECEIPT(2)	The error is detected at the receipt station.

This property is set before **ErrorEvent** is notified.

This property is initialized to 0 by **Open**.

ErrorString Property

Syntax **BSTR ErrorString;**

Remarks Holds a vendor-supplied description of the current error. The following table shows the valid property values.

Value	Meaning
"Off/Offline error"	OPOS_E_NOHARDWARE(107)
"Unrecoverable error"	OPOS_EPTR_UNRECOVERABLE(1010)
"Vp voltage error"	OPOS_EPTR_VPPower(1001)
"Autocutter error"	OPOS_EPTR_AUTOCUTTER(1002)
"Cover open error"	OPOS_EPTR_COVER_OPEN(201)
"Out-of-paper error"	OPOS_EPTR_REC_EMPTY(203)
"Head temperature error"	OPOS_EPTR_HEAD_TEMP(1005)
"Failure"	OPOS_E_FAILURE(111)
"Time out"	OPOS_E_TIMEOUT(112)

The values in the above table are described in descending order of priority. When multiple errors occur simultaneously, the higher priority item is set to **ErrorString**.

This property is set by the Control just before the notification of **ErrorEvent**. If no description is available, the property is set to an empty string. When the error is cleared, then the property is changed to an empty string.

FlagWhenIdle Property R/W

Syntax **BOOL FlagWhenIdle;**

Remarks Indicates whether or not to notify that **StatusUpdateEvent**.
The following table shows the valid property values.

Value	Meaning
TRUE	A StatusUpdateEvent will be notified when the POS Printer Control is in the idle state.
FALSE	This event is not notified.

FlagWhenIdle is automatically reset to FALSE when this status event is delivered.
The main use of idle status event that is controlled by this property is to give the application control when all outstanding asynchronous outputs have been processed. The event will be notified if the outputs were completed successfully or if they were cleared by the event handler that receives **ErrorEvent**.

If **State** is already set to OPOS_S_IDLE(2) when **FlagWhenIdle** is set to TRUE, then **StatusUpdateEvent** is notified immediately. The application can therefore depend on the event, with no race condition between the starting of its last asynchronous output and the setting of this flag.

This property is initialized to FALSE by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.

FontTypefaceList Property

Syntax **BSTR FontTypefaceList;**

Remarks Holds the fonts and/or typefaces that are supported by the printer.
This property is initialized to an empty string by **Open**.

MapCharacterSet Property R/W

Syntax **BOOL MapCharacterSet;**

Remarks This property is initialized to FALSE by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully. (Only when the default is set.)
OPOS_E_ILLEGAL(106)	Property setting is not supported.

MapMode Property R/W

Syntax **LONG MapMode;**

Remarks Holds the mapping mode of the POS Printer Control. The mapping mode defines the unit of measure used for other properties, such as line heights and line spacings.

The following mapping modes are supported. The values in the brackets indicate the value converted into dot.

Value	Meaning
PTR_MM_DOTS(1)	Printer's dot width, 0.125 mm (1 dot)
PTR_MM_TWIPS(2)	1/1440 of an inch (0.1411 dots)
PTR_MM_ENGLISH(3)	0.001 inch (0.203 dots)
PTR_MM_METRIC(4)	0.01 mm (0.08 dots)

For each mapping mode, the unit is converted using one of the following calculation formulae.

MapMode	Conversion
PTR_MM_DOTS(1) Printer dot width (dot value)	No conversion
PTR_MM_TWIPS(2) 1 / 1440 inch	$k = 1 / 1440$ ■ DOT -> TWIPS conversion $twips = dot / (dpi \times k)$ ■ TWIPS -> DOT conversion $dot = twips \times dpi \times k$
PTR_MM_ENGLISH(3) 0.001 inch	$k = 1 / 1000$ ■ DOT -> ENGLISH conversion $english = dot / (dpi \times k)$ ■ ENGLISH -> DOT conversion $dot = english \times dpi \times k$
PTR_MM_METRIC(4) 0.01 mm	$k = 1 / 100, mmpi = 25.4$ ■ DOT -> METRIC conversion $Metric = (mmpi \times dot) / (dpi \times k)$ ■ METRIC -> DOT conversion $dot = (metric \times dpi \times k) / mmpi$

(1 inch = 25.4 mm)

MapMode only changes the unit of each property for display, and all internal processings are executed in dot regardless of **MapMode**. Therefore, the rounding errors of values do not accumulate.

When converting a dot value to a map mode value, the value is rounded up to an integer. When converting from a map mode value to a dot value, the decimal part is truncated.

Setting **MapMode** may also change **RecLineSpacing**, **RecLineWidth**, **RecLineHeight**, **PageModeArea**, **PageModePrintArea**, **PageModeHorizontalPosition**, and **PageModeVerticalPosition**.

This property is initialized to PTR_MM_DOTS(1) by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	Improper mapping mode was specified.

PageModeArea Property

Syntax **BSTR PageModeArea;**

Remarks Holds the page area for the selected **PageModeStation** expressed in the unit of the measure given by **MapMode**.
This page area can be different than the print area and is determined by the hardware capability of the printer. The string consists of two ASCII numbers separated by a comma, in the following order: horizontal size, vertical size.
Specify PTR_S_RECEIPT(2) for **PageModeStation** before accessing this property.
Otherwise an empty string is returned until PTR_S_RECEIPT(2) is specified.

The following values are set to this property. (When **MapMode** = PTR_MM_DOTS(1))

Value	Meaning
"360,2400"	The PageModeArea value when the RecLineWidth is set to 360.
"432,2400"	The PageModeArea value when the RecLineWidth is set to 432.
"512,2400"	The PageModeArea value when the RecLineWidth is set to 512.
"576,2400"	The PageModeArea value when the RecLineWidth is set to 576.

PageModeDescriptor Property

Syntax **LONG PageModeDescriptor;**

Remarks The Page Mode functionality available on the station specified for **PageModeStation** is indicated by OR of the following values.
Specify PTR_S_RECEIPT(2) for **PageModeStation** before accessing this property.
Otherwise 0 is returned until PTR_S_RECEIPT(2) is specified.

Value	Meaning
PTR_PM_BITMAP(1)	Printing of bitmaps on the PageModeStation is supported.
PTR_PM_BARCODE(2)	Printing of barcodes on the PageModeStation is supported.
PTR_PM_BM_ROTATE(4)	Rotation of bitmaps on the PageModeStation is supported.
PTR_PM_BC_ROTATE(8)	Rotation of barcodes on the PageModeStation is supported.

This property is initialized to OR of the above values after PTR_S_RECEIPT(2) is set.

PageModeHorizontalPosition Property R/W


Syntax **LONG PageModeHorizontalPosition;**

Remarks Holds the horizontal start position offset within the print area for the selected **PageModeStation**. This property is expressed in the unit specified for **MapMode**. The horizontal direction is the same as the actual **PageModePrintDirection**. A read/get on this property will return the horizontal position offset set by the last write/set and not the current position. Specify PTR_S_RECEIPT(2) for the **PageModeStation** before accessing this property. Specify PTR_S_RECEIPT(2) for **PageModeStation** before accessing this property. Otherwise 0 is returned until PTR_S_RECEIPT(2) is specified.

The following code sample shows the usage of **PageModeHorizontalPosition**.

```
myptr.setMapMode(PTR_MM_ENGLISH);
myptr.setPageModeStation(PTR_S_RECEIPT);
myptr.pageModePrint(PTR_PM_PAGE_MODE);
// Set print area to 2 inches by 0.5 inches
myptr.setPageModePrintArea("0,0,2000,500");
myptr.setPageModePrintDirection(PTR_PD_LEFT_TO_RIGHT);
myptr.setPageModeHorizontalPosition(1500);
myptr.printNormal(PTR_S_RECEIPT, "123456789012345678901234567890\n");
```

The code sample above will generate the following receipt.

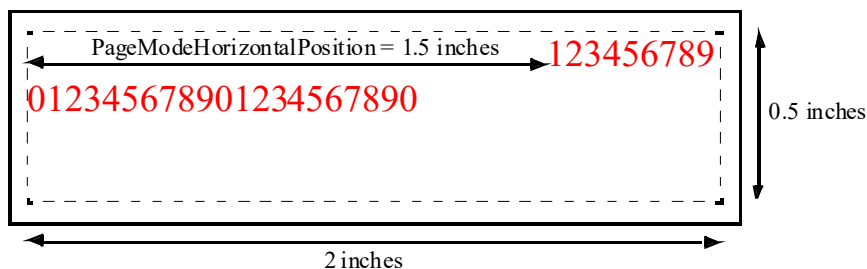

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	An illegal value was specified.

PageModePrintArea Property R/W

Syntax **BSTR PageModePrintArea;**


Remarks Holds the Page Mode print area for the selected **PageModeStation** expressed in the unit specified for **MapMode**. The maximum print area of **PageModePrintArea** is the page area of **PageModeArea**. The property consists of four ASCII numbers separated by commas, in the following order: horizontal start, vertical start, horizontal size, vertical size. For example, if the string is "50,100,200,400," then the station print area is a rectangle beginning at the top left position (50,100), and the bottom right position (249,499). The text beyond the right edge of the Page Mode print area will be printed to the next line. Any text or image beyond the bottom of the print area will not be printed. For example:

```

myptr.setMapMode(PTR_MM_ENGLISH);
myptr.setPageModeStation(PTR_S_RECEIPT);
myptr.pageModePrint(PTR_PM_PAGE_MODE);
// Set print area to half inch square block
myptr.setPageModePrintArea("0,0,500,500");
myptr.setPageModePrintDirection(PTR_PD_LEFT_TO_RIGHT);
myptr.printNormal(PTR_S_RECEIPT,"123456789012345678901234567890\n");

```

The code sample above will generate the following receipt.

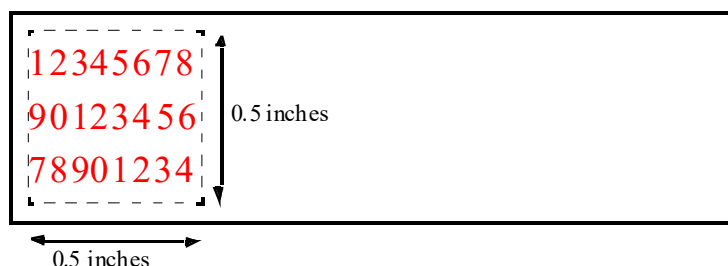

Specify PTR_S_RECEIPT(2) for **PageModeStation** before accessing this property. Otherwise an empty string is returned until PTR_S_RECEIPT(2) is specified. It is initialized to "0,0,0,0" when PTR_S_RECEIPT(2) is specified.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	An illegal value was specified.

PageModePrintDirection Property R/W

Syntax LONG PageModePrintDirection;

Remarks Holds the print direction. The print direction shall be as follows:


Value	Meaning
PTR_PD_LEFT_TO_RIGHT(1)	Prints from left to right, starting at the top left corner of the Page Mode print area. Normal direction printing.
PTR_PD_BOTTOM_TO_TOP(2)	Prints from bottom to top, starting at the bottom left corner of the Page Mode print area. Rotated left 90° printing.
PTR_PD_RIGHT_TO_LEFT(3)	Prints from right to left, starting at the bottom right corner of the Page Mode print area. Upside down printing.
PTR_PD_TOP_TO_BOTTOM(4)	Prints from top to bottom, starting at the top right corner of the Page Mode print area. Rotated right 90° printing.

Changing this property may also change the correction direction of the print start point indicated by **PageModeHorizontalPosition** and **PageModeVerticalPosition**. Changing this property is only effective for the current print area. By changing the print areas, it is possible to generate a receipt with text printed in multiple rotations.

For example:

```
myptr.setMapMode(PTR_MM_ENGLISH);
myptr.setPageModeStation(PTR_S_RECEIPT);
myptr.pageModePrint(PTR_PM_PAGE_MODE);
// Set print area to half inch square block
myptr.setPageModePrintArea("0,0,500,500");
myptr.setPageModePrintDirection(PTR_PD_LEFT_TO_RIGHT);
myptr.printNormal(PTR_S_RECEIPT,"123456789012345678901234567890\n");
myptr.setPageModePrintArea("500,0,500,500");
myptr.setPageModePrintDirection(PTR_PD_BOTTOM_TO_TOP);
myptr.printNormal(PTR_S_RECEIPT,"123456789012345678901234567890\n");
myptr.setPageModePrintArea("1000,0,500,500");
myptr.setPageModePrintDirection(PTR_PD_RIGHT_TO_LEFT);
myptr.printNormal(PTR_S_RECEIPT,"123456789012345678901234567890\n");
myptr.setPageModePrintArea("1500,0,500,500");
myptr.setPageModePrintDirection(PTR_PD_TOP_TO_BOTTOM);
myptr.printNormal(PTR_S_RECEIPT,"123456789012345678901234567890\n");
```


The code sample above will generate the following receipt.

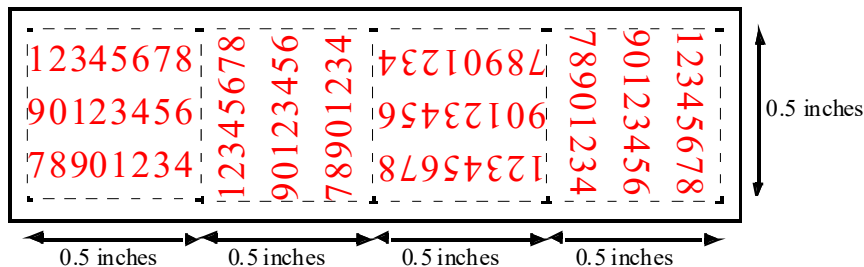

It is also possible to generate rotated text.

```
myptr.setMapMode(PTR_MM_ENGLISH);
myptr.setPageModeStation(PTR_S_RECEIPT);
myptr.pageModePrint(PTR_PM_PAGE_MODE);
myptr.pageModeVerticalPosition(100);
myptr.pageModeHorizontalPosition(200);
myptr.setPageModePrintArea("0,0,1000,500");
myptr.setPageModePrintDirection(PTR_PD_LEFT_TO_RIGHT);
myptr.printNormal(PTR_S_RECEIPT, "Normal print.\n");
myptr.setPageModePrintArea("1000,0,1000,500");
myptr.setPageModePrintDirection(PTR_PD_TOP_TO_BOTTOM);
myptr.printNormal(PTR_S_RECEIPT, "Rotated right 90 print.\n");
myptr.setPageModePrint(PTR_PM_NORMAL);
```

The code sample above will generate the following receipt.

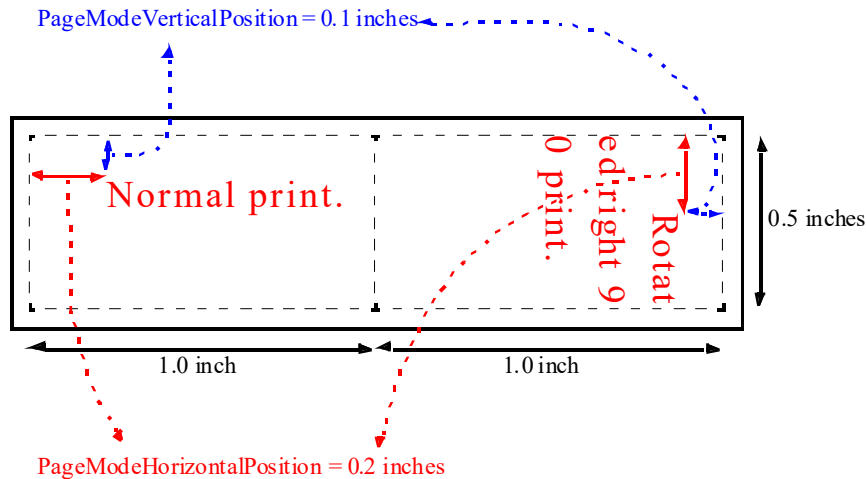

Specify PTR_S_RECEIPT(2) for **PageModeStation** before accessing this property. Otherwise 0 is returned until PTR_S_RECEIPT(2) is specified. It is initialized to PTR_PD_LEFT_TO_RIGHT(1) when PTR_S_RECEIPT(2) is specified.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	An illegal value was specified.

PageModeStation Property R/W

Syntax **LONG PageModeStation;**

Remarks Sets the print station for subsequent Page Mode properties. Be sure to specify PTR_S_RECEIPT(2) for this property before accessing the property or method of the Page Mode function.

This method is initialized to 0 by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	An illegal value was specified.

PageModeVerticalPosition Property R/W

Syntax **LONG PageModeVerticalPosition;**


Remarks Holds the vertical start position offset within the print area for the selected **PageModeStation**. This property is expressed in the unit specified for **MapMode**. The vertical direction is perpendicular to the direction specified in the actual **PageModePrintDirection**. A read/get on this property will return the vertical position offset set by the last write/set and not the current position. The following code sample shows usage of **PageModeVerticalPosition**.

```

myptr.setMapMode(PTR_MM_ENGLISH);
myptr.setPageModeStation(PTR_S_RECEIPT);
myptr.pageModePrint(PTR_PM_PAGE_MODE);
// Set print area to 2 inches by 0.5 inches
myptr.setPageModePrintArea("0,0,2000,500");
myptr.setPageModePrintDirection(PTR_PD_LEFT_TO_RIGHT);
myptr.setPageModeVerticalPosition(250);
myptr.printNormal(PTR_S_RECEIPT,"123456789012345678901234567890\n");

```

The code sample above will generate the following receipt.

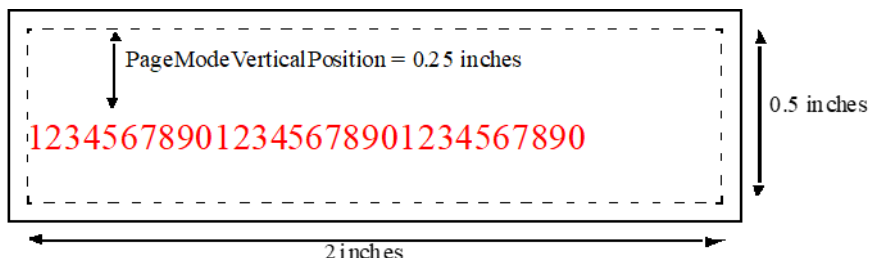

Specify PTR_S_RECEIPT(2) for PageModeStation before accessing this property. Otherwise 0 is returned until PTR_S_RECEIPT(2) is specified.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	An illegal value was specified.

RecBarCodeRotationList Property

Syntax **BSTR RecBarCodeRotationList;**

Remarks Holds the directions in which a receipt barcode may be rotated. This property is initialized to "0,R90,L90,180" by **Open**. The string consists of rotation strings separated by commas. The legal rotation strings are as follows:

Value	Meaning
0	Barcode may be printed in the normal orientation.
R90	Barcode may be printed in a rotated 90° to the right.
L90	Barcode may be printed in a rotated 90° to the left.
180	Barcode may be rotated 180°- upside down.

RecBitmapRotationList Property

Syntax **BSTR RecBitmapRotationList;**

Remarks Holds the directions in which a receipt bitmap may be rotated.
This property is initialized to "0,R90,L90,180" by **Open**. The string consists of rotation strings separated by commas. The legal rotation strings are as follows:

Value	Meaning
0	Bitmap may be printed in the normal orientation.
R90	Bitmap may be printed in a rotated 90° to the right.
L90	Bitmap may be printed in a rotated 90° to the left.
180	Bitmap may be rotated 180° - upside down.

RecCartridgeState Property

Syntax **LONG RecCartridgeState;**

Remarks Contains the status of the currently selected receipt cartridge (ink, ribbon or toner).
It contains the following value.

Value	Meaning
PTR_CART_UNKNOWN(0x10000000)	Device does not support cartridge state reporting.

This property is initialized to PTR_CART_UNKNOWN(0x10000000) when the device is first enabled by **Open**.

RecCurrentCartridge Property R/W

Syntax **LONG RecCurrentCartridge;**

Remarks Receipt Cartridge selection is not supported.

This property is initialized to PTR_COLOR_PRIMARY(0x00000001) when the device is first enabled by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully. (Only when the default is set.)
OPOS_E_ILLEGAL(106)	An invalid property value was specified.

RecEmpty Property

Syntax **BOOL RecEmpty;**

Remarks Indicates whether the receipt is out of paper.
The following table shows the valid property values.

Value	Meaning
TRUE	The receipt is out of paper.
FALSE	The receipt is present.

This property is initialized while the device is enabled and keeps the current state.

RecLetterQuality Property R/W

Syntax **BOOL RecLetterQuality;**

Remarks Indicates whether the printer prints in high quality mode.
The following table shows the valid property values.

Value	Meaning
TRUE	Prints in the high quality mode.
FALSE	Prints in the high speed mode.

This property is initialized to FALSE when the device is first enabled by **Open**.

In the configuration program, if [PrintSpeed] is other than the value of "RecLetterQuality Valid", this property is disabled and print is conducted in fixed speed printing mode as [PrintSpeed] setting.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.

RecLineChars Property R/W

Syntax **LONG RecLineChars;**

Remarks Holds the number of characters that may be printed on a receipt line.
Depending on the specified number of characters, the printer prints in the following print font.

RecLineWidth	RecLineChars	Print Font (H × W)	Character space	RecLineHeight
360	30 (Default)	Font A (24 dots × 12 dots)	0 dots	24
	40	Font B (16 dots × 8 dots)	1 dot	16
432	27	Font A (24 dots × 12 dots)	4 dots	24
	30		2 dots	
	33		1 dot	
	36 (Default)		0 dots	
	43	Font B (16 dots × 8 dots)	2 dots	16
	48		1 dot	
	54		0 dots	
512	42 (Default)	Font A (24 dots × 12 dots)	0 dots	24
	56	Font B (16 dots × 8 dots)	1 dot	16
576	36	Font A (24 dots × 12 dots)	4 dots	24
	41		2 dots	
	44		1 dot	
	48 (Default)		0 dots	
	57	Font B (16 dots × 8 dots)	2 dots	16
	64		1 dot	
	72		0 dots	

If changed to a line character width that is less than or equal to the maximum value allowed for the printer, then the width is set to the specified value. If the exact width cannot be supported, then subsequent lines will be printed with a character size that most closely supports the specified characters per line. (For example, if 40 is set when the paper width is 58mm/432dots, then the Service Object selects a **RecLineChars** = 43.)

If the character width is not supported, then an error is returned. (For example, if 60 is set when the paper width is 58mm/432dots, then an error occurs.)

Setting **RecLineChars** may also update **RecLineHeight**, and **RecLineSpacing**.

The value of **RecLineChars** is initialized to the default value when the device is first enabled by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call the ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	Improper character width was specified.

RecLineCharsList Property

Syntax **BSTR RecLineCharsList;**

Remarks Holds the line character widths supported.
This property is initialized to the following values by **Open**.

Value	Meaning
"30,40"	The RecLineCharsList value when the RecLineWidth is set to 360.
"27,30,33,36,43,48,54"	The RecLineCharsList value when the RecLineWidth is set to 432.
"42,56"	The RecLineCharsList value when the RecLineWidth is set to 512.
"36,41,44,48,57,64,72"	The RecLineCharsList value when the RecLineWidth is set to 576.

RecLineHeight Property R/W

Syntax **LONG RecLineHeight;**

Remarks Holds the print line height.
This property is expressed in the unit specified for **MapMode**.
This property is automatically updated by the change of **RecLineChars**,
OPOS_E_ILLEGAL(106) is returned when setting a value to this property.

When **RecLineChars** is changed, **RecLineHeight** is updated to the height of the print font that corresponds to the set **RecLineChars**. For the relationship between **RecLineChars** and the print font, see **RecLineChars**.

The relationship between **RecLineHeight** and the print font is as follows.
(When **MapMode** is PTR_MM_DOTS(1))

Print Font (H × W)	RecLineHeight
Font A (24 × 12 dots)	24
Font B (16 × 8 dots)	16

The value of **RecLineHeight** is initialized to 24 when the device is first enabled by **Open**.

RecLineSpacing Property R/W

Syntax **LONG RecLineSpacing;**

Remarks Holds the line spacing (the spacing of each single-high print line).
The line spacing includes both the printed line height plus the whitespace between each pair of lines.
This property is expressed in the unit specified for **MapMode**.
A value smaller than **RecLineHeight** cannot be specified. If a smaller value is specified, OPOS_E_ILLEGAL(106) is notified and the property is not changed.
The configurable range differs depending on the setting of **RecLineWidth** and **RecLineChars**.
The following table shows the valid configurable ranges. (When **MapMode** is PTR_MM_DOTS(1))

RecLineWidth	RecLineChars	RecLineSpacing	Default Value
360	30	24 to 255	30
	40	16 to 255	
432	27	24 to 255	
	30		
	33		
	36		
	43	16 to 255	
	48		
	54		
512	42	24 to 255	
	56	16 to 255	
576	36	24 to 255	
	41		
	44		
	48		
	57	16 to 255	
	64		
	72		

If the value other than the configurable range is specified, OPOS_E_ILLEGAL(106) is notified and the property is ignored.

When **RecLineChars** is changed or new **RecLineHeight** is bigger than the value specified for **RecLineSpacing**, the value of **RecLineHeight** is set. In the same way, if the value of **RecLineSpacing** exceeds the configurable range, the maximum value of configurable range is automatically set.

The value of **RecLineSpacing** is initialized to 30 (if **MapMode** is PTR_MM_DOTS(1)) when the device is first enabled by **Open**.

In RP-F10 and RP-G10, when the printer function setting "Paper Saving Setting (Paper Saving)" is enabled, the line spacing and the space between lines are printed with the specified value in the printer function setting "Paper Saving Setting (Paper Saving)". Therefore, the line spacing will not be as specified in the **RecLineSpacing**.

For details about "Paper Saving Setting (Paper Saving)", see "Technical Reference".

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call the ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	The setting range of property is improper.

RecLinesToPaperCut Property

Syntax **LONG RecLinesToPaperCut;**

Remarks Holds the number of lines that must be advanced before cutting the receipt.
The value obtained by dividing the distance between the print head and the cutter of the printer by line spacing indicated by **RecLineSpacing** is set. Therefore, this property changes when **RecLineSpacing** is changed.

Printer	Default
RP-F10/G10	3
RP-E10	4

This property is initialized to the default depended on the printer when the device is first enabled by **Open**.

RecLineWidth Property

Syntax **LONG RecLineWidth;**

Remarks Holds the width of a line of **RecLineChars**. The property is expressed in the unit specified for **MapMode**.
This property is initialized to one of the following values when the device is first enabled by **Open**. (When **MapMode** is PTR_MM_DOTS(1))

PaperSize	RecLineWidth
58mm/360dots	360
58mm/432dots	432
80mm/512dots	512
80mm/576dots	576

The default can be changed by setting of the configuration program for this property.
This property is initialized to one of the values showed above according to the value which is set in [PaperSize] of the configuration program while the device is enabled.

RecNearEnd Property

Syntax **BOOL RecNearEnd;**

Remarks Notifies whether the receipt is low.
The following table shows the valid property values.

Value	Meaning
FALSE	A paper-near-end sensor is not supported.

This property always indicates FALSE.

RecSidewaysMaxChars Property

Syntax **LONG RecSidewaysMaxChars;**

Remarks Holds the maximum number of one-byte characters that may be printed on each line in sideways mode (rotated 90° to the left or right).
This property is determined by the following calculation based on the **PageModeArea** and print font when the device is first enabled by **Open**.

[Calculation formula]

RecSidewaysMaxChars

= Maximum height of **PageModeArea** / (Print font width / 2 + Character space)

Example: When the **PageModeArea** is "576,2400", and the **RecLineChars** is "48"

RecSidewaysMaxChars

= 2400 / (24 / 2) + 0 = 200 (The decimal part is round down.)

RecSidewaysMaxLines Property

Syntax **LONG RecSidewaysMaxLines;**

Remarks Holds the maximum number of lines that may be printed in sideways mode (rotated 90° to the left or right).

[Calculation formula]

RecSidewaysMaxLines = (**RecLineWidth** – **RecLineHeight**) / **RecLineSpacing** + 1

This property is initialized when the device is first enabled by **Open**.

RotateSpecial Property R/W

Syntax **LONG RotateSpecial;**

Remarks Holds the rotation orientation for barcodes.
One of the following values is set to this property:

Value	Meaning
PTR_RP_NORMAL(1)	Prints subsequent barcodes in normal orientation.
PTR_RP_RIGHT90(257)	Rotates printing 90° to the right (clockwise).
PTR_RP_LEFT90(258)	Rotates printing 90° to the left (counter-clockwise).

Value	Meaning
PTR_RP_ROTATE180(259)	Rotates printing 180°, that is, prints upside-down.

This property is initialized to PTR_RP_NORMAL(1) by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	Improper value of the property was specified.

5.5 Common Methods

CheckHealth Method

Syntax **LONG CheckHealth (LONG *Level*);**

The *Level* indicates the type of health check to be executed on the device. The following values may be specified:

Value	Meaning
OPOS_CH_INTERNAL(1)	Executes an internal test without changing the physical state of the device. Confirm if the printer is in printable condition.
OPOS_CH_EXTERNAL(2)	Executes the test print after confirming the communication with the printer. The printer ROM version ID, ServiceObjectVersion and DeviceName of the POS Printer Control are printed.
OPOS_CH_INTERACTIVE(3)	Executes an interactive test of the device. The Service Object displays the modal dialog and prints the printer ROM version ID, ServiceObjectVersion and DeviceName of the POS Printer Control.

Remarks Calls to test the state of a device. A text description of the results of this method is placed in **CheckHealthText**. **CheckHealth** is always synchronous.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	Indicates that the health checking procedure was initiated properly and, when possible to determine, indicates that the device is healthy. However, the health of many devices can only be determined by a visual inspection of the test results.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call the ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	Unsupported <i>Level</i> is specified.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_FAILURE(111)	A communication error has occurred.
OPOS_E_TIMEOUT(112)	Data transmission timeout or data receive timeout has occurred.
OPOS_E_BUSY(113)	Cannot execute while output is in progress or an error occurs.
OPOS_E_EXTENDED(114)	Except for OPOS_EPTR_TOOBIG(206) and OPOS_EPTR_BADFORMAT(207), the error defined by ResultCodeExtended is notified.

ClaimDevice Method

Syntax **LONG ClaimDevice (LONG Timeout);**

The *Timeout* gives the maximum number of milliseconds to wait for exclusive access to be satisfied.

If the parameter is 0, the method returns the appropriate status immediately even though it cannot gain exclusive access to the device.

If OPOS_FOREVER(-1) is set, the method waits until exclusive access is satisfied.

Remarks Call this method to request exclusive access to the device.
The POS Printer device cannot be used until exclusive access is obtained.
When successful, **Claimed** is changed to TRUE.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	Exclusive access has been granted. Claimed is now TRUE. It is also returned if this application has already gained the exclusive access to the device.
OPOS_E_ILLEGAL(106)	An invalid <i>Timeout</i> is specified.
OPOS_E_TIMEOUT(112)	Another application has exclusive access to the device and the <i>Timeout</i> (in milliseconds) has elapsed before the device is released. Or, the device did not become a processable state before the <i>Timeout</i> (in milliseconds) has elapsed.

ClearOutput Method

Syntax **LONG ClearOutput ();**

Remarks Calls to clear all device output that has been buffered. Any output error events that are enqueued (usually waiting for FreezeEvents to be set to FALSE) are also cleared.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	Output has been cleared.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_TIMEOUT(112)	Data transmission timeout or data receive timeout has occurred.
OPOS_E_EXTENDED(114)	Except for OPOS_EPTR_TOOBIG(206) and OPOS_EPTR_BADFORMAT(207), the error defined by ResultCodeExtended is notified.

Close Method

Syntax **LONG Close ()**;

Remarks Call to release the device and its resources.
If **DeviceEnabled** is TRUE, the device is first disabled.
If **Claimed** is TRUE, exclusive access to the device is first released.
Do not execute this method while the event is in progress (or in the event handler).

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	Device has been disabled and closed.
OPOS_E_BUSY(113)	Asynchronous output is in progress.

CompareFirmwareVersion Method

Syntax **LONG CompareFirmwareVersion (BSTR *FirmwareFileName*, Long *result*)**;

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

DirectIO Method

Syntax **LONG DirectIO (LONG *Command*, LONG* *pData*, BSTR* *pString*)**;

Parameter	Meaning
<i>Command</i>	Command number. Specific values assigned by the Service Object.
<i>pData</i>	Pointer to additional numeric data. Specific values vary by <i>Command</i> and Service Object.
<i>pString</i>	Pointer to additional string data. Specific values vary by <i>Command</i> and Service Object. The format of this data depends on the value of BinaryConversion . See BinaryConversion for details.

Remarks The following functions are supported.

- Remaining memory capacity response
- International character selection
- Status response

- **Remaining memory capacity response**

In RP-F10 and RP-G10, this method issues the printer command "Send NV Graphics Memory Remaining Capacity", and returns its response as a numeric value.

In RP-E10, this method issues the printer command "Remaining User Area Response", and returns its response as a numeric value.

Asynchronous processing cannot be executed.

When **AsyncMode** is TRUE and **State** is OPOS_S_IDLE(2), this method is executed synchronously.

Parameter	Description
<i>Command</i>	PTR_DI_GET_REMAINING_MEMORY (3)
<i>pData</i>	Not used
<i>pString</i>	OUT Remaining memory

- **International character selection**

Selects the international character.

To change the international character, select the international character with this method after setting **CharacterSet**.

When changing **CharacterSet** to 932 after changing the international character, the international character is set to Japan.

When changing **CharacterSet** to other than 932 after changing the international character, the international character is set to USA.

When **AsyncMode** is TRUE and **State** is OPOS_S_IDLE(2), this method is executed synchronously.

Parameter	Description
<i>Command</i>	PTR_DI_SET_INTERNATIONAL_CHARACTER(201)
<i>pData</i>	IN International character number n $0 \leq n \leq 12$ Country names available for n are as follows. 0: USA 1: France 2: Germany 3: United Kingdom 4: Denmark I 5: Sweden 6: Italy 7: Spain I 8: Japan 9: Norway 10: Denmark II 11: Spain II 12: Latin America
<i>pString</i>	Not used

- **Status response**

Returns the paper sensor status.

When **AsyncMode** is TRUE and **State** is OPOS_S_IDLE(2), this method is executed synchronously.

Parameter	Description															
Command	PTR_DI_GET_STATUS_DATA(501)															
pData	IN Status type 1: Status response of paper sensor															
pString	OUT Status RP-F10, RP-G10: '0': Paper is ready '1': No paper RP-E10:															
	<table><tr><td></td><td>Paper end</td><td>Paper-near-end</td></tr><tr><td>'0'</td><td>Paper is ready.</td><td>Paper is ready.</td></tr><tr><td>'1'</td><td>No paper.</td><td>Paper is ready.</td></tr><tr><td>'2'</td><td>Paper is ready.</td><td>No paper.</td></tr><tr><td>'3'</td><td>No paper.</td><td>No paper.</td></tr></table>		Paper end	Paper-near-end	'0'	Paper is ready.	Paper is ready.	'1'	No paper.	Paper is ready.	'2'	Paper is ready.	No paper.	'3'	No paper.	No paper.
		Paper end	Paper-near-end													
	'0'	Paper is ready.	Paper is ready.													
	'1'	No paper.	Paper is ready.													
	'2'	Paper is ready.	No paper.													
	'3'	No paper.	No paper.													
If the paper-near-end sensor is set in disabled, the paper-near-end sensor becomes Paper is ready status.																

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	DirectIO is successfully completed.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	Parameter has an error or an invalid command number is specified.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_FAILURE(111)	A communication error has occurred.
OPOS_E_TIMEOUT(112)	Data transmission timeout or data response timeout has occurred.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs.
OPOS_E_EXTENDED(114)	Except for OPOS_EPTR_TOOBIG(206) and OPOS_EPTR_BADFORMAT(207), the error defined by ResultCodeExtended is notified.

Open Method

Syntax **LONG Open (BSTR DeviceName);**

DeviceName specifies the device name to open. Specify the registered device name (such as "RP-F10/G10_1") or the logical device name of the printer to execute this method.

Remarks Call this method to open the device.
When **Open** is successful, the common properties and other class-specific properties are initialized.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	Successful open.
OPOS_E_NOSERVICE(104)	Could not establish a connection to the corresponding Service Object.
OPOS_E_ILLEGAL(106)	The Control is already open.
OPOS_E_NOEXIST(109)	The specified <i>DeviceName</i> is not found.
OPOS_E_FAILURE(111)	Initialization of the OPOS Driver is failed.

Note The value of **ResultCode** after calling **Open** may not be the same as **Open** return value for the following two cases.

When the OPOS Control is closed and **Open** fails:

- **ResultCode** will continue to return OPOS_E_CLOSED(101).

When the OPOS Control is already open:

- **Open** will return OPOS_E_ILLEGAL(106), but **ResultCode** may continue to return the value held before **Open**.

ReleaseDevice Method

Syntax **LONG ReleaseDevice ();**

Remarks Call this method to release exclusive access to the device. If **DeviceEnabled** is TRUE and the device is an exclusive-use device, then the device is first disabled. Do not execute this method while the event is in progress (or in the event handler).

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	Exclusive access has been released. Claimed is now FALSE.
OPOS_E_ILLEGAL(106)	The application does not have exclusive access to the device.
OPOS_E_BUSY(113)	Asynchronous output is in progress.

ResetStatistics Method

Syntax **LONG ResetStatistics (BSTR *StatisticsBuffer*);**

Parameter	Meaning
<i>StatisticsBuffer</i>	This is the data buffer defining the statistics to be reset.

This is a comma-separated list of name(s), where an empty string means ALL resettable statistics are to be reset, "U_" means all UnifiedPOS defined resettable statistics are to be reset, "M_" means all SII defined resettable statistics are to be reset, and "actual_name1, actual_name2" (from the XML file definitions) means that the specifically defined resettable statistics are to be reset.

Remarks Resets the resettable statistics defined in a device.

Resettable statistics are as follows.

XML Definition Name	Meaning
ReceiptLineFeedCount	Number of receipt line feeds performed (unit: 100 dot-line)
HoursPoweredCount	Number of hours powered on (unit: hour)
PaperCutCount	Number of paper cuts

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	Resetting of all the specified statistics is successful.
OPOS_E_ILLEGAL(106)	The number of the statistics specified for the parameter in the CSV format exceeds the number of the resettable statistics.
OPOS_E_EXTENDED(114)	ResultCodeExtended =OPOS_ESTATS_ERROR (280) One or more of the specified statistics could not be reset.

RetrieveStatistics Method

Syntax **LONG RetrieveStatistics (BSTR **pStatisticsBuffer*);**

Parameter	Meaning
<i>pStatisticsBuffer</i>	This is the data buffer defining the statistics to be retrieved and where the statistics to be notified are placed.

This is a comma-separated list of name(s), where an empty string means ALL statistics are to be retrieved, "U_" means all UnifiedPOS defined statistics are to be retrieved, "M_" means all SII defined statistics are to be retrieved, and "actual_name1, actual_name2" (from the XML file definitions) means that the specifically defined statistics are to be retrieved.

Remarks Retrieves the requested statistics from a device. **CapStatisticsReporting** must be TRUE in order to successfully use this method. This method is always executed synchronously.

All calls to **RetrieveStatistics** will return the following XML as a minimum.

```
<?xml version='1.0' ?>
<UPOSStat version="1.14.0" xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
xmlns="http://www.nrf-arts.org/IXRetail/namespace/"
xsi:schemaLocation="http://www.nrf-arts.org/IXRetail/namespace/UPOSStat.xsd">
  <Event>
    <Parameter>
      <Name>RequestedStatistic</Name>
      <Value>StatisticValue</Value>
    </Parameter>
  </Event>
  <Equipment>
    <UnifiedPOSVersion>Version</UnifiedPOSVersion>
    <DeviceCategory UPOS="DeviceCategoryName"/>
    <ManufacturerName>Device Manufacturer</ManufacturerName>
    <ModelName>Device Model Name</ModelName>
  </Equipment>
</UPOSStat>
```

If the application requests a statistic name which is not supported by the device, the **<Parameter>** entry will be returned with an empty **<Value>**. For example,

```
<Parameter>
  <Name>RequestedStatistic</Name>
  <Value></Value>
</Parameter>
```

All SII-specific statistics (not defined in the schema) which are collected by the device will be returned in a **<ManufacturerSpecific>** tag instead of a **<Parameter>** tag.

```
<ManufacturerSpecific>
  <Name>TheAnswer</Name>
  <Value>42</Value>
</ManufacturerSpecific>
```

When an application requests all statistics from the device, the device will return a **<Parameter>** entry for every defined statistic for the device category as defined by the XML schema version specified by the version attribute in the **<UPOSStat>** tag. If the device does not record any of the statistics, the corresponding **<Value>** tag will be empty.

The available statistics are as follows.

XML Definition Name	Meaning
UnifiedPOSVersion	Version of the UnifiedPOS specification supported
DeviceCategory	Device category (e.g., POSPrinter)
ManufacturerName	Device manufacturer's name
ModelName	Device model name
SerialNumber	Device serial number
ManufactureDate	Device manufacture date
MechanicalRevision	Device hardware revision
FirmwareRevision	Device firmware revision
Interface	Device hardware interface (e.g., serial, USB)
InstallationDate	Device installation date
HoursPoweredCount	Number of hours powered on (unit: hour)
CommunicationErrorCount	Number of communication errors

XML Definition Name	Meaning
BarcodePrintedCount	Number of barcodes printed
FormInsertionCount	Number of forms inserted into the document/slip station
HomeErrorCount	Number of home errors
JournalCharacterPrintedCount	Number of journal characters printed
JournalLinePrintedCount	Number of journal lines printed (unit: line)
MaximumTempReachedCount	Number of times maximum temperature reached
NVRAMWriteCount	Number of times NVRAM is written to
PaperCutCount	Number of paper cuts
FailedPaperCutCount	Number of failed paper cuts
PrinterFaultCount	Number of printer faults
PrintSideChangeCount	Number of print side changes (check flips) performed
FailedPrintSideChangeCount	Number of print side changes (check flips) failures
ReceiptCharacterPrintedCount	Number of receipt characters printed
ReceiptLinePrintedCount	Number of receipt lines printed (unit: line)
ReceiptLineFeedCount	Number of receipt line feeds performed (unit: 100 dot-line)
ReceiptCoverOpenCount	Number of times the receipt cover was opened
SlipCharacterPrintedCount	Number of document/slip characters printed
SlipLinePrintedCount	Number of document/slip lines printed (unit: line)
SlipLineFeedCount	Number of document/slip line feeds performed (unit: line)
SlipCoverOpenCount	Number of times the document/slip station cover opened
StampFiredCount	Number of stamps fired
HoursPoweredCount_Accumulated	Number of hours powered on (unit: hour) (accumulated)
PaperCutCount_Accumulated	Number of paper cuts (accumulated)
ReceiptLineFeedCount_Accumulated	Number of receipt line feeds performed (unit: 100 dot-line) (accumulated)

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	Specified statistics are successfully gained.
OPOS_E_ILLEGAL(106)	All the statistics of the specified name are undefined.
OPOS_E_EXTENDED(114)	ResultCodeExtended =OPOS_ESTATS_ERROR (280) One or more of the specified statistics could not be obtained.
Other values	Refer to the description of ResultCode .

UpdateFirmware Method

Syntax **LONG UpdateFirmware (BSTR *FirmwareFileName*);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

UpdateStatistics Method

Syntax **LONG UpdateStatistics (BSTR *StatisticsBuffer*);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

5.6 Specific Methods

BeginInsertion Method

Syntax **LONG BeginInsertion (LONG Timeout);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

BeginRemoval Method

Syntax **LONG BeginRemoval (LONG Timeout);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

ChangePrintSide Method

Syntax **LONG ChangePrintSide (LONG Side);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

ClearPrintArea Method

Syntax **LONG ClearPrintArea ();**

Remarks Clears the print data on the Page Mode print area defined by **PageModePrintArea**. The entire page may be cleared by setting **PageModePrintArea** to be the same as **PageModeArea** and then by using **ClearPrintArea**. Specify PTR_S_RECEIPT(2) for **PageModeStation** before calling this method.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS (0)	The method was successful.
Other values	Refer to the description of ResultCode .

CutPaper Method

Syntax **LONG CutPaper (LONG *Percentage*);**

Parameter	Meaning
<i>Percentage</i>	Select the cut type. 100: Full cut 1 to 99: Partial cut 0: No paper cut

Remarks Call to cut the receipt.
This method is executed synchronously if **AsyncMode** is FALSE, and asynchronously if **AsyncMode** is TRUE.
Paper cut can also be executed by using "Paper cut" escape sequence (ESC|[#]P) when calling **PrintNormal** or **PrintImmediate**.
If printing data remains in the printer buffer, paper cut is executed after all buffered data is printed.
During rotated 90° right/left mode by **RotatePrint**, or while Page Mode by **PageModePrint** is selected, the method fails and paper cut is not executed.

Due to the positions of printer head and cutter, paper cut might be executed at the middle of printing data. To avoid this, call this method after feeding paper for the value of **RecLinesToPaperCut**.

In RP-F10 and RP-G10, when the printer function setting "Paper Saving Setting (Paper Saving)" is enabled, the value specified in the printer function setting "Paper Saving Setting (Paper Saving)" is applied to the line spacing when the carriage return (CR) or line feed (LF) is executed. (The value specified by **RecLineSpacing** is ignored.)
However, when the "Paper cut" escape sequence (ESC|[#]P), the "Feed and Paper cut" escape sequence (ESC|[#]fP), or **CutPaper** is executed after the paper is fed by the carriage return (CR) or line feed (LF), distance from the last print line to the cut position is not reduced because paper is cut after executing the paper feed for saved dot lines.
See "Technical Reference" for details.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call the ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	An invalid percentage was specified. Specify the number in the range of 0 to 100. Or, it is also notified when the method is not supported, for example, during rotated 90° right/left mode by RotatePrint , or while in the Page Mode by PageModePrint .
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_TIMEOUT(112)	Data transmission timeout has occurred.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs. (The State is set to OPOS_S_BUSY(3) or OPOS_S_ERROR(4) if AsyncMode is FALSE, and to OPOS_S_ERROR(4) if AsyncMode is TRUE.)

Value	Meaning
OPOS_E_EXTENDED(114)	Except for OPOS_EPTR_TOOBIG(206) and OPOS_EPTR_BADFORMAT(207), the error defined by ResultCodeExtended is notified.

DrawRuledLine Method

Syntax **LONG DrawRuledLine (LONG Station, BSTR PositionList, LONG LineDirection, LONG LineWidth, LONG LineStyle, LONG LineColor);**

Parameter	Meaning
<i>Station</i>	Station to be used. Specify PTR_S_RECEIPT(2).
<i>PositionList</i>	Specifies the position of ruled line.
<i>LineDirection</i>	Specifies the direction of ruled line. Available values are PTR_RL_HORIZONTAL(1) (horizontal ruled line) or PTR_RL_VERTICAL(2) (vertical ruled line).
<i>LineWidth</i>	Specifies the width of ruled line. Specifies a value in the valid range (1 to 255) in dots.
<i>LineStyle</i>	Specifies the type of ruled line. Only solid line PTR_LS_SINGLE_SOLID_LINE(1) is supported for ruled line type.
<i>LineColor</i>	Specifies the color of ruled line. Only black PTR_COLOR_PRIMARY(0x00000001) is supported for ruled line color.

Remarks Draws ruled lines.

This method is executed synchronously if **AsyncMode** is FALSE, and asynchronously if **AsyncMode** is TRUE.

How to specify *PositionList* string differs depending on whether *LineDirection* is set to horizontal ruled line or vertical ruled line.

For horizontal ruled line:

Specify a horizontal ruled line with a pair of ASCII numbers separated by a comma, indicating the drawing start position and length. You can specify multiple lines with multiple pairs separated by ASCII semicolon (";"). The drawing start position and length can be specified in the unit defined by **MapMode**.

These are examples of the *PositionList*.

- "0,500"

This setting draws a horizontal ruled line 500 dots long starting at the 0th dot from the left.

- "0,200;300,100"

This setting draws a horizontal ruled line 200 dots long starting at the 0th dot from the left.

In addition, it draws a horizontal ruled line 100 dots long starting at the 300th dot from the left.

For vertical ruled line:

Specify ASCII numbers separated by a comma, indicating the drawing positions of vertical ruled lines. The drawing position can be specified in the unit defined by **MapMode**.

These are examples of the *PositionList* parameter.

· "0,100,400,500"

This setting draws vertical ruled lines at the 0th, 100th, 400th, and 500th dot from the left.

The valid range of the drawing position of vertical ruled line is 0 to (**RecLineWidth** value - *LineWidth* value). If the specified value exceeds this valid range, an error is returned. Vertical ruled lines are drawn at the subsequent printing operation.

To end the drawing of vertical ruled lines, specify an empty string ("") for *PositionList*.

The drawing position is relative to the top left.

DrawRuledLine supports the batch print mode, but **RotatePrint** and **PageModePrint** do not.

When **ClearOutput** is executed, the specification of vertical ruled line ends.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	One of the following parameter errors occurred. - The specified parameter is improper. - The print mode is improper.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_TIMEOUT(112)	Data transmission timeout has occurred.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs. (State is set to OPOS_S_BUSY(3) or OPOS_S_ERROR(4) if AsyncMode is FALSE, and to OPOS_S_ERROR(4) if AsyncMode is TRUE.)
OPOS_E_EXTENDED(114)	Except for OPOS_EPTR_TOOBIG(206) and OPOS_EPTR_BADFORMAT(207), the error defined by ResultCodeExtended is notified.

EndInsertion Method

Syntax **LONG EndInsertion ();**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

EndRemoval Method

Syntax **LONG EndRemoval ();**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

MarkFeed Method

Syntax **LONG MarkFeed (LONG *Type*);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

PageModePrint Method

Syntax **LONG PageModePrint (LONG *Control*);**

The values of the *Control* are as follows.

Value	Meaning
PTR_PM_PAGE_MODE(1)	Enters Page Mode.
PTR_PM_PRINT_SAVE(2)	Prints the print data of the Page Mode print area and saves the data. This is used for repeated printings.
PTR_PM_NORMAL(3)	Prints the print area and destroys the canvas and exits Page Mode.
PTR_PM_CANCEL(4)	Clears the page and exits Page Mode without any printing of any print area.

Remarks Enters or exits Page Mode for the station specified in **PageModeStation**.


If PTR_PM_PAGE_MODE(1) is specified for *Control*, then Page Mode is started. Subsequently, the print data can be buffered with **PrintNormal**, **PrintBarCode**, **PrintBitmap**, or **PrintMemoryBitmap** until **PageModePrint** is called by specifying PTR_PM_PRINT_SAVE(2), PTR_PM_NORMAL(3), or PTR_PM_CANCEL(4). Methods called during this time only buffer the print data and they do not start printing. Also, the value of **AsyncMode** does not affect the Page Mode function. No **OutputID** will be assigned and no **OutputCompleteEvent** will be notified for each operation.

If PTR_PM_PRINT_SAVE(2) is specified for *Control*, then Page Mode is continued. If some print data is buffered by one of **PrintNormal**, **PrintBarCode**, **PrintBitmap**, and **PrintMemoryBitmap**, then the data is saved and printed. This control is used to print the same page layout with additional print items inside of the page.

If PTR_PM_NORMAL(3) is specified for *Control*, then Page Mode is exited to return to the normal state. If some print data is buffered by one of **PrintNormal**, **PrintBarCode**, **PrintBitmap**, and **PrintMemoryBitmap**, then the data is printed. The buffered data will not be saved.

If PTR_PM_CANCEL(4) is specified for *Control*, then Page Mode is exited to return to the normal state. If some print data is buffered by one of **PrintNormal**, **PrintBarCode**, **PrintBitmap**, and **PrintMemoryBitmap**, then the data is not printed or saved.

When **PageModePrint** is called while PTR_PM_PRINT_SAVE(2) or PTR_PM_NORMAL(3) is specified for *Control*, all of the print data on the Page Mode print area defined by **PageModePrintArea** will be printed, and the paper is fed to the end of the area. If more than one Page Mode print area is defined, then after **PageModePrint** is called, all of the data that is to be printed in the respective Page Mode print area(s) is printed, and the paper is fed to the end of the Page Mode print area located the farthest "down" the sheet of paper. (See the figure below.)

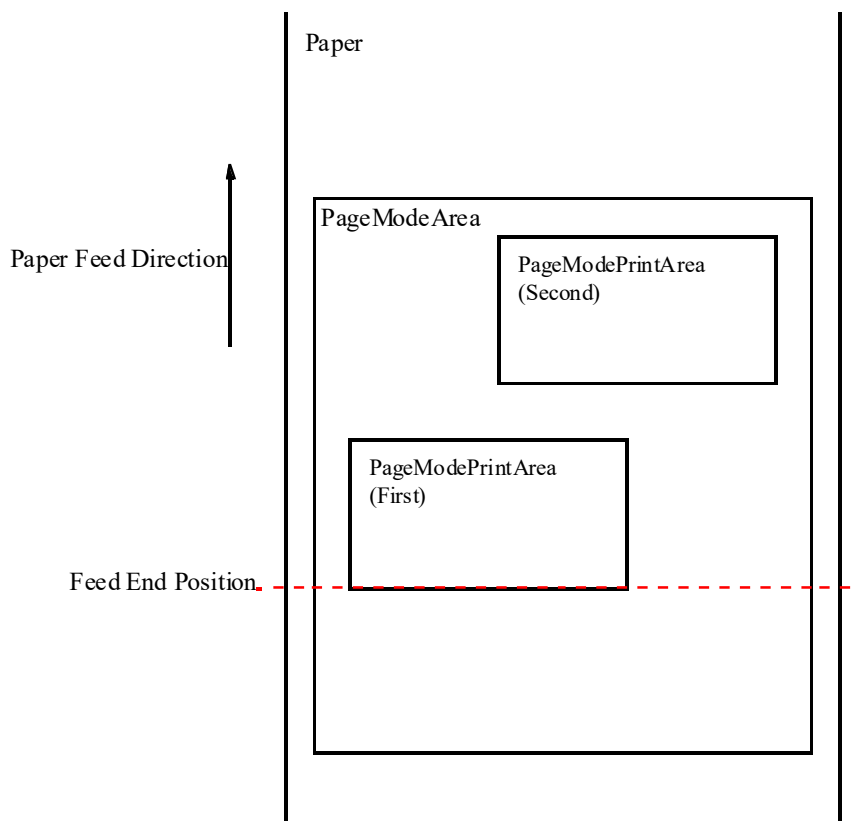

The entire Page Mode area is processed in a batch as one transaction. This method is executed asynchronously if **AsyncMode** is TRUE, or synchronously if **AsyncMode** is FALSE. Calling **ClearOutput** cancels Page Mode to return to the normal state. The buffered print data is also cleared.

The Page Mode function can be used within a transaction print, but not within a rotate print. Specify PTR_S_RECEIPT(2) for **PageModeStation** before calling this method.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_ILLEGAL(106)	The station specified by PageModeStation does not exist, or CapRecPageMode is FALSE. Or, while the station specified by PageModeStation is in the state before the transition to the Page Mode, PTR_PM_NORMAL(3), PTR_PM_PRINT_SAVE(4), or PTR_PM_CANCEL(4) is specified for <i>Control</i> .

Value	Meaning
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs. (It is notified only when AsyncMode is FALSE, and PTR_PM_NORMAL(3), PTR_PM_PRINT_SAVE(2), or PTR_PM_CANCEL(4) is specified to <i>Control</i> .)
OPOS_E_EXTENDED(114)	Except for OPOS_EPTR_TOOBIG(206) and OPOS_EPTR_BADFORMAT(207), the error defined by ResultCodeExtended is notified.
Other values	Refer to the description of ResultCode .

PrintBarcode Method

Syntax **LONG PrintBarcode (LONG Station, BSTR Data, LONG Symbology, LONG Height, LONG Width, LONG Alignment, LONG TextPosition);**

Parameter	Meaning
<i>Station</i>	Station to be used. Specify PTR_S_RECEIPT(2).
<i>Data</i>	Character string of barcode. The format of this data depends on the value of BinaryConversion . See BinaryConversion for details.
<i>Symbology</i>	Barcode type to be used. See the table of <i>Symbology</i> .
<i>Height</i>	Barcode height. Expressed in the unit specified for MapMode . For PTR_MM_DOTS(1), specify the value from 1 to 255. <i>Height</i> of the following barcodes are ignored and set automatically by <i>Width</i> . Specify from 1 to 255. <ul style="list-style-type: none"> • QR Code • GS1 Databar Omni-directional*¹ • GS1 Databar Expanded*¹ • GS1 Databar Expanded Stacked*¹ • GS1 Databar Limited*¹ • GS1 Databar Truncated*¹ <i>Height</i> of the following barcodes are ignored and set with a fixed value. Specify from 1 to 255. <ul style="list-style-type: none"> • GS1 Databar Stacked Omni-directional*¹ • GS1 Databar Stacked*¹ During Page Mode by PageModePrint , specify the value within the range of print area specified by PageModePrintArea and PageModeVerticalPosition .

Parameter	Meaning
<i>Width</i>	Barcode width. Expressed in the unit given by MapMode . The width of the barcode actually printed is the best fit within the width specified by <i>Width</i> . For PTR_MM_DOTS(1), specify the value from 1 to RecLineWidth for upright position. When rotating the barcode 90° right/left by RotateSpecial or RotatePrint , specify in the range not exceeding the maximum value of the printer. (See PageModeArea for the maximum value of the printer.) During Page Mode by PageModePrint , specify the value within the range of print area specified by PageModePrintArea and PageModeHorizontalPosition .
<i>Alignment</i>	Position of the barcode. See the table of <i>Alignment</i> .
<i>TextPosition</i>	Position of the character string. See the table of <i>TextPosition</i> .

*1: Not supported in RP-E10.

- Values of *Symbology*

Value	Meaning
PTR_BCS_UPCA(101)	UPC-A
PTR_BCS_UPCE(102)	UPC-E
PTR_BCS_EAN8(103)	EAN8 (JAN8)
PTR_BCS_JAN8(103)	JAN8 (EAN8)
PTR_BCS_EAN13(104)	EAN13 (JAN13)
PTR_BCS_JAN13(104)	JAN13 (EAN13)
PTR_BCS_EAN13_S(119)	EAN13 (JAN13) with supplemental barcode
PTR_BCS_ITF(106)	Interleaved 2 of 5
PTR_BCS_Codabar(107)	Codabar (NW-7)
PTR_BCS_Code39(108)	Code39
PTR_BCS_Code93(109)	Code93
PTR_BCS_Code128(110)	Code128
PTR_BCS_Code128_Parsed(123)*1	Code128 Parsed
PTR_BCS_GS1DATABAR(131)*1	GS1 Databar Omni-directional
PTR_BCS_GS1DATABAR_E(132)*1	GS1 Databar Expanded
PTR_BCS_GS1DATABAR_S(133)*1	GS1 Databar Stacked Omni-directional
PTR_BCS_GS1DATABAR_E_S(134)*1	GS1 Databar Expanded Stacked
PTR_BCS_PDF417(201)	PDF417
PTR_BCS_QRCODE(204)	QR Code (Mixed mode)
PTR_BCS_OTHER + 6(507)*1	GS1 Databar Limited
PTR_BCS_OTHER + 7(508)*1	GS1 Databar Stacked
PTR_BCS_OTHER + 10(511)*1	GS1 Databar Truncated

*1: Not supported in RP-E10.

- Values of *Alignment*

Value	Meaning
PTR_BC_LEFT(-1)	Align with the left-most print column.
PTR_BC_CENTER(-2)	Align in the center of the station.
PTR_BC_RIGHT(-3)	Align with the right-most print column.
Other value	Distance from the left-most print column to the start of the barcode. Expressed in the unit of measure given by MapMode .

When rotation 90° right/left is specified by **RotateSpecial**, **RotatePrint**, and during Page Mode by **PageModePrint**, the setting of *Alignment* is invalid and the data is always printed with left justify.

- Values of *TextPosition*

Value	Meaning
PTR_BC_TEXT_NONE(-11)	No text is printed. Only prints the barcode.
PTR_BC_TEXT_ABOVE(-12)	Prints the text above the barcode.
PTR_BC_TEXT_BELOW(-13)	Prints the text below the barcode.

Remarks Call this method when printing the barcode at the specified printer.
This method is executed synchronously if **AsyncMode** is FALSE, and asynchronously if **AsyncMode** is TRUE.
If **RotateSpecial** indicates that the barcode is rotated, the barcode is printed in rotated mode.
Height, *Width*, and *TextPosition* are applied to the barcode before it is rotated.
For example, if PTR_BC_TEXT_BELOW is specified, the text is placed under the barcode, and the text and barcode are rotated 90° to the left and printed.

The barcode quiet zone is not secured. Verify that the barcode can be read with your actual device beforehand.

However, the following barcode quiet zones are unnecessary or secured:

- GS1 Databar Omni-directional
- GS1 Databar Expanded
- GS1 Databar Stacked Omni-directional
- GS1 Databar Expanded Stacked
- GS1 Databar Limited
- GS1 Databar Stacked
- GS1 Databar Truncated

The limitations for the parameters of each barcode are described as follows when **MapMode** is PTR_MM_DOTS(1).

[UPC-A]

Parameter	Limitation
<i>Data</i>	Specify 11 or 12 letters consisting of '0' to '9'. The 12th letter does not affect the barcode printing data.
<i>Width</i>	RP-F10, RP-G10: $Width = 95 \times X$ $190 \leq Width \leq 570$ RP-E10: $Width = 113 \times X$ $226 \leq Width \leq 678$ X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i> .

[UPC-E]

Parameter	Limitation
<i>Data</i>	Specify 11 or 12 letters consisting of '0' to '9'. The 12th letter does not affect the barcode printing data.
<i>Width</i>	RP-F10, RP-G10: $Width = 51 \times X$ $102 \leq Width \leq 306$ RP-E10: $Width = 65 \times X$ $130 \leq Width \leq 390$ X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i> .

Additionally, the allowable character must follow the rules below.

- 1.The 1st letter is '0'.
- 2.The UPC-A left code indicates the 2nd to the 6th characters, the UPC-A right code indicates the 7th to the 11th characters, and the abbreviated code is actually printed as UPC-E. If the specified UPC-A initial character is other than 0 or a specified character is not included in the following list, OPOS_E_ILLEGAL(106) is returned.

Maker Code UPC-A Left Code					Item Code UPC-A Right Code					Abbreviated Code					
F1	F2	F3	F4	F5	A1	A2	A3	A4	A5	Z1	Z2	Z3	Z4	Z5	Z6
0-9	0-9	0	0	0	0	0	0-9	0-9	0-9	F1	F2	A3	A4	A5	0
0-9	0-9	1	0	0	0	0	0-9	0-9	0-9	F1	F2	A3	A4	A5	1
0-9	0-9	2	0	0	0	0	0-9	0-9	0-9	F1	F2	A3	A4	A5	2
0-9	0-9	3-9	0	0	0	0	0	0-9	0-9	F1	F2	F3	A4	A5	3
0-9	0-9	0-9	1-9	0	0	0	0	0	0-9	F1	F2	F3	F4	A5	4
0-9	0-9	0-9	0-9	1-9	0	0	0	0	5-9	F1	F2	F3	F4	F5	A5

[EAN8 (JAN8)]

Parameter	Limitation
<i>Data</i>	Specify 7 or 8 letters consisting of '0' to '9'. The 8th letter does not affect the barcode printing data.
<i>Width</i>	RP-F10, RP-G10: $Width = 67 \times X$ $134 \leq Width \leq 402$ RP-E10: $Width = 81 \times X$ $162 \leq Width \leq 486$ X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i> .

[EAN13 (JAN13)]

Parameter	Limitation
<i>Data</i>	Specify 12 or 13 letters consisting of '0' to '9'. The 13th letter does not affect the barcode printing data.
<i>Width</i>	RP-F10, RP-G10: $Width = 95 \times X$ $190 \leq Width \leq 570$ RP-E10: $Width = 113 \times X$ $226 \leq Width \leq 678$ X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i> .

[EAN13 (JAN13) with supplemental barcode]

Parameter	Limitation
<i>Data</i>	Specify 14, 15, 17, or 18 letters consisting of '0' to '9'. When 15 letters or 18 letters are entered, the 13th character does not affect the printing data.
<i>Width</i>	RP-F10, RP-G10: - For 14 or 15 letters $Width = 122 \times X$ $244 \leq Width \leq 732$ - For 17 or 18 letters $Width = 149 \times X$ $298 \leq Width \leq 894$ RP-E10: - For 14 or 15 letters $Width = 138 \times X$ $276 \leq Width \leq 828$ - For 17 or 18 letters $Width = 165 \times X$ $330 \leq Width \leq 990$ X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i> .

[Interleaved 2 of 5]

Parameter	Limitation
<i>Data</i>	Specify any value consisting of '0' to '9'. Note that the number of specified letters must be an even number except for 0.
<i>Width</i>	<p>RP-F10, RP-G10: $Width = ((D \times 2 + 1) \times X \times N) + ((D \times 3 + 6) \times X)$ $14 \times D + 16 \leq Width \leq 54 \times D + 54$</p> <p>RP-E10: $Width = ((D \times 2 + 1) \times X \times N) + (((D \times 3) + 6 + (10 \times 2)) \times X)$ $(14 \times D + 56) \leq Width \leq (54 \times D + 174)$</p> <p>D: the number of barcode characters X: fine element width $2 \leq X \leq 6$ N: ratio of wide element width to fine element width (Set to 2, 2.5, or 3) X and N are automatically set according to <i>Width</i>.</p>

[Codabar (NW-7)]

Parameter	Limitation
<i>Data</i>	The head and end of line must be one of 'A' to 'D'. Other data must be at least one of '0' to '9', '\$', '+', ':', '-', '.', and '/'.
<i>Width</i>	<p>RP-F10, RP-G10: $Width = (((6 \times X) + (2 \times X \times N)) \times D) + ((X \times N - X) \times D') + (-1 \times X)$ $20 \times D + 2 \times D' - 2 \leq Width \leq 72 \times D + 12 \times D' - 6$</p> <p>RP-E10: $Width = (((6 \times X) + (2 \times X \times N)) \times D) + ((X \times N - X) \times D') + (X \times (10 \times 2 - 1))$ $(20 \times D + 2 \times D' + 38) \leq Width \leq (72 \times D + 12 \times D' + 114)$</p> <p>D: the number of barcode characters D': the number of 'A' to 'D', '+', ':', '/', '.' included in the barcode characters X: fine element width $2 \leq X \leq 6$ N: ratio of wide element width to fine element width (Set to 2, 2.5, or 3) X and N are automatically set according to <i>Width</i>.</p>

[Code39]

Parameter	Limitation
<i>Data</i>	At least one of '0' to '9', 'A' to 'Z', space, '\$', '%', '+', '-', '.', '/' must be specified.
<i>Width</i>	RP-F10, RP-G10: $Width = (((X \times 7) + (X \times N \times 3)) \times (D + 2)) + (-1 \times X)$ $26 \times D + 50 \leq Width \leq 96 \times D + 186$ RP-E10: $Width = (((X \times 7) + (X \times N \times 3)) \times (D + 2)) + ((10 \times 2 - 1) \times X)$ $(26 \times D + 90) \leq Width \leq (96 \times D + 306)$ D: the number of barcode characters X: fine element width $2 \leq X \leq 6$ N: ratio of wide element width to fine element width (Set to 2, 2.5, or 3) X and N are automatically set according to <i>Width</i> .

[Code93]

Parameter	Limitation
<i>Data</i>	Specify any value consisting of decimal numbers from 0 to 46. Each numeric value is treated as the corresponding character shown in the table below.
<i>Width</i>	RP-F10, RP-G10: $Width = X \times ((D + 2 + 2) \times 9 + 1)$ $18 \times D + 74 \leq Width \leq 54 \times D + 222$ RP-E10: $Width = X \times ((10 \times 2) + ((D + 2 + 2) \times 9) + 1)$ $(18 \times D + 114) \leq Width \leq (54 \times D + 342)$ D: the number of barcode characters X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i> .

When printing Code93, to specify all the configurable data parameter, the value of **BinaryConversion** must be specified with OPOS_BC_NIBBLE(1) or OPOS_BC_DECIMAL(2). This is because the data includes the symbology character. Regarding the number specified for *Data*, 0x00 represents 0 and 0x01 represents 1.

Number	Character	Number	Character	Number	Character	Number	Character
0	0	12	C	24	O	36	-
1	1	13	D	25	P	37	.
2	2	14	E	26	Q	38	SPACE ^{*1}
3	3	15	F	27	R	39	\$
4	4	16	G	28	S	40	/
5	5	17	H	29	T	41	+
6	6	18	I	30	U	42	%

Number	Character	Number	Character	Number	Character	Number	Character
7	7	19	J	31	V	43	(\$)
8	8	20	K	32	W	44	(%)
9	9	21	L	33	X	45	(/)
10	A	22	M	34	Y	46	(+)
11	B	23	N	35	Z	-	-

*1: Input a space.

[Code128]

Parameter	Limitation
<i>Data</i>	Specify any value consisting of decimal numbers from 0 to 105. Each numeric value is treated as the corresponding character shown in the table below. The first letter must be a decimal number 103, 104, or 105, and the barcode data of at least one letter must follow it.
<i>Width</i>	RP-F10, RP-G10: $Width = X \times ((D + 2) \times 11 + 2)$ $22 \times D + 48 \leq Width \leq 66 \times D + 144$ RP-E10: $Width = X \times ((10 \times 2) + ((D + 2) \times 11) + 2)$ $(22 \times D + 88) \leq Width \leq (66 \times D + 264)$ D: the number of barcode character (including start code) X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i> .

When printing Code128, to specify all the configurable data parameter, the value of **BinaryConversion** must be specified with OPOS_BC_NIBBLE(1) or OPOS_BC_DECIMAL(2). This is because the data includes the symbology character. Regarding the number specified for *Data*, 0x00 represents 0 and 0x01 represents 1.

● Character set of Code128

Number	Character			Number	Character		
	Code A	Code B	Code C		Code A	Code B	Code C
0	SPACE*1	SPACE*1	00	53	U	U	53
1	!	!	01	54	V	V	54
2	"	"	02	55	W	W	55
3	#	#	03	56	X	X	56
4	\$	\$	04	57	Y	Y	57
5	%	%	05	58	Z	Z	58
6	&	&	06	59	[[59
7	'	'	07	60	\	\	60
8	((08	61]]	61
9))	09	62	^	^	62
10	*	*	10	63	_	_	63
11	+	+	11	64	NULL	`	64
12	,	,	12	65	SOH	a	65

Number	Character			Number	Character		
	Code A	Code B	Code C		Code A	Code B	Code C
13	-	-	13	66	STX	b	66
14	.	.	14	67	ETX	c	67
15	/	/	15	68	EOT	d	68
16	0	0	16	69	ENG	e	69
17	1	1	17	70	ACK	f	70
18	2	2	18	71	BEL	g	71
19	3	3	19	72	BS	h	72
20	4	4	20	73	HT	i	73
21	5	5	21	74	LF	j	74
22	6	6	22	75	VT	k	75
23	7	7	23	76	FF	l	76
24	8	8	24	77	CR	m	77
25	9	9	25	78	SO	n	78
26	:	:	26	79	SI	o	79
27	;	;	27	80	DLE	p	80
28	<	<	28	81	DC1	q	81
29	=	=	29	82	DC2	r	82
30	>	>	30	83	DC3	s	83
31	?	?	31	84	DC4	t	84
32	@	@	32	85	NAK	u	85
33	A	A	33	86	SYN	v	86
34	B	B	34	87	ETB	w	87
35	C	C	35	88	CAN	x	88
36	D	D	36	89	EM	y	89
37	E	E	37	90	SUB	z	90
38	F	F	38	91	ESC	{	91
39	G	G	39	92	FS		92
40	H	H	40	93	GS	}	93
41	I	I	41	94	RS	~	94
42	J	J	42	95	US	DEL	95
43	K	K	43	96	FNC3	FNC3	96
44	L	L	44	97	FNC2	FNC2	97
45	M	M	45	98	SHIFT	SHIFT	98
46	N	N	46	99	CODE C	CODE C	99
47	O	O	47	100	CODE B	FNC4	CODE B
48	P	P	48	101	FNC4	CODE A	CODE A
49	Q	Q	49	102	FNC1	FNC1	FNC1
50	R	R	50	103	START(CODE A)		
51	S	S	51	104	START(CODE B)		
52	T	T	52	105	START(CODE C)		

*1: Input a space.

[Code128 Parsed]*1

Parameter	Limitation
<i>Data</i>	<p>The head must be the special code (CODE A, CODE B, or CODE C) for the code set to use, and the barcode data of at least one letter must follow it. See "Code128 Special Code Table" for the special code. See "Input example of <i>Data</i>" for input of <i>Data</i>. The effective range of <i>Data</i> differs by code set.</p> <ul style="list-style-type: none"> • Code A: 0x00 to 0x5f, FNC1, FNC2, FNC3, FNC4, SHIFT, CODE B, CODE C • Code B: 0x20 to 0x7f, FNC1, FNC2, FNC3, FNC4, SHIFT, CODE A, CODE C • Code C: 0x30 to 0x39, FNC1, CODE A, CODE B
<i>Width</i>	<p>$Width = X \times ((D + 2) \times 11 + 2)$ $1^*2 \leq Width \leq 66 \times D + 144$ D: the number of barcode characters (including start code) X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i>.</p>

*1: Not supported in RP-E10.

*2: When $1 \leq D + 48$ is set, *Width* is set to $22 \times D + 48$.

● Code128 Special Code Table

<i>Data</i>	Special Code
"{S"	SHIFT
"{A"	CODE A
"{B"	CODE B
"{C"	CODE C
"{1"	FNC1
"{2"	FNC2
"{3"	FNC3
"{4"	FNC4
"{"	'{'

Data is comprised of ASCII characters, which the service maps to the corresponding value for the selected code set. In Code A and Code B, this will be a one to one mapping. In Code C, each pair of digits is converted to a single Code C data character in the range 0x00 through 0x63. (If the Code C data contains an odd number of digits, then a leading 0 digit is added by the service before conversion.) A sentinel character, the left curly bracket "{", followed by a certain value, is used to indicate a special character.

Input example of *Data*

When creating a barcode of the barcode character "0123", the input of *Data* is as follows according to the code set selected.

Selecting Code A : *Data*="{A0123"

Selecting Code B : *Data*="{B0123"

Selecting Code C : *Data*="{C0123" or *Data*="{C123"

[GS1 Databar Omni-directional]*¹

Parameter	Limitation
<i>Data</i>	Specify 13 letters consisting of '0' to '9'.
<i>Width</i>	$Width = 96 \times X$ $1^{*2} \leq Width \leq 576$ X: module width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i> .

*1: Not supported in RP-E10.

*2: When 1 to 287 is set, *Width* is set to 192.

[GS1 Databar Expanded]*¹

Parameter	Limitation
<i>Data</i>	Specify with 2 or more letters of '0' to '9', 'A' to 'Z', 'a' to 'z', space, '!', '"', '%', '&', '(', ')', '*', '+', ',', '-', '.', '/', ':', ';', '<', '>', '=', '?', '_'. Input "{1" for FNC1. Be sure to input the check digit since it is not automatically calculated by the printer.
<i>Width</i>	Input the value other than 0.

*1: Not supported in RP-E10.

[GS1 Databar Stacked Omni-directional]*¹

Parameter	Limitation
<i>Data</i>	Specify 13 letters consisting of '0' to '9'.
<i>Height</i>	Input the value other than 0. The value is set as $Height = 138$ regardless of the input value.
<i>Width</i>	Input the value other than 0. The value is set as $Width = 100$ regardless of the input value.

*1: Not supported in RP-E10.

Module width is fixed at 2.

[GS1 Databar Expanded Stacked]*¹

Parameter	Limitation
<i>Data</i>	Specify with 2 or more letters of '0' to '9', 'A' to 'Z', 'a' to 'z', space, '!', '"', '%', '&', '(', ')', '*', '+', ',', '-', '.', '/', ':', ';', '<', '>', '=', '?', '_'. Input "{1" for FNC1. Be sure to input the check digit since it is not automatically calculated by the printer.
<i>Width</i>	Input the value other than 0.

*1: Not supported in RP-E10.

Module width is fixed at 2.

[PDF417]

Parameter	Limitation
<i>Data</i>	It must be a character string in which 0x00 to 0x7F follow the ASCII code and 0x80 to 0xFF follow the extended character set of PC437 English list.
<i>Height</i> <i>Width</i>	<p>RP-F10, RP-G10: $Width = (17 \times C + 69) \times X$ $Height = R \times Y$</p> <p>RP-E10: $Width = (17C+69) \times X + (2X \times 2)$ $Height = RY + (2X \times 2)$</p> <p>X: module width Y: module height R: the number of rows C: the number of vertical columns</p> <p>For the number of rows and the number of vertical columns, the smallest value that input data can be converted to barcode is selected. For module width and module height, the maximum size that does not exceed the <i>Width</i> and <i>Height</i> parameters is selected after the number of rows and the number of vertical columns are determined.</p>

Print mode is the normal mode and the error correction level is fixed to 4.

[QR Code]

Parameter	Limitation
Data	Specify characters of the following range: ASCII characters 8 bits Latin/Katakana characters based on JIS X 0201 Shift-JIS code based on JIS X 0208
Width	RP-F10, RP-G10: $Width = (4V + 17) \times X$ $42 \leq Width$ RP-E10: $Width = (4V+17) \times X+(4X \times 2)$ V: version of QR Code (RP-F10, RP-G10: 1 to 18) (RP-E10: 1 to 40) X: module width and height (RP-F10, RP-G10: 2 to 16) (RP-E10: 2 to 11) For version, the smallest value that input data can be converted to barcode is selected. Also, for module width and height, the maximum size that does not exceed the <i>Width</i> is selected after the version is determined.

QR Code model is fixed at 2 and the error correction level is fixed at M. Printing size is based on *Width*, and *Height* is ignored since QR Code is a square.

If data other than the printable characters is specified, OPOS E ILLEGAL(106) is notified.

[GS1 Databar Limited]*¹

Parameter	Limitation
<i>Data</i>	Specify 13 letters consisting of '0' to '9'.
<i>Width</i>	$Width = 79 \times X$ $1^{*2} \leq Width \leq 474$ X: module width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i> .

*1 Not supported in RP-E10.

*2: When 1 to 236 is set, *Width* is set to 158.

[GS1 Databar Stacked]*¹

Parameter	Limitation
<i>Data</i>	Specify 13 letters consisting of '0' to '9'.
<i>Height</i>	Input the value other than 0. The value is set as <i>Height</i> = 26 regardless of the input value.
<i>Width</i>	Input the value other than 0. The value is set as <i>Width</i> = 100 regardless of the input value.

*1 Not supported in RP-E10.

Module width is fixed at 2.

[GS1 Databar Truncated]*¹

Parameter	Limitation
<i>Data</i>	Specify 13 letters consisting of '0' to '9'.
<i>Width</i>	$Width = 96 \times X$ $1^{*2} \leq Width \leq 576$ X: module width $2 \leq X \leq 6$ X is automatically set according to <i>Width</i> .

*1 Not supported in RP-E10.

*2: When 1 to 287 is set, *Width* is set to 192.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	One of the following parameter errors occurred. - <i>Station</i> does not exist. - <i>Station</i> does not support barcode printing. - <i>Height</i> or <i>Width</i> is 0 or too big. - This <i>Symbology</i> is not supported. - The value of <i>Alignment</i> is improper. - The value of <i>TextPosition</i> is improper. - The specified data is not printable. - The data stored in the specified <i>Width</i> cannot be printed.

Value	Meaning
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_TIMEOUT(112)	Data transmission timeout has occurred.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs. (The State is set to OPOS_S_BUSY(3) or OPOS_S_ERROR(4) if AsyncMode is FALSE, and to OPOS_S_ERROR(4) if AsyncMode is TRUE.)
OPOS_E_EXTENDED(114)	Except for OPOS_EPTR_TOOBIG(206) and OPOS_EPTR_BADFORMAT(207), the error defined by ResultCodeExtended is notified.

PrintBitmap Method

Syntax **LONG PrintBitmap (LONG Station, BSTR FileName, LONG Width, LONG Alignment);**

Parameter	Meaning
<i>Station</i>	Station to be used. Specify PTR_S_RECEIPT(2).
<i>FileName</i>	Name of bitmap file. For the supported image file, see below.
<i>Width</i>	Print width of bitmap. See values below.
<i>Alignment</i>	Print position of bitmap. See values below.

- Supported bitmap file

Item	Specifications
Extension	bmp
Format	Windows Bitmap
Color	1, 4, 8, or 24 bits
Compression format	Uncompressed only

- Values of *Width*

Value	Meaning
PTR_BM_ASIS(-11)	Prints the bitmap with one bitmap pixel per printer dot.
Other values	<p>Bitmap width. Expressed in the unit specified for MapMode. If MapMode is PTR_MM_DOTS(1), specify between 1 and RecLineWidth. When printing bitmap in a rotated 90° to right/left mode by RotatePrint is executed, specify the value not exceeding the maximum value of the printer (see PageModeArea for the maximum value).</p> <p>During Page Mode by PageModePrint, specify the value within the range of print area defined by PageModePrintArea and PageModeHorizontalPosition.</p>

The value is rounded up to a multiple of 8 by this software. Specify the bitmap width within the range so that the converted value does not exceed the print area.

- Values of *Alignment*

Value	Meaning
PTR_BM_LEFT(-1)	Align with the left-most print column.
PTR_BM_CENTER(-2)	Align in the center of the station.
PTR_BM_RIGHT(-3)	Align with the right-most print column.
Other values	Distance from the left-most print column to the start of the bitmap. Expressed in the unit of measure given by MapMode .

When rotation 90° right/left is specified by **RotatePrint**, and during Page Mode by **PageModePrint**, the setting of *Alignment* is invalid and the data is always printed with left justify.

Remarks Call this method when printing a bitmap on the specified station.
The highest performance cannot be achieved since the bitmap data is sent to the printer after **PrintBitmap** is called. It is recommended to print the bitmap data using **SetBitmap** and escape sequence.
This method is executed synchronously if **AsyncMode** is FALSE, and asynchronously if **AsyncMode** is TRUE.
Width controls the transformation of bitmap data. If *Width* is PTR_BM_ASIS(-11), then no transformation is executed. The bitmap is printed with one pixel per printer dot. If *Width* is not 0, then the bitmap will be transformed by stretching or compressing the bitmap such that its width is the specified width and the aspect ratio is unchanged.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call the ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	One of the following parameter errors occurred. <ul style="list-style-type: none"> • <i>Station</i> does not exist. • <i>Station</i> does not support bitmap printing. • <i>Width</i> is too big. • <i>Alignment</i> is invalid or too big. When position is specified during normal or upside-down mode, the total value including print bitmap width exceeds the range of RecLineWidth . <ul style="list-style-type: none"> • 32-bit colored bitmap is set.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_NOEXIST(109)	The file specified by <i>FileName</i> was not found.
OPOS_E_TIMEOUT(112)	Data transmission timeout has occurred.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs. (State is set to OPOS_S_BUSY(3) or OPOS_S_ERROR(4) if AsyncMode is FALSE, and to OPOS_S_ERROR(4) if AsyncMode is TRUE.)
OPOS_E_EXTENDED(114)	The error defined by ResultCodeExtended is notified.

PrintImmediate Method

Syntax **LONG PrintImmediate (LONG Station, BSTR Data);**

Parameter	Meaning
<i>Station</i>	Station to be used. Specify PTR_S_RECEIPT(2).
<i>Data</i>	Characters to be printed. Consists of printable characters, escape sequences, line feeds (LF), and carriage returns (CR). See the following values and meanings of special characters within <i>Data</i> for LF and CR. The format of this data depends on the value of BinaryConversion . See BinaryConversion for details.

The values and meanings of special characters within *Data* are as follows.

Value	Operation
LF	Prints data in the buffer, and feeds to the next line.
CR	Replaceable with the same operation as line feed (LF).
LF & CR	Carriage return (CR) is replaceable with the same operation as line feed (LF). Therefore, operation of line feed (LF) is executed twice.
CR & LF	Carriage return (CR) is ignored. Operation of line feed (LF) is executed once.

In RP-F10 and RP-G10, when the printer function setting "Paper Saving Setting (Paper Saving)" is enabled, the value specified in the printer function setting "Paper Saving Setting (Paper Saving)" is applied to the line spacing when the carriage return (CR) or line feed (LF) is executed (The value specified by **RecLineSpacing** is ignored).

However, when any of the "Paper cut" escape sequence (ESC[*#*]P), the "Feed and Paper cut" escape sequence (ESC[*#*]fP), or **CutPaper** is executed after the paper is fed by the carriage return (CR) or line feed (LF), distance from the last print line to the cut position is not reduced because paper is cut after executing the paper feed for saved dot lines.

Remarks Call this method to print the data in *Data* on the printer immediately. The data that exceeds the maximum number of characters per line is printed on the next print line. This method tries to print its data immediately without buffering by **TransactionPrint** and **RotatePrint**.
If unprinted data remains in the printer buffer, printing is executed after all the buffered data is printed.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call the ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	The specified printer does not exist.
OPOS_E_FAILURE(111)	A communication error has occurred.
OPOS_E_TIMEOUT(112)	Data transmission timeout has occurred.

PrintMemoryBitmap Method

Syntax **LONG PrintMemoryBitmap (LONG Station, BSTR Data, LONG Type, LONG Width, LONG Alignment);**

Parameter	Meaning
<i>Station</i>	Station to be used. Specify PTR_S_RECEIPT(2).
<i>Data</i>	Byte array holding the bitmap data. For the supported image file, see PrintBitmap . The format of this data depends on the value of BinaryConversion . See BinaryConversion for details.
<i>Type</i>	Bitmap format. Only PTR_BMT_BMP (1) is supported for the format of the data indicated by <i>Data</i> .
<i>Width</i>	Print width of bitmap. See values below.
<i>Alignment</i>	Print position of bitmap. See values below.

- Values of *Width*

Value	Meaning
PTR_BM_ASIS(-11)	Prints the bitmap with one bitmap pixel per printer dot.
Other values	<p>Bitmap width. Expressed in the unit given by MapMode. If MapMode is PTR_MM_DOTS(1), specify between 1 and RecLineWidth. When printing bitmap in a rotated 90° to right/left mode by RotatePrint is executed, specify the value not exceeding the maximum value of the printer (see PageModeArea for the maximum value of the printer).</p> <p>During Page Mode by PageModePrint, specify the value within the range of print area defined by the PageModePrintArea and the PageModeHorizontalPosition.</p>

The value is rounded up to a multiple of 8 by this software. Specify the bitmap width within the range so that the converted value does not exceed the print area.

- Values of *Alignment*

Value	Meaning
PTR_BM_LEFT(-1)	Align with the left-most print column.
PTR_BM_CENTER(-2)	Align in the center of the station.
PTR_BM_RIGHT(-3)	Align with the right-most print column.
Other values	Distance from the left-most print column to the start of the bitmap. Expressed in the unit of measure given by MapMode .

When rotation 90° right/left is specified by **RotatePrint**, and during Page Mode by **PageModePrint**, the setting of *Alignment* is invalid and the data is always printed with left justify.

Remarks Call this method when printing a memory-stored bitmap on the specified station. For the operation specifications, see **PrintBitmap**.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	One of the following parameter errors occurred. <ul style="list-style-type: none"> • <i>Station</i> does not exist. • <i>Station</i> does not support bitmap printing. • <i>Width</i> is too big. • <i>Alignment</i> is invalid or too big. When position is specified during normal or upside-down mode, the total value including print bitmap width exceeds the range of RecLineWidth. • 32-bit colored bitmap is set.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_NOEXIST(109)	There is no data in <i>Data</i> .
OPOS_E_TIMEOUT(112)	Data transmission timeout has occurred.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs. (State is set to OPOS_S_BUSY(3) or OPOS_S_ERROR(4) if AsyncMode is FALSE, and to OPOS_S_ERROR(4) if AsyncMode is TRUE.)
OPOS_E_EXTENDED(114)	The error defined by ResultCodeExtended is notified.

PrintNormal Method

Syntax **LONG** PrintNormal (**LONG** *Station*, **BSTR** *Data*);

Parameter	Meaning
<i>Station</i>	Station to be used. Specify PTR_S_RECEIPT(2).
<i>Data</i>	Characters to be printed. Consists of printable characters, escape sequences, line feeds (LF), and carriage returns (CR). See the following values and meanings of special characters within <i>Data</i> for LF and CR. The format of this data depends on the value of BinaryConversion . See BinaryConversion for details.

The values and meanings of special characters within *Data* are as follows.

Value	Meaning
LF	Prints data in the buffer, and feeds to the next line.
CR	Replaceable with the same operation as line feed (LF).
LF & CR	Carriage return (CR) is replaceable with the same operation as line feed (LF). Therefore, operation of line feed (LF) is executed twice.
CR & LF	Carriage return (CR) is ignored. Operation of line feed (LF) is executed once.

In RP-F10 and RP-G10, when the printer function setting "Paper Saving Setting (Paper Saving)" is enabled in the printer, the value specified in the printer function setting "Paper Saving Setting (Paper Saving)" is applied to the line spacing when the carriage return (CR) or line feed (LF) is executed (The value specified by **RecLineSpacing** is ignored). However, when any of the "Paper cut" escape sequence (ESC|[#]P), the "Feed and Paper cut" escape sequence (ESC|[#]fP), or **CutPaper** is executed after the paper is fed by the carriage return (CR) or line feed (LF), distance from the last print line to the cut position is not reduced because paper is cut after executing the paper feed for saved dot lines.

Remarks Call this method to print the data in *Data*. The print data that exceeds the maximum number of characters per line is printed on the next print line.
If unprinted data remains in the printer buffer, printing is executed after all the buffered data is printed.
This method is executed synchronously if **AsyncMode** is FALSE, and asynchronously if **AsyncMode** is TRUE.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	The specified printer does not exist.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_FAILURE(111)	A communication error has occurred.
OPOS_E_TIMEOUT(112)	Data transmission timeout or data receive timeout has occurred.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs. (State is set to OPOS_S_BUSY(3) or OPOS_S_ERROR(4) if AsyncMode is FALSE, and to OPOS_S_ERROR(4) if AsyncMode is TRUE.)
OPOS_E_EXTENDED(114)	Except for OPOS_EPTR_TOOBIG(206) and OPOS_EPTR_BADFORMAT(207), the error defined by ResultCodeExtended is notified.

PrintTwoNormal Method

Syntax **LONG PrintTwoNormal (LONG Stations, BSTR Data1, BSTR Data2);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

RotatePrint Method

Syntax **LONG RotatePrint (LONG Station, LONG Rotation);**

Parameter	Meaning
<i>Station</i>	Station to be used. Specify PTR_S_RECEIPT(2).
<i>Rotation</i>	Direction of rotation. See values below.

- Values of *Rotation*.

Value	Meaning
PTR_RP_RIGHT90(257)	Starts rotated printing 90° to the right (clockwise).
PTR_RP_LEFT90(258)	Starts rotated printing 90° to the left (counterclockwise).
PTR_RP_ROTATE180(259)	Starts rotated printing 180°, that is, prints upside-down.
PTR_RP_BARCODE(4096)	Starts rotated barcode printing. This value is ORed with one of the above start rotated print values.
PTR_RP_BITMAP(8192)	Starts rotated bitmap printing. This value is ORed with one of the above start rotated print values. Rotates the bitmap printed by PrintBitmap .
PTR_RP_NORMAL(1)	Ends rotated printing.

Remarks This method is executed synchronously if **AsyncMode** is FALSE, and asynchronously if **AsyncMode** is TRUE.

If *Rotation* is PTR_RP_ROTATE180(259), then upside-down print mode starts. Subsequent calls to **PrintNormal** or **PrintImmediate** will print the data upside-down until **RotatePrint** is called with the *Rotation* set to PTR_RP_NORMAL(1). Lines are printed in the order that they are sent to the POS Printer Control, with the start of each line justified at the right margin of the printer. If PTR_RP_BARCODE(4096) is set as OR of PTR_RP_ROTATE180(259) in *Rotation*, the barcode printing by **PrintBarCode** makes upside-down barcode. Also, if PTR_RP_BITMAP(8192) is set as OR of PTR_RP_ROTATE180(259) in *Rotation*, the bitmap printing by **PrintBitmap** makes upside-down bitmap.

- **Caution for rotating 180°**

If the transaction by **TransactionPrint** is started, the upside-down print mode is cleared as well as **ClearOutput**.

If *Rotation* is PTR_RP_RIGHT90(257) or PTR_RP_LEFT90(258), the sideways print mode starts. Subsequent calls to **PrintNormal** will buffer the print data until **RotatePrint** is called with *Rotation* set to PTR_RP_NORMAL(1). (In this case, the data of the above method is only buffered and not printed. Also, the value of **AsyncMode** does not affect its operation. In other words, no **OutputID** is assigned to the request and no **OutputCompleteEvent** is informed.) If PTR_RP_BARCODE (4096) is set in *Rotation*, barcode printing by **PrintBarCode** is buffered. If PTR_RP_BITMAP(8192) is set in *Rotation*, bitmap printing by **PrintBitmap** is buffered. If *Rotation* is PTR_RP_NORMAL(1), rotated print mode is exited. If some print data is buffered while the sideways rotated print is in effect, the buffered data is printed. Service Object calculates so that the width in the sideways print mode becomes the optimum size. The maximum width is 2400 dots in the sideways print mode. If the print data per line exceeds this range, the width is 2400 dots and non-printed data is printed by feeding to the next print line.

- **Caution for rotating 90°**

If the bitmap print by "Print Bitmap" escape sequence (ESC|#B) is specified on **PrintNormal** during the sideways print mode, the print data is buffered regardless of *Rotation*.

If the transaction by **TransactionPrint** is started, the sideways print mode is canceled as well as **ClearOutput**. This is because buffering by **TransactionPrint** is prior to buffering by the **RotatePrint**. In order to perform batch print in the sideways print mode, execute **TransactionPrint**, execute **RotatePrint** to exit the rotated print mode, and then cancel the batch print by **TransactionPrint**.

Calling **ClearOutput** cancels rotated print mode. Any buffered sideways rotated print lines are also cleared.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	The specified printer does not exist.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs. (State is set to OPOS_S_BUSY(3) or OPOS_S_ERROR(4) if AsyncMode is FALSE, and to OPOS_S_ERROR(4) if AsyncMode is TRUE.)
OPOS_E_EXTENDED(114)	Except for OPOS_EPTR_TOOBIG(206) and OPOS_EPTR_BADFORMAT(207), the error defined by ResultCodeExtended is notified.

SetBitmap Method

Syntax **LONG SetBitmap (LONG BitmapNumber, LONG Station, BSTR FileName, LONG Width, LONG Alignment);**

Parameter	Meaning
<i>BitmapNumber</i>	The number to be assigned to this bitmap. The valid values are 1 to 20.
<i>Station</i>	Station to be used. Specify PTR_S_RECEIPT(2).
<i>FileName</i>	Name of bitmap file. If an empty string is set, the bitmap setting is canceled. For the supported image file, see PrintBitmap .
<i>Width</i>	Print width of bitmap. See the following values.
<i>Alignment</i>	Print position of bitmap. See PrintBitmap for values.

- Values of *Width*

Value	Meaning
PTR_BM_ASIS(-11)	Prints the bitmap with one bitmap pixel per printer dot.
Other values	Bitmap width. Expressed in the unit given by MapMode . If MapMode is PTR_MM_DOTS(1), specify between 1 and RecLineWidth .

Remarks Call this method to save the information about the bitmap to be printed. The bitmap may then be printed by calling **PrintNormal** or **PrintImmediate** with the "Print Bitmap" escape sequence (ESC|#B) in the print data. Service Object prepares for printing with downloading bitmap data to the downloaded bit image area and NV graphics area of the printer. When bitmap print is specified by escape sequence, only command which conducts printing is transmitted to provide better performance.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call the ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	One of the following parameter errors occurred. <ul style="list-style-type: none"> • The value of <i>BitmapNumber</i> is improper. • <i>Station</i> does not exist. • <i>Station</i> does not support bitmap printing. • <i>Width</i> is too big. • <i>Alignment</i> is invalid or too big. When absolute position is specified, the total including print bitmap width exceeds the range of RecLineWidth. • 32-bit colored bitmap is set.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_NOEXIST(109)	The file specified by <i>FileName</i> was not found.
OPOS_E_FAILURE(111)	Failed to register bitmap due to the shortage of memory on the printer.
OPOS_E_TIMEOUT(112)	Data transmission timeout has occurred or any response from the printer is not made before timeout.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs (This can be set when State is OPOS_S_BUSY(3) or OPOS_S_ERROR(4)).
OPOS_E_EXTENDED(114)	The error defined by ResultCodeExtended is notified.

SetLogo Method

Syntax **LONG SetLogo (LONG Location, BSTR Data);**

Parameter	Meaning
<i>Location</i>	Logo to be set. Specify PTR_L_TOP(1) or PTR_L_BOTTOM(2).
<i>Data</i>	Characters that produce the logo. Consists of printable characters, escape sequences, line feeds (LF), and carriage returns (CR). See the following values and meanings of special characters within <i>Data</i> for LF and CR. The format of this data depends on the value of BinaryConversion . See BinaryConversion for details.

The values and meanings of special characters within *Data* are as follows.

Value	Meaning
LF	Prints data in the buffer, and feeds to the next line.
CR	Replaceable with the same operation as line feed (LF).
LF & CR	Carriage return (CR) is replaceable with the same operation as line feed (LF). Therefore, operation of line feed (LF) is executed twice.
CR & LF	Carriage return (CR) is ignored. Operation of line feed (LF) is executed once.

In RP-F10 and RP-G10, when the printer function setting "Paper Saving Setting (Paper Saving)" is enabled in the printer, the value specified in the printer function setting "Paper Saving Setting (Paper Saving)" is applied to the line spacing when the carriage return (CR) or line feed (LF) is executed (The value specified by **RecLineSpacing** is ignored). However, when any of the "Paper cut" escape sequence (ESC|[#]P), the "Feed and Paper cut" escape sequence (ESC|[#]fP), or **CutPaper** is executed after the paper is fed by the carriage return (CR) or line feed (LF), distance from the last print line to the cut position is not reduced because paper is cut after executing the paper feed for saved dot lines.

Remarks Call this method to save a data string as the top or bottom logo. The logo can be printed by calling **PrintNormal** or **PrintImmediate** with "Print Top Logo" escape sequence (ESC|tL) or "Print Bottom Logo" escape sequence (ESC|bL) in the print data. *Data* registered by this method holds the data in the character set of **CharacterSet** at the time when the method is executed. Therefore, execute **SetLogo** with **CharacterSet** 932 to register the data including kanji character(s). After that, kanji character(s) will be printed even if **CharacterSet** is set to 999 when the data is printed by escape sequence.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_ILLEGAL(106)	Improper <i>Location</i> is specified.
Other values	Refer to the description of ResultCode .

TransactionPrint Method

Syntax **LONG TransactionPrint(LONG Station, LONG Control);**

Parameter	Meaning
<i>Station</i>	Station to be used. Specify PTR_S_RECEIPT(2).
<i>Control</i>	Transaction control. See values below.

- Values of *Control*

Value	Meaning
PTR_TP_TRANSACTION(11)	Starts a transaction.
PTR_TP_NORMAL(12)	Ends a transaction by printing the buffered data.

Remarks Call this method to enter or exit transaction mode.

If *Control* is PTR_TP_TRANSACTION (11), then transaction mode is entered. Subsequent calls to **PrintNormal**, **CutPaper**, **RotatePrint**, **PrintBarCode**, **PrintBitmap**, **PrintMemoryBitmap**, or **DrawRuledLine** will buffer the print data at the Service Object until **TransactionPrint** is called with the *Control* set to PTR_TP_NORMAL(12). (In this case, the print methods only validate the method parameters and buffer the data, and they do not initiate printing. Also, the value of **AsyncMode** does not affect its operation. In other words, no **OutputID** is assigned to the request and no **OutputCompleteEvent** is enqueued.)

If *Control* is PTR_TP_NORMAL(12), then transaction mode is exited. If some data was buffered by calls to **PrintNormal**, **CutPaper**, **RotatePrint**, **PrintBarCode**, **PrintBitmap**, **PrintMemoryBitmap**, or **DrawRuledLine**, then the buffered data is printed. This method is executed synchronously if **AsyncMode** is FALSE, and asynchronously if **AsyncMode** is TRUE. Calling **ClearOutput** cancels transaction mode. Any buffered print lines are also cleared. For the combination with **RotatePrint**, refer to **RotatePrint**.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The method was successful.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	The specified printer does not exist.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_BUSY(113)	Cannot be executed while output is in progress or an error occurs. (State is set to OPOS_S_BUSY(3) or OPOS_S_ERROR(4) if AsyncMode is FALSE, and to OPOS_S_ERROR(4) if AsyncMode is TRUE.)
OPOS_E_EXTENDED(114)	Except for OPOS_EPTR_TOOBIG(206) and OPOS_EPTR_BADFORMAT(207), the error defined by ResultCodeExtended is notified.

ValidateData Method

Syntax **LONG ValidateData(LONG Station, BSTR Data);**

Parameter	Meaning
<i>Station</i>	Station to be used. Specify PTR_S_RECEIPT(2).
<i>Data</i>	Data to be validated. May include printable data and escape sequences. The format of this data depends on the value of BinaryConversion . See BinaryConversion for details.

Remarks Before calling **PrintImmediate** or **PrintNormal**, call this method when determining whether a data sequence, possibly including one or more escape sequences, is valid for the specified station.
This method does not cause any printing but is used to determine the capability of the station.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The data is valid.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	At least one of the escape sequences is out of the range. However, the Control can select valid alternatives. Also, this value is stored when the escape sequence is not supported by the Page Mode function or rotated right/left 90° print mode.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_FAILURE(111)	At least one of the escape sequences is not supported. No alternatives can be selected.

The cases in which OPOS_E_ILLEGAL(106) is notified are as follows.

Escape Sequence	Condition
Paper cut	One of the following statuses occurs. <ul style="list-style-type: none"> Percentage '#' is not precisely supported. The Control will select the nearest value that is supported. It is not supported during rotated 90° right/left mode by RotatePrint. It is not supported during Page Mode by PageModePrint.
Feed and Paper cut	One of the following statuses occurs. <ul style="list-style-type: none"> Percentage '#' is not precisely supported. The Control will select the nearest value that is supported. It is not supported during rotated 90° right/left mode by RotatePrint. It is not supported during Page Mode by PageModePrint.

Escape Sequence	Condition
Feed lines	<p>One of the following statuses occurs.</p> <ul style="list-style-type: none"> • The line count '#' is not precisely supported. The Control will select the nearest value that is supported. • It is not supported during rotated 90° right/left mode by RotatePrint. • It is not supported during Page Mode by PageModePrint.
Feed units	<ul style="list-style-type: none"> • The feed unit count '#' is not precisely supported due to occurrence of rounding error of 1 dot depending on the setting of MapMode. • The feed unit count '#' is not precisely supported. The Control will select the nearest value that is supported. • It is not supported during rotated 90° right/left mode by RotatePrint. • It is not supported during Page Mode by PageModePrint.
Pass through embedded data	The number of bytes of embedded data '#' is not precisely supported.
Print in-line barcode	<p>One of the following statuses occurs.</p> <ul style="list-style-type: none"> • The number of bytes of barcode data '#' is not precisely supported. • The characters following R and indicating the attribute, or the parameter value are not precisely supported.
Print in-line ruled line	<p>One of the following statuses occurs.</p> <ul style="list-style-type: none"> • The number of bytes of ruled line data '#' is not precisely supported. • The characters following dL and indicating the attribute, or the parameter value are not precisely supported.
Underline	The thickness '#' is not precisely supported. The Control will select the nearest value that is supported.
Scale vertically	The scale factor '#' is not precisely supported. The Control will select the nearest value that is supported.
Scale horizontally	The scale factor '#' is not precisely supported. The Control will select the nearest value that is supported.
Center	<p>One of the following statuses occurs.</p> <ul style="list-style-type: none"> • It is not supported during rotated 90° right/left mode by RotatePrint. • It is not supported during Page Mode by PageModePrint.
Right justify	<p>One of the following statuses occurs.</p> <ul style="list-style-type: none"> • It is not supported during rotated 90° right/left mode by RotatePrint. • It is not supported during Page Mode by PageModePrint.
Left justify	<p>One of the following statuses occurs.</p> <ul style="list-style-type: none"> • It is not supported during rotated 90° right/left mode by RotatePrint. • It is not supported during Page Mode by PageModePrint.

The cases in which OPOS_E_FAILURE(111) is notified are as follows.

Escape Sequence	Condition
(General)	The format of the escape sequence is invalid.
Feed, Paper cut, and Stamp	Not supported.
Fire stamp	Not supported.
Print bitmap	The bitmap number '#' is not correct.
Feed reverse	Not supported.
Font typeface	Not supported.
Italic	Not supported.
Alternate color (Custom)	Not supported.
Shading	Not supported.
RGB Color	Not supported.
SubScript	Not supported.
SuperScript	Not supported.
Strike-through	Not supported.

Data	Condition
data1CRdata2LF	(Where CR is a Carriage Return and LF is a Line Feed.) Cannot remain on the same line after the data is printed. The data1 is printed on one line, and the data2 is printed on the next line.

5.7 Events

DirectIOEvent Event

Syntax **void DirectIOEvent**(LONG *EventNumber*, LONG* *pData*, BSTR* *pString*);

Remarks This event is not supported.

ErrorEvent Event

Syntax **void ErrorEvent** (LONG *ResultCode*, LONG *ResultCodeExtended*, LONG *ErrorLocus*, LONG* *pErrorResponse*);

Parameter	Meaning
<i>ResultCode</i>	Factor code causing the error event. See ResultCode for the values.
<i>ResultCodeExtended</i>	Extended code of the factor causing the error event. See values below.
<i>ErrorLocus</i>	Set to OPOS_EL_OUTPUT(1). The error occurred while processing asynchronous output.
<i>pErrorResponse</i>	Pointer for error event response. See values below.

If *ResultCode* is OPOS_E_EXTENDED(114), then *ResultCodeExtended* is set to one of the following values.

Value	Meaning
OPOS_EPTR_COVER_OPEN(201)	The printer cover is open.
OPOS_EPTR_REC_EMPTY(203)	The receipt is out of paper.
OPOS_EPTR_VPPower(1001)	Vp voltage error has occurred.
OPOS_EPTR_AUTOCUTTER(1002)	Autocutter error has occurred.
OPOS_EPTR_HEAD_TEMP(1005)	Head-temperature error has occurred.
OPOS_EPTR_UNRECOVERABLE(1010)	A non-recoverable error has occurred.

The content of the location specified by *pErrorResponse* is preset to the default value of OPOS_ER_RETRY(11).

The application sets one of the following values.

Value	Meaning
OPOS_ER_RETRY(11)	Retries the asynchronous output. The error state is exited. If the registry "ProcessCompletionTiming" is "0", all data not being transmitted to the printer is printed. If the registry "ProcessCompletionTiming" is "1", all unprinted data is printed.
OPOS_ER_CLEAR(12)	Clears all buffered print data. The error state is exited.

Remarks This event is notified when an error is detected and the POS Printer Control state transitions into the error state.

OutputCompleteEvent Event

Syntax **void OutputCompleteEvent (LONG *OutputID*);**

OutputID indicates the ID number of the completed asynchronous output request.

Remarks This event is notified when the previously started asynchronous output request has completed successfully.

StatusUpdateEvent Event

Syntax **void StatusUpdateEvent (LONG *Status*);**

Status is set to one of the following values.

Value	Meaning
PTR_SUE_COVER_OPEN(11)	The printer cover is open.
PTR_SUE_COVER_OK(12)	The printer cover is closed.
PTR_SUE_REC_EMPTY(24)	The receipt is out of paper.
PTR_SUE_REC_NEAREMPTY(25)	The receipt is low.
PTR_SUE_REC_PAPEROK(26)	The receipt is ready.
PTR_SUE_IDLE(1001)	All the asynchronous outputs finished either successfully or by cleared. The POS Printer Control's State is now OPOS_S_IDLE(2). FlagWhenIdle must be TRUE for this event to be notified. And the POS Printer Control automatically resets the property to FALSE before the event is notified.
OPOS_SUE_POWER_ONLINE(2001)	The device is powered on and ready (This is notified when PowerNotify = OPOS_PN_ENABLED(1)).
OPOS_SUE_POWER_OFF_OFFLINE(2004)	The device is powered off or offline (This is notified when PowerNotify = OPOS_PN_ENABLED(1)).

Remarks This event is notified when an important state change has occurred in the printer device.

When the Bluetooth model is used, it takes about 30 seconds to notify the OPOS_SUE_POWER_OFF_OFFLINE(2004) after the power condition of the device is either power off or offline.

And it takes about 10 seconds to notify the OPOS_SUE_POWER_ONLINE(2001) after the power condition of the device is on and ready.

Chapter 6 Cash Drawer Control Interface Specifications

This chapter describes the Cash Drawer Control properties, methods and events implemented in this software.

6.1 Summary

6.1.1 Common Properties

Property Name	Type	Access	Availability Condition	Default
BinaryConversion	Long	R/W	Open	OPOS_BC_NONE(0)
CapCompareFirmwareVersion	Boolean	R	Open	FALSE
CapPowerReporting	Long	R	Open	OPOS_PR_STANDARD(1)
CapStatisticsReporting	Boolean	R	Open	FALSE
CapUpdateFirmware	Boolean	R	Open	FALSE
CapUpdateStatistics	Boolean	R	Open	FALSE
CheckHealthText	String	R	Open	""
Claimed	Boolean	R	Open	FALSE
ControlObjectDescription	String	R	-	"OPOS CashDrawer Control 1.14.xxx [Public, by CRM/RCS-Dayton]"
ControlObjectVersion	Long	R	-	1014xxx
DeviceDescription	String	R	Open	"SII RP-x10 Cash Drawer"
DeviceEnabled	Boolean	R/W	Open	FALSE
DeviceName	String	R	Open	"RP-x10 Cash Drawer"
FreezeEvents	Boolean	R/W	Open	FALSE
OpenResult	Long	R	-	OPOS_SUCCESS(0)
PowerNotify	Long	R/W	Open	OPOS_PN_DISABLED(0)
PowerState	Long	R	Open	OPOS_PS_UNKNOWN(2000)
ResultCode	Long	R	-	OPOS_SUCCESS (0)
ResultCodeExtended	Long	R	Open	0
ServiceObjectDescription	String	R	Open	"SII RP-x10 Cash Drawer Service Object, Copyright(C) 20xx Seiko Instruments Inc."
ServiceObjectVersion	Long	R	Open	1014xxx
State	Long	R	-	OPOS_S_CLOSED(1)

6.1.2 Specific Properties

Property Name	Type	Access	Availability Condition	Default
CapStatus	Boolean	R	Open	TRUE
CapStatusMultiDrawerDetect	Boolean	R	Open	FALSE
DrawerOpened	Boolean	R	Open & Enable	Depends on the cash drawer status

6.1.3 Common Methods

Method Name	Availability Condition
CheckHealth	Open & Enable
ClaimDevice	Open
Close	Open
CompareFirmwareVersion	Open, Claim, & Enable
DirectIO	Open & Enable ^{*1}
Open	-
ReleaseDevice	Open & Claim
ResetStatistics	Open & Enable
RetrieveStatistics	Open & Enable
UpdateFirmware	Open, Claim, & Enable
UpdateStatistics	Open & Enable

^{*1}: The availability condition differs from that of UPOS V 1.14.1.

6.1.4 Specific Methods

Method Name	Availability Condition
OpenDrawer	Open & Enable
WaitForDrawerClose	Open & Enable

6.1.5 Events

Event Name	Occurrence Condition
DirectIOEvent	Open & Enable
StatusUpdateEvent	Open & Enable

6.2 Common Properties

BinaryConversion Property R/W

Syntax **LONG BinaryConversion;**

Remarks The value of **BinaryConversion** can be modified to one of the following values, but this affects no method.

Value	Meaning
OPOS_BC_NONE(0)	Data is placed one byte per BString character, with no conversion. (Default)
OPOS_BC_NIBBLE(1)	Each byte is converted into 2 characters.
OPOS_BC_DECIMAL(2)	Each byte is converted into 3 characters.

This property is initialized to OPOS_BC_NONE(0) by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	An illegal value was specified.

CapCompareFirmwareVersion Property

Syntax **BOOL CapCompareFirmwareVersion;**

Remarks Indicates whether the version of the firmware can be compared.
The following table shows the valid property values.

Value	Meaning
FALSE	The function that compares firmware versions is not supported.

This property is initialized to FALSE by **Open**.

CapPowerReporting Property

Syntax **LONG CapPowerReporting;**

Remarks Identifies the reporting capabilities of the device.
The following table shows the valid property values.

Value	Meaning
OPOS_PR_STANDARD(1)	The following 2 types of power states can be determined and reported. <ul style="list-style-type: none">• OFF_OFFLINE (power off or offline)• ONLINE

This property is initialized to OPOS_PR_STANDARD(1) by **Open**.

CapStatisticsReporting Property

Syntax **BOOL CapStatisticsReporting;**

Remarks Identifies the statistics reporting capabilities of the device.
The following table shows the valid property values.

Value	Meaning
FALSE	No statistical data regarding the device is available.

This property is initialized to FALSE by **Open**.

CapUpdateFirmware Property

Syntax **BOOL CapUpdateFirmware;**

Remarks Indicates whether the device supports firmware updating.
The following table shows the valid property values.

Value	Meaning
FALSE	Firmware update is not supported.

This property is initialized to FALSE by **Open**.

CapUpdateStatistics Property

Syntax **BOOL CapUpdateStatistics;**

Remarks Indicates the function that some or all device statistics can be reset/updated.
The following table shows the valid property values.

Value	Meaning
FALSE	None of the statistical data can be reset/updated by the application.

This property is initialized to FALSE by **Open**.

CheckHealthText Property

Syntax **BSTR CheckHealthText;**

Remarks Holds the results of the most recent call to **CheckHealth**. The results of diagnosis are as follows.

Value	Meaning
"Internal HCheck: Successful"	Succeeded in the health check without using the device.
"External HCheck: Successful"	Succeeded in confirmation of communication with the cash drawer and opening the drawer using the device.
"External HCheck: Failure"	Failed in confirmation of communication with the cash drawer or opening the drawer using the device.
"Interactive HCheck: Successful"	Succeeded in the interactive test of the device.

Value	Meaning
"Interactive HCheck: Failure"	Failed in the interactive test of the device.
"Interactive HCheck: Canceled"	For the interactive test of the device, the dialog is closed without testing.

This value is initialized to an empty string before the first call to **CheckHealth**.

Claimed Property

Syntax **BOOL Claimed;**

Remarks Indicates whether the device is claimed for exclusive access.
The following table shows the valid property values.

Value	Meaning
TRUE	The device is claimed for exclusive access.
FALSE	The device is released for sharing with other applications.

The value of this property is initialized to FALSE by **Open**.

ControlObjectDescription Property

Syntax **BSTR ControlObjectDescription;**

Remarks Identifies the Control Object by this property.
"OPOS CashDrawer Control 1.14.xxx [Public, by CRM/RCS-Dayton]" is set.

This property is always readable.

ControlObjectVersion Property

Syntax **LONG ControlObjectVersion;**

Remarks Holds the Control Object version number.

This property is always readable.

DeviceDescription Property

Syntax **BSTR DeviceDescription;**

Remarks Identifies the device and any pertinent information about it.
Depends on the printer, the default is different.

Printer	Default
RP-F10/G10	"SII RP-F10/G10 Cash Drawer"
RP-E10	"SII RP-E10 Cash Drawer"

This property is initialized by **Open**.

DeviceEnabled Property R/W

Syntax **BOOL DeviceEnabled;**

Remarks Indicates whether the device has been placed in an operational state.
The following table shows the valid property values.

Value	Meaning
TRUE	The device has been placed in an operational state. If changed to TRUE, then the device is brought to an operational state.
FALSE	The device has been disabled. If changed to FALSE, then the device is disabled.

The application must set this property to TRUE before using output devices.

This property is initialized to FALSE by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_FAILURE(111)	The connection port cannot be opened. Try again after ensuring that the port is not used by other programs or that the port exists.

DeviceName Property

Syntax **BSTR DeviceName;**

Remarks Identifies the device and any pertinent information about it.
Depends on the printer, the default is different.

Printer	Default
RP-F10/G10	"RP-F10/G10 Cash Drawer"
RP-E10	"RP-E10 Cash Drawer"

This property is initialized by **Open**.

FreezeEvents Property R/W

Syntax **BOOL FreezeEvents;**

Remarks Selects whether to notify events.
The following table shows the valid property values.

Value	Meaning
TRUE	Events are not delivered from the Control. Events will be held by the Control until events are unfrozen.
FALSE	Events are delivered from the Control. If some events have been held while events were frozen and all other conditions are correct for delivering the events, changing FreezeEvents to FALSE allows these events to be delivered.

An application may choose to freeze events for a specific sequence of code where interruption by an event is not desirable.

This property is initialized to FALSE by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.

OpenResult Property

Syntax **LONG OpenResult;**

Remarks Holds additional details about the most recent **Open**. The values of **OpenResult** are as follows.

Value	Meaning
OPOS_SUCCESS(0)	Successful open.
OPOS_OR_ALREADYOPEN (301)	The Control is already open.
OPOS_OR_REGBADNAME (302)	The registry does not contain a key for the specified device name.
OPOS_OR_REGPROGID (303)	Could not read the device name key's default, or could not convert the Programmatic ID it holds into a valid Class ID.
OPOS_OR_CREATE (304)	Could not create a Service Object instance, or could not get its IDispatch interface.
OPOS_OR_BADIF (305)	The Service Object does not support one or more of the methods required by its release.

This property is initialized to OPOS_SUCCESS(0) by **Open**.

PowerNotify Property R/W

Syntax **LONG PowerNotify;**

Remarks Contains the type of power notification selection made by the application.
The following table shows the valid property values.

Value	Meaning
OPOS_PN_DISABLED(0)	The Control will not provide any power notifications to the application. No power notification StatusUpdateEvents will be fired, and PowerState will not be set.
OPOS_PN_ENABLED(1)	The Control will fire power notification StatusUpdateEvents and update PowerState beginning when DeviceEnabled is set to TRUE. The level of functionality depends upon CapPowerReporting .

PowerNotify may only be set while the device is disabled; that is, while **DeviceEnabled** is FALSE.

This property is initialized to OPOS_PN_DISABLED (0) by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	One of the following reasons: <ul style="list-style-type: none">• DeviceEnabled = TRUE• The setting range of property is improper.

PowerState Property

Syntax **LONG PowerState;**

Remarks Identifies the current power condition of the device.
The following table shows the valid property values.

Value	Meaning
OPOS_PS_UNKNOWN(2000)	Cannot determine the device's power state, for one of the following reasons: <ul style="list-style-type: none">• PowerNotify = OPOS_PN_DISABLED(0)• DeviceEnabled = FALSE
OPOS_PS_ONLINE(2001)	The device is powered on and ready.
OPOS_PS_OFF_OFFLINE(2004)	The device is powered off or offline.

This property is initialized to OPOS_PS_UNKNOWN(2000) by **Open**.

ResultCode Property

Syntax **LONG ResultCode;**

Remarks This property is set by each method. It is also set when a writable property is set.

This property is always readable. Before **Open** is called, it returns the value OPOS_E_CLOSED(101).

The following table shows the valid property values.

Value	Meaning
OPOS_SUCCESS(0)	Successful operation.
OPOS_E_CLOSED(101)	Attempt was made to access a closed device. This error is not mentioned in the description of property and method.
OPOS_E_CLAIMED(102)	Attempt was made to access a device that is exclusively accessed by another process.
OPOS_E_NOSERVICE(104)	The Control cannot communicate with the Service Object. The software must be re-installed the software. See "SII Software Package for Windows Installation Guide" for the installation and uninstallation procedure.
OPOS_E_DISABLED(105)	Cannot execute operation while device is disabled.
OPOS_E_ILLEGAL(106)	Attempt was made to execute an illegal or unsupported operation with the device, or an invalid parameter value was used.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_FAILURE(111)	A communication error has occurred.
OPOS_E_TIMEOUT(112)	Timeout has occurred when the ClaimDevice is executed. The exclusive access cannot be obtained within the preset time.

ResultCodeExtended Property

Syntax **LONG ResultCodeExtended;**

Remarks This property is initialized to 0 by **Open**. The extended error code is not supported.

Reference **ResultCode**

ServiceObjectDescription Property

Syntax **BSTR ServiceObjectDescription;**

Remarks A character string that identifies the Service Object is set to this property.
Depends on the printer, the default is different.

Printer	Default
RP-F10/G10	"SII RP-F10/G10 Cash Drawer Service Object, Copyright (C) 20xx Seiko Instruments Inc."
RP-E10	"SII RP-E10 Cash Drawer Service Object, Copyright (C) 20xx Seiko Instruments Inc."

This property is initialized by **Open**.

ServiceObjectVersion Property

Syntax **LONG ServiceObjectVersion;**

Remarks Holds the Service Object version number.

This property is initialized by **Open**.

State Property

Syntax **LONG State;**

Remarks Contains the current state of the Control.
The following table shows the valid property values.

Value	Meaning
OPOS_S_CLOSED(1)	The Control is closed.
OPOS_S_IDLE(2)	The Control is in a good state and is not busy.

This property is always readable.

This property returns OPOS_S_CLOSED(1) until **Open** is successfully completed.

6.3 Specific Properties

CapStatus Property

Syntax **BOOL CapStatus;**

Remarks Indicates whether the status of the cash drawer, open or closed, can be reported.
The following table shows the valid property values.

Value	Meaning
TRUE	The drawer can report its status, open or closed.

This property is initialized to TRUE by **Open**.

CapStatusMultiDrawerDetect Property

Syntax **BOOL CapStatusMultiDrawerDetect;**

Remarks Indicates whether the status of each drawer in multiple drawer configuration can be reported.
The following table shows the valid property values.

Value	Meaning
FALSE	The status unique to each drawer in multiple drawer configuration cannot be reported.

This property is initialized to FALSE by **Open**.

DrawerOpened Property

Syntax **BOOL DrawerOpened;**

Remarks Indicates whether the drawer is open.
The following table shows the valid property values.

Value	Meaning
TRUE	The cash drawer is open.* ¹
FALSE	The cash drawer is closed.* ¹

*1: By selecting "Enable" from [InvertDrawerStatus] of the configuration program, the drawer can report its inverted status.

This property is initialized to an appropriate value when the device is enabled.

6.4 Common Methods

CheckHealth Method

Syntax **LONG CheckHealth (LONG Level);**

The *Level* indicates the type of health check to be executed on the device. The following values may be specified:

Value	Meaning
OPOS_CH_INTERNAL(1)	Executes a health check without using the device physically. OPOS_SUCCESS(0) is always returned.
OPOS_CH_EXTERNAL(2)	Opens the cash drawer, if possible, after confirming the communication with the drawer using the device. OPOS_SUCCESS(0) is returned when it is opened successfully. This method fails when another application has exclusive access to the device.
OPOS_CH_INTERACTIVE(3)	Executes an interactive test of the device. The Service Object displays the modal dialog and opens the cash drawer, if possible. OPOS_SUCCESS(0) is returned when it is opened successfully. This method fails when another application has exclusive access to the device.

Remarks Call to test the state of a device. A text description of the results of this method is placed in the **CheckHealthText**. **CheckHealth** is always synchronous.

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Indicates that the health checking procedure was initiated properly and, when possible to determine, indicates that the device is healthy. However, the health of many devices can only be determined by a visual inspection of the test results.
OPOS_E_CLAIMED(102)	Another device has exclusive access.
OPOS_E_ILLEGAL(106)	Unsupported <i>Level</i> is specified.
OPOS_E_NOHARDWARE(107)	The printer to which the cash drawer is connected is powered off or the cable is not connected. This value is notified only when OPOS_CH_EXTERNAL(2) is set.
OPOS_E_FAILURE(111)	A communication error has occurred. This value is notified only when OPOS_CH_EXTERNAL(2) is set.

ClaimDevice Method

Syntax **LONG ClaimDevice (LONG Timeout);**

Timeout gives the maximum number of milliseconds to wait for exclusive access to be satisfied. If the parameter is 0, the method returns the appropriate status immediately even though it cannot gain exclusive access to the device.
If OPOS_FOREVER(-1), the method waits until exclusive access is satisfied.

Remarks Call this method to request exclusive access to the device.
Acquisition of exclusive access is not essential since the drawer device is a sharable device.
When it is successful, **Claimed** is set to TRUE.

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Exclusive access has been granted and available device connection has been established. Claimed is now TRUE. It is also returned if this application has already gained the exclusive access to the device.
OPOS_E_ILLEGAL(106)	An invalid <i>Timeout</i> is specified.
OPOS_E_TIMEOUT(112)	Another application has exclusive access to the device and the <i>Timeout</i> (in milliseconds) has elapsed before the device is released. Or, the device did not become a processable state before the <i>Timeout</i> (in milliseconds) has elapsed.

Close Method

Syntax **LONG** Close ();

Remarks Call to release the device and its resources.
If **DeviceEnabled** is TRUE, the device is first disabled.
If **Claimed** is TRUE, exclusive access to the device is first released.
Do not execute this method while the event is in progress (or in the event handler).

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Device has been disabled and closed.
Other values	Refer to the description of ResultCode .

CompareFirmwareVersion Method

Syntax **LONG** CompareFirmwareVersion (BSTR *FirmwareFileName*, **Long** *result*);

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

DirectIO Method

Syntax **LONG DirectIO (LONG Command, LONG* pData, BSTR* pString);**

Remarks Call this method to communicate directly with the Service Object.
This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

Open Method

Syntax **LONG Open (BSTR DeviceName);**

DeviceName specifies the device name to open. Specify the registered device name (such as "RP-F10/G10_1") or the logical device name of the cash drawer.

Remarks Call this method to open the device.
When **Open** is successful, the common properties and other class-specific properties are initialized.

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Successful open.
OPOS_E_NOSERVICE(104)	Could not establish a connection to the corresponding Service Object.
OPOS_E_ILLEGAL(106)	The Control is already open.
OPOS_E_NOEXIST(109)	The specified <i>DeviceName</i> is not found. This includes the cases when <i>DeviceName</i> is set using an empty string.
OPOS_E_FAILURE(111)	Initialization of the OPOS Driver is failed.

Remarks The value of **ResultCode** after calling **Open** may not be the same as **Open** return value for the following two cases.

When the OPOS Control is closed and **Open** fails:

- **ResultCode** will continue to return OPOS_E_CLOSED(101).

When the OPOS Control is already open:

- **Open** will return OPOS_E_ILLEGAL(106), but **ResultCode** may continue to return the value held before **Open**.

ReleaseDevice Method

Syntax **LONG ReleaseDevice ();**

Remarks Call this method to release exclusive access to the device.
If **DeviceEnabled** is TRUE and the device is an exclusive-use device, then the device is first disabled.
Do not execute this method while the event is in progress (or in the event handler).

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Exclusive access has been released. Claimed is now FALSE.
OPOS_E_ILLEGAL(106)	The application does not have exclusive access to the device.
Other values	Refer to the description of ResultCode .

ResetStatistics Method

Syntax **LONG ResetStatistics (BSTR *StatisticsBuffer*);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

RetrieveStatistics Method

Syntax **LONG RetrieveStatistics (BSTR **pStatisticsBuffer*);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

UpdateFirmware Method

Syntax **LONG UpdateFirmware (BSTR *FirmwareFileName*);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

UpdateStatistics Method

Syntax **LONG UpdateStatistics (BSTR *StatisticsBuffer*);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

6.5 Specific Methods

OpenDrawer Method

Syntax **LONG OpenDrawer ();**

Remarks Opens the cash drawer. This method fails when another application has exclusive access to the device.

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	The cash drawer was opened successfully.
OPOS_E_CLAIMED(102)	Another device has exclusive access.
OPOS_E_DISABLED (105)	Not enabled.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_FAILURE(111)	Communication with the device is failed.

WaitForDrawerClose Method

Syntax **LONG WaitForDrawerClose (LONG BeepTimeout, LONG BeepFrequency, LONG BeepDuration, LONG BeepDelay);**

Remarks Not supported in RP-E10.
Waits until the cash drawer is closed.
This method does not return control to the application until **DrawerOpened** is FALSE or the printer is powered off.
The alert beeper is not supported. The input parameter is ignored.
This method fails when another application has exclusive access to the device.

Return One of the following values is returned by the method and also placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The cash drawer was closed successfully.
OPOS_E_CLAIMED(102)	Another device has exclusive access.
OPOS_E_DISABLED(105)	Not enabled.
OPOS_E_NOHARDWARE(107)	The printer is not connected to the system or is not powered on.
OPOS_E_FAILURE(111)	Communication with the device is failed.

6.6 Events

DirectIOEvent Event

Syntax **void DirectIOEvent**(**LONG** *EventNumber*, **LONG*** *pData*, **BSTR*** *pString*);

Remarks This event is not supported.

StatusUpdateEvent Event

Syntax **void StatusUpdateEvent** (**LONG** *Status*);

Status is set to one of the following values.

Value	Meaning
CASH_SUE_DRAWERCLOSED(0)	The cash drawer is closed.* ¹
CASH_SUE_DRAWEROPEN(1)	The cash drawer is open.* ¹
OPOS_SUE_POWER_ONLINE(2001)	The device is powered on and ready (This is notified when PowerNotify = OPOS_PN_ENABLED(1)).
OPOS_SUE_POWER_OFF_OFFLINE(2004)	The device is powered off or offline (This is notified when PowerNotify = OPOS_PN_ENABLED(1)).

*1: By selecting "Enable" from [InvertDrawerStatus] of the configuration program, the drawer can report its inverted status.

Remarks This event is notified when the open/close state of the cash drawer is changed.

To notify the open/close state of the cash drawer, the following conditions must be satisfied.

- **CapStatus** is set to TRUE.
- **DeviceEnabled** is set to TRUE.

To notify the power state, the following conditions must be satisfied.

- **PowerNotify** is set to OPOS_PN_ENABLED(1).
- **DeviceEnabled** is set to TRUE.

Chapter 7 Scanner (Barcode) Control Interface

Specifications

This chapter describes the Scanner Control properties, methods and events implemented in this software. Supported only by RP-F10.

7.1 Summary

7.1.1 Common Properties

Property Name	Type	Access	Availability Condition	Default
AutoDisable	Boolean	R/W	Open	FALSE
BinaryConversion	Long	R/W	Open	OPOS_BC_NONE(0)
CapCompareFirmwareVersion	Boolean	R	Open	FALSE
CapPowerReporting	Long	R	Open	OPOS_PR_STANDARD(1)
CapStatisticsReporting	Boolean	R	Open	FALSE
CapUpdateFirmware	Boolean	R	Open	FALSE
CapUpdateStatistics	Boolean	R	Open	FALSE
CheckHealthText	String	R	Open	""
Claimed	Boolean	R	Open	FALSE
ControlObjectDescription	String	R	-	"OPOS Scanner Control 1.14.xxx [Public, by CRM/MCS]"
ControlObjectVersion	Long	R	-	1014xxx
DataCount	Long	R	Open	0
DataEventEnabled	Boolean	R/W	Open	FALSE
DeviceDescription	String	R	Open	"SII RP-F10 Scanner"
DeviceEnabled	Boolean	R/W	Open & Claim	FALSE
DeviceName	String	R	Open	"RP-F10 Scanner"
FreezeEvents	Boolean	R/W	Open	FALSE
OpenResult	Long	R	-	OPOS_SUCCESS(0)
PowerNotify	Long	R/W	Open	OPOS_PN_DISABLED(0)
PowerState	Long	R	Open	OPOS_PS_UNKNOWN(2000)

Property Name	Type	Access	Availability Condition	Default
ResultCode	Long	R	-	OPOS_SUCCESS (0)
ResultCodeExtended	Long	R	Open	0
ServiceObjectDescription	String	R	Open	"SII RP-F10 Scanner Service Object, Copyright(C) 20xx Seiko Instruments Inc."
ServiceObjectVersion	Long	R	Open	1014xxx
State	Long	R	-	OPOS_S_CLOSED(1)

7.1.2 Specific Properties

Property Name	Type	Access	Availability Condition	Default
DecodeData	Boolean	R/W	Open	FALSE
ScanData	String	R	Open	""
ScanDataLabel	String	R	Open	""
ScanDataType	Long	R	Open	SCAN_SDT_UNKNOWN(0)

7.1.3 Common Methods

Method Name	Availability Condition
CheckHealth	Open, Claim, & Enable
ClaimDevice	Open
ClearInput	Open & Claim
ClearInputProperties	Open & Claim
Close	Open
CompareFirmwareVersion	Open, Claim, & Enable
DirectIO	Open, Claim, & Enable ^{*1}
Open	-
ReleaseDevice	Open & Claim
ResetStatistics	Open, Claim, & Enable
RetrieveStatistics	Open, Claim, & Enable
UpdateFirmware	Open, Claim, & Enable
UpdateStatistics	Open, Claim, & Enable

^{*1}: The availability condition differs from that of UPOS V 1.14.1.

7.1.4 Events

Event Name	Occurrence Condition
DataEvent	Open, Claim, & Enable
DirectIOEvent	Open & Claim
ErrorEvent	Open, Claim, & Enable
StatusUpdateEvent	Open, Claim, & Enable

7.2 Common Properties

AutoDisable Property R/W

Syntax **BOOL AutoDisable;**

Remarks This property applies only to event-driven input devices. This property provides the application with an additional option for controlling the receipt of input data. If an application wants to receive and process only one input, or only one input at a time, then this property should be set to TRUE.

The following table shows the valid property values.

Value	Meaning
TRUE	As soon as the Service Object receives and enqueues data to be fired as a DataEvent , then DeviceEnabled is set to FALSE. Before any additional input can be received, the application must set DeviceEnabled to TRUE.
FALSE	The Service Object does not automatically disable the device when data is received.

This property is initialized to FALSE by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.

BinaryConversion Property R/W

Syntax **LONG BinaryConversion;**

Remarks OPOS passes multi-character input and output using BStrings. BStrings may be safely used for text data. As the BStrings are passed between the application and the OPOS Control, OLE may execute language-specific translations to or from Unicode. When BStrings are used to pass binary data, then these translations may alter the data such that the data byte in a BString character at the application does not match the corresponding byte at the Control. This mismatch is more likely when BString pointers are used, since the Unicode characters are presented to the application and/or OPOS Control, and a language difference between them may cause misinterpretation.

Characters between 0x00 and 0x7F may be sent without fear of language-specific translation. Only characters between 0x80 and 0xFF sometimes cause incorrect translations.

The values of **BinaryConversion** are as follows.

Value	Meaning
OPOS_BC_NONE(0)	Data is placed one byte per BString character, with no conversion.

Value	Meaning
OPOS_BC_NIBBLE(1)	Each byte is converted into two characters (This option provides for the fastest conversion between binary and ASCII characters). First character = 0x30 + bits 7-4 of the data byte. Second character = 0x30 + bits 3-0 of the data byte. Example: Byte value 154 = 0x9A is converted to the characters 0x39 0x3A (= string "9:"). Note that this conversion is not the more common hexadecimal ASCII, which would have converted 154 to 0x39 0x41 (= string "9A").
OPOS_BC_DECIMAL(2)	Each byte is converted into three characters. VAL (string) may be used on each 3 characters to convert from ASCII to binary. RIGHT ("^^"+STR(byte),3) may be used to produce 3 ASCII characters from each byte, where '^' represents the space character. Example 1: Byte value 154 = 0x9A becomes the characters 0x31 0x35 0x34 (= string "154"). Example 2: Byte value 8 becomes the characters 0x30 0x30 0x38 (= string "008").

When **BinaryConversion** is on (that is, not OPOS_BC_NONE(0)) and the property or method parameter description specifies that **BinaryConversion** applies, before setting the property or passing the method parameter, convert the string data into the format specified by the **BinaryConversion** value.

This property is initialized to OPOS_BC_NONE(0) by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	An illegal value was specified.

CapCompareFirmwareVersion Property

Syntax **BOOL CapCompareFirmwareVersion;**

Remarks Indicates whether the version of the firmware can be compared.
The following table shows the valid property values.

Value	Meaning
FALSE	The function that compares firmware versions is not supported.

This property is initialized to FALSE by **Open**.

CapPowerReporting Property

Syntax **LONG CapPowerReporting;**

Remarks Identifies the reporting capabilities of the device.
The following table shows the valid property values.

Value	Meaning
OPOS_PR_STANDARD(1)	The following 2 types of power states can be determined and reported. <ul style="list-style-type: none">• OFF_OFFLINE (power off or offline)• ONLINE

This property is initialized to OPOS_PR_STANDARD(1) by **Open**.

CapStatisticsReporting Property

Syntax **BOOL CapStatisticsReporting;**

Remarks Indicates the statistics accumulation function of the device.
The following table shows the valid property values.

Value	Meaning
FALSE	The statistics accumulation function of the device is not supported.

This property is initialized to FALSE by **Open**.

CapUpdateFirmware Property

Syntax **BOOL CapUpdateFirmware;**

Remarks Indicates whether the device supports firmware updating.
The following table shows the valid property values.

Value	Meaning
FALSE	Firmware update is not supported.

This property is initialized to FALSE by **Open**.

CapUpdateStatistics Property

Syntax **BOOL CapUpdateStatistics;**

Remarks Indicates the function that some or all the device statistics can be reset.
The following table shows the valid property values.

Value	Meaning
FALSE	The statistic reset function of the device is not supported.

This property is initialized to FALSE by **Open**.

CheckHealthText Property

Syntax **BSTR CheckHealthText;**

Remarks Holds the results of the most recent call to **CheckHealth**. The results of diagnosis are as follows.

Value	Meaning
"Internal HCheck: Successful"	Confirmed that the scanner is connected.
"Internal HCheck: Failure"	Cannot confirm that scanner is connected.
"External HCheck: Successful"	Confirmed that the scanner is connected.
"External HCheck: Failure"	Cannot confirm that scanner is connected.
"Interactive HCheck: Successful"	Succeeded in the interactive test of the device.
"Interactive HCheck: Failure"	Failed in the interactive test of the device.

This value is initialized to an empty string before the first call to **CheckHealth**.

Claimed Property

Syntax **BOOL Claimed;**

Remarks Indicates whether the device is claimed for exclusive access.
The following table shows the valid property values.

Value	Meaning
TRUE	The device is claimed for exclusive access.
FALSE	The device is released for sharing with other applications.

The value of this property is initialized to FALSE by **Open**.

ControlObjectDescription Property

Syntax **BSTR ControlObjectDescription;**

Remarks Identifies the Control Object by this property.
"OPOS Scanner Control 1.14.xxx [Public, by CRM/MCS]" is set.

This property is always readable.

ControlObjectVersion Property

Syntax **LONG ControlObjectVersion;**

Remarks Holds the Control Object version number.

This property is always readable.

DataCount Property

Syntax **LONG DataCount;**

Remarks Holds the number of enqueued **DataEvent** at the control.
The application may interrogate this property to determine whether additional input is enqueued from a device, but has not yet been delivered because of other application processing or freezing of events, or other causes.

This property is initialized to 0 by **Open**.

DataEventEnabled Property R/W

Syntax **BOOL DataEventEnabled;**

Remarks Delivers a **DataEvent** after input data is enqueued.
The following table shows the valid property values.

Value	Meaning
TRUE	A DataEvent will be delivered as soon as input data is enqueued. If some input data is already queued, a DataEvent is delivered immediately when this property is changed to TRUE. However, if FreezeEvents is TRUE or another event is already being processed at the application, input data will be enqueued at the Service Object until the buffer condition is corrected.
FALSE	Input data is queued in the Service Object. Also, if an input error occurs, the ErrorEvent is not delivered while DataEventEnabled is FALSE.

This property is initialized to FALSE by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_NOTCLAIMED(103)	To enable an exclusive use device, its exclusive access must be obtained previously.
OPOS_E_NOHARDWARE(107)	The scanner is not connected.
OPOS_E_FAILURE(111)	The device cannot be enabled. Setting information and the information from device may be different.
OPOS_E_TIMEOUT(112)	The Service Object timed out waiting for a response from the device, or the data was unable to be transmitted to the device within the timeout.

DeviceDescription Property

Syntax **BSTR DeviceDescription;**

Remarks Identifies the device and any pertinent information about it.
The following table shows the valid property values.

Printer	Default
RP-F10	"SII RP-F10 Scanner"

DeviceEnabled Property R/W

Syntax **BOOL DeviceEnabled;**

Remarks Indicates whether the device has been placed in an operational state.
The following table shows the valid property values.

Value	Meaning
TRUE	The device has been placed in an operational state. If changed to TRUE, then the device is brought to an operational state.
FALSE	The device has been disabled. If changed to FALSE, then the device is disabled.

The application must set this property to TRUE before using output devices.

This property is initialized to FALSE by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_NOTCLAIMED(103)	To enable an exclusive use device, its exclusive access must be obtained previously.
OPOS_E_NOHARDWARE(107)	The scanner is not connected.
OPOS_E_FAILURE(111)	The device cannot be enabled. Setting information and the information from device may be different.
OPOS_E_TIMEOUT(112)	The Service Object timed out waiting for a response from the device, or the data was unable to be transmitted to the device within the timeout.

DeviceName Property

Syntax **BSTR DeviceName;**

Remarks Identifies the device and any pertinent information about it.
The following table shows the valid property values.

Printer	Default
RP-F10	"RP-F10 Scanner"

FreezeEvents Property R/W

Syntax **BOOL FreezeEvents;**

Remarks Selects whether to notify events.
The following table shows the valid property values.

Value	Meaning
TRUE	Events are not delivered from the Control. Events will be held by the Control until events are unfrozen.
FALSE	Events are delivered from the Control. If some events have been held while events were frozen and all other conditions are correct for delivering the events, changing FreezeEvents to FALSE allows these events to be delivered.

An application may choose to freeze events for a specific sequence of code where interruption by an event is not desirable.

This property is initialized to FALSE by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.

OpenResult Property

Syntax **LONG OpenResult;**

Remarks Holds additional details about the most recent **Open**. The values of **OpenResult** are as follows.

Value	Meaning
OPOS_SUCCESS(0)	Successful open.
OPOS_OR_ALREADYOPEN (301)	The Control is already open.
OPOS_OR_REGBADNAME (302)	The registry does not contain a key for the specified device name. Or, the device name is not specified.
OPOS_OR_REGPROGID (303)	Could not read the device name key's default, or could not convert the Programmatic ID it holds into a valid Class ID.
OPOS_OR_CREATE (304)	Could not create a Service Object instance, or could not get its IDispatch interface.
OPOS_OR_BADIF (305)	The Service Object does not support one or more of the methods required by its release. The setting of device name may be different from the Service Object.

This property is initialized to OPOS_SUCCESS(0) by **Open**.

PowerNotify Property R/W

Syntax **LONG PowerNotify;**

Remarks Contains the type of power notification selection made by the application.
The following table shows the valid property values.

Value	Meaning
OPOS_PN_DISABLED(0)	The Control will not provide any power notifications to the application. No power notification StatusUpdateEvents will be fired, and PowerState will not be set.
OPOS_PN_ENABLED(1)	The Control will fire power notification StatusUpdateEvents and update PowerState beginning when DeviceEnabled is set to TRUE. The level of functionality depends upon CapPowerReporting .

PowerNotify may only be set while the device is disabled; that is, while **DeviceEnabled** is FALSE.

This property is initialized to OPOS_PN_DISABLED (0) by **Open**.

Return When this property is set, one of the following values is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.
OPOS_E_ILLEGAL(106)	One of the following reasons: <ul style="list-style-type: none">• DeviceEnabled = TRUE• The setting range of property is improper.

PowerState Property

Syntax **LONG PowerState;**

Remarks Identifies the current power condition of the device.
The following table shows the valid property values.

Value	Meaning
OPOS_PS_UNKNOWN(2000)	Cannot determine the device's power state, for one of the following reasons: <ul style="list-style-type: none">• PowerNotify = OPOS_PN_DISABLED(0)• DeviceEnabled = FALSE
OPOS_PS_ONLINE(2001)	The device is powered on and ready.
OPOS_PS_OFF_OFFLINE(2004)	The device is powered off or offline.

This property is initialized to OPOS_PS_UNKNOWN(2000) by **Open**.

ResultCode Property

Syntax **LONG ResultCode;**

Remarks This property is set by each method. It is also set when a writable property is set.

This property is always readable. Before **Open** is called, it returns the value OPOS_E_CLOSED(101).

The following table shows the valid property values.

Value	Meaning
OPOS_SUCCESS(0)	Successful operation.
OPOS_E_CLOSED(101)	Attempt was made to access a closed device. This error is not mentioned in the description of property and method.
OPOS_E_NOTCLAIMED(103)* ¹	Attempt was made to access an exclusive-use device that must be claimed before the method or property set action can be used.
OPOS_E_NOSERVICE(104)	The Control cannot communicate with the Service Object. The software must be re-installed the software. See "SII Software Package for Windows Installation Guide" for the installation and uninstallation procedure.
OPOS_E_DISABLED(105)* ¹	Cannot execute operation while device is disabled.
OPOS_E_ILLEGAL(106)	Attempt was made to execute an illegal or unsupported operation with the device, or an invalid parameter value was used.
OPOS_E_NOHARDWARE(107)	The scanner is not connected.
OPOS_E_FAILURE(111)	The device cannot execute the requested procedure, even though the device is connected to the system, powered on, and on-line.
OPOS_E_TIMEOUT(112)	The Service Object timed out waiting for a response from the device, or the data was unable to be transmitted to the device within the timeout.

*1: When multiple values of OPOS_E_NOTCLAIMED(103) and OPOS_E_DISABLED(105) are valid, the value of OPOS_E_NOTCLAIMED(103) has the high priority.

ResultCodeExtended Property

Syntax **LONG ResultCodeExtended;**

Remarks This property is initialized to 0 by **Open**. The extended error code is not supported.

Reference **ResultCode**

ServiceObjectDescription Property

Syntax **BSTR ServiceObjectDescription;**

Remarks A character string that identifies the Service Object is set to this property.
The following table shows the valid property values.

Printer	Default
RP-F10	"SII RP-F10 Scanner Service Object, Copyright (C) 20xx Seiko Instruments Inc."

ServiceObjectVersion Property

Syntax **LONG ServiceObjectVersion;**

Remarks Holds the Service Object version number.

This property is initialized by **Open**.

State Property

Syntax **LONG State;**

Remarks Contains the current state of the Control.
The following table shows the valid property values.

Value	Meaning
OPOS_S_CLOSED(1)	The Control is closed.
OPOS_S_IDLE(2)	The Control is in a good state and is not busy.

This property is always readable.
This property returns OPOS_S_CLOSED(1) until **Open** is successfully completed.

7.3 Specific Properties

DecodeData Property R/W

Syntax **BOOL DecodeData;**

Remarks The following table shows the valid property values.

Value	Meaning
TRUE	Decode ScanData into ScanDataLabel and ScanDataType *1.
FALSE	Not decode ScanData .

*1: **ScanDataType** is not supported.

This property is initialized to FALSE by **Open**.

Return When this property is set, the following value is placed in **ResultCode**.

Value	Meaning
OPOS_SUCCESS(0)	The property was set successfully.

ScanData Property

Syntax **BSTR ScanData;**

Remarks Holds the barcode data read from the scanner.

The format of barcode data depends upon the value of the **BinaryConversion**.
For details, see **BinaryConversion**.

This property is initialized to an empty string by **Open**.

ScanDataLabel Property

Syntax **BSTR ScanDataLabel;**

Remarks Barcode data held in **ScanData** is decoded into this property according to the value of **DecodeData**.

DecodeData	ScanDataLabel
TRUE	Characters that can be displayed in text such as alphanumeric characters and symbols are decoded to this property.
FALSE	An empty string ("") is set to this property.

The format of barcode data depends upon the value of the **BinaryConversion**.
For details, see **BinaryConversion**.

This property is initialized to an empty string by **Open**.

ScanDataType Property

Syntax **LONG ScanDataType;**

Remarks This property is not supported.

This property always returns SCAN_SDT_UNKNOWN(0).

7.4 Common Methods

CheckHealth Method

Syntax **LONG CheckHealth (LONG Level);**

The *Level* indicates the type of health check to be executed on the device. The following values may be specified:

Value	Meaning
OPOS_CH_INTERNAL(1)	Confirms whether the scanner is connected.
OPOS_CH_EXTERNAL(2)	Confirms whether the scanner is connected.
OPOS_CH_INTERACTIVE(3)	Executes an interactive test of the device, displays the modal dialog, and waits for the scanner to scan the barcode data.

Remarks Call to test the state of a device. A text description of the results of this method is placed in the **CheckHealthText**. **CheckHealth** is always synchronous.

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Indicates that the health checking procedure was initiated properly and, when possible to determine, indicates that the device is healthy. However, the health of many devices can only be determined by a visual inspection of the test results.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call the ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.
OPOS_E_ILLEGAL(106)	Unsupported <i>Level</i> is specified.
OPOS_E_NOHARDWARE(107)	The scanner is not connected.
OPOS_E_FAILURE(111)	A communication error has occurred.
OPOS_E_TIMEOUT(112)	Data transmission timeout or data receive timeout has occurred.

ClaimDevice Method

Syntax **LONG ClaimDevice (LONG Timeout);**

Timeout gives the maximum number of milliseconds to wait for exclusive access to be satisfied. If the parameter is 0, the method returns the appropriate status immediately even though it cannot gain exclusive access to the device. If OPOS_FOREVER(-1), the method waits until exclusive access is satisfied.

Remarks Call this method to request exclusive access to the device. The scanner device cannot be used unless exclusive access is acquired. When it is successful, **Claimed** is set to TRUE.

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Exclusive access has been granted. Claimed is now TRUE. It is also returned if this application has already gained the exclusive access to the device.
OPOS_E_ILLEGAL(106)	An invalid <i>Timeout</i> is specified.
OPOS_E_TIMEOUT(112)	Another application has exclusive access to the device and the <i>Timeout</i> (in milliseconds) has elapsed before the device is released. Or, the device did not become a processable state before the <i>Timeout</i> (in milliseconds) has elapsed.

ClearInput Method

Syntax **LONG ClearInput ();**

Remarks Call to clear all device input that has been buffered. Any data events or input error events that are enqueued (usually waiting for **DataEventEnabled** to be set to TRUE and **FreezeEvents** to be set to FALSE) are also cleared.

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Input has been cleared.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.

ClearInputProperties Method

Syntax **LONG ClearInputProperties ();**

Remarks Call to clear all data properties delivered from **DataEvent**. This method does not reset **DataCount** and **State**.

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Input has been cleared.
OPOS_E_NOTCLAIMED(103)	Exclusive access is not available. Call ClaimDevice to gain exclusive access.
OPOS_E_DISABLED(105)	Not enabled. Call after setting DeviceEnabled to TRUE.

Close Method

Syntax **LONG Close ();**

Remarks Call to release the device and its resources.
If **DeviceEnabled** is TRUE, the device is first disabled.
If **Claimed** is TRUE, exclusive access to the device is first released.
Do not execute this method while the event is in progress (or in the event handler).

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Device has been disabled and closed.

CompareFirmwareVersion Method

Syntax **LONG CompareFirmwareVersion (BSTR *FirmwareFileName*, Long *result*);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

DirectIO Method

Syntax **LONG DirectIO (LONG *Command*, LONG* *pData*, BSTR* *pString*);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

Open Method

Syntax **LONG Open (BSTR *DeviceName*);**

DeviceName specifies the device name to open. Specify the registered device name (such as "RP-F10") or the logical device name of the scanner.

Remarks Call this method to open the device.
When **Open** is successful, the common properties and other class-specific properties are initialized.

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Successful open.
OPOS_E_NOSERVICE(104)	Could not establish a connection to the corresponding Service Object.
OPOS_E_ILLEGAL(106)	The Control is already open.
OPOS_E_NOEXIST(109)	The specified <i>DeviceName</i> is not found. This includes the cases when <i>DeviceName</i> is set using an empty string.
OPOS_E_FAILURE(111)	Initialization of the OPOS Driver is failed.

Remarks The value of **ResultCode** after calling **Open** may not be the same as **Open** return value for the following two cases.

When the OPOS Control is closed and **Open** fails:

- **ResultCode** will continue to return OPOS_E_CLOSED(101).

When the OPOS Control is already open:

- **Open** will return OPOS_E_ILLEGAL(106), but **ResultCode** may continue to return the value held before **Open**.

ReleaseDevice Method

Syntax **LONG ReleaseDevice ();**

Remarks Call this method to release exclusive access to the device.
If **DeviceEnabled** is TRUE and the device is an exclusive-use device, then the device is first disabled.
Do not execute this method while the event is in progress (or in the event handler).

Return One of the following values is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_SUCCESS(0)	Exclusive access has been released. Claimed is now FALSE.
OPOS_E_ILLEGAL(106)	The application does not have exclusive access to the device.

ResetStatistics Method

Syntax **LONG ResetStatistics (BSTR *StatisticsBuffer*);**

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

RetrieveStatistics Method

Syntax **LONG** RetrieveStatistics (BSTR **pStatisticsBuffer*);

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

UpdateFirmware Method

Syntax **LONG** UpdateFirmware (BSTR *FirmwareFileName*);

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

UpdateStatistics Method

Syntax **LONG** UpdateStatistics (BSTR *StatisticsBuffer*);

Remarks This method is not supported.

Return The following value is returned by the method and also placed in **ResultCode**:

Value	Meaning
OPOS_E_ILLEGAL(106)	This method is not supported.

7.5 Events

DataEvent Event

Syntax **void DataEvent (LONG Status);**

Parameter	Meaning
<i>Status</i>	0 is set.

Remarks Notified to transmit input data from the device to the application. Barcode data is set to **ScanData**, **ScanDataLabel** and **ScanDataType***¹ before this event is notified.

*1: **ScanDataType** is not supported.

DirectIOEvent Event

Syntax **void DirectIOEvent (LONG EventNumber, LONG* pData, BSTR* pString);**

Remarks This event is not supported.

ErrorEvent Event

Syntax **void ErrorEvent (LONG ResultCode, LONG ResultCodeExtended, LONG ErrorLocus, LONG* pErrorResponse);**

Remarks This event is not supported.

OutputCompleteEvent Event

Syntax **void OutputCompleteEvent (LONG OutputID);**

The *OutputID* indicates the ID number of the asynchronous output request that is complete.

Remarks This event is not supported.

StatusUpdateEvent Event

Syntax **void StatusUpdateEvent (LONG Status);**

Status is set to one of the following values.

Value	Meaning
OPOS_SUE_POWER_ONLINE(2001)	The device is powered on and ready (This is notified when PowerNotify = OPOS_PN_ENABLED(1)).
OPOS_SUE_POWER_OFF_OFFLINE(2004)	The device is powered off or offline (This is notified when PowerNotify = OPOS_PN_ENABLED(1)).

Remarks This event is notified when the connection state of the scanner is changed.

Chapter 8 Registry Used by This Software

The registry set by the configuration program is described as follows.

Although the registry values can be set manually, set them using the configuration program. The contents of registry are read at the time when this software executes the **Open** method. Therefore, changing the value during operation of this software will not be reflected in the operation. In order to reflect new setting values, call the **Open** method after calling the **Close** method in this software.

8.1 POS Printer Control

[Registry key]

HKEY_LOCAL_MACHINE\SOFTWARE\OLEforRetail\ServiceOPOS\POSPrinter\DeviceNameKey

The device name key depends on the printer. It is added by the configuration program for each printer device.

Printer	Device Name key	Meaning
RP-F10/G10	Example: "RP-F10/G10"	Device name of printer which is added by the configuration program.
RP-E10	Example: "RP-E10"	

[Registry value list]

Value Name	Value	Meaning
Default	RP-F10, RP-G10: OPOS.POSPRINTER.SO.SII.CORE.GEN RP-E10: OPOS.POSPRINTER.SO.SII.CORE114.GEN	-
CoreSODLLPath	RP-F10, RP-G10: C:\Program Files\SII\OPOS \SPSWO_Prn.dll RP-E10: C:\Program Files\SII\OPOS \SPSWO_Prn114.dll	File name of POS Printer Service Object (Full path)
DefaultCharacterSet	932 (Japanese) 999 (English)	Default of CharacterSet
Description	SII RP-x10 POS Printer Service Object, Copyright (C) 20xx Seiko Instruments Inc.	Details of dedicated POS Printer Service Object for printer
DriverName	SII RP-F10/G10 SII RP-E10	Printer driver name Used for printer driver setting

Value Name	Value	Meaning
Interface	-	First time setup interface
LogFileNameCore* ¹	-	Log file name of POS Printer Service Object (Full path)
LogFileNameSub* ¹	-	Log file name of dedicated POS Printer Service Object for RP-E10 (Full path)
LogFileSizeCore* ¹	0	Maximum log file size of POS Printer Service Object (KB)
LogFileSizeSub* ¹	0	Maximum log file size of dedicated POS Printer Service Object for RP-E10 (KB)
LogRetentionPeriod* ²	1	Retention period of log file 1: 1 day 3: 3 days 10: 10 days 30: 30 days 90: 90 days
LogLevelCore	-1	Log output level of POS Printer Service Object -1: No output 0: Error 1: Warning* ¹ 2: Information* ¹ 3: Debug* ¹ 4: Trace
LogLevelSub	-1	Log output level of dedicated POS Printer Service Object for RP-x10 -1: No output 0: Error 1: Warning* ¹ 2: Information* ¹ 3: Debug* ¹ 4: Trace
NearEndSensor* ¹	1	Near-end sensor function 0: Enable 1: Disable
PaperSize	3	Receipt width and number of effective dots selection 0: 58mm/360dots 1: 58mm/432dots 2: 80mm/512dots 3: 80mm/576dots
PortName	-	Communication port name
PrintSpeed	0	Print Speed Specify 0: Enabled RecLetterQuality 1: High speed 2: Middle speed (quality) 3: Middle speed (silent) 4: Low* ¹
SendTimeout	10000	Send timeout (ms)
ReceiveTimeout	10000	Receive timeout (ms)

Value Name	Value	Meaning
ProcessCompletionTiming	1	Process Completion Timing 0: Completion of data transmission 1: Completion of printing
SubSODLLPath	RP-F10, RP-G10: C:\Program Files\SII\OPOS\SPSWO_Prn_RPF10.dll RP-E10: C:\Program Files\SII\OPOS\SPSWO_Prn114_RPE10.dll	File name of dedicated POS Printer Service Object for RP-x10 (Full path)
Version	1.14.xx	Version of dedicated POS Printer Service Object for RP-x10

*1: Supported only by RP-E10.

*2: Not supported in RP-E10.

8.2 Cash Drawer Control

[Registry key]

HKEY_LOCAL_MACHINE\SOFTWARE\OLEforRetail\ServiceOPOS\CashDrawer\DeviceNameKey

The device name key depends on the printer. It is added by the configuration program for each cash drawer device.

Printer	Device Name key	Meaning
RP-F10/G10	Example: "RP-F10/G10_1"	Device name of cash drawer for RP-x10 which is added by the configuration program.
RP-E10	Example: "RP-E10_1"	

[Registry value list]

Value Name	Value	Meaning
Default	RP-F10, RP-G10: OPOS.CASHDRAWER.SO.SII.CORE.GEN RP-E10: OPOS.CASHDRAWER.SO.SII.CORE114.GEN	-
CoreSODLLPath	RP-F10, RP-G10: C:\Program Files\SII\OPOS \SPSWO_Drw.dll RP-E10: C:\Program Files\SII\OPOS \SPSWO_Drw114.dll	File name of Cash Drawer Service Object (Full path)
Description	SII RP-x10 Cash Drawer Service Object, Copyright (C) 20xx Seiko Instruments Inc.	Details of dedicated Cash Drawer Service Object for RP-x10
DrawerNo	1 or 2	Cash drawer number 1: Cash drawer 1 2: Cash drawer 2
DriverName	SII RP-F10/G10 SII RP-E10	Printer driver name Used for printer driver setting
InvertDrawerStatus	F	Notification method of cash drawer open/close state F: Reversal is not active. The cash drawer is open when the drawer switch input status is "Low". T: Reversal is active. The cash drawer is open when the drawer switch input status is "High".
LogFileNameCore* ¹	-	Log file name of POS Printer Service Object (Full path)
LogFileNameSub* ¹	-	Log file name of dedicated POS Printer Service Object for RP-E10 (Full path)
LogFileSizeCore* ¹	0	Maximum log file size of POS Printer Service Object (KB)

Value Name	Value	Meaning
LogFileSizeSub ^{*1}	0	Maximum log file size of dedicated POS Printer Service Object for RP-E10 (KB)
LogRetentionPeriod ^{*2}	1	Retention period of log file 1: 1 day 3: 3 days 10: 10 days 30: 30 days 90: 90 days
LogLevelCore	-1	Log output level of Cash Drawer Service Object -1: No output 0: Error 1: Warning ^{*1} 2: Information ^{*1} 3: Debug ^{*1} 4: Trace
LogLevelSub	-1	Log output level of dedicated Cash Drawer Service Object for RP-F10/G10 -1: No output 0: Error 1: Warning ^{*1} 2: Information ^{*1} 3: Debug ^{*1} 4: Trace
PortName	-	Communication port name
PulseTimer	1	ON/OFF pulse time for cash drawer drive 1 to 8 (× 100 ms)
SubSODLLPath	RP-F10, RP-G10: C:\Program Files\SII\OPOS \SPSWO_Drw_RPF10.dll RP-E10: C:\Program Files\SII\OPOS \SPSWO_Drw114_RPE10.dll	File name of dedicated Cash Drawer Service Object for RP-x10 (Full path)
Version	1.14.xx	Version of dedicated Cash Drawer Service Object for RP-x10

*1: Supported only by RP-E10.

*2: Not supported in RP-E10.

8.3 Scanner Control

Supported only by RP-F10.

[Registry key]

HKEY_LOCAL_MACHINE\SOFTWARE\OLEforRetail\ServiceOPOS\Scanner\DeviceNameKey

The device name key depends on the printer. It is added by the configuration program for each scanner device.

Printer	Device Name key	Meaning
RP-F10	Example: "RP-F10"	Device name of scanner which is added by the configuration program.

[Registry value list]

Value Name	Value	Meaning
Default	OPOS.SCANNER.SO.SII.GEN	-
SODLLPath	C:\Program Files\SII\OPOS \SPSWO_Scn.dll	File name of Scanner Service Object (Full path)
Description	SII RP-F10 Scanner Service Object, Copyright (C) 20xx Seiko Instruments Inc.	Details of Scanner Service Object
DriverName	SII RP-F10/G10	Printer driver name Used for printer driver setting
LogRetentionPeriod	1	Retention period of log file 1: 1 day 3: 3 days 10: 10 days 30: 30 days 90: 90 days
LogLevel	-1	Log output level of Scanner Service Object -1: No output 0: Error 4: Trace
Version	1.14.xx	Version of Scanner Service Object

Chapter 9 Header File

9.1 POS Printer Header File

The header file used in this software is described below.
The constants defined uniquely in this software are as follows.

- OPOS_EPTR_VPPower
- OPOS_EPTR_AUTOCUTTER
- OPOS_EPTR_HEAD_TEMP
- OPOS_EPTR_IMAGEAREA_FULL
- OPOS_EPTR_UNRECOVERABLE
- PTR_DI_GET_REMAINING_MEMORY
- PTR_DI_SET_INTERNATIONAL_CHARACTER
- PTR_DI_GET_STATUS_DATA

Header file: siicommpr.h

```
////////////////////////////////////
//
// SICommPtr.h
//
// POS Printer header file for OPOS Applications.
//
// Modification history
// -----
//
////////////////////////////////////
#if !defined(SIICOMMPTR_H)
#define SIICOMMPTR_H
////////////////////////////////////
// OPOS "ResultCodeExtended" Property Base Constants
////////////////////////////////////
const LONG PTRERREXT = 1000; // POS Printer specific error base
////////////////////////////////////
```

```

// "ResultCodeExtended" Property Constants for Printer
////////////////////////////////////
const LONG OPOS_EPTR_VPPower          = PTRERREXT+1;
const LONG OPOS_EPTR_AUTOCUTTER       = PTRERREXT+2;
const LONG OPOS_EPTR_HEAD_TEMP        = PTRERREXT+5;
const LONG OPOS_EPTR_IMAGEAREA_FULL   = PTRERREXT+9;
const LONG OPOS_EPTR_UNRECOVERABLE    = PTRERREXT+10;

////////////////////////////////////
// Parameter Constants of "DirectIO" Method
////////////////////////////////////
const LONG PTR_DI_GET_REMAINING_MEMORY      = 3;
const LONG PTR_DI_SET_INTERNATIONAL_CHARACTER = 201;
const LONG PTR_DI_GET_STATUS_DATA          = 501;
#endif  //!defined(SIICOMMPTR_H)

```