



SII POS for .NET Service Object Application Programmer's Guide

Rev.01

[Products]

RP-F10 Series

RP-G10 Series

RP-E10 Series

Seiko Instruments Inc.


Copyright© 2024 by Seiko Instruments Inc.
All rights reserved.

Microsoft® and Windows® are registered trademarks of Microsoft Corporation in the U.S., Japan, and other countries.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

Seiko Instruments Inc. (hereinafter referred to as "SII") has prepared this manual for use by SII personnel, licensees, and customers. The information contained herein is the property of SII and shall not be reproduced in whole or in part without the prior written approval of SII.

SII reserves the right to make changes without notice to the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical, arithmetic, or listing errors.

SII  is a trademark of Seiko Instruments Inc.

Introduction

This manual describes "SII POS for .NET Service Object" (hereinafter referred to as the "software") provided by Seiko Instruments Inc. (hereinafter referred to as "SII").

Target Products

The products supported by this manual are listed below.

	Device Name	Description in This Manual
PosPrinter	RP-F10/G10 POS Printer RP-E10 POS Printer	Printer
CashDrawer	RP-F10/G10 Cash Drawer RP-E10 Cash Drawer	Drawer
Scanner	RP-F10 Scanner	Scanner

Also see "UnifiedPOS Retail Peripheral Architecture Version 1.12" (hereinafter "UPOS V1.12") and "Microsoft Point of Service for .NET - POS for .NET v1.12 SDK Documentation" when using this software.

Notation in This Manual

The notation in this manual is described.

Operation and Display

In principle, this manual is written on the basis of the following conditions:

- Screenshots and display layouts of Windows 10
- Operating instructions with a mouse and a keyboard

Terms

The terms used in this manual are defined as below.

Term	Description
Configuration program	The program that executes addition and setting change of devices for PosPrinter, CashDrawer and Scanner provided by this software. When installing this software, it will be installed as [SIIPOSforNETSettingUtility] on the computer.
Default	The value immediately after satisfying the availability condition.
Line spacing	The height of each print line (total value of the printed line height and the whitespace between each pair of lines).
Technical Reference	Technical Reference shown as follows: <ul style="list-style-type: none">• RP-F10 SERIES THERMAL PRINTER TECHNICAL REFERENCE• RP-G10 SERIES THERMAL PRINTER TECHNICAL REFERENCE• RP-E10 SERIES THERMAL PRINTER TECHNICAL REFERENCE
User's Guide	User's Guide shown as follows: <ul style="list-style-type: none">• RP-F10 SERIES Thermal Printer USER'S GUIDE• RP-G10 SERIES Thermal Printer USER'S GUIDE• RP-E10 SERIES Thermal Printer USER'S GUIDE
Printer command	Command for controlling the printer described in "Technical Reference".

Table of Contents

Chapter 1 Overview 1-1

1.1	Configuration	1-1
1.1.1	Structural Diagram.....	1-1
1.2	Printer Settings	1-3
1.3	Limitations	1-5
1.3.1	General	1-5
1.3.2	PosPrinter	1-5
1.3.3	CashDrawer	1-6
1.3.4	Scanner.....	1-6

Chapter 2 Installation 2-1

Chapter 3 How to Operate Configuration Program 3-1

3.1	Screen Layout.....	3-2
3.1.1	Menu Bar	3-2
3.1.2	Device View	3-3
3.1.3	Setting View	3-3
3.2	Functions.....	3-13
3.2.1	Addition of Device.....	3-13
3.2.2	Changing Device Settings.....	3-32
3.2.3	Deletion of Device	3-33
3.2.4	Device Interactive Test	3-34
3.2.5	Memory Settings of Printer (PrinterUtility)	3-36

Chapter 4 Properties, Methods, and Events 4-1

4.1	PosPrinter.....	4-1
4.1.1	Summary.....	4-1
4.1.2	Data Characters and Escape Sequences.....	4-8

4.1.3	Common Properties.....	4-12
	CapCompareFirmwareVersion Property	4-12
	CapPowerReporting Property.....	4-12
	CapStatisticsReporting Property.....	4-12
	CapUpdateFirmware Property	4-13
	CapUpdateStatistics Property	4-13
	CheckHealthText Property	4-13
	Claimed Property	4-14
	DeviceDescription Property	4-14
	DeviceEnabled Property R/W.....	4-14
	DeviceName Property	4-15
	FreezeEvents Property R/W.....	4-15
	OutputId Property.....	4-15
	PowerNotify Property R/W	4-16
	PowerState Property	4-16
	ServiceObjectDescription Property.....	4-17
	ServiceObjectVersion Property	4-17
	State Property.....	4-17
	SynchronizingObject Property	4-18
4.1.4	Specific Properties.....	4-19
	AsyncMode Property R/W	4-19
	CapCharacterSet Property	4-19
	CapCoverSensor Property	4-19
	CapMapCharacterSet Property	4-20
	CapRec2Color Property	4-20
	CapRecBarCode Property.....	4-20
	CapRecBitmap Property.....	4-20
	CapRecBold Property	4-21
	CapRecCartridgeSensor Property	4-21
	CapRecColor Property	4-21
	CapRecDHigh Property.....	4-21
	CapRecDWide Property.....	4-22
	CapRecDWideDHigh Property	4-22
	CapRecEmptySensor Property	4-22
	CapRecItalic Property	4-22
	CapRecLeft90 Property.....	4-23
	CapRecMarkFeed Property.....	4-23
	CapRecNearEndSensor Property.....	4-23
	CapRecPageMode Property.....	4-23
	CapRecPaperCut Property.....	4-24
	CapRecPresent Property	4-24
	CapRecRight90 Property	4-24
	CapRecRotate180 Property	4-24
	CapRecStamp Property	4-25
	CapRecUnderline Property	4-25
	CapTransaction Property	4-25
	CartridgeNotify Property R/W	4-25
	CharacterSet Property R/W.....	4-26
	CharacterSetList Property	4-26

CoverOpen Property	4-27
ErrorLevel Property	4-27
ErrorStation Property	4-27
ErrorString Property	4-28
FlagWhenIdle Property R/W	4-28
FontTypefaceList Property	4-29
MapCharacterSet Property R/W	4-29
MapMode Property R/W	4-30
PageModeArea Property	4-31
PageModeDescriptor Property	4-31
PageModeHorizontalPosition Property R/W	4-32
PageModePrintArea Property R/W	4-32
PageModePrintDirection Property R/W	4-33
PageModeStation Property R/W	4-35
PageModeVerticalPosition Property R/W	4-36
RecBarcodeRotationList Property	4-37
RecBitmapRotationList Property	4-37
RecCartridgeState Property	4-37
RecCurrentCartridge Property R/W	4-38
RecEmpty Property	4-38
RecLetterQuality Property R/W	4-38
RecLineChars Property R/W	4-39
RecLineCharsList Property	4-40
RecLineHeight Property R/W	4-40
RecLineSpacing Property R/W	4-41
RecLinesToPaperCut Property	4-42
RecLineWidth Property	4-42
RecNearEnd Property	4-43
RecSidewaysMaxChars Property	4-43
RecSidewaysMaxLines Property	4-43
RotateSpecial Property R/W	4-44
4.1.5 Common Methods	4-45
CheckHealth Method	4-45
Claim Method	4-45
ClearOutput Method	4-46
Close Method	4-46
CompareFirmwareVersion Method	4-46
DirectIO Method	4-46
Open Method	4-48
Release Method	4-48
ResetStatistic(string) Method	4-48
ResetStatistics() Method	4-48
ResetStatistics(StatisticCategories) Method	4-49
ResetStatistics(string[]) Method	4-49
RetrieveStatistic(string) Method	4-49
RetrieveStatistics() Method	4-49
RetrieveStatistics(StatisticCategories) Method	4-49
RetrieveStatistics(string[]) Method	4-50
UpdateFirmware Method	4-50

	UpdateStatistic Method	4-50
	UpdateStatistics(Statistic[]) Method	4-50
	UpdateStatistics(StatisticCategories, Object) Method	4-50
4.1.6	Specific Methods	4-51
	ClearPrintArea Method	4-51
	CutPaper Method	4-51
	PageModePrint Method	4-52
	PrintBarCode Method	4-54
	PrintBitmap Method	4-68
	PrintImmediate Method	4-69
	PrintMemoryBitmap Method	4-70
	PrintNormal Method	4-70
	RotatePrint Method	4-71
	SetBitmap Method	4-73
	SetLogo Method	4-73
	TransactionPrint Method	4-74
	ValidateData Method	4-75
4.1.7	Events	4-76
	DirectIOEvent Event	4-76
	ErrorEvent Event	4-76
	OutputCompleteEvent Event	4-76
	StatusUpdateEvent Event	4-77
4.2	CashDrawer	4-78
4.2.1	Summary	4-78
4.2.2	Common Properties	4-80
	CapCompareFirmwareVersion Property	4-80
	CapPowerReporting Property	4-80
	CapStatisticsReporting Property	4-80
	CapUpdateFirmware Property	4-81
	CapUpdateStatistics Property	4-81
	CheckHealthText Property	4-81
	Claimed Property	4-82
	DeviceDescription Property	4-82
	DeviceEnabled Property R/W	4-82
	DeviceName Property	4-83
	FreezeEvents Property R/W	4-83
	PowerNotify Property R/W	4-83
	PowerState Property	4-84
	ServiceObjectDescription Property	4-84
	ServiceObjectVersion Property	4-85
	State Property	4-85
	SynchronizingObject Property	4-85
4.2.3	Specific Properties	4-86
	CapStatus Property	4-86
	CapStatusMultiDrawerDetect Property	4-86
	DrawerOpened Property	4-86
4.2.4	Common Methods	4-87
	CheckHealth Method	4-87
	Claim Method	4-87

	Close Method.....	4-88
	CompareFirmwareVersion Method.....	4-88
	DirectIO Method.....	4-88
	Open Method.....	4-88
	Release Method.....	4-88
	ResetStatistic(string) Method	4-88
	ResetStatistics() Method	4-89
	ResetStatistics(StatisticCategories) Method	4-89
	ResetStatistics(string[]) Method.....	4-89
	RetrieveStatistic(string) Method.....	4-89
	RetrieveStatistics() Method	4-89
	RetrieveStatistics(StatisticCategories) Method	4-89
	RetrieveStatistics(string[]) Method.....	4-89
	UpdateFirmware Method.....	4-90
	UpdateStatistic Method	4-90
	UpdateStatistics(Statistic[]) Method.....	4-90
	UpdateStatistics(StatisticCategories, Object) Method	4-90
4.2.5	Specific Methods	4-91
	OpenDrawer Method.....	4-91
	WaitForDrawerClose Method	4-91
4.2.6	Events	4-92
	StatusUpdateEvent Event	4-92
4.3	Scanner.....	4-93
4.3.1	Summary.....	4-93
4.3.2	Common Properties.....	4-95
	AutoDisable Property R/W	4-95
	CapCompareFirmwareVersion Property	4-95
	CapPowerReporting Property.....	4-95
	CapStatisticsReporting Property.....	4-96
	CapUpdateFirmware Property.....	4-96
	CapUpdateStatistics Property	4-96
	CheckHealthText Property	4-97
	Claimed Property	4-97
	DataCount Property	4-97
	DataEventEnabled Property R/W	4-98
	DeviceDescription Property.....	4-98
	DeviceEnabled Property R/W.....	4-98
	DeviceName Property	4-99
	FreezeEvents Property R/W.....	4-99
	PowerNotify Property R/W	4-99
	PowerState Property.....	4-100
	ServiceObjectDescription Property.....	4-100
	ServiceObjectVersion Property	4-100
	State Property.....	4-101
	SynchronizingObject Property	4-101
4.3.3	Specific Properties.....	4-102
	DecodeData Property.....	4-102
	ScanData Property.....	4-102
	ScanDataLabel Property	4-102

	DecodeData Property.....	4-102
4.3.4	Common Methods	4-103
	CheckHealth Method.....	4-103
	Claim Method.....	4-103
	ClearInput Method	4-104
	ClearInputProperties Method.....	4-104
	Close Method.....	4-104
	CompareFirmwareVersion Method.....	4-104
	DirectIO Method.....	4-104
	Open Method.....	4-104
	Release Method.....	4-105
	ResetStatistic(string) Method	4-105
	ResetStatistics() Method	4-105
	ResetStatistics(StatisticCategories) Method	4-105
	ResetStatistics(string[]) Method.....	4-105
	RetrieveStatistic(string) Method.....	4-105
	RetrieveStatistics() Method	4-105
	RetrieveStatistics(StatisticCategories) Method	4-106
	RetrieveStatistics(string[]) Method.....	4-106
	UpdateFirmware Method.....	4-106
	UpdateStatistic Method	4-106
	UpdateStatistics(Statistic[]) Method.....	4-106
	UpdateStatistics(StatisticCategories, Object) Method	4-106
4.3.5	Events.....	4-107
	DataEvent Event.....	4-107
	DirectIOEvent Event.....	4-107
	ErrorEvent Event.....	4-107
	StatusUpdateEvent Event	4-107

Appendix A Exceptions

A-1

A.1	PosPrinter Exception Error List.....	A-1
A.2	CashDrawer Exception Error List	A-5
A.3	Scanner Exception Error List.....	A-7

Appendix B Statistics

B-1

Chapter 1 Overview


This chapter describes the overview of this software.

1.1 Configuration


1.1.1 Structural Diagram

The structure of the software is as follows, and the scope of this manual is indicated by dashed lines.

- RP-F10, RP-G10

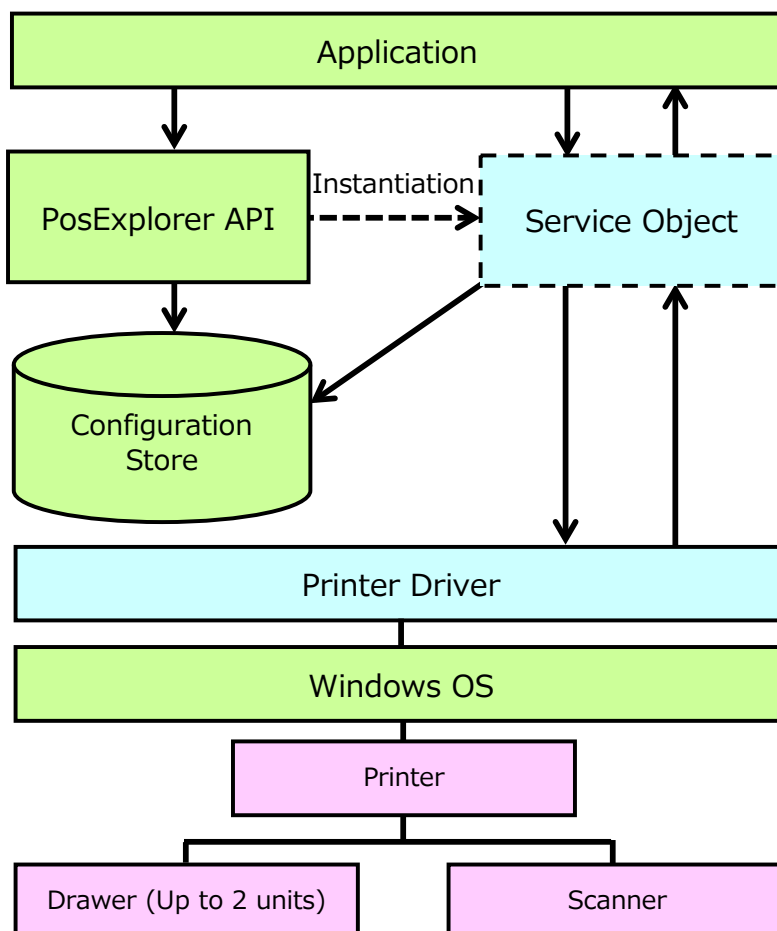

- RP-E10

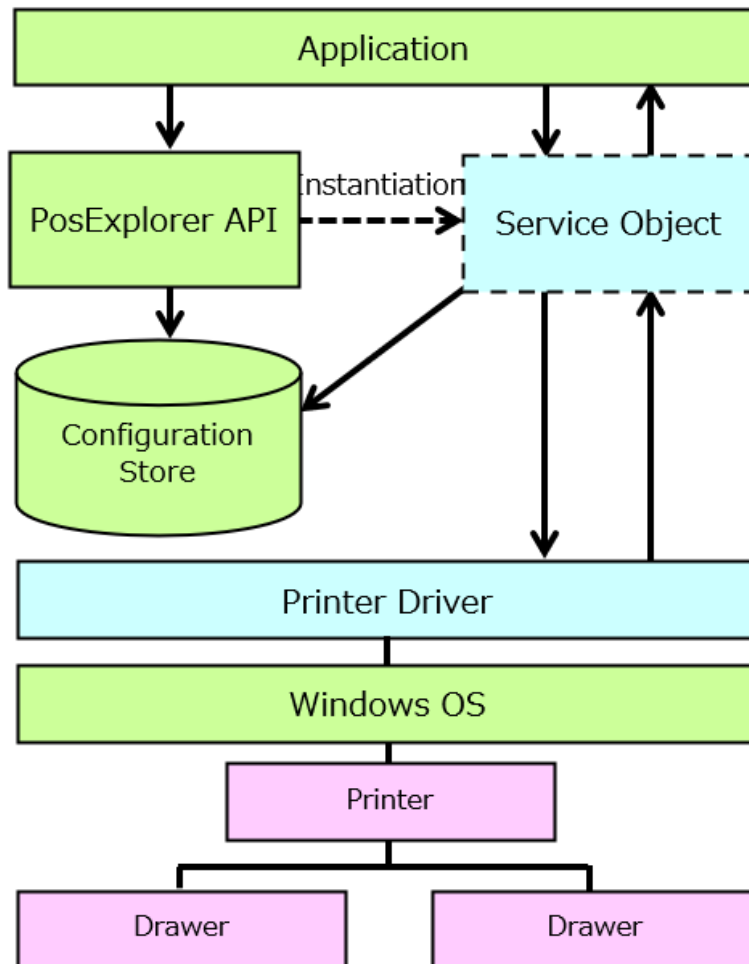

1.2 Printer Settings

The memory switches of the printer are set to [Value] in the following table when using the software.
See "User's Guide" for details about the memory switches.

When in the PosPrinter control, the execution of **Claim** sets [Value] in the following table forcibly.
When in the CashDrawer or Scanner control, the [Value] is set to the following table forcibly by setting *true* in **DeviceEnabled** or executing **Claim**.

• RP-F10, RP-G10

MS	Function	Value	Note
4-4	Paper Width Selection (Paper Width)	0 : 58 mm ^{*1} 1 : 80 mm ^{*2}	Either one [Value] on the left is set forcibly by [Number of Effective Dots(dots)] in the configuration program.
4-5	Number of Effective Dots Selection (Number of Effective Dots)	0 : 360 dots / 512 dots 1 : 432 dots / 576 dots	Either one [Value] on the left can be set by [Number of Effective Dots(dots)] in the configuration program.
4-7 to 4-8	Maximum Print Speed Selection (Print Speed)	01B : Middle (Quality) 10B : Middle (Silent) 11B : High	Any one of [Value] on the left can be set by [PrintSpeed] in the configuration program.
5-1	Automatic Status Response Selection (Auto Status Back)	0 : Enable	-
5-2	Initialized Response Selection (Init. Response)	0 : Enable	
5-3	Data Discard Selection When Error Occurs (Error Through)	0 : Enable 1 : Disable	When adding a device in the configuration program, if PrinterDriver is specified, it will be set to "1: Disable". If anything else is specified, it will be set to "0: Enable".
13-3	Realtime Command Selection (Realtime Command)	1 : Enable	-
38-1	Scanner Automatic Status Response Selection (Scanner Auto Status Back)	0 : Enable	

*1: This value is set when [Number of Effective Dots(dots)] in the configuration program is 360 dots / 512 dots.

*2: This value is set when [Number of Effective Dots(dots)] in the configuration program is 432 dots / 576 dots.

Caution

- ◆ Connect to the drawer kick connector of the printer when using the cash drawer.
- ◆ The firmware of the printer to support the barcode scanner is Ver.1.10 or later.
- ◆ See "RP-F10 SERIES Thermal Printer USER'S GUIDE" for details of the recommended barcode scanner and the barcode scanner setting.

Reference

- See "RP-F10 SERIES Thermal Printer USER'S GUIDE" for details about the combination of peripherals.

• RP-E10

MS	Function	Value	Note
1-3	Mark Mode Selection (Mark Mode)	0 : Disable	-
1-6	Near-end Sensor Function Selection (Near End Sensor)	0 : Disable 1 : Enable	Either one [Value] on the left can be set by [NearEndSensor] in the configuration program.
4-4	Paper Width Selection (Paper Width)	0 : 58 mm ^{*1} 1 : 80 mm ^{*2}	Either one [Value] on the left is set forcibly by [Number of Effective Dots(dots)] in the configuration program.
4-5	Number of Effective Dots Selection (Number of Effective Dots)	0 : 360dots/512dots 1 : 432dots/576dots	Either one [Value] on the left can be set by [Number of Effective Dots(dots)] in the configuration program.
4-7 to 4-8	Maximum Print Speed Selection (Print Speed)	00B : Low 01B : Middle (Quality) 10B : Middle (Silent) 11B : High	Any one of [Value] on the left can be set by [PrintSpeed] in the configuration program.
5-1	Automatic Status Response Selection (Auto Status Back)	0 : Enable	-
5-2	Initialized Response Selection (Init. Response)	0 : Enable	
5-3	Data Discard Selection When an Error Occurs (Error Through)	0 : Enable 1 : Disable	When adding a device in the configuration program, if PrinterDriver is specified, it will be set to "1: Disable". If anything else is specified, it will be set to "0: Enable".
5-5	Paper-near-end Sensor Error Selection (Near End Error)	1 : Disable	-

*1: This value is set when [Number of Effective Dots(dots)] in the configuration program is 360dots/512dots.

*2: This value is set when [Number of Effective Dots(dots)] in the configuration program is 432dots/576dots.

1.3 Limitations

The limitations of this software are described.

1.3.1 General

When using 1 printer simultaneously from multiple computers via TCP/IP connections, use **TransactionPrint** to prevent print data from other computers from interrupting.

1.3.2 PosPrinter

This software is based on UnifiedPOS Specification Version 1.12, and all interfaces of PosPrinter device are provided with the following limitations.

- (a) The method and property settings related to journal and slip prints are not supported.
- (b) The following functions are not supported.
 - Feed, Paper cut and Stamp
 - Stamp
 - Feed reverse
 - Font typeface selection
 - Italic
 - Alternate color (Custom)
 - Red color
 - Shading
 - RBG Color
 - Sub Script
 - Super Script
 - Strike-through
- (c) All the following methods always return *ErrorCode.Illegal* after they are enabled.
 - **BeginInsertion**
 - **BeginRemoval**
 - **ChangePrintSide**
 - **EndInsertion**
 - **EndRemoval**
 - **MarkFeed**
 - **PrintTwoNormal**
- (d) **DirectIOEvent** (device-specific event) is not supported.
- (e) When [Process Completion Timing] is set as "Data printing" in the configuration program, the printer command "Execution Response Request" is used inside this software for controlling the print operation. Therefore, an unexpected behavior may occur when sending "Execution Response Request" by the "Pass through embedded data" escape sequence (ESC|#E).
- (f) When an error occurs, the printer command "Hardware Reset" is sent from PosPrinter to cancel printing in the printer; however, printing may be performed a bit before PosPrinter stops printing in the printer.
- (g) For Bluetooth connection, when the device becomes a recoverable error during printing, it may take some time to return to normal status from the error cancellation. The first processing after error cancelation should be done after about 10 seconds from the error cancellation.

1.3.3 CashDrawer

All interfaces of CashDrawer device are provided with the following limitations.

- (a) The following method always returns *ErrorCode.Illegal* after it is enabled.
 - **DirectIO**
- (b) **DirectIOEvent** (device-specific event) is not supported.

1.3.4 Scanner

All interfaces of Scanner device are provided with the following limitations.
Supported only by RP-F10.

- (a) 0 is always placed in **ScanDataType**.
- (b) The following method always returns *ErrorCode.Illegal* after it is enabled.
 - **DirectIO**
- (c) **DirectIOEvent** (device-specific event) is not supported.

Chapter 2 Installation

For the installation, see "SII Software Package for Windows Installation Guide".

Chapter 3 How to Operate Configuration Program


This chapter describes the configuration program provided by this software.

Caution

- ◆ Using this software requires logon to the computer with administrator privileges.

3.1 Screen Layout

The screen layout of the configuration program is described.

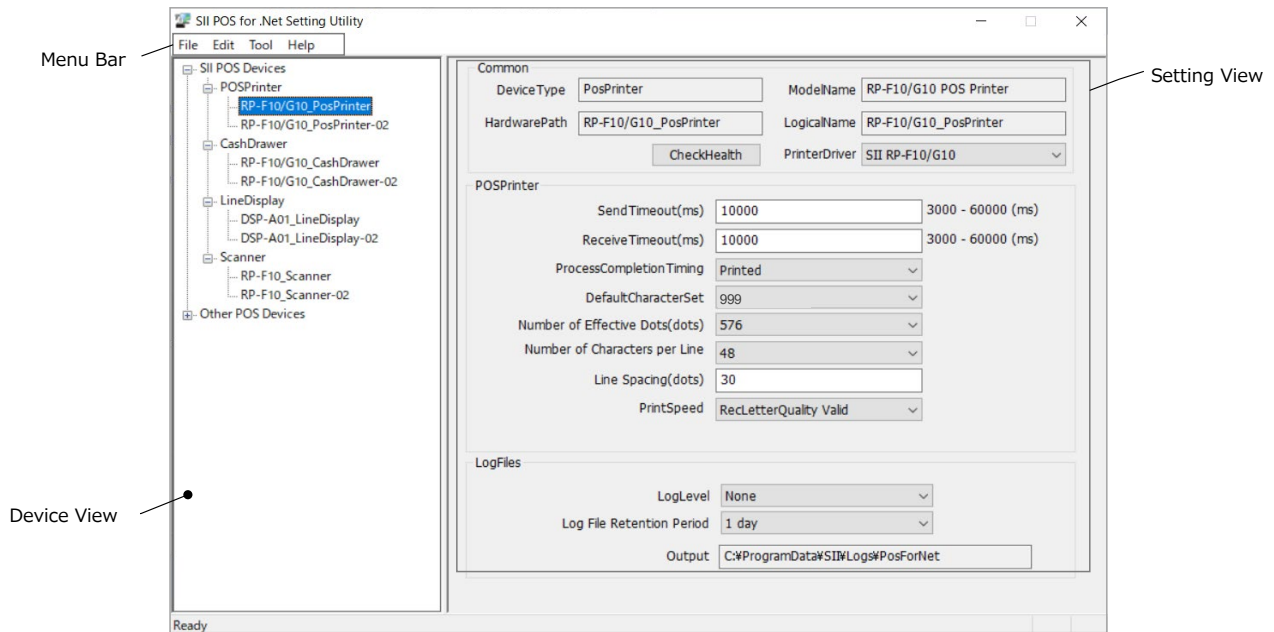

Item	Description
Menu Bar	The menu bar of the configuration program. See "3.1.1 Menu Bar" for items in the menu bar.
Device View	The type, the name, and the logical name of the device registered in the system are displayed in a tree.
Setting View	Displays setting contents of the device selected in "Device View". See "3.1.3(1) PosPrinter", "3.1.3(2) CashDrawer" and "3.1.3(3) Scanner" for items of each device.

3.1.1 Menu Bar

Item		Description
File	Exit	Ends the configuration program.
Edit	Add Device...	Adds a new device.
	Delete	Deletes the selected device.
Tool	CheckHealth	Executes an interactive test on the selected device.
Help(H)	About Utility...	Displays the version information of the configuration program.

3.1.2 Device View

Name	Description
SII POS Devices	Displays SII devices. When the logical name is selected in "Device View", setting contents of the device can be changed or deleted.
Other POS Devices	Displays devices other than SII devices. Device settings cannot be changed or deleted.


3.1.3 Setting View

(1) PosPrinter

- Setting items when selecting the printer driver

The items and their setting contents of the "Setting View" displayed by selecting a printer driver when adding a device are described below.

The figure shows RP-F10/G10 selected in the initial setting.

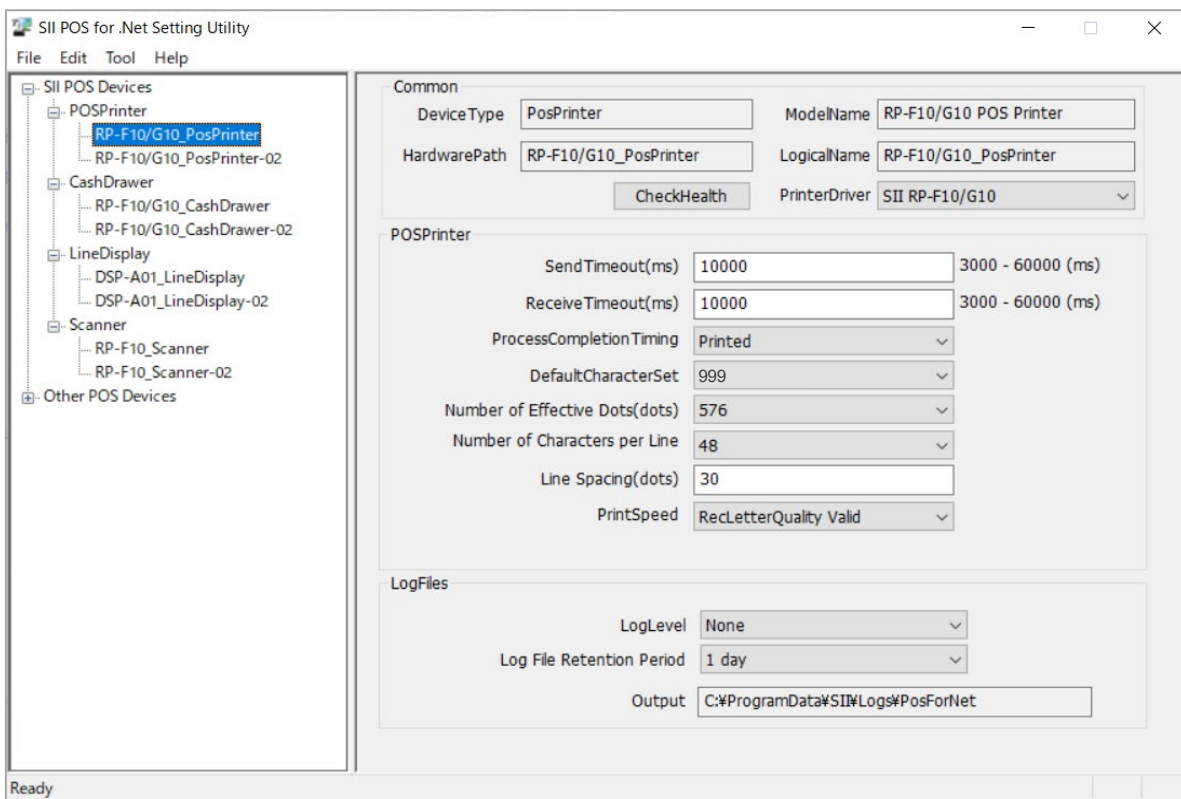

Reference

- The items supported by the printer are displayed.

Item	Description	Setting Content (" " : Default)
Common		
DeviceType	Device type	[PosPrinter]
ModelName	Model name	RP-F10, RP-G10: RP-F10/G10 POS Printer RP-E10: RP-E10 POS Printer
HardwarePath	Set automatically.	-
LogicalName	Logical name	-
PrinterDriver	Printer driver name	-
CheckHealth	Executes an interactive test for the selected device.	-
PosPrinter		
SendTimeout(ms)	Send timeout value in communication with the printer (milliseconds)	3000 to 60000 (10000)
ReceiveTimeout(ms)	Receive timeout value in communication with the printer (milliseconds)	3000 to 60000 (10000)
ProcessCompletion Timing	Timing of method completion	Data Transmitted (Completion of data transmission) Printed (Completion of printing)
DefaultCharacterSet	Character set type CharacterSet is initialized with this value. See CharacterSet for details.	437 737*1 850 852 855*1 857*1 858 860 863 865 866*1 932*2 999*3 1250 1251 1252 1253 1254
Number of Effective Dots(dots)	Number of effective dots per line. RecLineWidth is initialized with this value.	360 432 512 576
Number of Characters per Line	Number of 1-byte characters per line RecLineChars is initialized with this value.	360 dots / 30,40 432 dots / 27,30,33,36,43,48,54 512 dots / 42,56 576 dots / 36,41,44,48,57,64,72

Item	Description	Setting Content (" " : Default)
Line Spacing(dots)	Line spacing per line Settable range: The settable minimum value differs depending on the selected values of effective dots and characters per line. RecLineSpacing is initialized with this value.	Settable range: 24 to 255 (30) Number of valid dots / Number of Characters per Line 360 dots / 30 432 dots / 27,30,33,36 512 dots / 42 576 dots / 36,41,44,48
		Settable range: 16 to 255 Number of valid dots / Number of Characters per Line 360 dots / 40 432 dots / 43,48,54 512 dots / 56 576 dots / 57,64,72
NearEndSensor*4	NearEnd sensor control	Enable Disable
PrintSpeed	Print speed of the printer It is decided by RecLetterQuality when selecting RecLetterQuality Valid .	RecLetterQuality Valid High *5 Middle (Quality) *5 Middle (Silence) *5 Low *4*5
LogFiles		
LogLevel	Log output level	No Output: No logs are output. Error: Error logs at execution are output. Info: Error logs at execution and highlighted event at execution are output. Debug: Error logs at execution, highlighted event at execution and more detailed information for debugging are output.
Log File Retention Period	Retention period for log files Log files past the retention period are deleted when logs are output. The actual retention period may be longer by 1 day at maximum.	1 day 3 days 10 days 30 days 90 days
Output	Log output directory (Unchangeable) The log output directory and the file name are as follows. Output Directory: <System Drive>:\ProgramData\SI\Logs\PosForNet The output directory cannot be changed. File Name: <yyyyMMdd>.log The maximum size of the log file is 32 MB. When the log file exceeds the maximum size, the file name is changed to <yyyyMMdd_hhmmssfff>.log, and a new <yyyyMMdd>.log is created.*6	

*1: Not supported in RP-E10.

*2: Default for Japanese

*3: Default for English

*4: Supported only by RP-E10.


*5: See "User's Guide" for details of the print speed.

*6: The symbols used for the file name mean as follows. Each value comes from the Windows system clock.

yyyy : Year
MM : Month
dd : Day
hh : Hour
mm : Minute
ss : Second
fff : Millisecond

- Setting items when selecting the port

The items and their setting contents of the "Setting View" displayed by selecting the port when adding a device are described below.

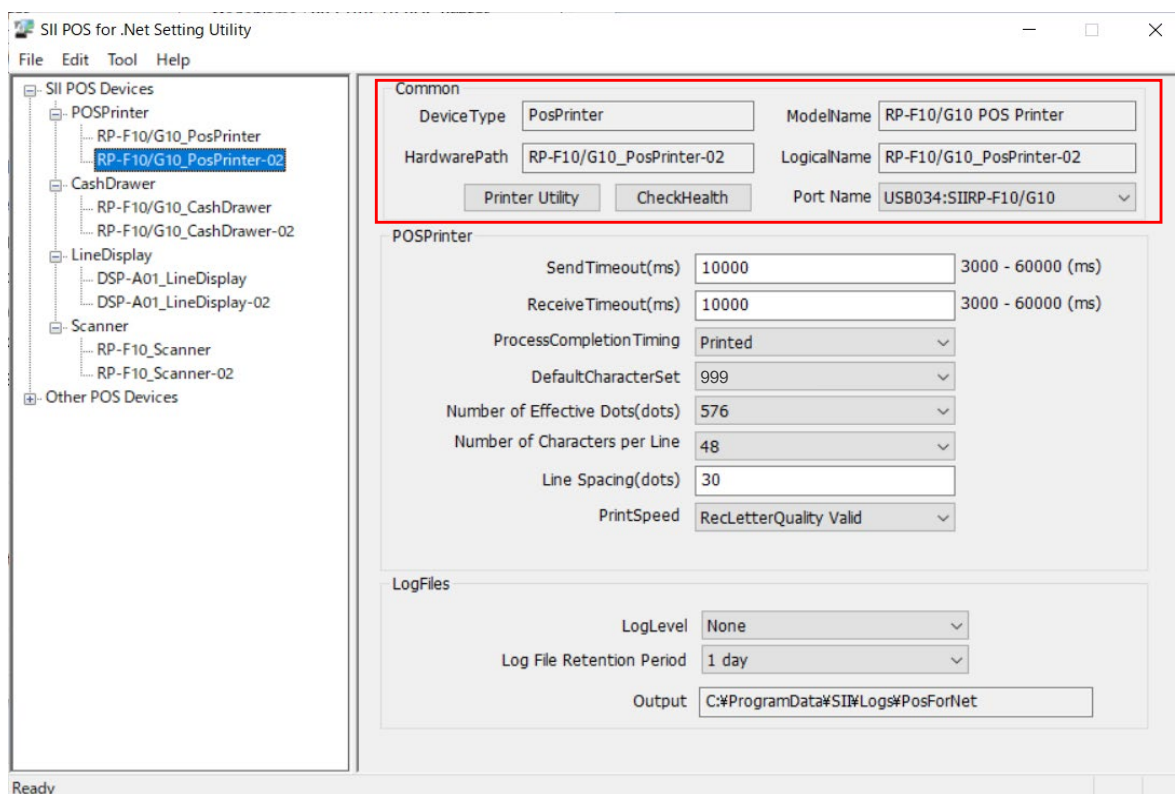

The difference between the settings in the "Settings View" when the port is selected and the setting items displayed when the printer driver is selected is only Common.

This section describes the items of Common and their settings.

Item	Description	Setting Content (" " : Default)
Common		
DeviceType	Device type	[PosPrinter]
ModelName	Model name	RP-F10, RP-G10: RP-F10/G10 POS Printer RP-E10: RP-E10 POS Printer
HardwarePath	Set automatically.	-
LogicalName	Logical name	-
Port Name	Port name for the selected device	-
Printer Utility	Configuration program	-


Item	Description	Setting Content (" " : Default)
CheckHealth	Executes an interactive test for the selected device.	

(2) CashDrawer

- CashDrawer setting items

The items displayed in "Setting View" when the Cash Drawer is selected and setting contents are described below.

The figure shows RP-F10/G10 selected in the initial setting.

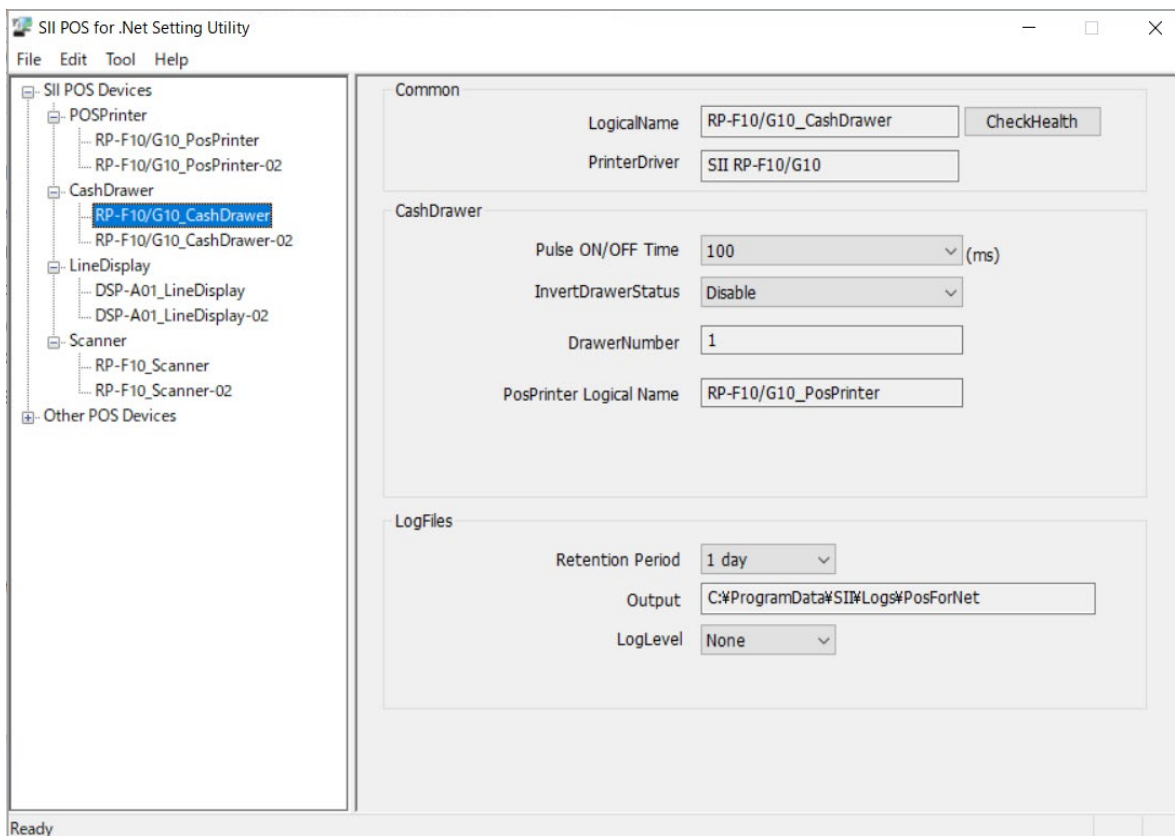

Item	Description	Setting Content (" " : Default)
Common		
LogicalName	Logical name	-
CheckHealth	Executes an interactive test for the selected device.	-
PrinterDriver	Printer driver name	
CashDrawer		
Pulse ON/OFF Time	Pulse time of the drawer signal (milliseconds) Specifies ON/OFF time of the pulse. The same time is specified for the ON time and the OFF time.	100 to 800 (500)


Item	Description	Setting Content (" " : Default)
InvertDrawerStatus	Notification method of drawer open/close state	Disable: Reversal is not active. The drawer is open when the drawer switch input status is "Low". Enable: Reversal is active. The drawer is open when the drawer switch input status is "High".
DrawerNumber	Drawer number connected to the printer	1 2
PosPrinter Logical Name	Logical name of the printer to which the drawer is connected	-
LogFiles		
Retention Period	Retention period for log files Log files past the retention period are deleted when logs are output. The actual retention period may be longer by 1 day at maximum.	1 day 3 days 10 days 30 days 90 days
Output	Log output directory (Unchangeable) The log output directory and the file name are as follows. Output Directory: <System Drive>\ProgramData\SI\Logs\PosForNet The output directory cannot be changed. File Name: <yyyyMMdd>.log The maximum size of the log file is 32 MB. When the log file exceeds the maximum size, the file name is changed to <yyyyMMdd_hhmmssfff>.log, and a new <yyyyMMdd>.log is created.*1	
LogLevel	Log output level	No Output: No logs are output. Error: Error logs at execution are output. Info: Error logs at execution and highlighted event at execution are output. Debug: Error logs at execution, highlighted event at execution and more detailed information for debugging are output.

*1: The symbols used for the file name mean as follows. Each value comes from the Windows system clock.

yyyy : Year
 MM : Month
 dd : Day
 hh : Hour
 mm : Minute
 ss : Second
 fff : Millisecond

- Setting items when selecting the port

The items and their setting contents of the "Setting View" displayed by selecting the port when adding a device are described below.

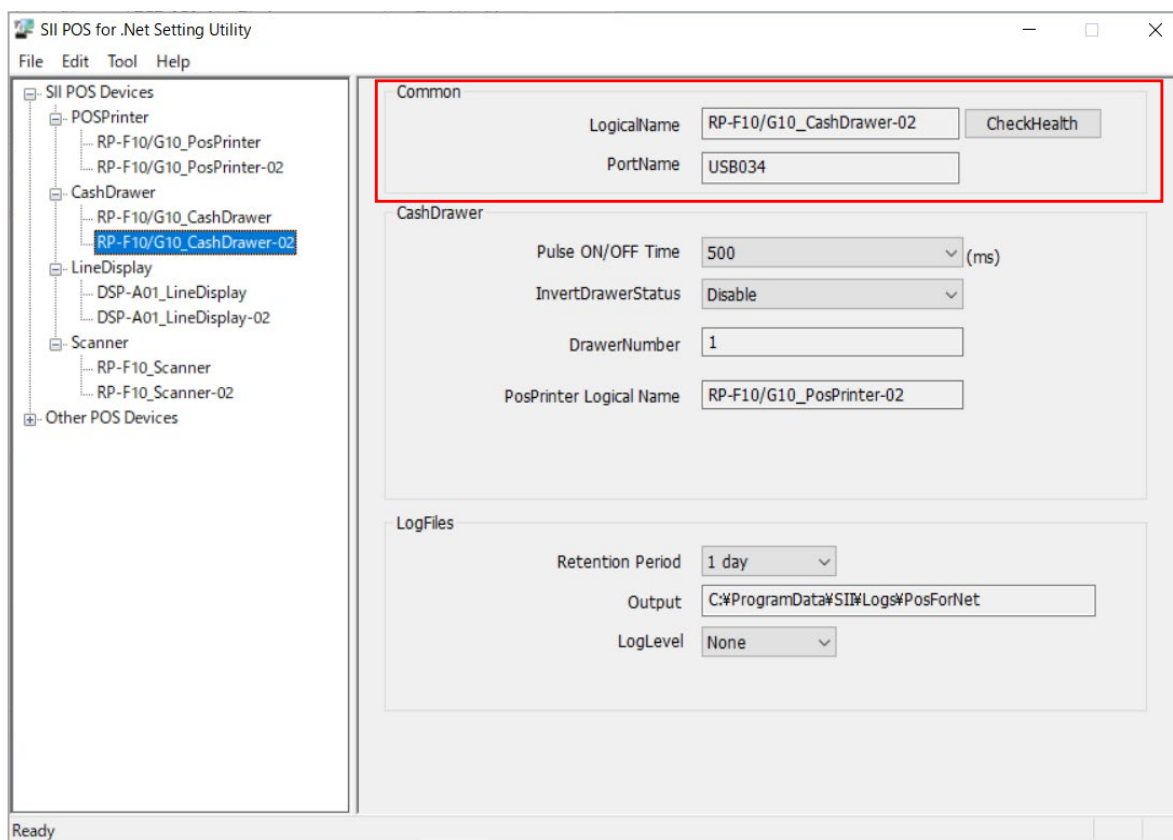

The difference between the settings in the "Settings View" when the port is selected and the setting items displayed when the Cash Drawer is selected is only Common.

This section describes the items of Common and their settings.


Item	Description	Setting Content (" " : Default)
Common		
LogicalName	Logical name	-
CheckHealth	Executes an interactive test for the selected device.	-
PortName	Port name for the selected device	

(3) Scanner

- Scanner setting items

The items displayed in "Setting View" when the Scanner is selected and setting contents are described below.

Supported only by RP-F10.

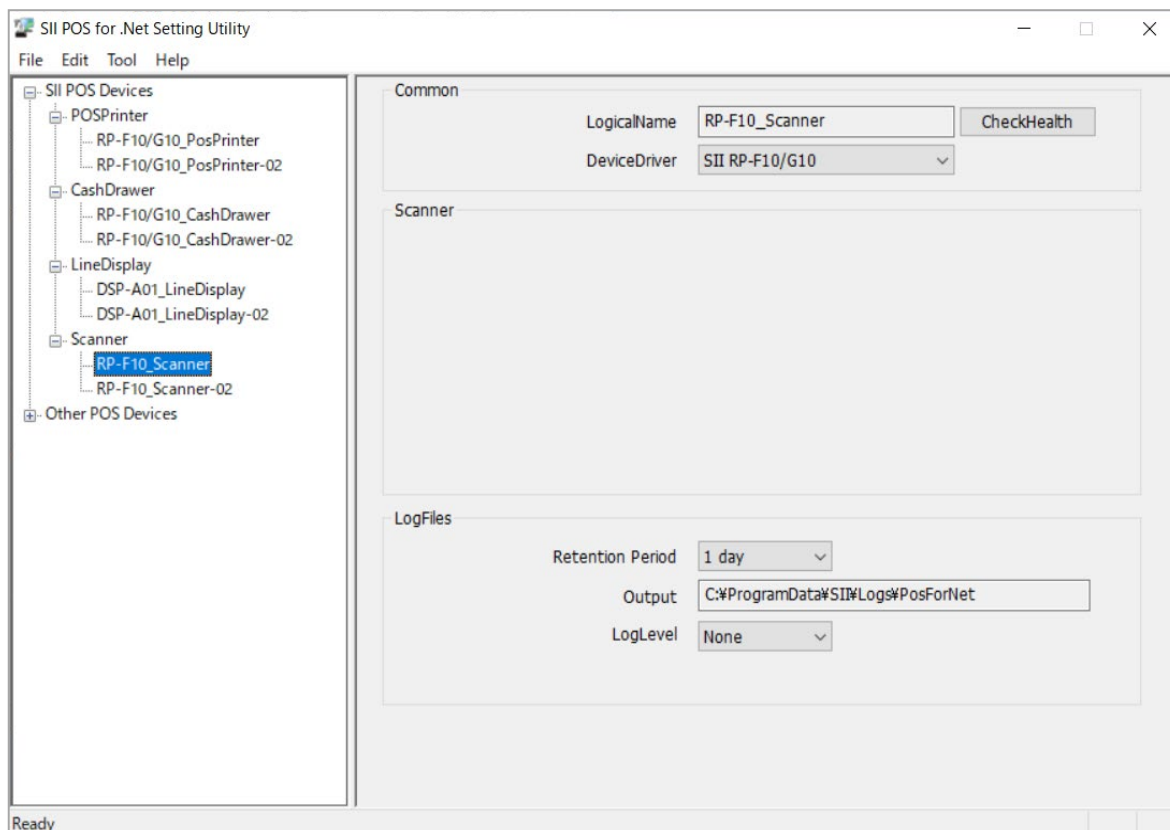

Item	Description	Setting Content (" " : Default)
Common		
LogicalName	Logical name	-
CheckHealth	Executes an interactive test for the selected device.	-
DeviceDriver	It is set automatically. It cannot be changed.	
Scanner		
-		
LogFiles		
Retention Period	Retention period for log files Log files past the retention period are deleted when logs are output. The actual retention period may be longer by 1 day at maximum.	1 day 3 days 10 days 30 days 90 days


Item	Description	Setting Content (" " : Default)
Output	Log output directory (Unchangeable) The log output directory and the file name are as follows. Output Directory: <System Drive>\ProgramData\SI\Logs\PosForNet The output directory cannot be changed. File Name: <yyyyMMdd>.log The maximum size of the log file is 32 MB. When the log file exceeds the maximum size, the file name is changed to <yyyyMMdd_hhmmssfff>.log, and a new <yyyyMMdd>.log is created.*1	
LogLevel	Log output level	No Output: No logs are output. Error: Error logs at execution are output. Info: Error logs at execution and highlighted event at execution are output. Debug: Error logs at execution, highlighted event at execution and more detailed information for debugging are output.

*1: The symbols used for the file name mean as follows. Each value comes from the Windows system clock.

yyyy : Year
 MM : Month
 dd : Day
 hh : Hour
 mm : Minute
 ss : Second
 fff : Millisecond

- Setting items when selecting the port

The items and their setting contents of the "Setting View" displayed by selecting the port when adding a device are described below.

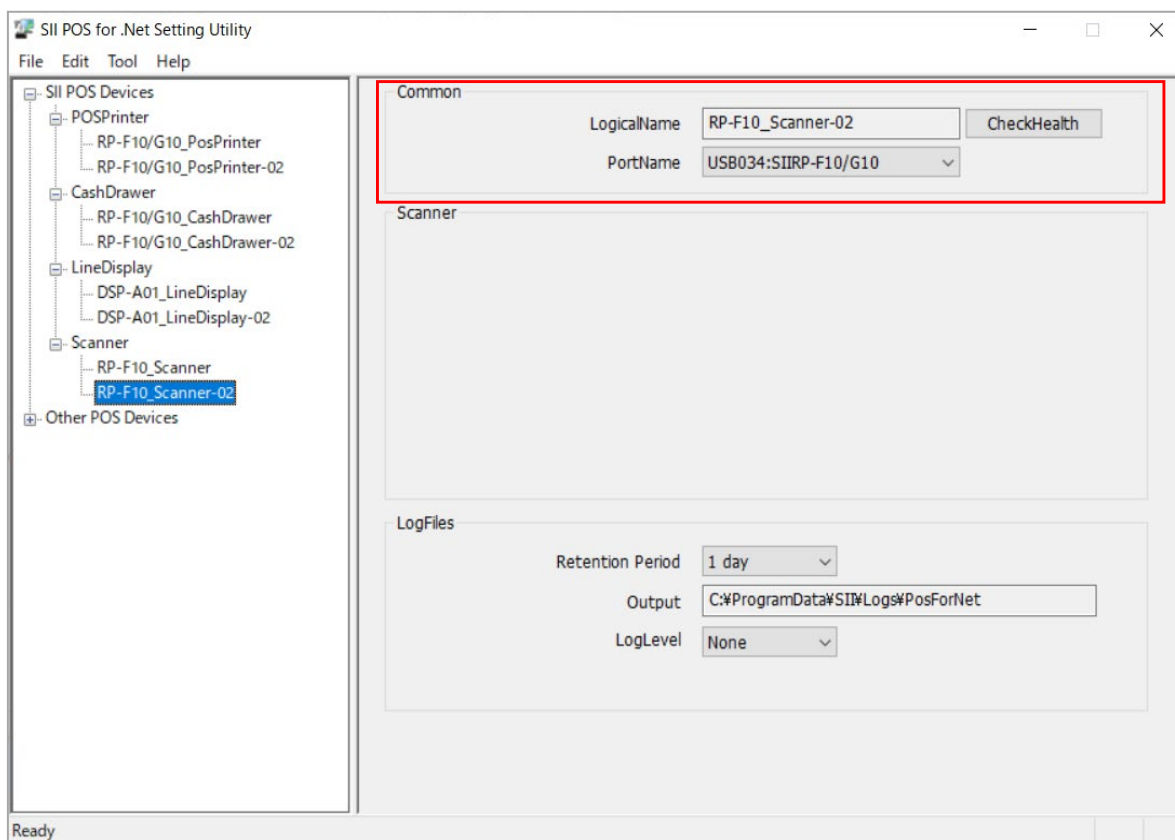

The difference between the settings in the "Settings View" when the port is selected and the setting items displayed when the Scanner is selected is only Common.

This section describes the items of Common and their settings.

Item	Description	Setting Content (" " : Default)
Common		
LogicalName	Logical name	-
CheckHealth	Executes an interactive test for the selected device.	-
PortName	Port name for the selected device	

3.2 Functions

The functions of the configuration program are described.
The procedure is described using RP-F10 as an example.

3.2.1 Addition of Device

The procedure for adding a device is described.

When the configuration program is started up immediately after installing this software, a device needs to be added since no device has been added.


Maximum 8 printers can be added. Up to 2 drawers and 1 scanner can be added for 1 printer.

Caution


- ◆ When selecting USB for the interface, connect to the port in advance before starting up the configuration program.
- ◆ When selecting Bluetooth for the interface, pair the printer in advance before starting up the configuration program.
- ◆ When selecting LAN/WLAN for the interface, create the LAN port in advance before starting up the configuration program.
- ◆ When selecting COM for the interface, connect to the port in advance before starting up the configuration program.
- ◆ The printer driver is required to be installed on the computer when selecting the PrinterDriver. See "SII Software Package for Windows Installation Guide" for installing the printer driver.

(1) Addition of Printer


- 1) When the configuration program starts, the following window is displayed. Select the [Edit] - [Add Device...] button from "Menu Bar".

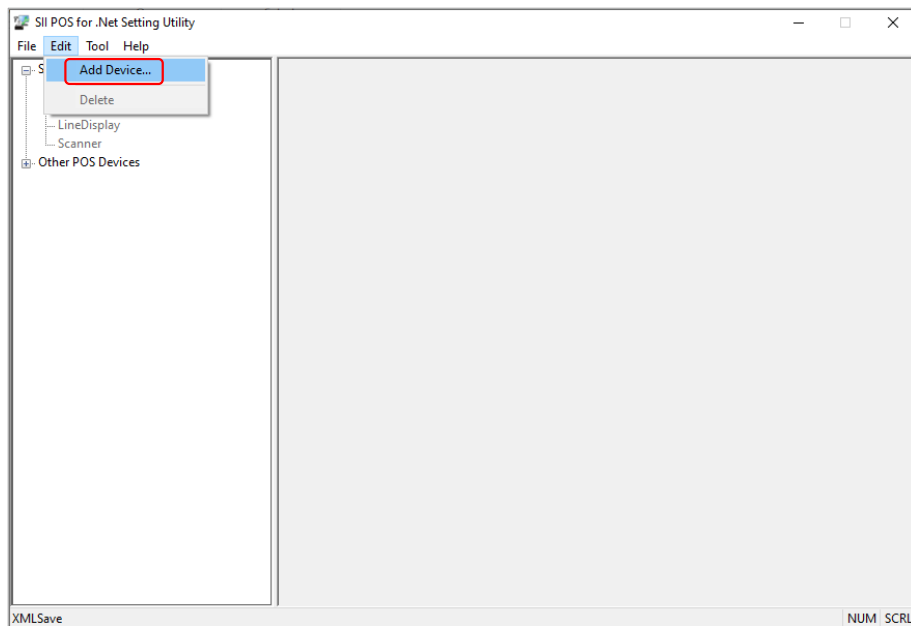


- 2) Select "POSPrinter" for [DeviceClass], and then click the [Next >] button.

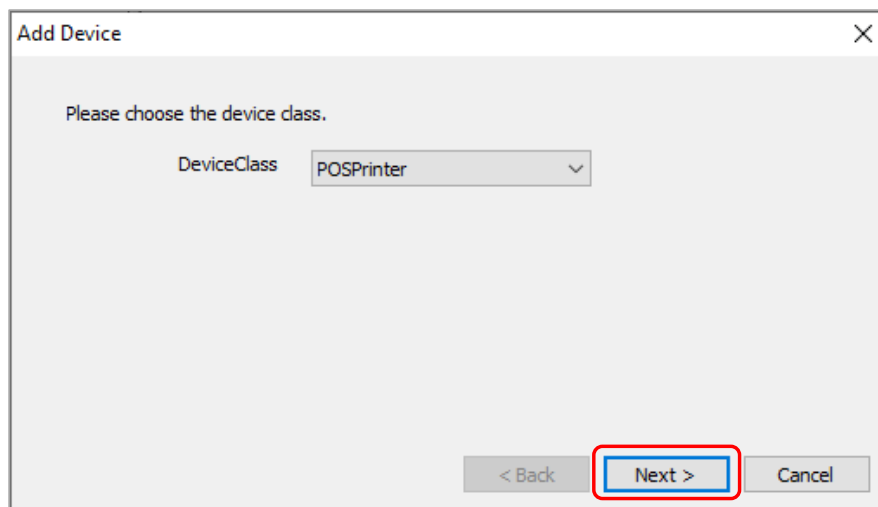

- 3) Select the printer to be added from [Printer Model], and click the [Next >] button. Select the printer driver or interface from [Interface] and click the [Next >] button.

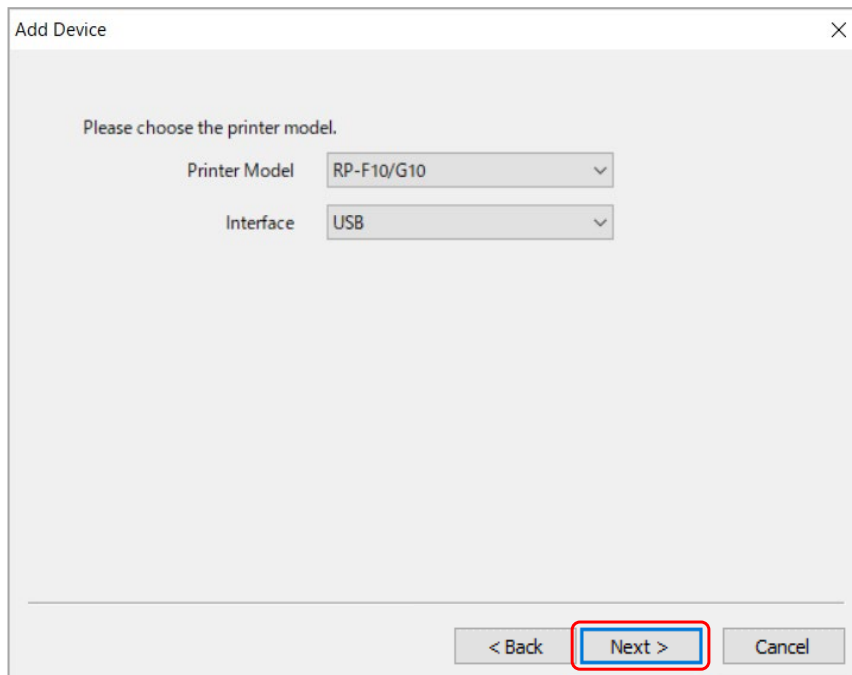

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. The main text says "Please choose the printer model." Below this, there are two dropdown menus. The first is labeled "Printer Model" and has "RP-F10/G10" selected. The second is labeled "Interface" and has "USB" selected. At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangle.

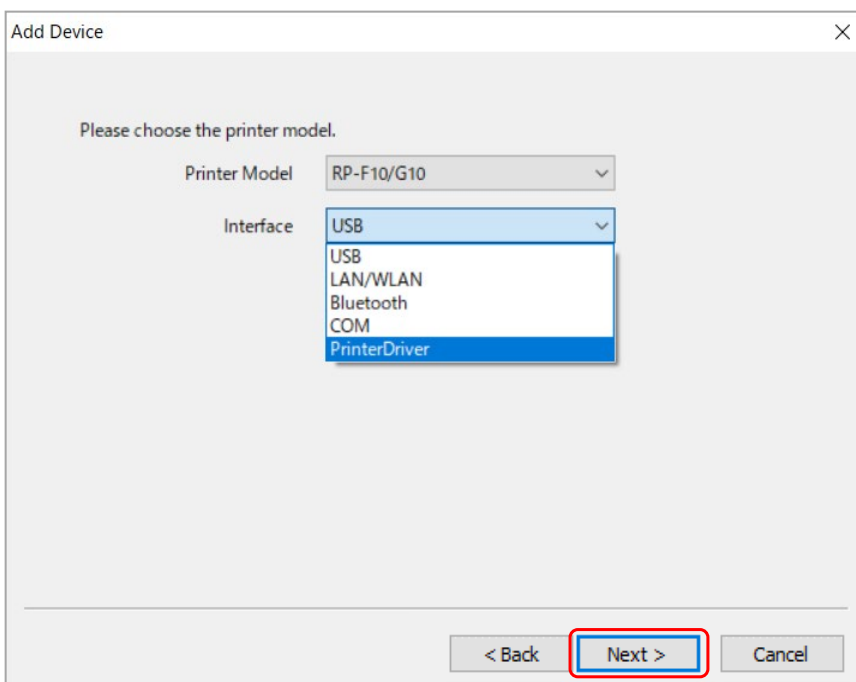

The screenshot shows the same "Add Device" dialog box. The "Printer Model" dropdown remains "RP-F10/G10". The "Interface" dropdown menu is now expanded, showing a list of options: "USB", "LAN/WLAN", "Bluetooth", "COM", and "PrinterDriver". The "PrinterDriver" option is highlighted in blue. The "Next >" button at the bottom is still highlighted with a red rectangle.

The following procedures vary depending on the selection of [Interface].


- Selecting USB: See "**When selecting the USB**".
- Selecting Bluetooth: See "**When selecting the Bluetooth**".
- Selecting LAN/WLAN: See "**When selecting the LAN/WLAN**".
- Selecting COM: See "**When selecting the COM**".
- Selecting printer driver: See "**When selecting the printer driver**".

Reference

- When adding the printer and the drawer at the same time, the printer will be displayed preferentially.


When selecting the USB

- 4) Select the port to be used from [USB Port], and then click the [Next >] button. [New Device Logical Name] is set automatically.

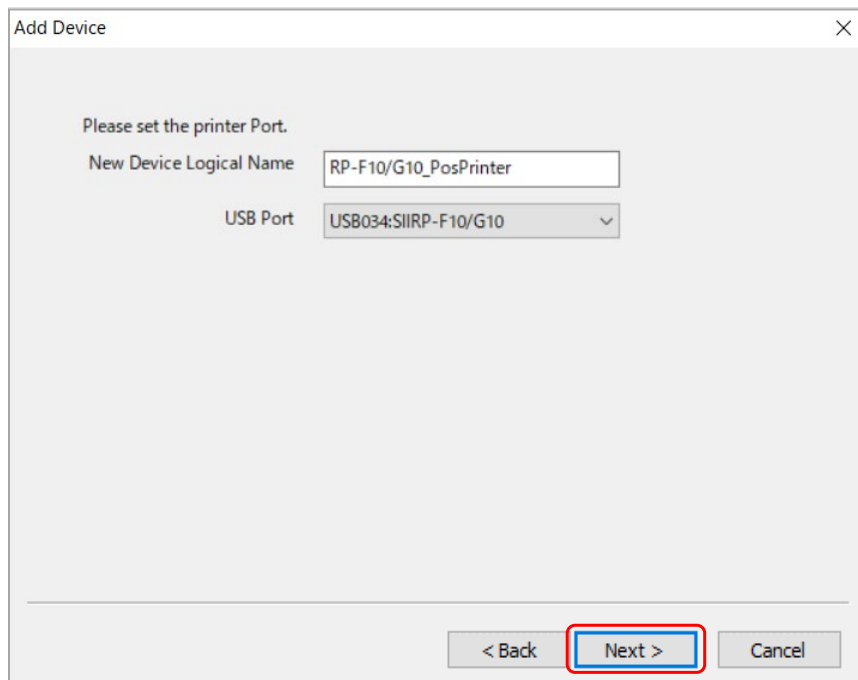

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. Inside the dialog, there is a prompt "Please set the printer Port." followed by two input fields. The first field is labeled "New Device Logical Name" and contains the text "RP-F10/G10_PosPrinter". The second field is labeled "USB Port" and is a dropdown menu showing "USB034:SIIRP-F10/G10". At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangular border.

- 5) Enter or select the settings of the printer, and then click the [Next >] button.

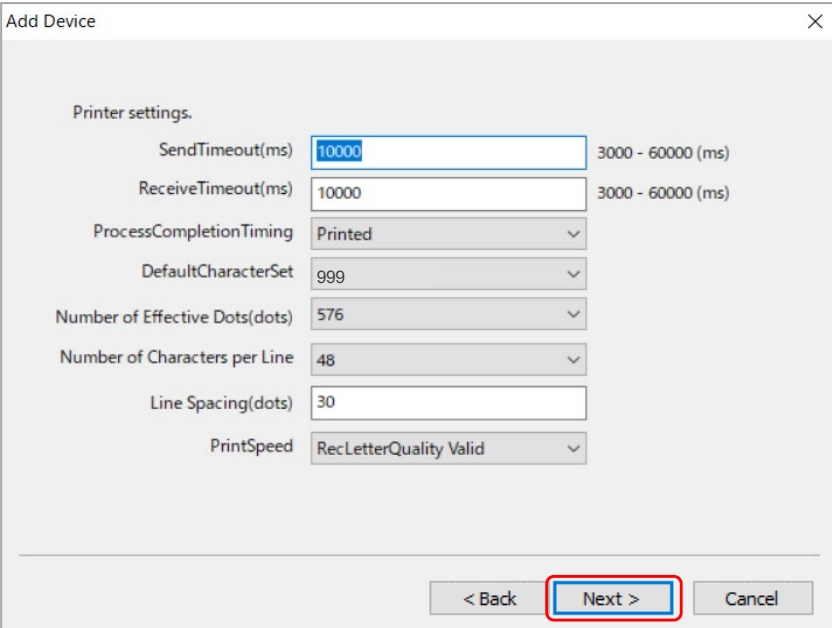


The 'Add Device' dialog box displays the following settings:

Setting	Value	Range/Options
SendTimeout(ms)	10000	3000 - 60000 (ms)
ReceiveTimeout(ms)	10000	3000 - 60000 (ms)
ProcessCompletionTiming	Printed	Dropdown
DefaultCharacterSet	999	Dropdown
Number of Effective Dots(dots)	576	Dropdown
Number of Characters per Line	48	Dropdown
Line Spacing(dots)	30	Dropdown
PrintSpeed	RecLetterQuality Valid	Dropdown

At the bottom, there are three buttons: '< Back', 'Next >' (highlighted with a red box), and 'Cancel'.

- 6) Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding no drawer:
Select "0" for [The number of drawers], and click the [Next >] button.
 - When adding 1 drawer in addition to the printer:
Select "1" for [The number of drawers], and click the [Next >] button.
See the description 4) in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.
 - When adding 2 drawers in addition to the printer:
Select 2 for [The number of drawers], and click the [Next >] button.
See the description 4) in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.

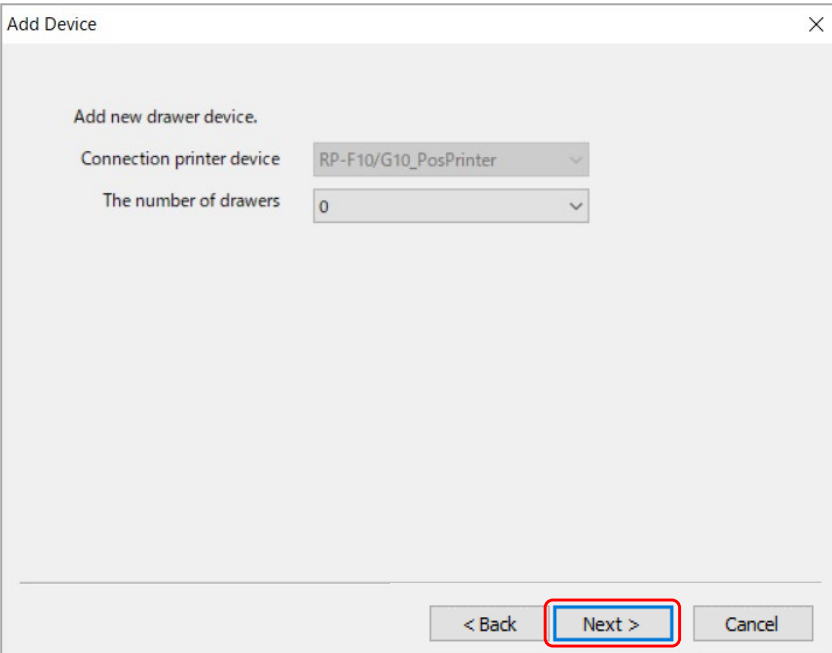


The 'Add Device' dialog box displays the following settings:

Setting	Value
Connection printer device	RP-F10/G10_PosPrinter
The number of drawers	0

At the bottom, there are three buttons: '< Back', 'Next >' (highlighted with a red box), and 'Cancel'.

- 7) Click the [Finish] button.

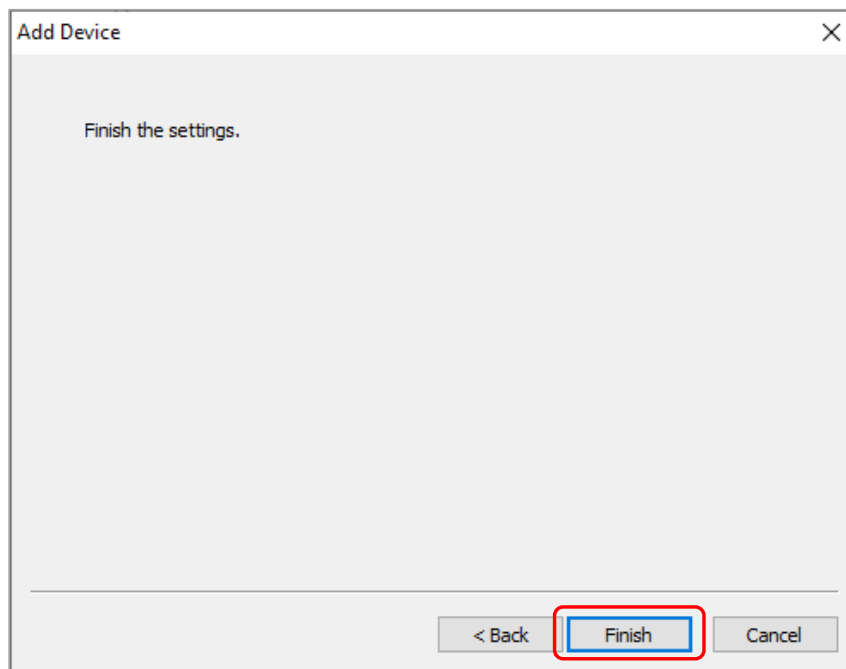

When selecting the Bluetooth

Caution

- ◆ Bluetooth connection cannot be used at the same time by multiple hosts.

- 4) Printers that have been paired once will be shown, select a printer and click the [Next >] button. The [New Device Logical Name] is set automatically.

Add Device

Please set the printer Port.

New Device Logical Name RP-F10/G10_PosPrinter

COM6:RP-F10-5G-No2
COM9:RP-E10-5G-No7

< Back Next > Cancel

- 5) Enter or select the settings of the printer, and then click the [Next >] button.


Add Device

Printer settings.

SendTimeout(ms) 10000 3000 - 60000 (ms)
ReceiveTimeout(ms) 10000 3000 - 60000 (ms)
ProcessCompletionTiming Printed
DefaultCharacterSet 999
Number of Effective Dots(dots) 576
Number of Characters per Line 48
Line Spacing(dots) 30
PrintSpeed RecLetterQuality Valid


< Back Next > Cancel

- 6) Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding no drawer:
Select "0" for [The number of drawers], and click the [Next >] button.
 - When adding 1 drawer in addition to the printer:
Select "1" for [The number of drawers], and click the [Next >] button.
See the description 4) in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.
 - When adding 2 drawers in addition to the printer:
Select 2 for [The number of drawers], and click the [Next >] button.
See the description 4) in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.

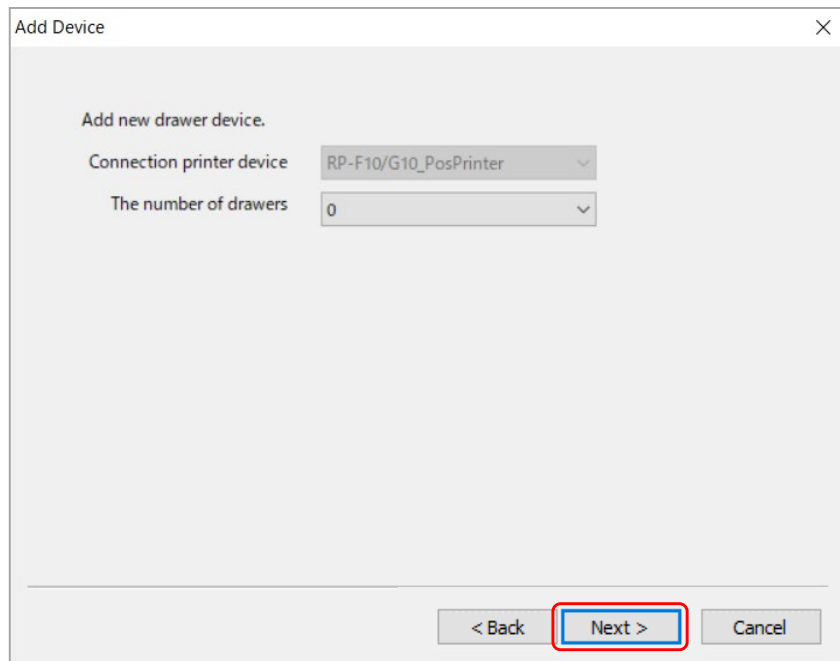

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. Inside the dialog, the text "Add new drawer device." is displayed. Below this, there are two dropdown menus: "Connection printer device" which is set to "RP-F10/G10_PosPrinter", and "The number of drawers" which is set to "0". At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangular box.

- 7) Click the [Finish] button.

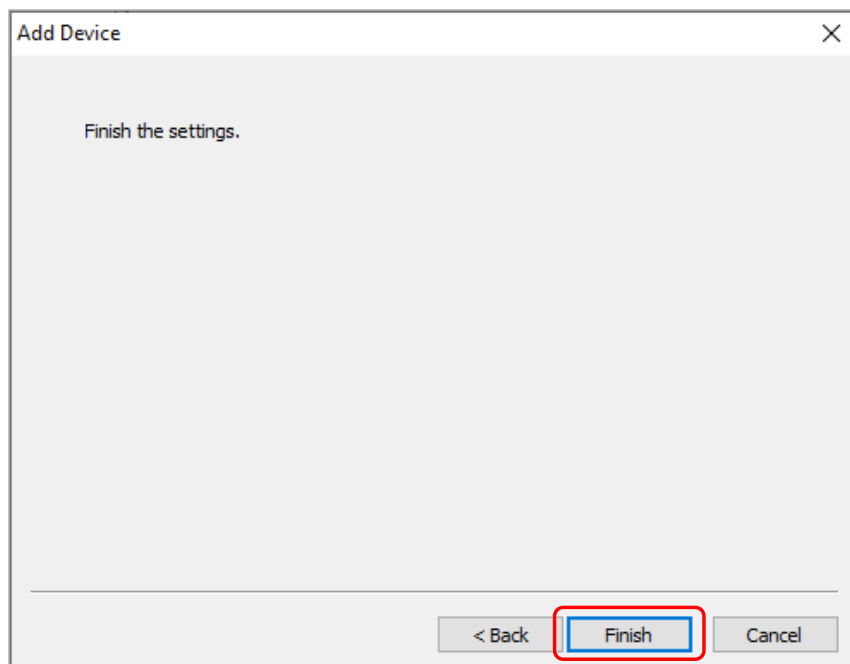

The screenshot shows the same "Add Device" dialog box, but now the text "Finish the settings." is displayed. The "Connection printer device" and "The number of drawers" dropdowns are no longer visible. At the bottom, the buttons are "< Back", "Finish", and "Cancel". The "Finish" button is highlighted with a red rectangular box.

When selecting the LAN/WLAN

- 4) The printer will be shown, select the printer and click the [Next >] button. The [New Device Logical Name] is set automatically.

Add Device

Please set the printer Port.

New Device Logical Name: RP-F10/G10_PosPrinter

192.168.0.1:
192.168.0.190:
192.168.1.190:
192.168.10.23:
192.168.129.12:
192.168.129.129:
192.168.129.162:
192.168.129.176:
192.168.129.33:
192.168.129.42:

< Back Next > Cancel

- 5) Enter or select the settings of the printer, and then click the [Next >] button.

Add Device

Printer settings.

SendTimeout(ms): 10000 3000 - 60000 (ms)

ReceiveTimeout(ms): 10000 3000 - 60000 (ms)

ProcessCompletionTiming: Printed

DefaultCharacterSet: 999

Number of Effective Dots(dots): 576


Number of Characters per Line: 48

Line Spacing(dots): 30

PrintSpeed: RecLetterQuality Valid


< Back Next > Cancel

- 6) Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding no drawer:
Select "0" for [The number of drawers], and click the [Next >] button.
 - When adding 1 drawer in addition to the printer:
Select "1" for [The number of drawers], and click the [Next >] button.
See the description 4) in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.
 - When adding 2 drawers in addition to the printer:
Select 2 for [The number of drawers], and click the [Next >] button.
See the description 4) in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.

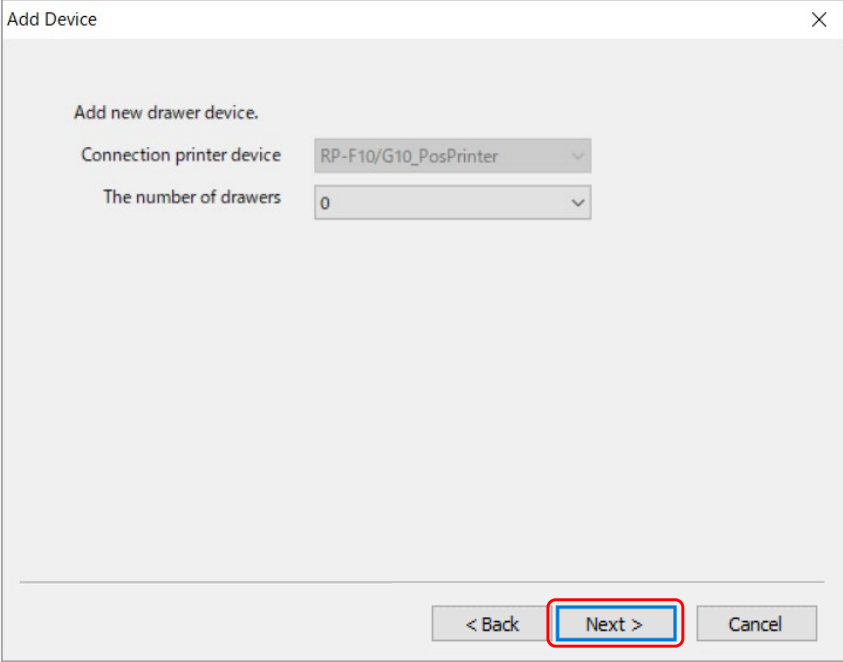

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. Inside the dialog, there is a section titled "Add new drawer device." Below this title, there are two dropdown menus. The first is labeled "Connection printer device" and has "RP-F10/G10_PosPrinter" selected. The second is labeled "The number of drawers" and has "0" selected. At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangle.


- 7) Click the [Finish] button.

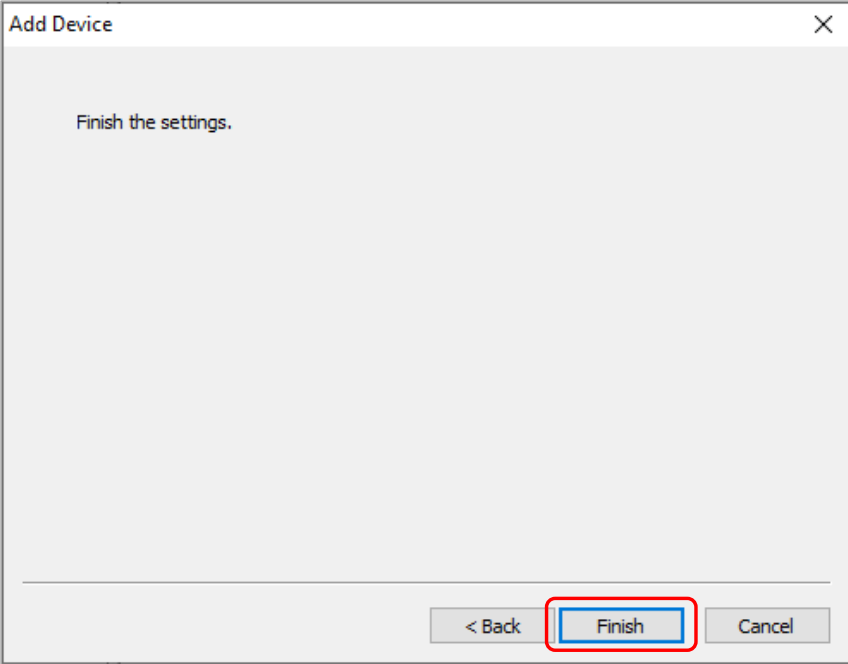

The screenshot shows the same "Add Device" dialog box, but now it displays the text "Finish the settings." at the top. The "Next >" button from the previous screen is no longer visible. At the bottom, there are three buttons: "< Back", "Finish", and "Cancel". The "Finish" button is highlighted with a red rectangle.

When selecting the COM

- 4) When the serial port is displayed, select the port to be used, and then click the [Next >] button. [New Device Logical Name] is set automatically.

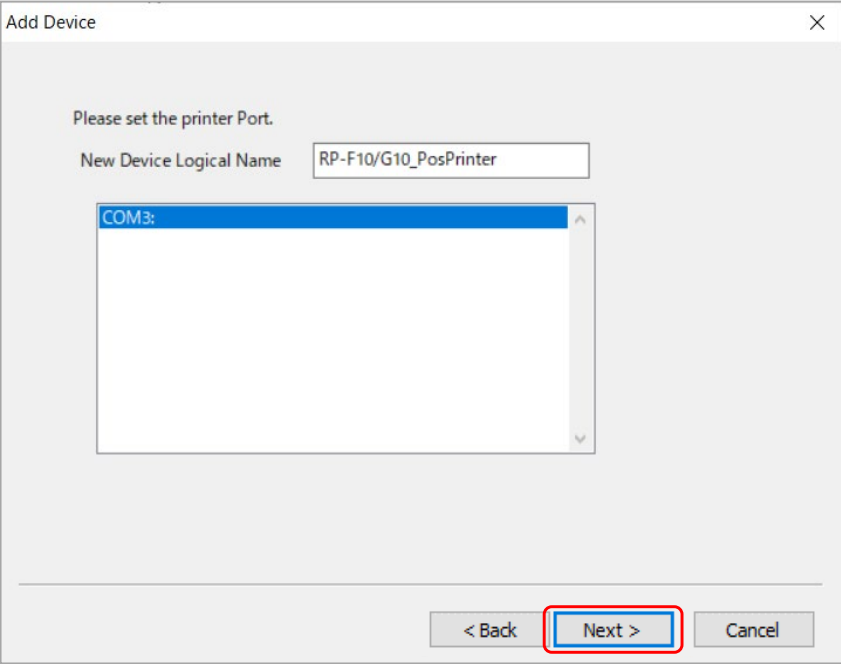

Add Device


Please set the printer Port.

New Device Logical Name RP-F10/G10_PosPrinter

COM3:

< Back Next > Cancel

- 5) Enter or select the settings of the printer, and then click the [Next >] button.

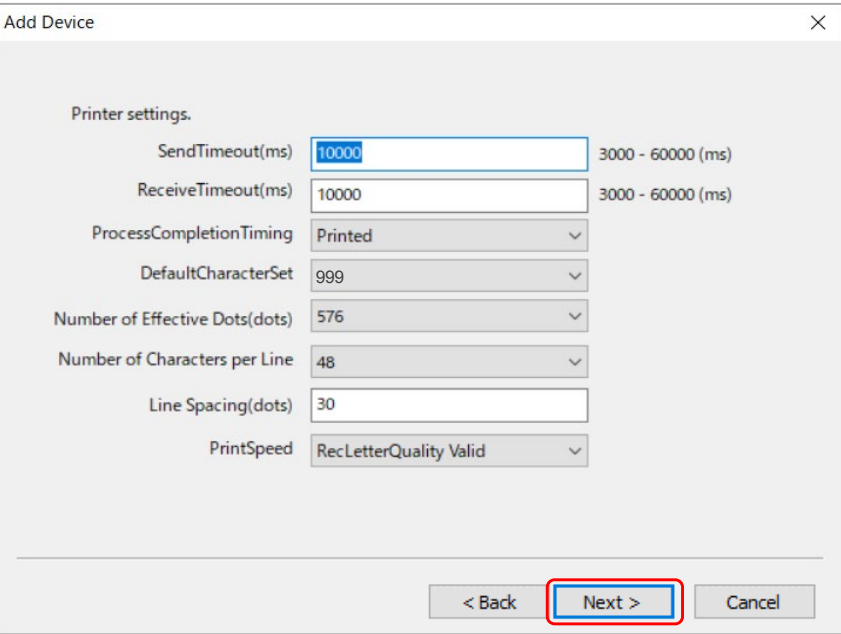

Add Device

Printer settings.

SendTimeout(ms) 10000 3000 - 60000 (ms)

ReceiveTimeout(ms) 10000 3000 - 60000 (ms)

ProcessCompletionTiming Printed

DefaultCharacterSet 999

Number of Effective Dots(dots) 576


Number of Characters per Line 48

Line Spacing(dots) 30

PrintSpeed RecLetterQuality Valid


< Back Next > Cancel

- 6) Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding no drawer:
Select "0" for [The number of drawers], and click the [Next >] button.
 - When adding 1 drawer in addition to the printer:
Select "1" for [The number of drawers], and click the [Next >] button.
See the description 4) in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.
 - When adding 2 drawers in addition to the printer:
Select 2 for [The number of drawers], and click the [Next >] button.
See the description 4) in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.

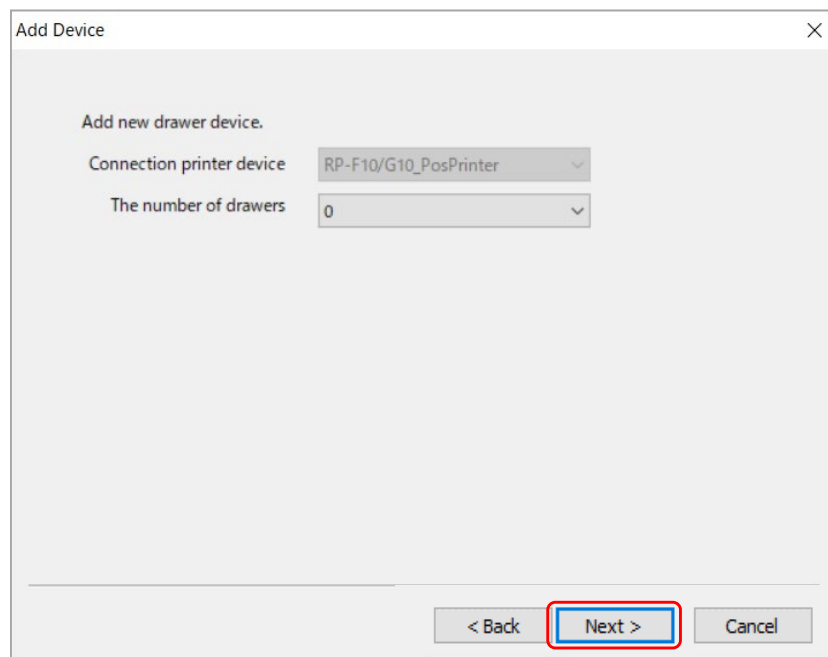

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. Inside the dialog, there is a section titled "Add new drawer device." Below this title, there are two dropdown menus. The first is labeled "Connection printer device" and has "RP-F10/G10_PosPrinter" selected. The second is labeled "The number of drawers" and has "0" selected. At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangle.


- 7) Click the [Finish] button.

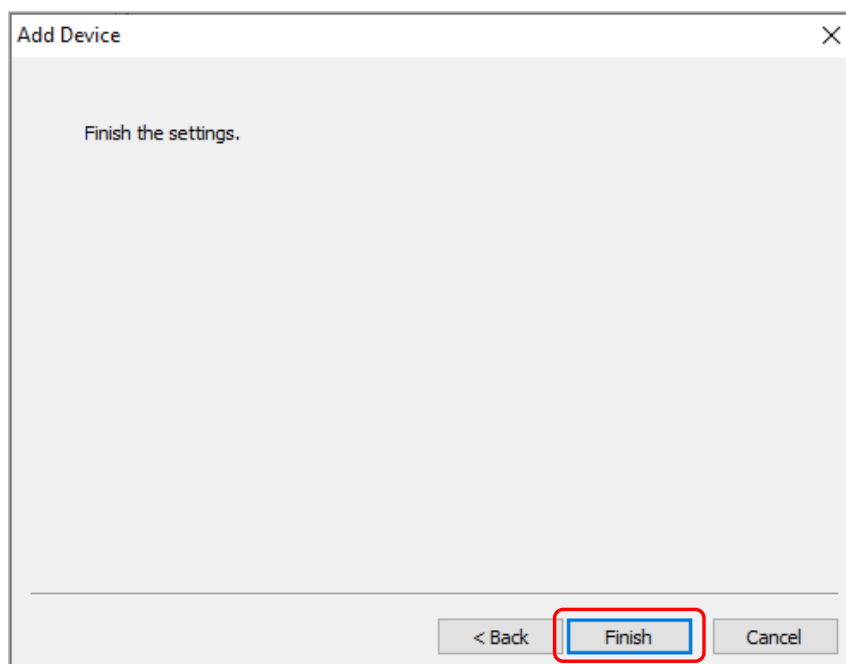

The screenshot shows the same "Add Device" dialog box, but now it displays the text "Finish the settings." at the top. The "Connection printer device" and "The number of drawers" dropdowns are no longer visible. At the bottom, the buttons are "< Back", "Finish", and "Cancel". The "Finish" button is highlighted with a red rectangle.

When selecting the printer driver


- 4) Select the printer driver from [Printer Driver], and then click the [Next >] button. [New Device Logical Name] is set automatically.

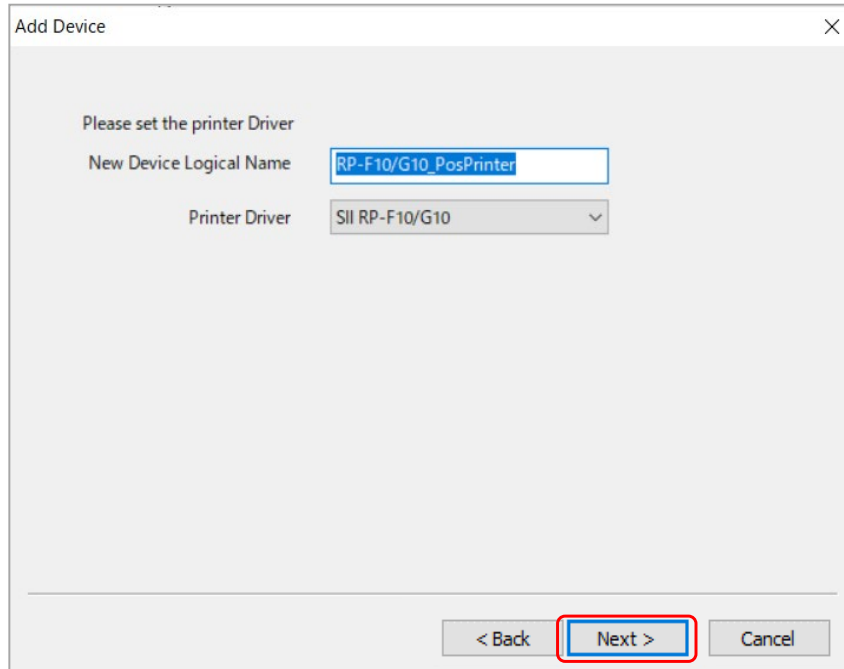

The screenshot shows the 'Add Device' dialog box. It contains the following fields and controls:

- Please set the printer Driver**
- New Device Logical Name**: A text box containing 'RP-F10/G10_PosPrinter'.
- Printer Driver**: A dropdown menu showing 'SII RP-F10/G10'.
- At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a red rectangle.


- 5) Enter or select the settings of the printer, and then click the [Next >] button.

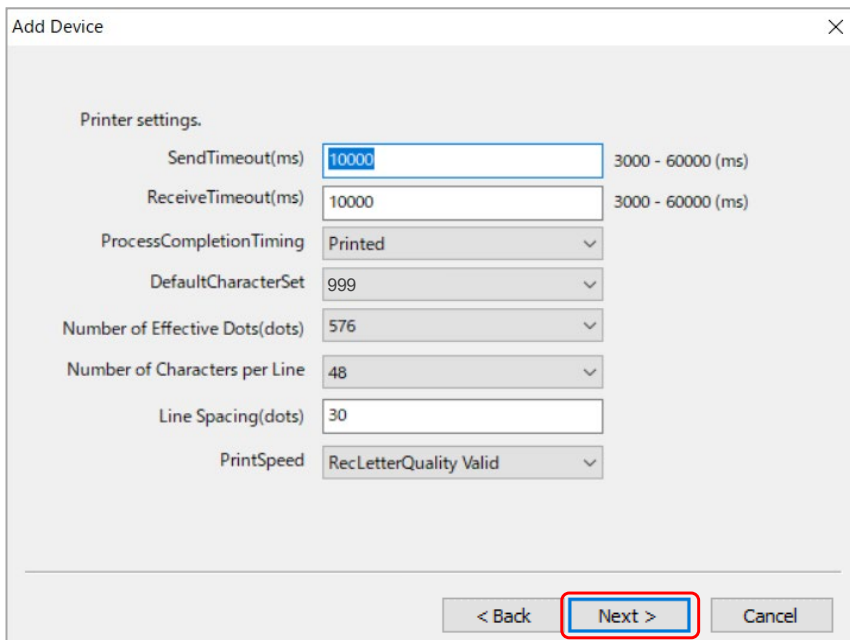

The screenshot shows the 'Add Device' dialog box with the 'Printer settings' section. It contains the following fields and controls:


- Printer settings.**
- SendTimeout(ms)**: A text box containing '10000'. To its right is the range '3000 - 60000 (ms)'.
- ReceiveTimeout(ms)**: A text box containing '10000'. To its right is the range '3000 - 60000 (ms)'.
- ProcessCompletionTiming**: A dropdown menu showing 'Printed'.
- DefaultCharacterSet**: A dropdown menu showing '999'.
- Number of Effective Dots(dots)**: A dropdown menu showing '576'.
- Number of Characters per Line**: A dropdown menu showing '48'.
- Line Spacing(dots)**: A text box containing '30'.
- PrintSpeed**: A dropdown menu showing 'RecLetterQuality Valid'.
- At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a red rectangle.

- 6) Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding no drawer:
Select "0" for [The number of drawers], and click the [Next >] button.
 - When adding 1 drawer in addition to the printer:
Select "1" for [The number of drawers], and click the [Next >] button.
See the description 4) in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.
 - When adding 2 drawers in addition to the printer:
Select 2 for [The number of drawers], and click the [Next >] button.
See the description 4) in "(2) Addition of CashDrawer" of "3.2.1 Addition of Device" for the subsequent setting.

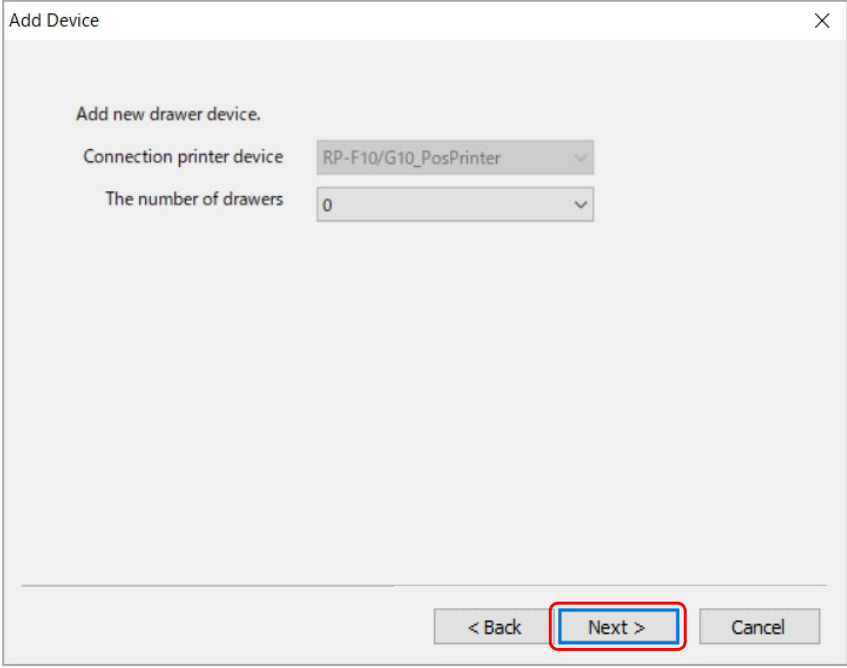

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. Inside the dialog, the text "Add new drawer device." is displayed. Below this, there are two dropdown menus: "Connection printer device" which is set to "RP-F10/G10_PosPrinter", and "The number of drawers" which is set to "0". At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a red rectangular box.


- 7) Click the [Finish] button.

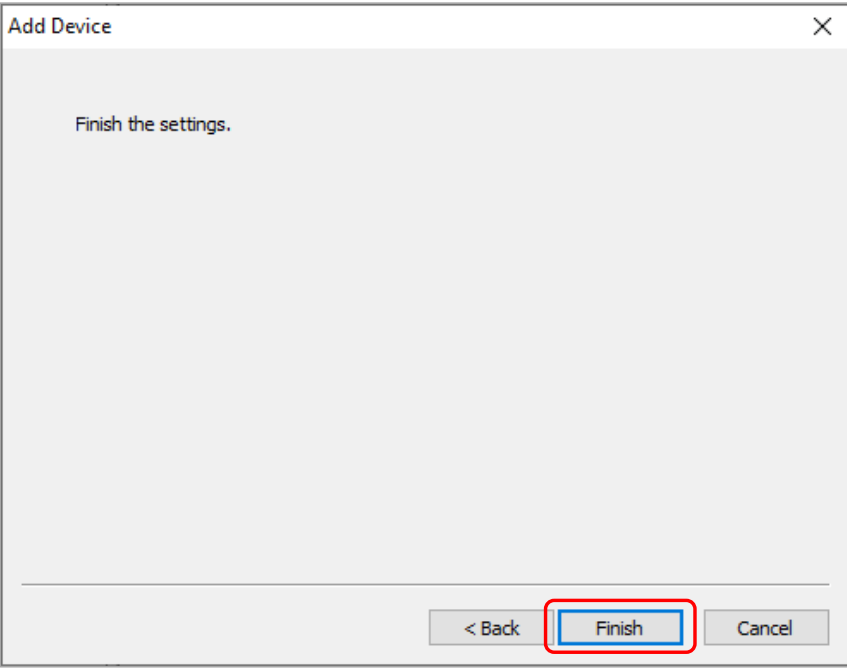


The screenshot shows the same "Add Device" dialog box, but now the text "Finish the settings." is displayed. The "Connection printer device" and "The number of drawers" dropdowns are no longer visible. At the bottom, the buttons are "< Back", "Finish", and "Cancel". The "Finish" button is highlighted with a red rectangular box.

(2) Addition of CashDrawer

- 1) Start the configuration program, and select [Edit] – [Add Device...] from "Menu Bar".

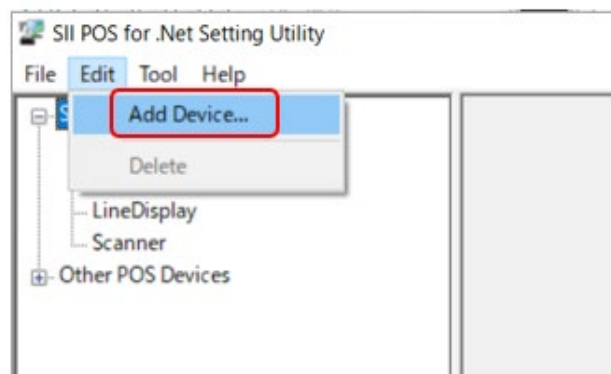

- 2) Select "CashDrawer" for [DeviceClass], and then click the [Next >] button.

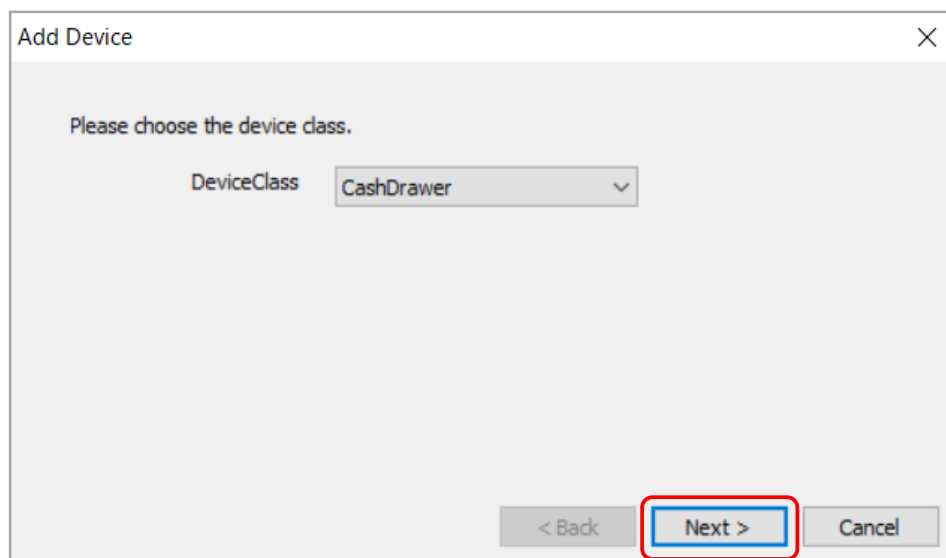

- 3) Select the printer to be connected from [Connection printer device].
Select the number of the drawers to connect to the printer from [The number of drawers].
- When adding 1 drawer:
Select "1" in [The number of drawers], and click the [Next >] button.
 - When adding 2 drawers:
Select "2" in [The number of drawers], and click the [Next >] button.

Add Device

Add new drawer device.

Connection printer device RP-F10/G10_PosPrinter

The number of drawers 1 2

< Back Next > Cancel

Reference

- Up to 2 drawers can be set for 1 printer.

- 4) Enter or select the settings of the first drawer, and click the [Next >] button.
When selecting "1" in [The number of drawers] of the description 3), see the description 6) for the subsequent setting.

Add Device

The first drawer settings.


New Device Logical Name RP-F10/G10_CashDrawer

Pulse ON/OFF time 500 (ms)

InvertDrawerStatus Disable

< Back Next > Cancel

- 5) Enter or select the settings of the second drawer, and click the [Next >] button.

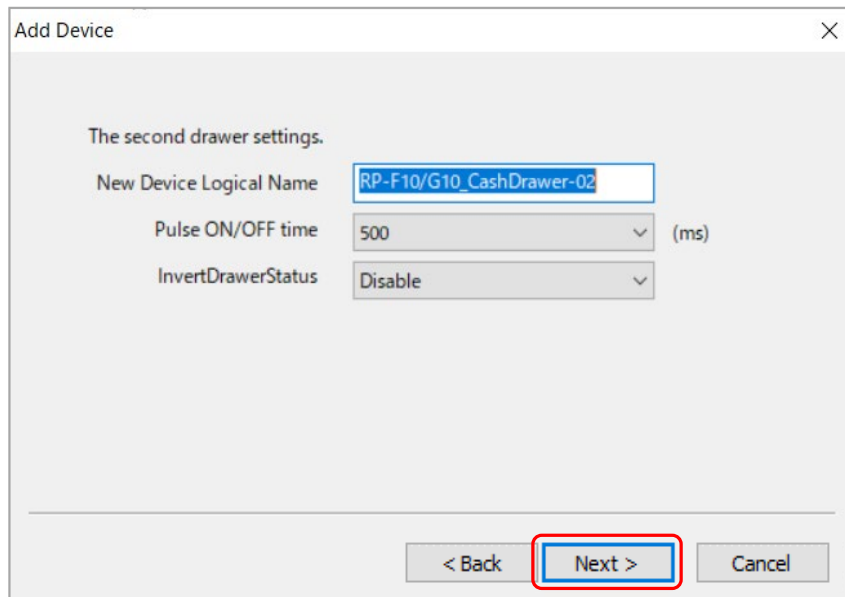

Add Device

The second drawer settings.


New Device Logical Name

Pulse ON/OFF time (ms)

InvertDrawerStatus

< Back **Next >** Cancel

- 6) Click the [Finish] button.

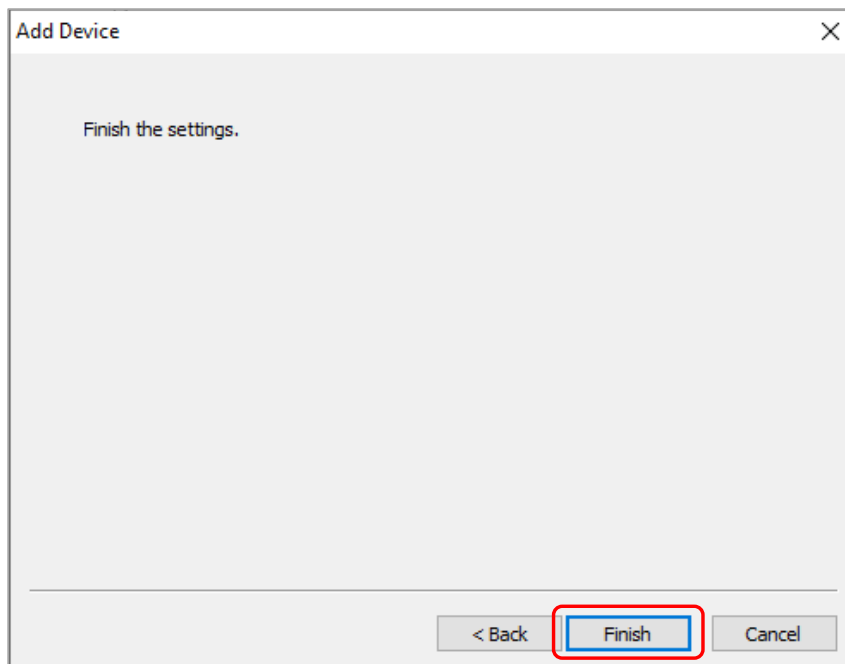

Add Device

Finish the settings.

< Back **Finish** Cancel


Reference

- When adding the printer and the drawer at the same time, the printer will be displayed preferentially.


(3) Addition of Scanner

Supported only by RP-F10.


- 1) Start the configuration program, and select [Edit] – [Add Device...] from "Menu Bar".

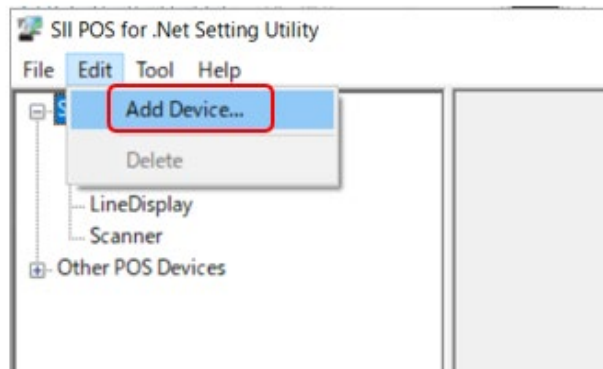


- 2) Select "Scanner" for [DeviceClass], and then click the [Next >] button.

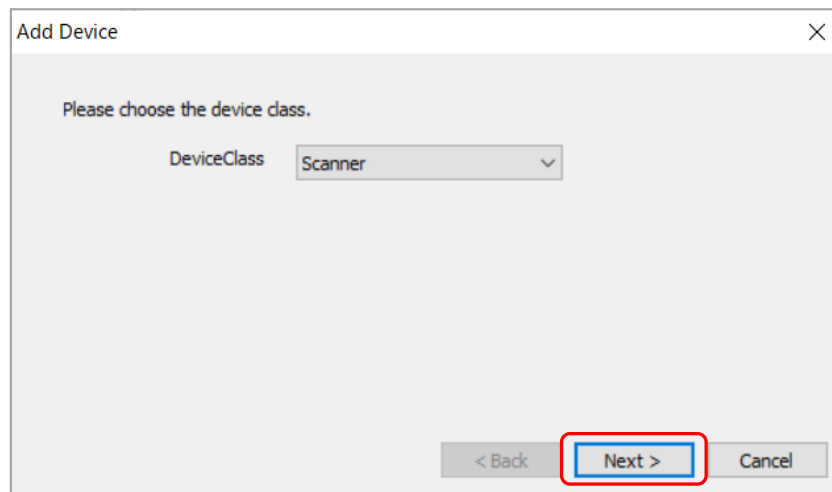

- 3) Select the device to be connected from [Device Model], and click the [Next >] button.

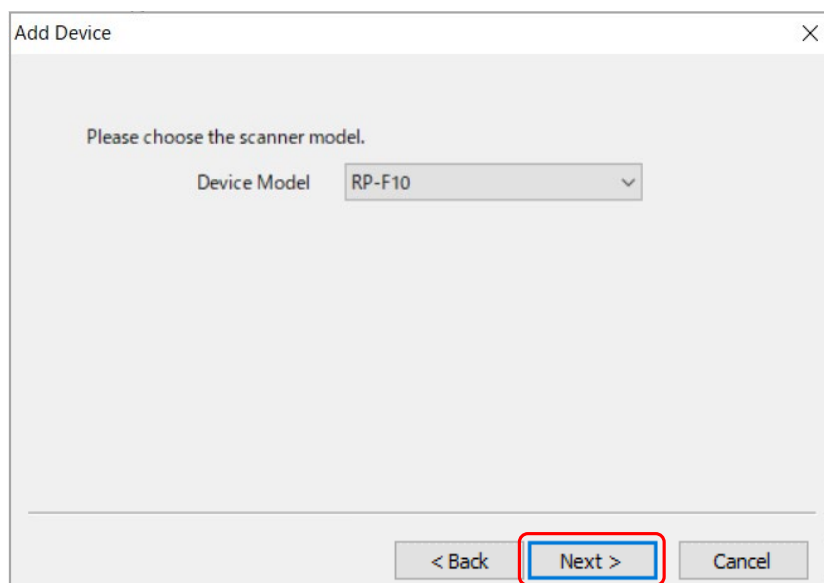


- 4) Select the printer driver to be used for the scanner selected in the description 2) from [Connection printer device], and then click the [Next >] button. [New Device Logical Name] is set automatically.

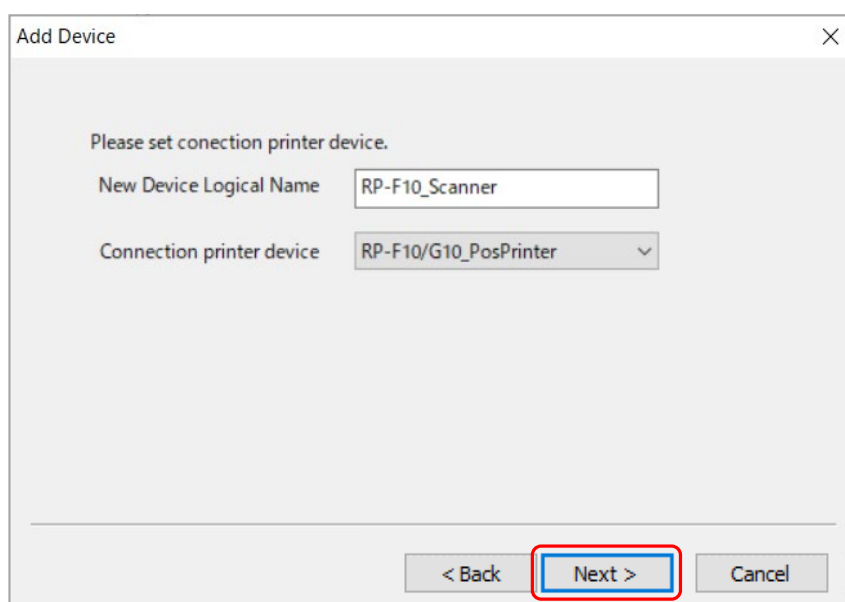

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. The main text says "Please set connection printer device." Below this, there are two fields: "New Device Logical Name" with the value "RP-F10_Scanner" and "Connection printer device" with a dropdown menu showing "RP-F10/G10_PosPrinter". At the bottom, there are three buttons: "< Back", "Next >" (highlighted with a red rectangle), and "Cancel".

- 5) Click the [Finish] button.

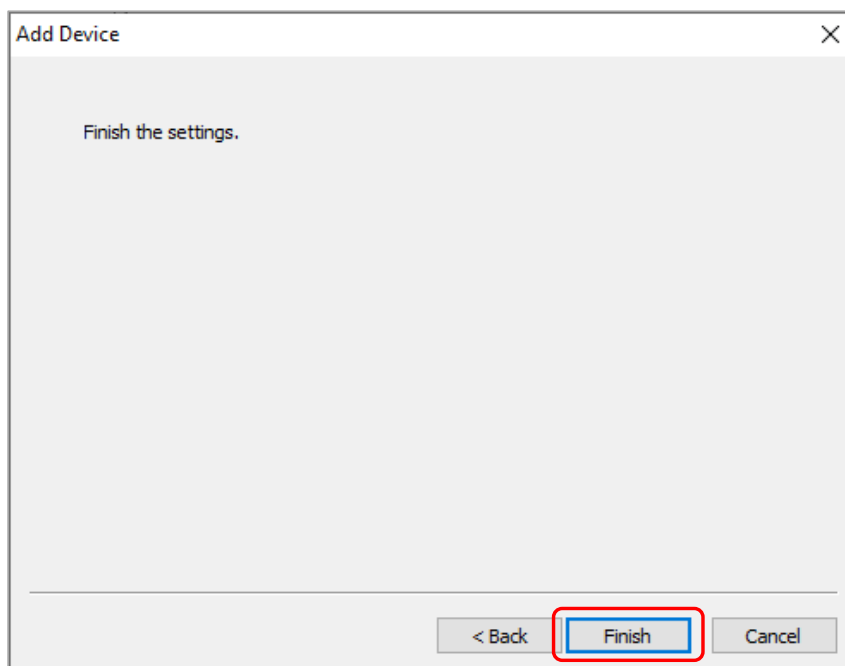


The screenshot shows the same "Add Device" dialog box, but the main text now says "Finish the settings." The "Next >" button is no longer visible, and the "Finish" button is now highlighted with a red rectangle. The "< Back" and "Cancel" buttons remain at the bottom.


3.2.2 Changing Device Settings

The procedure for changing settings of the added device is described.

- 1) Select the logical name of PosPrinter to change from "Device View".

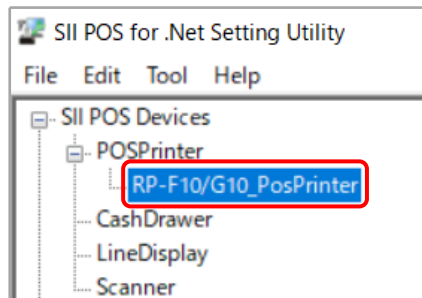

- 2) "Setting View" is displayed in editable state. Click the [OK] button after changing the contents.

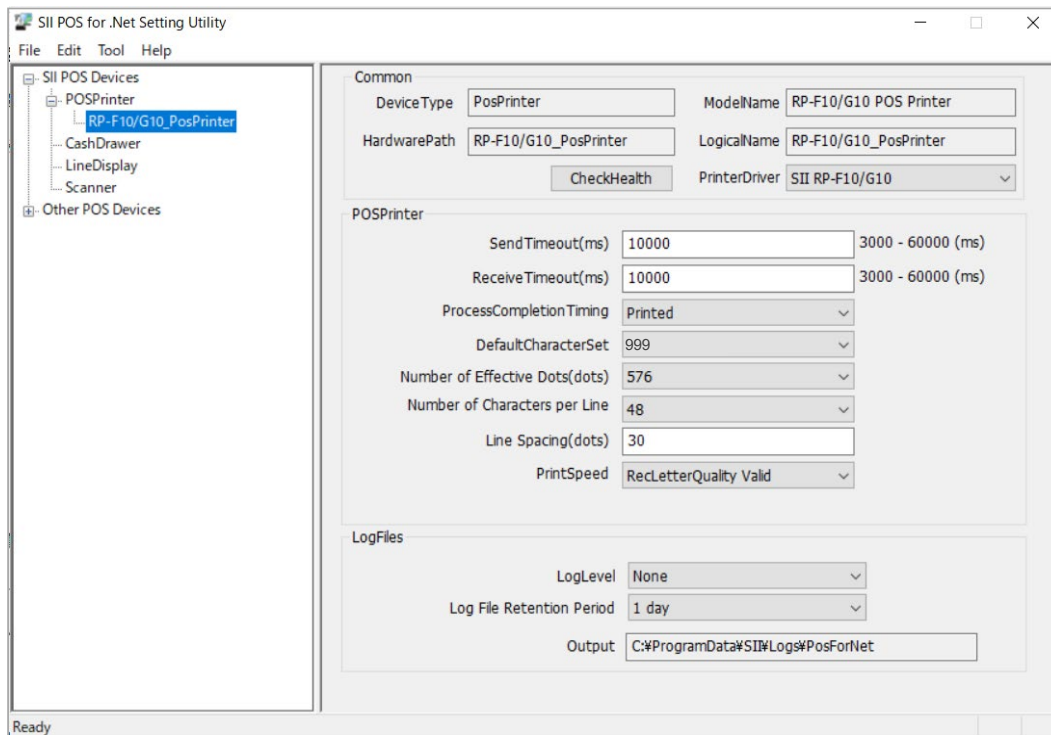


Reference

- When another device is selected or the configuration program is finished, the setting contents are saved.


3.2.3 Deletion of Device

The procedure for deleting the added device is described below.


- 1) Select the device to be deleted from "Device View", and select [Delete] from the right-click menu.

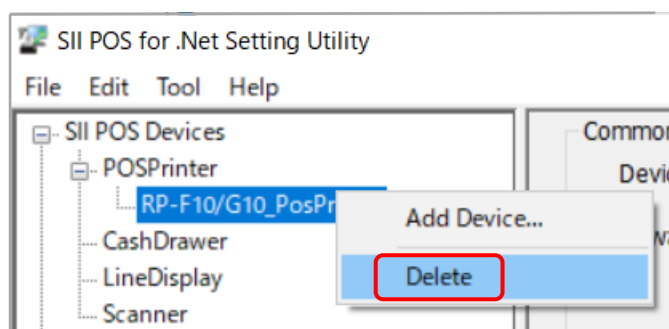

- 2) Confirm the device name, and click the [OK] button.

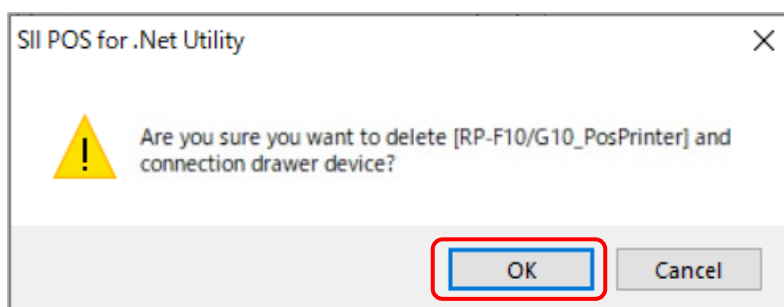

- 3) Confirm that the selected device has been deleted from the "Device View".

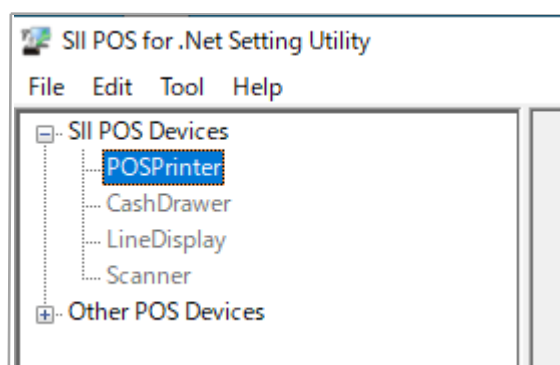


Caution

- ◆ When the POSPrinter device is selected, the selected POSPrinter device and all devices connected to the printer are deleted.


3.2.4 Device Interactive Test

In the configuration program, an interactive test can be performed on the device selected in "Device View". The procedure of the interactive test is described below.

- 1) Select the device name or the logical device name for which the interactive test is performed from "Device View".

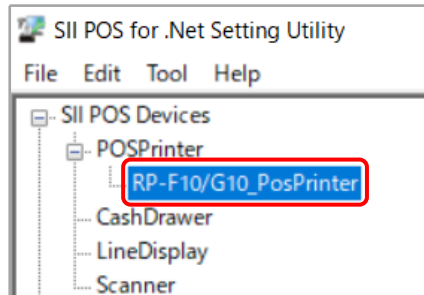

- 2) Click the [CheckHealth] button in "Setting View".

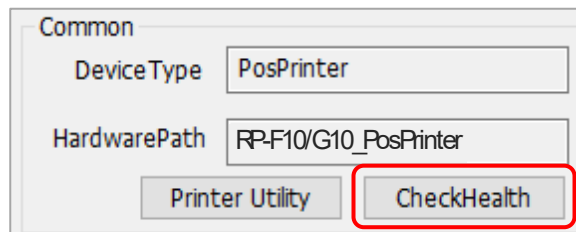


- 3) The preparation for the interactive test is started.

- **POSPrinter and CashDrawer**

[When the preparation for the interactive test succeeded]


- 4) The dialogue to perform the interactive test is displayed.

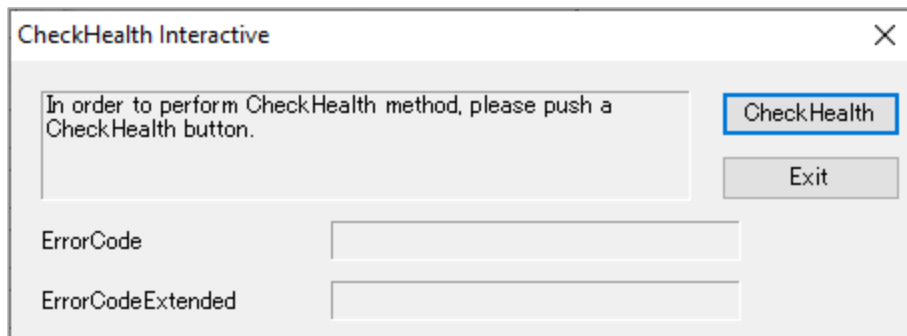

To start the interactive test, click the [CheckHealth] button.
To exit the interactive test, click the [Exit] button.

[When the preparation for the interactive test failed]


- 4) The dialogue is displayed.

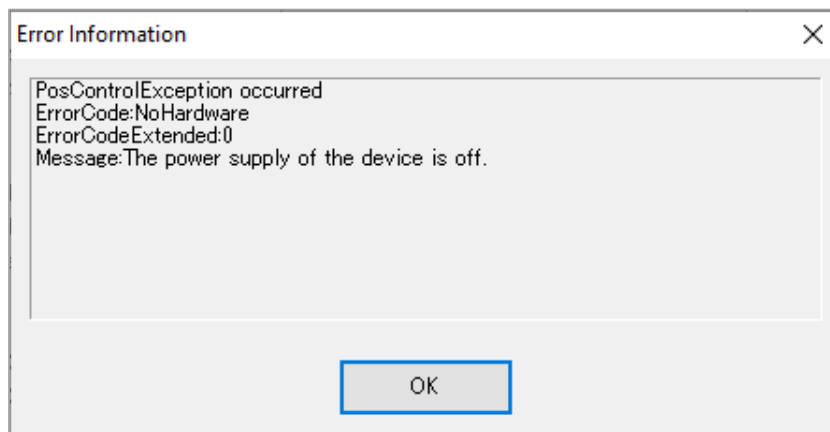

See "Appendix A Exceptions" for ErrorCode.
Click the [OK] button after confirming ErrorCode.

- **Scanner**

- 4) The result of interactive test is displayed.

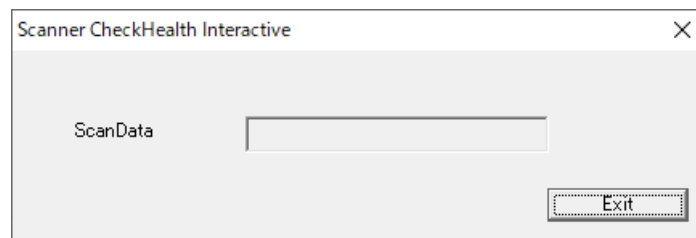

To exit the interactive test, click the [Exit] button.

3.2.5 Memory Settings of Printer (PrinterUtility)

In the configuration program, the settings of the memory switches connected to the printer can be confirmed and changed.

(1) When the port is selected in the configuration program

- 1) Click the [Printer Utility] button in the "Setting View".



- 2) SII Printer Setting Utility starts up.

(2) When the printer driver is selected in the configuration program

When selecting the printer driver, it is necessary to install the printer driver.

See "SII Software Package for Windows Installation Guide" for installation of the printer driver. Start up SII Printer Setting Utility following the procedures below after installing the printer driver.

- For Windows 11:
Select [All apps] - [SII Printer Software] - [Printer Setting Utility] from the Start menu, and then the SII Printer Setting Utility starts up.
- For Windows 10:
Select [SII Printer Software] - [Printer Setting Utility] from the Start menu, and then the SII Printer Setting Utility starts up.

Chapter 4 Properties, Methods, and Events

This chapter describes properties, methods, and events implemented in this software.

4.1 PosPrinter

4.1.1 Summary

(1) Common Properties

Property Name	Type	Access	Availability Condition	Default
CapCompareFirmwareVersion	bool	R	Open	<i>false</i>
CapPowerReporting	PowerReporting	R	Open	<i>Standard</i>
CapStatisticsReporting	bool	R	Open	<i>true</i>
CapUpdateFirmware	bool	R	Open	<i>false</i>
CapUpdateStatistics	bool	R	Open	<i>true</i>
CheckHealthText	string	R	Open	<i>""</i>
Claimed	bool	R	Open	<i>false</i>
DeviceDescription	string	R	Open	"SII RP-x10 POS Printer"
DeviceEnabled	bool	R/W	Open & Claim	<i>false</i>
DeviceName	string	R	Open	"RP-x10 POS Printer"
FreezeEvents	bool	R/W	Open & Claim	<i>false</i>
OutputId	int	R	Open	0
PowerNotify	PowerNotification	R/W	Open	<i>Disabled</i>
PowerState	PowerState	R	Open	<i>Unknown</i>
ServiceObjectDescription	string	R	Open	"SII RP-x10 POS Printer Service Object, Copyright(C) 20xx Seiko Instruments Inc."
ServiceObjectVersion	Version	R	Open	1.12.x.x
State	ControlState	R	-	<i>Idle</i>
SynchronizingObject	System.ComponentModel.ISynchronizeInvoke	R/W	Open	Depends on the application.

(2) Specific Properties

(When RecLineWidth=576, RecLineChars=48, RecLineSpacing=30, CharacterSet=999)

Property Name	Type	Access	Availability Condition	Default
AsyncMode	bool	R/W	Open	false
CapCharacterSet	CharacterSetCapability	R	Open	Kanji
CapCoverSensor	bool	R	Open	true
CapMapCharacterSet	bool	R	Open	false
CapRec2Color	bool	R	Open	false
CapRecBarCode	bool	R	Open	true
CapRecBitmap	bool	R	Open	true
CapRecBold	bool	R	Open	true
CapRecCartridgeSensor	PrinterCartridgeSensors	R	Open	None
CapRecColor	PrinterColors	R	Open	Primary
CapRecDHigh	bool	R	Open	true
CapRecDWide	bool	R	Open	true
CapRecDWideDHigh	bool	R	Open	true
CapRecEmptySensor	bool	R	Open	true
CapRecItalic	bool	R	Open	false
CapRecLeft90	bool	R	Open	true
CapRecMarkFeed	PrinterMarkFeeds	R	Open	None
CapRecNearEndSensor	bool	R	Open	false
				true ^{*1*2}
CapRecPageMode	bool	R	Open	true
CapRecPaperCut	bool	R	Open	true
CapRecPresent	bool	R	Open	true
CapRecRight90	bool	R	Open	true
CapRecRotate180	bool	R	Open	true
CapRecStamp	bool	R	Open	false
CapRecUnderline	bool	R	Open	true
CapTransaction	bool	R	Open	true
CartridgeNotify	PrinterCartridgeNotify	R/W ^{*4}	Open	Disabled
CharacterSet	int	R/W	Open, Claim, & Enable	999 ^{*2}
CharacterSetList	int[]	R	Open	{437, 737 ^{*3} , 850, 852, 855 ^{*3} , 857 ^{*3} , 858, 860, 863, 865, 866 ^{*3} , 932, 999, 1250, 1251, 1252, 1253, 1254}
CoverOpen	bool	R	Open, Claim, & Enable	Depends on printer status.
ErrorLevel	PrinterErrorLevel	R	Open	None
ErrorStation	PrinterStation	R	Open	None
ErrorString	string	R	Open	""

Property Name	Type	Access	Availability Condition	Default
FlagWhenIdle	bool	R/W	Open	<i>false</i>
FontTypefaceList	string[]	R	Open	[0]
MapCharacterSet	bool	R/W*2	Open	<i>false</i>
MapMode	MapMode	R/W	Open	<i>Dots</i>
PageModeArea	System.Drawing.Point	R	Open	{0, 0}
PageModeDescriptor	PageModeDescriptors	R	Open	<i>None</i>
PageModeHorizontalPosition	int	R/W	Open	0
PageModePrintArea	System.Drawing.Rectangle	R/W	Open	{0, 0, 0, 0}
PageModePrintDirection	PageModePrintDirection	R/W	Open	<i>None</i>
PageModeStation	PrinterStation	R/W	Open	<i>None</i>
PageModeVerticalPosition	int	R/W	Open	0
RecBarCodeRotationList	Rotation[]	R	Open	{ <i>Normal, Left90, Right90, Rotate180</i> }
RecBitmapRotationList	Rotation[]	R	Open	{ <i>Normal, Left90, Right90, Rotate180</i> }
RecCartridgeState	PrinterCartridgeStates	R	Open, Claim, & Enable	<i>Unknown</i>
RecCurrentCartridge	PrinterColors	R/W*4	Open, Claim, & Enable	<i>Primary</i>
RecEmpty	bool	R	Open, Claim, & Enable	Depends on printer status.
RecLetterQuality	bool	R/W*2	Open, Claim, & Enable	<i>false</i>
RecLineChars	int	R/W	Open, Claim, & Enable	48*2
RecLineCharsList	int[]	R	Open	{36,41,44,48,57,64,72}*5
RecLineHeight	int	R/W	Open, Claim, & Enable	24*5
RecLineSpacing	int	R/W	Open, Claim, & Enable	30*2
RecLinesToPaperCut	int	R	Open, Claim, & Enable	3*5
				4*1*5
RecLineWidth	int	R	Open, Claim, & Enable	576*2
RecNearEnd	bool	R	Open, Claim, & Enable	<i>false</i>
				Depends on printer status.*1
RecSidewaysMaxChars	int	R	Open, Claim, & Enable	200*5
RecSidewaysMaxLines	int	R	Open, Claim, & Enable	19*5
RotateSpecial	Rotation	R/W	Open	<i>Normal</i>

*1: For RP-E10.

*2: Can be modified by the configuration program.

*3: Not supported in RP-E10.

*4: Cannot be rewritten.

*5: Automatically modified by the configuration program.

The following specific properties are provided but the operation is not supported.

Property Name	Type	Access	Availability Condition	Default
CapConcurrentJrnRec	bool	R	Open	false
CapConcurrentJrnSlp	bool	R	Open	false
CapConcurrentPageMode	bool	R	Open	false
CapConcurrentRecSlp	bool	R	Open	false
CapJrn2Color	bool	R	Open	false
CapJrnBold	bool	R	Open	false
CapJrnCartridgeSensor	PrinterCartridgeSensors	R	Open	None
CapJrnColor	PrinterColors	R	Open	None
CapJrnDHigh	bool	R	Open	false
CapJrnDWide	bool	R	Open	false
CapJrnDWideDHigh	bool	R	Open	false
CapJrnEmptySensor	bool	R	Open	false
CapJrnItalic	bool	R	Open	false
CapJrnNearEndSensor	bool	R	Open	false
CapJrnPresent	bool	R	Open	false
CapJrnUnderline	bool	R	Open	false
CapSlp2Color	bool	R	Open	false
CapSlpBarCode	bool	R	Open	false
CapSlpBitmap	bool	R	Open	false
CapSlpBold	bool	R	Open	false
CapSlpBothSidesPrint	bool	R	Open	false
CapSlpCartridgeSensor	PrinterCartridgeSensors	R	Open	None
CapSlpColor	PrinterColors	R	Open	None
CapSlpDHigh	bool	R	Open	false
CapSlpDWide	bool	R	Open	false
CapSlpDWideDHigh	bool	R	Open	false
CapSlpEmptySensor	bool	R	Open	false
CapSlpFullSlip	bool	R	Open	false
CapSlpItalic	bool	R	Open	false
CapSlpLeft90	bool	R	Open	false
CapSlpNearEndSensor	bool	R	Open	false
CapSlpPageMode	bool	R	Open	false
CapSlpPresent	bool	R	Open	false
CapSlpRight90	bool	R	Open	false
CapSlpRotate180	bool	R	Open	false
CapSlpUnderline	bool	R	Open	false

Property Name	Type	Access	Availability Condition	Default
JrnCartridgeState	PrinterCartridgeStates	R	Open, Claim, & Enable	<i>Unknown</i>
JrnCurrentCartridge	PrinterColors	R/W	Open, Claim, & Enable	<i>None</i>
JrnEmpty	bool	R	Open, Claim, & Enable	<i>false</i>
JrnLetterQuality	bool	R/W	Open, Claim, & Enable	<i>false</i>
JrnLineChars	int	R/W	Open, Claim, & Enable	0
JrnLineCharsList	int[]	R	Open	[0]
JrnLineHeight	int	R/W	Open, Claim, & Enable	0
JrnLineSpacing	int	R/W	Open, Claim, & Enable	0
JrnLineWidth	int	R	Open, Claim, & Enable	0
JrnNearEnd	bool	R	Open, Claim, & Enable	<i>false</i>
SlpBarCodeRotationList	Rotation[]	R	Open	[0]
SlpBitmapRotationList	Rotation[]	R	Open	[0]
SlpCartridgeState	PrinterCartridgeStates	R	Open, Claim, & Enable	<i>Unknown</i>
SlpCurrentCartridge	PrinterColors	R/W	Open, Claim, & Enable	<i>None</i>
SlpEmpty	bool	R	Open, Claim, & Enable	<i>false</i>
SlpLetterQuality	bool	R/W	Open, Claim, & Enable	<i>false</i>
SlpLineChars	int	R/W	Open, Claim, & Enable	0
SlpLineCharsList	int[]	R	Open	[0]
SlpLineHeight	int	R/W	Open, Claim, & Enable	0
SlpLinesNearEndToEnd	int	R	Open, Claim, & Enable	0
SlpLineSpacing	int	R/W	Open, Claim, & Enable	0
SlpLineWidth	int	R	Open, Claim, & Enable	0
SlpMaxLines	int	R	Open, Claim, & Enable	0
SlpNearEnd	bool	R	Open, Claim, & Enable	<i>false</i>
SlpPrintSide	PrinterSide	R	Open, Claim, & Enable	<i>Unknown</i>

Property Name	Type	Access	Availability Condition	Default
SlpSidewaysMaxChars	int	R	Open, Claim, & Enable	0
SlpSidewaysMaxLines	int	R	Open, Claim, & Enable	0

(3) Common Methods

Method Name	Availability Condition
CheckHealth	Open, Claim, & Enable
Claim	Open
ClearOutput	Open & Claim
Close	Open
CompareFirmwareVersion	Open, Claim, & Enable
DirectIO	Open, Claim, & Enable
Open	-
Release	Open & Claim
ResetStatistic(string)	Open, Claim, & Enable
ResetStatistics()	Open, Claim, & Enable
ResetStatistics(StatisticCategories)	Open, Claim, & Enable
ResetStatistics(string[])	Open, Claim, & Enable
RetrieveStatistic(string)	Open, Claim, & Enable
RetrieveStatistics()	Open, Claim, & Enable
RetrieveStatistics(StatisticCategories)	Open, Claim, & Enable
RetrieveStatistics(string[])	Open, Claim, & Enable
UpdateFirmware	Open, Claim, & Enable
UpdateStatistic	Open, Claim, & Enable
UpdateStatistics(Statistic[])	Open, Claim, & Enable
UpdateStatistics(StatisticCategories, Object)	Open, Claim, & Enable

(4) Specific Methods

Method Name	Availability Condition
BeginInsertion	Open, Claim, & Enable
BeginRemoval	Open, Claim, & Enable
ChangePrintSide	Open, Claim, & Enable
ClearPrintArea	Open, Claim, & Enable
CutPaper	Open, Claim, & Enable
EndInsertion	Open, Claim, & Enable
EndRemoval	Open, Claim, & Enable
MarkFeed	Open, Claim, & Enable
PageModePrint	Open, Claim, & Enable
PrintBarCode	Open, Claim, & Enable

Method Name	Availability Condition
PrintBitmap	Open, Claim, & Enable
PrintImmediate	Open, Claim, & Enable
PrintMemoryBitmap	Open, Claim, & Enable
PrintNormal	Open, Claim, & Enable
PrintTwoNormal	Open, Claim, & Enable
RotatePrint	Open, Claim, & Enable
SetBitmap	Open, Claim, & Enable
SetLogo	Open, Claim, & Enable
TransactionPrint	Open, Claim, & Enable
ValidateData	Open, Claim, & Enable

(5) Events

Event Name	Availability Condition
DirectIOEvent	Open, Claim, & Enable ^{*1}
ErrorEvent	Open, Claim, & Enable
OutputCompleteEvent	Open, Claim, & Enable
StatusUpdateEvent	Open, Claim, & Enable

^{*1}: The availability condition differs from that of UPOS V 1.12.

4.1.2 Data Characters and Escape Sequences

(1) Escape Sequence operated when specified

Name	Data	Remarks
Paper cut	ESC [#]P	<ul style="list-style-type: none"> Cuts receipt. The placeholder '#' is replaced by an ASCII decimal string indicating the cut percentage. If a value greater than 100 is specified for '#', then a full cut is executed. If a value from 1 to 99 is specified, a partial cut is executed. If 0 is specified for '#', no cut is executed. If '#' is omitted, a full cut is executed. This is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Feed and Paper cut	ESC [#]fP	<ul style="list-style-type: none"> Cuts receipt after feeding the paper RecLinesToPaperCut lines. The placeholder '#' is defined by "Paper cut" escape sequence (ESC [#]P). This is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Feed, Paper cut, and Stamp	ESC [#]sP	Not supported.
Print bitmap	ESC #B	<ul style="list-style-type: none"> Prints the pre-stored bitmap. The placeholder '#' is replaced by the bitmap number. A value from 1 to 20 can be specified for '#'. If values other than 1 to 20 are specified for '#', they are ignored. If the character '#' is omitted, the data is regarded as print data instead of an escape sequence.
Print top logo	ESC tL	<ul style="list-style-type: none"> Prints the pre-stored top logo.
Print bottom logo	ESC bL	<ul style="list-style-type: none"> Prints the pre-stored bottom logo.
Fire stamp	ESC sL	Not supported.
Feed lines ^{*1}	ESC [#]IF	<ul style="list-style-type: none"> Feeds the paper forward by lines. The placeholder '#' is replaced by an ASCII decimal string indicating the number of lines to be fed. A value from 0 to 255 can be specified for '#'. If '#' exceeds this range, the maximum supported number of 255 lines are fed. If '#' is omitted, then one line is fed. This is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Feed units ^{*1}	ESC [#]uF	<ul style="list-style-type: none"> Feeds the paper forward by units in MapMode. If MapMode is set to <i>MapMode.Dots</i>, a value from 1 to 255 can be specified for '#'. The placeholder '#' is replaced by an ASCII decimal string indicating the number of units to be fed. If '#' is omitted, then one unit is fed. If '#' exceeds this range, the maximum supported number of 255 units is fed. This is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Feed reverse	ESC [#]rF	Not supported.

Name	Data	Remarks
Pass through embedded data	ESC #E	<ul style="list-style-type: none"> Sends the characters following "#E" through to the printer without modifying any of them. The placeholder '#' is replaced by an ASCII decimal string indicating the number of bytes following the escape sequence that should be passed through as-is to the printer. A value from 1 to 65535 can be specified for '#'. If '#' exceeds this range, transmission of embedded data is not executed. If the print data of the number of bytes specified by '#' is not set after the escape sequence is specified, only the transmittable print data is sent. (Example: If ESC 2Ea is specified, only "a" is sent since only one byte is set for the character string.) If '#' is omitted, the data is regarded as print data instead of an escape sequence. During rotated 90° right/left mode by RotatePrint, the width cannot be calculated exactly because data string specified by transmission of embedded data is not counted as character string. Therefore, make an appropriate adjustment by inserting blanks.
Print in-line barcode	ESC #R	<ul style="list-style-type: none"> Prints a barcode. The placeholder '#' is replaced by an ASCII decimal string indicating the number of characters of the string following R (definition of the barcode characteristics). If '#' is omitted, the data is regarded as print data instead of an escape sequence. If the number of characters specified by '#' does not match the number of bytes following R, all the data within the range specified by '#' is discarded. During rotated 90° right/left mode by RotatePrint, the width cannot be calculated exactly because data string specified by transmission of barcode printing is not counted as character string. Therefore, make an appropriate adjustment by inserting blanks.

*1: In RP-F10 and RP-G10, the line spacing is reduced according to the setting value of the printer function setting "Paper Saving Setting (Paper Saving)". Therefore, the following printing processes are changed.

- The amount of feed specified by the "Feed lines" escape sequence (ESC[|#|F) is smaller than the setting value of **RecLineSpacing**.
- The amount of feed specified by the "Feed units" escape sequence (ESC[|#|uF) is processed on the basis of the setting value of the printer function setting "Paper Saving Setting (Paper Saving)" (When Mode1 is selected, paper is not fed at all).

However, the line spacing from last print line to receipt cut position is not reduced because paper is cut after executing the paper feed for saved dot lines.

The cut operations in which the paper feed for saved dot lines is executed are "Paper cut" escape sequence (ESC[|#|P), "Feed and Paper cut" escape sequence (ESC[|#|fP), and **CutPaper**.

• In-Line Barcode Printing

The application can print barcodes along with other print data by using the "Print in-line barcode" escape sequence (ESC|#R). The placeholder '#' is replaced by the number of characters of the string (definition of the barcode characteristics) following R.

The string following R specifies the barcode characteristics using lowercase alphabet letters and numbers. The available numbers are the constant values defined for **PrintBarCode**.

The characters indicating the attributes are as follows:

- s: symbology (barcode type)
- h: height (barcode height)
- w: width (barcode width)
- a: alignment (position of barcode)

t: text position (position of HRI string)
d: start of data (start position of barcode data)
e: end of data (end position of barcode data)

Attributes must be written in the above order.

Every attribute is mandatory. If one of these two conditions is not obeyed or a value outside of the range is specified for the number following each attribute, it may cause unpredictable print results.

Below is an example of printing UPC-A under the condition of center, HRI string printed below the barcode, 200 dots height, and 400 dots width.

ESC|33Rs101h200w400a-2t-13d123456789012e

For the barcode quiet zone, see the description of **PrintBarCode**.

(2) Escape Sequence valid until changed

Name	Data	Remarks
Font typeface	ESC #FT	Not supported.

(3) Escape Sequence reset by end of print method or "Normal" escape sequence

Name	Data	Remarks
Bold	ESC [!]bC	<ul style="list-style-type: none"> Prints in bold. If '!' is specified, bold is disabled.
Underline	ESC [!][#]uC	<ul style="list-style-type: none"> Prints with underline. The placeholder '#' is replaced by an ASCII decimal string indicating the thickness of the underline in printer dot units. The available thickness is from 0 to 2. If '#' is 3 or larger, then a thickness of 2 is used for the underline. If '#' is omitted, then a thickness of 1 is used. If '!' is specified, underline is disabled.
Italic	ESC [!]iC	Not supported.
Alternate color (Custom)	ESC [#]rC	Not supported.
Red color	ESC rC	Not supported.
Reverse video	ESC [!]rvC	<ul style="list-style-type: none"> Prints in a reverse video format. If '!' is specified, reverse video is disabled.
Shading	ESC [#]sC	Not supported.
Single high and wide	ESC 1C	<ul style="list-style-type: none"> Prints normal size.
Double wide	ESC 2C	<ul style="list-style-type: none"> Prints double-wide characters.
Double high	ESC 3C	<ul style="list-style-type: none"> Prints double-high characters.
Double high and wide	ESC 4C	<ul style="list-style-type: none"> Prints double-high / double-wide characters.
Scale horizontally	ESC #hC	<ul style="list-style-type: none"> A supported value for the placeholder '#' is 1 to 8. If a value less than 1 is specified for '#', print in 1 scale. If a value greater than 8 is specified for '#', print in 8 scale. If '#' is omitted, the data is regarded as print data instead of an escape sequence.

Name	Data	Remarks
Scale vertically	ESC #vC	<ul style="list-style-type: none"> • A supported value for the placeholder '#' is 1 to 8. If a value less than 1 is specified for '#', print in 1 scale. If a value greater than 8 is specified for '#', print in 8 scale. If '#' is omitted, the data is regarded as print data instead of an escape sequence.
RGB Color	ESC [#]fC	Not supported.
Center	ESC cA	<ul style="list-style-type: none"> • Aligns the text after ESC cA in the center. This must be specified at the head of the line. If not, this is invalid. Also, if there is a linefeed on the print data, the center is valid after linefeed. • This specification is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Right justify	ESC rA	<ul style="list-style-type: none"> • Aligns the text after ESC rA to the right. This must be specified at the head of the line. If not, this is invalid. Also, if there is a linefeed on the print data, the right justify is valid after linefeed. • This specification is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Left justify	ESC lA	<ul style="list-style-type: none"> • Aligns the text after ESC lA to the left. This must be specified at the head of the line. If not, this is invalid. Also, if there is a linefeed on the print data, the left justify is valid after linefeed. • This specification is ignored during rotated 90° right/left mode by RotatePrint or during Page Mode by PageModePrint.
Normal	ESC N	<ul style="list-style-type: none"> • Restores printer characteristics to normal condition.
SubScript	ESC [!]tbC	Not supported.
SuperScript	ESC [!]tpC	Not supported.
Strike-through	ESC [!][#]stC	Not supported.

4.1.3 Common Properties

This section describes the details of the common properties for PosPrinter.
For details of the thrown exception errors, see "Appendix A Exceptions".

CapCompareFirmwareVersion Property

Type **bool**

Description Indicates whether the version of the firmware can be compared.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The function that compares firmware versions is not supported.

This property is initialized to *false* by **Open**.

CapPowerReporting Property

Type **PowerReporting**

Description Identifies the reporting capabilities of the device.
The following table shows the valid property values.

Value	Meaning
<i>PowerReporting.Standard</i>	The following 2 types of power states can be determined and reported. <ul style="list-style-type: none">• <i>PowerState.OffOffline</i> (power off or offline)• <i>PowerState.Online</i>

This property is initialized to *PowerReporting.Standard* by **Open**.

CapStatisticsReporting Property

Type **bool**

Description Indicates the statistics accumulation function of the device.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The device accumulates and can provide various statistics regarding usage. The information accumulated and reported is device specific, and is retrieved using RetrieveStatistic(s) .

This property is initialized to *true* by **Open**.

CapUpdateFirmware Property

Type **bool**

Description Indicates whether the device supports firmware updating.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	Firmware update is not supported.

This property is initialized to *false* by **Open**.

CapUpdateStatistics Property

Type **bool**

Description Indicates the function that some or all the device statistics can be reset.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The device statistics, or some of the statistics, can be reset to 0 using ResetStatistic(s) .

This property is initialized to *true* by **Open**.

CheckHealthText Property

Type **string**

Description Holds the results of the most recent call to **CheckHealth**.
The results of diagnosis are as follows.

Method Parameter	Method Result	CheckHealthText
<i>HealthCheckLevel.External</i>	Success	"External HCheck: Successful"
	Fail	"External HCheck: Failure"
<i>HealthCheckLevel.Interactive</i> ^{*1}	Success	"Interactive HCheck: Successful"
	Fail	"Interactive HCheck: Failure"
<i>HealthCheckLevel.Internal</i>	Success	"Internal HCheck: Successful"
	Fail	"Internal HCheck: Failure"

^{*1}: In the case of *HealthCheckLevel.Interactive*, if the dialog box is closed without testing after execution, "Interactive HCheck: Canceled" is set.

This property is initialized to empty string by **Open**.

Claimed Property

Type **bool**

Description Indicates whether the device is claimed for exclusive access.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The device is released for sharing with other applications.
<i>true</i>	The exclusive access to the device is obtained.

This property is initialized to *false* by **Open**.

DeviceDescription Property

Type **string**

Description Identifies the device and any pertinent information about it.
This property depends on **DeviceName**.
This property is initialized in either of the following values by **Open**.

DeviceName	Value
"RP-F10/G10 POS Printer"	"SII RP-F10/G10 POS Printer"
"RP-E10 POS Printer"	"SII RP-E10 POS Printer"

DeviceEnabled Property R/W

Type **bool**

Description Indicates whether the device has been placed in an operational state.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The device has been disabled. If changed to <i>false</i> , then the device is disabled.
<i>true</i>	The device has been placed in an operational state. If changed to <i>true</i> , then the device is brought to an operational state.

The application must set this property to *true* before using the device.

If **State** is other than *ControlState.Idle*, **DeviceEnabled** cannot be changed from *true* to *false*.

This property is initialized to *false* by **Open**.

DeviceName Property

Type **string**

Description Identifies the device and any pertinent information about it.
This property depends on the default setting.
This property is initialized in either of the following values by **Open**.

Printer	Value
RP-F10	"RP-F10/G10 POS Printer"
RP-G10	
RP-E10	"RP-E10 POS Printer"

FreezeEvents Property R/W

Type **bool**

Description Selects whether to notify events.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The application allows events to be delivered. If some events have been held while events were frozen and all other conditions are correct for delivering the events, changing FreezeEvents to <i>false</i> will allow these events to be delivered.
<i>true</i>	The application has requested that the Service Object not deliver events. Events will be enqueued by the Service Object but not delivered until the application changes FreezeEvents to <i>false</i> .

An application may choose to freeze events for a specific sequence of code where interruption by an event is not desirable.

If an error occurs while a print method such as **PrintNormal** is operated under **AsyncMode** is *true*, **ErrorEvent** is frozen and **State** turns to *ControlState.Busy*. In this case, discard the frozen event by **ClearOutput** or set **FreezeEvents** to *false* to cause **ErrorEvent**, and then execute **Close**, since the Service Object cannot be closed under this circumstance.

This property is initialized to *false* by **Open**.

OutputId Property

Type **int**

Description Holds the identifier of the most recently started asynchronous output (call to an asynchronous method when **AsyncMode** is set to *true*).

When a method successfully initiates an asynchronous output, the Service Object assigns an identifier to the request. When the output completes, the Control will fire an **OutputCompleteEvent** passing this output ID as a parameter.

OutputId is allocated automatically within the range of **int**.

This property is initialized to 0 by **Open**.

PowerNotify Property R/W

Type **PowerNotification**

Description Contains the type of power notification selection made by the application.
The following table shows the valid property values.

Value	Meaning
<i>PowerNotification.Disabled</i>	The Service Object will not provide any power notifications to the application. No power notification StatusUpdateEvents will be fired, and PowerState will not be set.
<i>PowerNotification.Enabled</i>	The Service Object will fire power notification StatusUpdateEvents and update PowerState beginning when DeviceEnabled is set to <i>true</i> . The level of functionality depends upon CapPowerReporting .

PowerNotify may only be set while the device is disabled; that is, while **DeviceEnabled** is *false*.

This property is initialized to *PowerNotification.Disabled* by **Open**.

PowerState Property

Type **PowerState**

Description Identifies the current power condition of the device.
The following table shows the valid property values.

Value	Meaning
<i>PowerState.OffOffline</i>	The device is powered off or offline.
<i>PowerState.Online</i>	The device is powered on and ready for use.
<i>PowerState.Unknown</i>	Cannot determine the device's power state, for one of the following reasons: • PowerNotify = <i>PowerNotification.Disabled</i> . • DeviceEnabled = <i>false</i>

This property is initialized to *PowerState.Unknown* by **Open**.

ServiceObjectDescription Property

Type **string**

Description A character string that identifies the Service Object is set to this property.
This property depends on **DeviceName**.
This property is initialized in either of the following values by **Open**.

DeviceName	Value
"RP-F10/G10 POS Printer"	"SII RP-F10/G10 POS Printer Service Object, Copyright (C) 20xx Seiko Instruments Inc."
"RP-E10 POS Printer"	"SII RP-E10 POS Printer Service Object, Copyright (C) 20xx Seiko Instruments Inc."

ServiceObjectVersion Property

Type **Version**

Description Holds the Service Object version number.
Version numbers consist of four integers; Major, Minor, Build, and Revision.
The Major and Minor version numbers correspond to the UPOS version that the Service Object implements.
When Build version is A, Revision version is B, this property is initialized to 1.12.A.B by **Open**.

State Property

Type **ControlState**

Description Contains the current state of the device.
The following table shows the valid property values.

Value	Meaning
<i>ControlState.Busy</i>	The device is in a normal state and is busy executing output.
<i>ControlState.Closed</i>	The device is closed.
<i>ControlState.Error</i>	An error has been reported, and the application must recover the Control to a normal state before normal I/O can resume. This state is only possible inside the ErrorEvent event handler.
<i>ControlState.Idle</i>	The device is in a good state and is not busy.

This property is always readable.

This property is initialized to *ControlState.Idle* by **Open**.

SynchronizingObject Property

Type	System.ComponentModel.ISynchronizeInvoke
Description	<p>Contains an instance of the ISynchronizeInvoke class. Applications can use this property to specify the thread events that are to be delivered on.</p> <p>If SynchronizingObject is set to null, events are delivered on an internal thread owned by the Service Object.</p> <p>Applications using Windows Forms should set SynchronizationObject to the <i>this</i> pointer of the main Form class so that events are delivered on the main application thread as required by the Form class.</p>

4.1.4 Specific Properties

This section describes the details of the specific properties for PosPrinter.
For exception errors of specific properties that are not supported, see "Appendix A Exceptions".

AsyncMode Property R/W

Type **bool**

Description Indicates whether certain print methods will be performed asynchronously.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	PrintNormal, CutPaper, PrintBarCode, PrintBitmap, PrintMemoryBitmap, RotatePrint, TransactionPrint, and PageModePrint print methods are executed synchronously.
<i>true</i>	The above methods are executed asynchronously.

This property is initialized to *false* by **Open**.

CapCharacterSet Property

Type **CharacterSetCapability**

Description Holds the printable character setting of the printer.
The following table shows the valid property values.

Value	Meaning
<i>CharacterSetCapability.Kanji</i>	The character setting supports Code Page932, including ASCII characters 0x20 through 0x7F and the one-byte katakana characters 0xA1 through 0xDF. It also includes the Shift-JIS code characters defined in JIS 1st and 2nd levels.

This property is initialized to *CharacterSetCapability.Kanji* by **Open**.

CapCoverSensor Property

Type **bool**

Description Indicates whether the printer has a "cover open" sensor for the receipt.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The printer has a "cover open" sensor.

This property is initialized to *true* by **Open**.

CapMapCharacterSet Property

Type **bool**

Description Indicates that the Service Object is able to map the characters of the application to a character set.

The following table shows the valid property values.

Value	Meaning
<i>false</i>	The Service Object cannot exactly map the characters to the character sets defined in CharacterSetList .

This property is initialized to *false* by **Open**.

CapRec2Color Property

Type **bool**

Description Indicates whether the receipt can print dark plus an alternate color.

The following table shows the valid property values.

Value	Meaning
<i>false</i>	Two color printing of the receipt is not supported.

This property is initialized to *false* by **Open**.

CapRecBarCode Property

Type **bool**

Description Indicates whether the receipt has barcode printing capability.

The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt has barcode printing capability.

This property is initialized to *true* by **Open**.

CapRecBitmap Property

Type **bool**

Description Indicates whether the receipt can print bitmaps.

The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt can print bitmaps.

This property is initialized to *true* by **Open**.

CapRecBold Property

Type **bool**

Description Indicates whether the receipt can print bold characters.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt can print bold characters.

This property is initialized to *true* by **Open**.

CapRecCartridgeSensor Property

Type **PrinterCartridgeSensors**

Description Indicates the presence of receipt cartridge monitoring sensors.
The following table shows the valid property values.

Value	Meaning
<i>PrinterCartridgeSensors.None</i>	Receipt cartridge monitoring sensors are not supported.

This property is initialized to *PrinterCartridgeSensors.None* by **Open**.

CapRecColor Property

Type **PrinterColors**

Description Indicates availability of receipt color cartridges.
The following table shows the valid property values.

Value	Meaning
<i>PrinterColors.Primary</i>	Receipt supports primary color (Black).

This property is initialized to *PrinterColors.Primary* by **Open**.

CapRecDHigh Property

Type **bool**

Description Indicates whether the receipt can print double high characters.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt can print double high characters.

This property is initialized to *true* by **Open**.

CapRecDWide Property

Type **bool**

Description Indicates whether the receipt can print double wide characters.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt can print double wide characters.

This property is initialized to *true* by **Open**.

CapRecDWideDHigh Property

Type **bool**

Description Indicates whether the receipt can print double high/double wide characters.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt can print double high / double wide characters.

This property is initialized to *true* by **Open**.

CapRecEmptySensor Property

Type **bool**

Description Indicates whether the receipt has an "out-of-paper" sensor.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt has an out-of-paper sensor.

This property is initialized to *true* by **Open**.

CapRecItalic Property

Type **bool**

Description Indicates whether the receipt can print italic characters.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The receipt cannot print Italic characters.

This property is initialized to *false* by **Open**.

CapRecLeft90 Property

Type **bool**

Description Indicates whether the receipt can print in a rotated 90° left mode.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt can print in a rotated 90° left mode.

This property is initialized to *true* by **Open**.

CapRecMarkFeed Property

Type **PrinterMarkFeeds**

Description Indicates the type of mark sensed paper handling available.
The following table shows the valid property values.

Value	Meaning
<i>PrinterMarkFeeds.None</i>	Control function for marked thermal paper is not supported.

This property is initialized to *PrinterMarkFeeds.None* by **Open**.

CapRecNearEndSensor Property

Type **bool**

Description Indicates whether the receipt has a low paper sensor.
The following table shows the valid property values.

Value	Meaning
<i>False</i>	The printer does not have a paper-near-end sensor.
<i>True</i>	The printer has a paper-near-end sensor.

This property depends on **DeviceName**.

When **DeviceName** is "RP-F10/G10 POS Printer":

This property is initialized to *false* by **Open**.

When **DeviceName** is "RP-E10 POS Printer":

If [NearEndSensor] is set to [Disable] by the configuration program, then this property is initialized to *false* by **Open**. In case of other settings, this property is initialized to *true*.

CapRecPageMode Property

Type **bool**

Description Indicates whether the printer can support Page Mode for the receipt station.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The printer can support Page Mode for the receipt station.

This property is initialized to *true* by **Open**.

CapRecPaperCut Property

Type **bool**

Description Indicates whether the receipt can perform paper cuts.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt can perform paper cuts.

This property is initialized to *true* by **Open**.

CapRecPresent Property

Type **bool**

Description Indicates whether the receipt print station is present.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt print station is present.

This property is initialized to *true* by **Open**.

CapRecRight90 Property

Type **bool**

Description Indicates whether the receipt can print in a rotated 90° right mode.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt can print in a rotated 90° right mode.

This property is initialized to *true* by **Open**.

CapRecRotate180 Property

Type **bool**

Description Indicates whether the receipt can print in a rotated upside down mode.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt can print in a rotated upside down mode.

This property is initialized to *true* by **Open**.

CapRecStamp Property

Type **bool**

Description Indicates whether the receipt has a stamp capability.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The receipt does not have a stamp capability.

This property is initialized to *false* by **Open**.

CapRecUnderline Property

Type **bool**

Description Indicates whether the receipt can print underlined characters.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The receipt can print underlined characters.

This property is initialized to *true* by **Open**.

CapTransaction Property

Type **bool**

Description Indicates whether receipt station supports printer transactions.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The printer transactions are supported by each station.

This property is initialized to *true* by **Open**.

CartridgeNotify Property R/W

Type **PrinterCartridgeNotify**

Description Contains the type of cartridge state notification selected by the application.
The following table shows the valid property values.

Value	Meaning
<i>PrinterCartridgeNotify.Disabled</i>	Cartridge state notification is not provided.

This property cannot be rewritten.

This property is initialized to *PrinterCartridgeNotify.Disabled* by **Open**.

CharacterSet Property R/W

Type **int**

Description Holds the character set for printing characters.
One of the following values is set to this property:

Value	Meaning
437	Selects Code Page437 character set.
737 ^{*1}	Selects Code Page737 character set.
850	Selects Code Page850 character set.
852	Selects Code Page852 character set.
855 ^{*1}	Selects Code Page855 character set.
857 ^{*1}	Selects Code Page857 character set.
858	Selects Code Page858 character set.
860	Selects Code Page860 character set.
863	Selects Code Page863 character set.
865	Selects Code Page865 character set.
866 ^{*1}	Selects Code Page866 character set.
932	Selects Katakana as Code Page932 character set (Shift-JIS Code).
999	Selects Windows ANSI character set. ^{*2}
1250	Selects Code Page1250 character set.
1251	Selects Code Page1251 character set.
1252	Selects Code Page1252 character set. ^{*2}
1253	Selects Code Page1253 character set.
1254	Selects Code Page1254 character set.

^{*1}: Not supported in RP-E10.

^{*2}: Windows ANSI character set is equal to Code Page1252 character set.

For this property, the default can be changed by setting of the configuration program.
This property is initialized to the value of character set which is set in [DefaultCharacterSet] of the configuration program by **Open**.

CharacterSetList Property

Type **int[]**

Description Holds the character set numbers.
This property is initialized to {437, 737*1, 850, 852, 855*1, 857*1, 858, 860, 863, 865, 866*1, 932, 999, 1250, 1251, 1252, 1253, 1254} by **Open**.

*1: Not supported in RP-E10.

CoverOpen Property

Type **bool**

Description Indicates whether the printer cover is open.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The printer cover is closed.
<i>true</i>	The printer cover is open.

This property is initialized while the device is enabled and keeps the current state.

ErrorLevel Property

Type **PrinterErrorLevel**

Description Holds the severity of the error condition.
The following table shows the valid property values.

Value	Meaning
<i>PrinterErrorLevel.Fatal</i>	A non-recoverable error has occurred.
<i>PrinterErrorLevel.None</i>	No error condition is present.
<i>PrinterErrorLevel.Recoverable</i>	A recoverable error has occurred.

This property is set by the Service Object just before the notification of **ErrorEvent**.

When the error is cleared, then the property is changed to *PrinterErrorLevel.None*.

This property is initialized to *PrinterErrorLevel.None* by **Open**.

ErrorStation Property

Type **PrinterStation**

Description Holds the station that was printing when an error was detected.
The following table shows the valid property values.

Value	Meaning
<i>PrinterStation.None</i>	The error was not detected.
<i>PrinterStation.Receipt</i>	The error is detected at the receipt station.

This property is set by the Service Object just before the notification of **ErrorEvent**.
When the error is cleared, then the property is changed to *PrinterStation.None*.
This property is initialized to *PrinterStation.None* by **Open**.

ErrorString Property

Type **string**

Description Holds a vendor-supplied description of the current error.
The following table shows the valid property values.

Setting Priority	ErrorCode	ErrorCodeExtended	String
1	<i>ErrorCode.NoHardware</i>		The power supply of the device is off.
2	<i>ErrorCode.Extended</i>	<i>ExtendedErrorFatal</i> (1010)	Unrecoverable error occurred.
3	<i>ErrorCode.Extended</i>	<i>ExtendedErrorVpPower</i> (1001)	Vp power error occurred.
4	<i>ErrorCode.Extended</i>	<i>ExtendedErrorCutterError</i> (1002)	Cutter error.
5	<i>ErrorCode.Extended</i>	<i>ExtendedErrorCoverOpen</i> (201)	The cover is open.
6	<i>ErrorCode.Extended</i>	<i>ExtendedErrorReceiptEmpty</i> (203)	Out of receipt form.
7	<i>ErrorCode.Extended</i>	<i>ExtendedErrorHeadTemp</i> (1005)	Head temperature error.
8	<i>ErrorCode.Failure</i>		Communication error occurred.
			Windows system error occurred.
			Time out.

The values in the above table are described in descending order of priority. When multiple errors occur simultaneously, the higher-priority value is set.
This property is set by the Service Object just before the notification of **ErrorEvent**.
When the error is cleared, this property is changed to an empty string.
This property is initialized to empty string by **Open**.

FlagWhenIdle Property R/W

Type **bool**

Description Indicates whether or not to notify that **StatusUpdateEvent**.
One of the following values is set to this property:

Value	Meaning
<i>false</i>	StatusUpdateEvent is not notified.
<i>true</i>	StatusUpdateEvent will be sent when State is <i>ControlState.Idle</i> .

FlagWhenIdle is automatically reset to *false* when **StatusUpdateEvent** is notified after **FlagWhenIdle** is set to *true*.

By using **FlagWhenIdle** and **StatusUpdateEvent**, the application can know when all outstanding asynchronous outputs have been processed. The event will be notified if the outputs were completed successfully or if they were cleared by **ClearOutput** or the event handler that receives **ErrorEvent**.

If **State** is already set to *ControlState.Idle* when **FlagWhenIdle** is set to *true*, then a **StatusUpdateEvent** is notified immediately. The application can therefore depend on the event with no race condition between the starting of its last asynchronous output and the setting of this flag.

This property is initialized to *false* by **Open**.

FontTypefaceList Property

Type	string[]
Description	Holds the fonts and/or typefaces that are supported by the printer. An empty array indicates that only the default font is supported. This property is initialized to an empty string array by Open .

MapCharacterSet Property R/W

Type	bool
Description	Indicates whether character mapping is supported or not. The following table shows the valid property values.

Value	Meaning
<i>false</i>	No mapping is supported.

This property cannot be rewritten.

This property is initialized to *false* by **Open**.

MapMode Property R/W

Type	MapMode
Description	Holds the mapping mode of the printer. The mapping mode defines the unit of measure used for other properties, such as line heights and line spacings.

The following mapping modes are supported.

The values in the brackets indicate the value converted into dot.

Parameter	Meaning
<i>MapMode.Dots</i>	Printer's dot width 0.125 mm (1 dot)
<i>MapMode.English</i>	0.001 inch (0.203 dots)
<i>MapMode.Metric</i>	0.01 mm (0.08 dots)

Parameter	Meaning
<i>MapMode.Twips</i>	1/1440 of an inch (0.1411 dots)

For each mapping mode, the unit is converted using one of the following calculation formula.

Parameter	Conversion
<i>MapMode.Dots</i>	No conversion
<i>MapMode.English</i>	$k = 1/1000$ ■ <i>MapMode.Dots</i> to <i>MapMode.English</i> conversion $\text{english} = \text{dot} / (\text{dpi} \times k)$ ■ <i>MapMode.English</i> to <i>MapMode.Dots</i> conversion $\text{dot} = \text{english} \times \text{dpi} \times k$
<i>MapMode.Metric</i>	$k = 1/100, \text{mmpi} = 25.4$ ■ <i>MapMode.Dots</i> to <i>MapMode.Metric</i> conversion $\text{metric} = (\text{mmpi} \times \text{dot}) / (\text{dpi} \times k)$ ■ <i>MapMode.Metric</i> to <i>MapMode.Dots</i> conversion $\text{dot} = (\text{metric} \times \text{dpi} \times k) / \text{mmpi}$
<i>MapMode.Twips</i>	$k = 1/1440$ ■ <i>MapMode.Dots</i> to <i>MapMode.Twips</i> conversion $\text{twips} = \text{dot} / (\text{dpi} \times k)$ ■ <i>MapMode.Twips</i> to <i>MapMode.Dots</i> conversion $\text{dot} = \text{twips} \times \text{dpi} \times k$

MapMode only changes the unit of each property for display, and all internal processings are executed in dot regardless of **MapMode**.

Therefore, the rounding errors of values do not accumulate.

When converting a dot value to a map mode value, the value is rounded up to an integer.

When converting from a map mode value to a dot value, the decimal part is truncated.

Setting **MapMode** may also change **RecLineSpacing**, **RecLineWidth**, **RecLineHeight**, **PageModeArea**, **PageModePrintArea**, **PageModeHorizontalPosition**, and **PageModeVerticalPosition**.

This property is initialized to *MapMode.Dots* when the device is first enabled following **Open**.

PageModeArea Property

Type **System.Drawing.Point**

Description Holds the page area for the selected **PageModeStation** expressed in the unit of measure given by **MapMode**.
 Specify *PrinterStation.Receipt* for **PageModeStation** before accessing this property.
 When *PrinterStation.Receipt* is specified for **PageModeStation**, the following values are set to this property.

RecLineWidth	Value When MapMode = <i>MapMode.Dots</i>
360	<i>Point.X</i> = 360, <i>Point.Y</i> = 2400
432	<i>Point.X</i> = 432, <i>Point.Y</i> = 2400

RecLineWidth	Value When MapMode = <i>MapMode.Dots</i>
512	<i>Point.X</i> = 512, <i>Point.Y</i> = 2400
576	<i>Point.X</i> = 576, <i>Point.Y</i> = 2400

This property is initialized to {*Point.X* = 0, *Point.Y* = 0} by **Open**.

PageModeDescriptor Property

Type **PageModeDescriptors**

Description The Page Mode functionality available on the station specified for **PageModeStation** is indicated by OR of the following values.

Specify *PrinterStation.Receipt* for **PageModeStation** before accessing this property.
When *PrinterStation.Receipt* is specified for **PageModeStation**, OR of *PageModeDescriptors.Bitmap*, *PageModeDescriptors.BitmapRotate*, *PageModeDescriptors.Barcode*, and *PageModeDescriptors.BarcodeRotate* is set to this property.

Value	Meaning
<i>PageModeDescriptors.Barcode</i>	Printing of barcodes on the PageModeStation is supported
<i>PageModeDescriptors.BarcodeRotate</i>	Rotation of barcodes on the PageModeStation is supported
<i>PageModeDescriptors.Bitmap</i>	Printing of bitmaps on the PageModeStation is supported
<i>PageModeDescriptors.BitmapRotate</i>	Rotation of bitmaps on the PageModeStation is supported

This property is initialized to *PageModeDescriptors.None* by **Open**.

PageModeHorizontalPosition Property R/W

Type **int**

Description Holds the horizontal start position offset within the print area for the selected **PageModeStation**.

This property is expressed in the unit specified for **MapMode**.

The horizontal direction is the same as the actual **PageModePrintDirection**.

A read/get on this property will return the horizontal position offset set by the last write/set and not the current position.


Specify *PrinterStation.Receipt* for **PageModeStation** before accessing this property.

Otherwise 0 is returned until *PrinterStation.Receipt* is specified.

The following code sample shows the usage of **PageModeHorizontalPosition**.

```
myptr.MapMode=MapMode.English;
myptr.PageModeStation=PrinterStation.Receipt;
myptr.PageModePrint(PageModePrintControl.PageMode);
// Set print area to 2 inches by 0.5 inches
myptr.PageModePrintArea=new System.Drawing.Point(0,0,2000,500);
myptr.PageModePrintDirection=PageModePrintDirection.LeftToRight;
myptr.PageModeHorizontalPosition=1500;
myptr.PrintNormal(PrinterStation.Receipt,"123456789012345678901234567890\n");
myptr.PageModePrint(PageModePrintControl.Normal);
```

The code sample above will generate the following receipt.

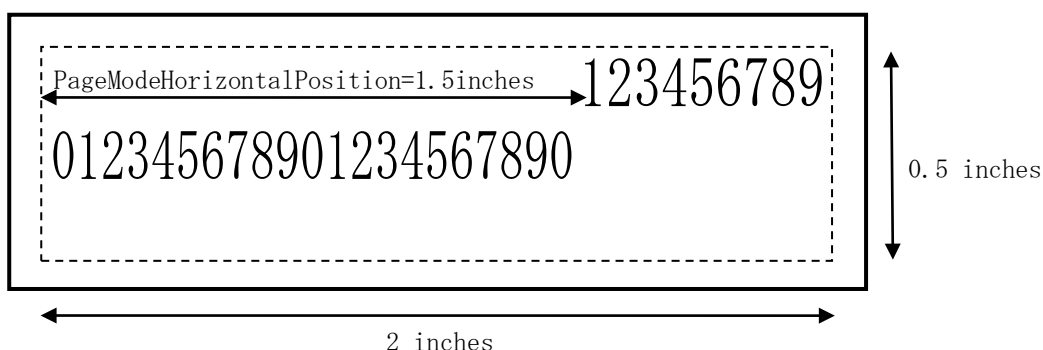

This property is initialized to 0 by **Open**.

PageModePrintArea Property R/W

Type **System.Drawing.Rectangle**

Description Holds the Page Mode print area for the selected **PageModeStation** expressed in the unit specified for **MapMode**.


The maximum possible print area of **PageModePrintArea** is the page area of **PageModeArea**.

Specify *PrinterStation.Receipt* for **PageModeStation** before accessing this property. Otherwise *Rectangle.Empty* is returned until *PrinterStation.Receipt* is specified.

The following code sample shows the usage of **PageModePrintArea**.

```
myptr.MapMode=MapMode.English;
myptr.PageModeStation=PrinterStation.Receipt;
myptr.PageModePrint(PageModePrintControl.PageMode);
// Set print area to half inch square block
myptr.PageModePrintArea=new System.Drawing.Point(0,0,500,500);
myptr.PageModePrintDirection=PageModePrintDirection.LeftToRight;
myptr.PrintNormal(PrinterStation.Receipt,"123456789012345678901234\n");
myptr.PageModePrint(PageModePrintControl.Normal);
```

The code sample above will generate the following receipt.

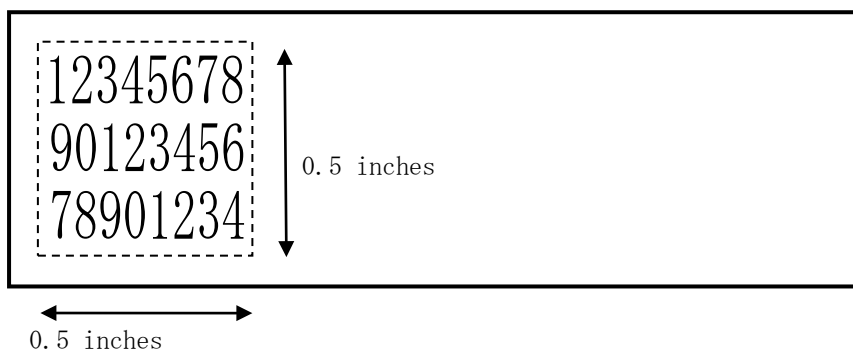

This property is initialized to {*Rectangle.x* = 0, *Rectangle.y* = 0, *Rectangle.width* = 0, *Rectangle.height* = 0} by **Open**.

PageModePrintDirection Property R/W

Type **PageModePrintDirection**

Description Holds the print direction.
Specify *PrinterStation.Receipt* for **PageModeStation** before accessing this property.
Otherwise *PageModePrintDirection.None* is returned until *PrinterStation.Receipt* is specified.
The following table shows the valid property values.


Value	Meaning
<i>PageModePrintDirection.BottomToTop</i>	Prints from bottom to top, starting at the bottom left corner of the Page Mode print area. Rotated left 90° printing.
<i>PageModePrintDirection.LeftToRight</i>	Prints from left to right, starting at the top left corner of the Page Mode print area. Normal direction printing.
<i>PageModePrintDirection.None</i>	The print direction is not specified.
<i>PageModePrintDirection.RightToLeft</i>	Prints from right to left, starting at the bottom right corner of the Page Mode print area. Upside down printing.
<i>PageModePrintDirection.TopToBottom</i>	Prints from top to bottom, starting at the top right corner of the Page Mode print area. Rotated right 90° printing.

Changing this property may also change the correction direction of the print start point indicated by **PageModeHorizontalPosition** and **PageModeVerticalPosition**. Changing this property is only effective for the current print area. By changing the print areas, it is possible to generate a receipt with text printed in multiple rotations.

For example:

```
myptr.MapMode=MapMode.English;  
myptr.PageModeStation=PrinterStation.Receipt;  
myptr.PageModePrint(PageModePrintControl.PageMode);  
// Set print area to half inch square block  
myptr.PageModePrintArea=new System.Drawing.Point(0,0,500,500);  
myptr.PageModePrintDirection=PageModePrintDirection.LeftToRight;  
myptr.PrintNormal(PrinterStation.Receipt,"123456789012345678901234\n");  
myptr.PageModePrintArea=new System.Drawing.Point(500,0,500,500);  
myptr.PageModePrintDirection=PageModePrintDirection.BottomToTop;  
myptr.PrintNormal(PrinterStation.Receipt,"123456789012345678901234\n");  
myptr.PageModePrintArea=new System.Drawing.Point(1000,0,500,500);  
myptr.PageModePrintDirection=PageModePrintDirection.RightToLeft;  
myptr.PrintNormal(PrinterStation.Receipt,"123456789012345678901234\n");  
myptr.PageModePrintArea=new System.Drawing.Point(1500,0,500,500);  
myptr.PageModePrintDirection=PageModePrintDirection.TopToBottom;  
myptr.PrintNormal(PrinterStation.Receipt,"123456789012345678901234\n");  
myptr.PageModePrint(PageModePrintControl.Normal);
```


The code sample above will generate the following receipt.

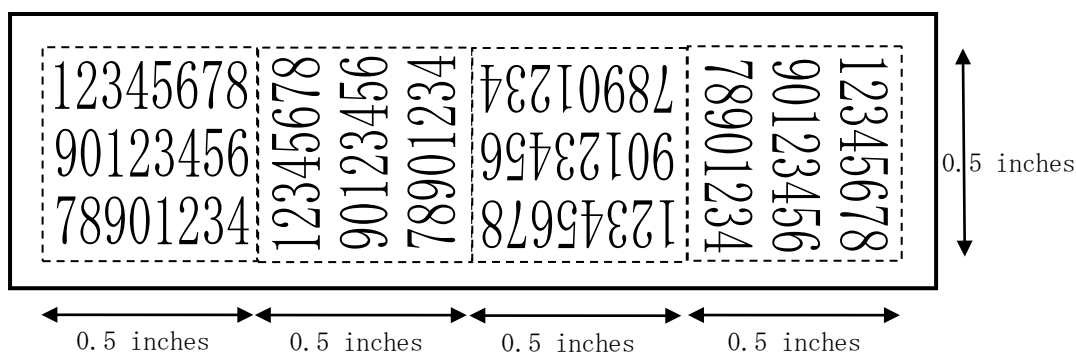

It is also possible to generate rotated text.

```
myptr.MapMode=MapMode.English;  
myptr.PageModeStation=PrinterStation.Receipt;  
myptr.PageModePrint(PageModePrintControl.PageMode);  
myptr.PageModeVerticalPosition=100;  
myptr.PageModeHorizontalPosition=200;  
myptr.PageModePrintArea=new System.Drawing.Point(0,0,1000,500);  
myptr.PageModePrintDirection=PageModePrintDirection.LeftToRight;  
myptr.PrintNormal(PrinterStation.Receipt,"Normal print.\n");  
myptr.PageModePrintArea=new System.Drawing.Point(1000,0,1000,500);  
myptr.PageModePrintDirection=PageModePrintDirection.TopToBottom;  
  
myptr.PrintNormal(PrinterStation.Receipt,"Rotated right 90 print.\n");  
myptr.PageModePrint(PageModePrintControl.Normal);
```

The code sample above will generate the following receipt.

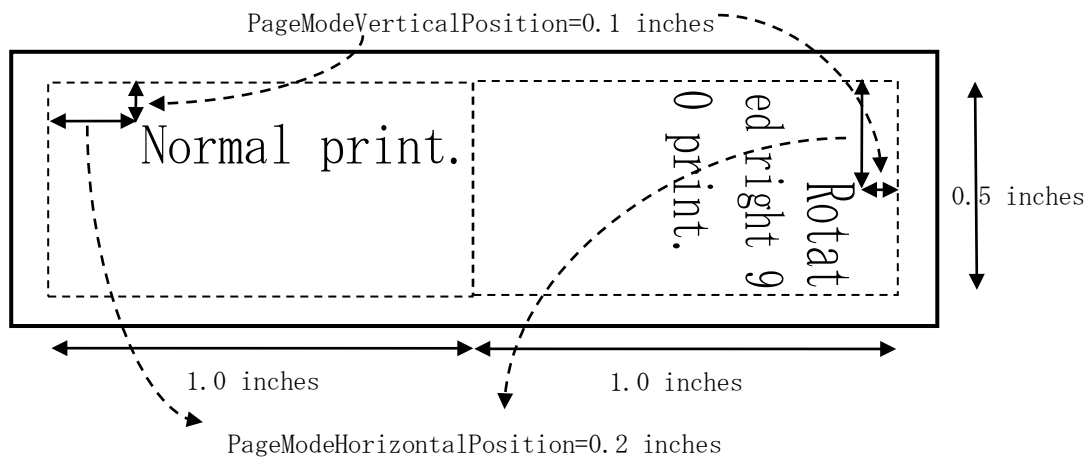

This property is initialized to *PageModePrintDirection.None* by **Open**.

And this property is set to *PageModePrintDirection.LeftToRight* when a valid station is specified.

PageModeStation Property R/W

Type **PrinterStation**

Description Sets the printer station for subsequent Page Mode properties.
Be sure to specify *PrinterStation.Receipt* for this property before accessing the property or method of the Page Mode function.

This property is initialized to *PrinterStation.None* by **Open**.

PageModeVerticalPosition Property R/W


Type **int**

Description Holds the vertical start position offset within the print area for the print station specified by **PageModeStation**.
This property is expressed in the unit of specified for **MapMode**.
The vertical direction is perpendicular to the direction specified in the actual **PageModePrintDirection**. A read/get on this property will return the vertical position offset set by the last write/set and not the current position.
Specify *PrinterStation.Receipt* for **PageModeStation** before accessing this property.
Otherwise 0 is returned until *PrinterStation.Receipt* is specified.

The following code sample shows the usage of **PageModeVerticalPosition**.

```
myptr.MapMode=MapMode.English;
myptr.PageModeStation=PrinterStation.Receipt;
myptr.PageModePrint(PageModePrintControl.PageMode);
// Set print area to 2 inches by 0.5 inches
myptr.PageModePrintArea=new System.Drawing.Point(0,0,2000,500);
myptr.PageModePrintDirection=PageModePrintDirection.LeftToRight;
myptr.PageModeVerticalPosition=250;
myptr.PrintNormal(PrinterStation.Receipt,"123456789012345678901234567890\n");
myptr.PageModePrint(PageModePrintControl.Normal);
```

The code sample above will generate the following receipt.

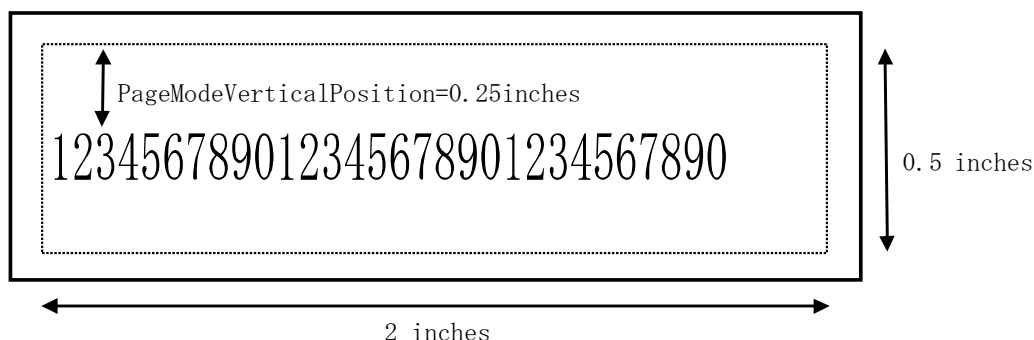

This property is initialized to 0 by **Open**.

RecBarCodeRotationList Property

Type **Rotation[]**

Description Holds the directions in which a receipt barcode may be rotated.
The following table shows the valid property values.

Value	Meaning
<i>Rotation.Left90</i>	Barcode may be printed in a rotated 90° to the left.
<i>Rotation.Normal</i>	Barcode may be printed in the normal orientation.
<i>Rotation.Right90</i>	Barcode may be printed in a rotated 90° to the right.
<i>Rotation.Rotate180</i>	Barcode may be rotated 180°- upside down.

This property is initialized to {*Rotation.Normal*, *Rotation.Right90*, *Rotation.Left90*, *Rotation.Rotate180*} by **Open**.

RecBitmapRotationList Property

Type **Rotation[]**

Description Holds the directions in which a receipt bitmap may be rotated.
The following table shows the valid property values.

Value	Meaning
<i>Rotation.Left90</i>	Bitmap may be printed in a rotated 90° to the left.
<i>Rotation.Normal</i>	Bitmap may be printed in the normal orientation.
<i>Rotation.Right90</i>	Bitmap may be printed in a rotated 90° to the right.
<i>Rotation.Rotate180</i>	Bitmap may be rotated 180°- upside down.

This property is initialized to {*Rotation.Normal*, *Rotation.Right90*, *Rotation.Left90*, *Rotation.Rotate180*} by **Open**.

RecCartridgeState Property

Type **PrinterCartridgeStates**

Description Contains the status of the currently selected receipt cartridge.
The following table shows the valid property values.

Value	Meaning
<i>PrinterCartridgeStates.Unknown</i>	Device does not support cartridge state reporting.

This property is initialized to *PrinterCartridgeStates.Unknown* when the device is first enabled following the **Open** call.

RecCurrentCartridge Property R/W

Type **PrinterColors**

Description Specifies the currently selected receipt cartridge.
The following table shows the valid property values.

Value	Meaning
<i>PrinterColors.Primary</i>	Supports primary color.

This property cannot be rewritten. This property is initialized to *PrinterColors.Primary* when the device is first enabled following the **Open** call.

RecEmpty Property

Type **bool**

Description Indicates whether the receipt is out of paper.
The following table shows the valid property values.

Value	Meaning
<i>False</i>	The receipt paper is present.
<i>True</i>	The receipt is out of paper.

This property is initialized while the device is enabled and keeps the current state.
When **CoverOpen** is *true*, **RecEmpty** is not updated.

RecLetterQuality Property R/W

Type **bool**

Description Indicates whether the printer prints in high-quality mode.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	Prints in high speed mode.
<i>true</i>	Prints in high quality mode.

If [PrintSpeed] in the configuration program is [RecLetterQuality Valid], this property is enabled and determines the print speed of the printer according to print mode. For print speed settings in the configuration program other than that, see "Technical Reference".

This property is initialized to *false* when the device is enabled.

RecLineChars Property R/W

Type **int**

Description Holds the number of characters that may be printed on a receipt line.
This property is set to one of the values which **RecLineCharsList** has.
Depending on the specified number of characters, the printer prints in the following print font.

When **RecLineWidth** is 360:

Value	RecLineChars	Print Font (H × W)	Character Space	RecLineHeight
1 to 30	30	24 dots × 12 dots	0 dots	24
31 to 40	40	16 dots × 8 dots	1 dot	16

When **RecLineWidth** is 432:

Value	RecLineChars	Print Font (H × W)	Character Space	RecLineHeight
1 to 27	27	24 dots × 12 dots	4 dots	24
28 to 30	30	24 dots × 12 dots	2 dots	24
31 to 33	33	24 dots × 12 dots	1 dot	24
34 to 36	36	24 dots × 12 dots	0 dots	24
37 to 43	43	16 dots × 8 dots	2 dots	16
44 to 48	48	16 dots × 8 dots	1 dot	16
49 to 54	54	16 dots × 8 dots	0 dots	16

When **RecLineWidth** is 512:

Value	RecLineChars	Print Font (H × W)	Character Space	RecLineHeight
1 to 42	42	24 dots × 12 dots	0 dots	24
43 to 56	56	16 dots × 8 dots	1 dot	16

When **RecLineWidth** is 576:

Value	RecLineChars	Print Font (H × W)	Character Space	RecLineHeight
1 to 36	36	24 dots × 12 dots	4 dots	24
37 to 41	41	24 dots × 12 dots	2 dots	24
42 to 44	44	24 dots × 12 dots	1 dot	24
45 to 48	48	24 dots × 12 dots	0 dots	24
49 to 57	57	16 dots × 8 dots	2 dots	16
58 to 64	64	16 dots × 8 dots	1 dot	16
65 to 72	72	16 dots × 8 dots	0 dots	16

If the setting value is not supported, then an error is returned.

For example, if 41 is set when **RecLineWidth** is 360, then an error is returned.

Setting **RecLineChars** may also update **RecLineHeight**, **RecLineSpacing**, **RecSidewaysMaxChars**, and **RecSidewaysMaxLines**.

For this property, the default can be changed by setting of the configuration program. This property is initialized to the value set in [Number of Characters per Line] of the configuration program when the device is enabled.

RecLineCharsList Property

Type **int[]**

Description Gets a collection of the line widths (characters per line) supported by the receipt station.

RecLineWidth	Value
360	30,40
432	27,30,33,36,43,48,54
512	42,56
576	36,41,44,48,57,64,72

This property is initialized to one of the values shown above by **Open**, depending on the value set in [Number of Effective Dots(dots)] of the configuration program.

RecLineHeight Property R/W

Type **int**

Description Holds the receipt print line height.

This property is expressed in the unit specified for **MapMode**.

This property cannot be rewritten. The value is automatically set by **RecLineChars**.

The values in the following table are at the time of **MapMode** is *MapMode.Dots*.

RecLineWidth	RecLineChars	Value
360	30	24
	40	16
432	27	24
	30	
	33	
	36	
	43	16
	48	
	54	
512	42	24
	56	16
576	36	24
	41	
	44	
	48	
	57	16
	64	
	72	

This property is initialized to one of the values shown above depending on the values set in [Number of Effective Dots(dots)] and [Number of Characters per Line] of the configuration program, when the device is enabled.

RecLineSpacing Property R/W

Type **int**

Description Holds the spacing of each single-high print line. This includes both the printed line height and the whitespace between each pair of lines.

This property is expressed in the unit specified for **MapMode**. The values in the following table are at the time of **MapMode** is *MapMode.Dots*.

The configurable range differs depending on the setting of **RecLineWidth** and **RecLineChars**. The following table shows the valid configurable ranges. When a value out of the range is specified, *ErrorCode.Illegal* is thrown and the property is not set.

RecLineWidth	RecLineChars	Value
360	30	24 to 255
	40	16 to 255
432	27	24 to 255
	30	
	33	
	36	
	43	16 to 255
	48	
	54	
512	42	24 to 255
	56	16 to 255
576	36	24 to 255
	41	
	44	
	48	
	57	16 to 255
	64	
	72	

In RP-F10 and RP-G10, when the printer function setting "Paper Saving Setting (Paper Saving)" is enabled, the line spacing and the space between lines are printed with the specified value in the printer function setting "Paper Saving Setting (Paper Saving)". (The value specified in **RecLineSpacing** is ignored.)

For details about "Paper Saving Setting (Paper Saving)", see "Technical Reference".

For this property, the default can be changed by setting of the configuration program. This property is initialized to the value of line spacing set in [Line Spacing(dots)] of the configuration program, when the device is enabled.

RecLinesToPaperCut Property

Type **int**

Description Holds the number of lines that must be advanced before cutting the receipt paper. The value obtained by dividing the distance between the print head and the cutter of the printer by line spacing indicated by **RecLineSpacing** is set. Therefore, this property changes when **RecLineSpacing** is changed.

[Calculation formula]

RecLinesToPaperCut = 76 / **RecLineSpacing**

Example:

When **RecLineSpacing** is 30 (**MapMode**=*MapMode.Dots*)

RecLinesToPaperCut = 76 / 30 = 2.53... = 3

(The decimal part is rounded up.)

This property is initialized to the value based on the above calculation using [Line Spacing(dots)] of the configuration program by **Open**.

RecLineWidth Property

Type **int**

Description Holds the width of a line of **RecLineChars**. This property is expressed in the unit specified for **MapMode**. The values in the following table are at the time of **MapMode** is *MapMode.Dots*.

Value
360
432
512
576

The default can be changed by setting of the configuration program.

This property is initialized to one of the values shown above depending on the value set in [Number of Effective Dots(dots)] of the configuration program, when the device is enabled.

RecNearEnd Property

Type **bool**

Description Indicates whether the receipt has a low paper sensor. The following table shows the valid property values.

Value	Meaning
<i>False</i>	The receipt paper is not low.

Value	Meaning
<i>True</i>	The receipt paper is low.

This property is initialized while the device is enabled and keeps the current state.

When **CapRecNearEndSensor** is *false*, the value of this property is always *false*. When

CapRecNearEndSensor is *true* and **RecEmpty** is *true*, **RecNearEnd** always indicates *true*.

RecSidewaysMaxChars Property

Type **int**

Description Holds the maximum number of one-byte characters that may be printed on each line in sideways mode (rotated 90° to the left or right).

[Calculation formula]

RecSidewaysMaxChars

= Maximum height of **PageModeArea** / (Print font width / 2 + Character space)

Example:

When **PageModeArea** is "576,2400", and **RecLineChars** is 48

RecSidewaysMaxChars = 2400 / ((24 / 2) + 0) = 200

(The decimal part is rounded down.)

This property is initialized to the value based on the above calculation depending on

PageModeArea and the print font, when the device is first enabled following **Open**.

RecSidewaysMaxLines Property

Type **int**

Description Holds the maximum number of lines that may be printed in sideways mode (rotated 90° to the left or right).

[Calculation formula]

RecSidewaysMaxLines

= (RecLineWidth - RecLineHeight) / RecLineSpacing + 1

Example:

When **RecLineWidth** is 576, **RecLineHeight** is 24, and **RecLineSpacing** is 30

RecSidewaysMaxLines = (576 - 24) / 30 + 1 = 19

(The decimal part is rounded down.)

This property is initialized to the value based on the above calculation depending on

RecLineWidth, **RecLineSpacing**, and **RecLineHeight**, when the device is first enabled following **Open**.

RotateSpecial Property R/W

Type **Rotation**

Description Holds the rotation orientation for barcodes.
The following table shows the valid property values.
If *rotation* contains *PrintRotation.Barcode* in **RotatePrint**, the rotating direction of the *rotation* is selected.

Value	Meaning
<i>Rotation.Left90</i>	Rotates printing 90° to the left (counter-clockwise).
<i>Rotation.Normal</i>	Prints subsequent barcodes in normal orientation.
<i>Rotation.Right90</i>	Rotates printing 90° to the right (clockwise).
<i>Rotation.Rotate180</i>	Rotates printing 180°, that is, prints upside-down.

This property is initialized to *Rotation.Normal* by **Open**.

4.1.5 Common Methods

This section describes the details of the common methods for PosPrinter.
For details of the thrown exception errors, see "Appendix A Exceptions".

CheckHealth Method

Syntax `string CheckHealth(HealthCheckLevel level);`

Parameter	Meaning
<i>level</i>	Specifies the type of health check to be executed on the device.

· Values of *level*

Value	Meaning
<i>HealthCheckLevel.External</i>	Executes a complete test using the device. ROM version ID of the printer, ServiceObjectVersion , and DeviceName are printed on the printer.
<i>HealthCheckLevel.Interactive</i>	Executes an interactive test of the device. Displays a modal dialog box to execute a complete test using the device and display results.
<i>HealthCheckLevel.Internal</i>	Execute a health check without using the device physically.

Description Tests the status of the device.
A text description of the results of this method is placed in **CheckHealthText**.
CheckHealth is always executed synchronously.

Claim Method

Syntax `void Claim(int timeout);`

Parameter	Meaning
<i>timeout</i>	Specifies the maximum waiting time (in milliseconds) for exclusive access. If it is 0, the method returns the result immediately even if exclusive access of the device cannot be obtained. If <i>WaitForever</i> (-1) is set, the method waits until exclusive access is obtained.

Description Requests exclusive access to the device.
The PosPrinter device cannot be used until the exclusive access is obtained.
When it is successful, **Claimed** is set to *true*.
When the power is OFF or the cable is not connected, **Claim** is not available.

ClearOutput Method

Syntax **void ClearOutput();**

Description Clears all device output that has been buffered.
Any output error events that are enqueued (usually waiting for **FreezeEvents** to be set to *false*) are also cleared.

When the Bluetooth model is used, it takes about 10 seconds before device is ready for use after **ClearOutput**.

Close Method

Syntax **void Close();**

Description Releases the device and its resources.
If **DeviceEnabled** is *true*, the device is first disabled.
If **Claimed** is *true*, exclusive access to the device is first released.
Do not execute this method while the event is in progress (or in the event handler).

CompareFirmwareVersion Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **CompareFirmwareResult CompareFirmwareVersion(string firmwareFileName);**

DirectIO Method

Syntax **DirectIOData DirectIO(int *command*, int *data*, object *obj*);**

Parameter	Meaning
<i>command</i>	Command number. Specific values assigned by the Service Object.
<i>data</i>	Additional numeric data. Specific values vary by <i>command</i> and Service Object.
<i>obj</i>	Additional data provided by the Service Object. Specific values vary by <i>command</i> and what the Service Object sends.

Description The following functions are supported:
· Remaining memory capacity response
· International character selection
· Status response
DirectIO is always executed synchronously.

- **Remaining memory capacity response**

In RP-F10 and RP-G10, this method issues the printer command "Send NV Graphics Memory Remaining Capacity", and returns its response as a numeric value.

In RP-E10, this method issues the printer command "Remaining User Area Response", and returns its response as a numeric value.

The response data is placed in *DirectIOData.data*.

Parameter	Description
<i>command</i>	3
<i>data</i>	<i>null</i>
<i>obj</i>	<i>null</i>

- **International character selection**

Selects the international character.

To change the international character, select the international character with this method after setting **CharacterSet**.

When changing **CharacterSet** to 932 after changing the international character, the international character is set to Japan.

When changing **CharacterSet** to other than 932 after changing the international character, the international character is set to USA.

Parameter	Description
<i>command</i>	201
<i>data</i>	International character number n $0 \leq n \leq 12$ Country names available for n are as follows: 0: USA 1: France 2: Germany 3: United Kingdom 4: Denmark I 5: Sweden 6: Italy 7: Spain I 8: Japan 9: Norway 10: Denmark II 11: Spain II 12: Latin America
<i>obj</i>	<i>null</i>

- **Status response**

Returns the paper sensor status in a numeric value.

Parameter	Description
<i>command</i>	501
<i>data</i>	1
<i>obj</i>	<i>null</i>

The response data is placed in *DirectIOData.data*.

RP-F10, RP-G10

Value	State
0	Paper is ready
1	No paper

RP-E10

Value	State ^{*1}
0	Paper is ready./"the paper is low" undetected.
1	No paper./"the paper is low" undetected.
2	Paper is ready./"the paper is low" detected.
3	No paper./"the paper is low" detected.

^{*1}: When the paper-near-end sensor is disabled, the value of "the paper is low" undetected. is always returned.

Open Method

Syntax **void Open();**

Description Opens the device.
When **Open** is successful, the common properties and other class-specific properties are initialized.

Release Method

Syntax **void Release();**

Description Releases exclusive access to the device.
If **DeviceEnabled** is *true*, and the device is an exclusive-use device, then the device is first disabled.
Do not execute this method while the event is in progress (or in the event handler).

ResetStatistic(string) Method

Syntax **void ResetStatistic(string *statistic*);**

Description Resets the specified statistics to 0.
For the statistics that can be reset, see "Appendix B Statistics".
ResetStatistic is always executed synchronously.

ResetStatistics() Method

Syntax	void ResetStatistics();
Description	Resets all the statistics to 0. For the statistics that can be reset, see "Appendix B Statistics". ResetStatistics is always executed synchronously.

ResetStatistics(StatisticCategories) Method

Syntax	void ResetStatistics(StatisticCategories <i>statistics</i>);
Description	Resets all the statistics of the specified category to 0. For the statistics that can be reset, see "Appendix B Statistics". ResetStatistics is always executed synchronously.

ResetStatistics(string[]) Method

Syntax	void ResetStatistics(string[] <i>statistics</i>);
Description	Resets the specified statistics to 0. For the statistics that can be reset, see "Appendix B Statistics". ResetStatistics is always executed synchronously.

RetrieveStatistic(string) Method

Syntax	string RetrieveStatistic(string <i>statistic</i>);
Description	Retrieves the specified device statistics. For <i>statistic</i> , specify the statistics to retrieve. When it is successful, RetrieveStatistic returns the XML string of the statistics. For the statistics that are retrieved, see "Appendix B Statistics". RetrieveStatistic is always executed synchronously.

RetrieveStatistics() Method

Syntax	string RetrieveStatistics();
Description	Retrieves all the device statistics. When it is successful, RetrieveStatistics returns the XML string of the statistics. For the statistics that are retrieved, see "Appendix B Statistics". RetrieveStatistics is always executed synchronously.

RetrieveStatistics(StatisticCategories) Method

- Syntax** **string** RetrieveStatistics(**StatisticCategories** *statistics*);
- Description** Retrieves the statistics of the specified category.
statistics stores the category of the statistics to be retrieved by the application.
When it is successful, **RetrieveStatistics** returns the XML string of the statistics.
For the statistics that are retrieved, see "Appendix B Statistics".
RetrieveStatistics is always executed synchronously.

RetrieveStatistics(string[]) Method

- Syntax** **string** RetrieveStatistics(**string[]** *statistics*);
- Description** Retrieves the specified device statistics.
For *statistic*, specify the statistics to retrieve.
When it is successful, **RetrieveStatistics** returns the XML string of the statistics.
For the statistics that are retrieved, see "Appendix B Statistics".
RetrieveStatistics is always executed synchronously.

UpdateFirmware Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

- Syntax** **void** UpdateFirmware(**string** *firmwareFileName*);

UpdateStatistic Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

- Syntax** **void** UpdateStatistic(**string** *name*, **object** *value*);

UpdateStatistics(Statistic[]) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

- Syntax** **void** UpdateStatistics(**Statistic[]** *statistics*);

UpdateStatistics(StatisticCategories, Object) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

- Syntax** **void** UpdateStatistics(**StatisticCategories** *statistics*, **object** *value*);

4.1.6 Specific Methods

This section describes the details of the specific methods for PosPrinter.

For exception errors of specific methods that are not supported, see "Appendix A Exceptions".

ClearPrintArea Method

Syntax **void ClearPrintArea();**

Description Clears the print data on the Page Mode print area defined by **PageModePrintArea**. The entire page may be cleared by setting **PageModePrintArea** to be the same as **PageModeArea** and then by using **ClearPrintArea**. Specify *PrinterStation.Receipt* for **PageModeStation** before calling this method.

CutPaper Method

Syntax **void CutPaper(int percentage);**

Parameter	Meaning
<i>percentage</i>	Specifies the percentage of the paper to be cut. 100 : Full cut 1 to 99 : Partial cut 0 : No paper cut

Description Cuts the receipt.
This method is executed synchronously if **AsyncMode** is *false*, and asynchronously if **AsyncMode** is *true*.
Paper cut can also be executed by using "Paper cut" escape sequence (ESC[*#*]P) when calling **PrintNormal** or **PrintImmediate**.
If printing data remains in the printer buffer, paper cut is executed after all buffered data is printed.
During rotated 90° right/left mode by **RotatePrint**, or while Page Mode by **PageModePrint** is selected, the method fails and paper cut is not executed.

Due to the positions of printer head and cutter, paper cut might be executed at the middle of printing data. To avoid this, call this method after feeding paper for the value of **RecLinesToPaperCut**.

In RP-F10 and RP-G10, when the printer function setting "Paper Saving Setting (Paper Saving)" is enabled, the value specified in the printer function setting "Paper Saving Setting (Paper Saving)" is applied to the line spacing when the carriage return (CR) or line feed (LF) is executed. (The value specified by **RecLineSpacing** is ignored.)
However, when the "Paper cut" escape sequence (ESC[*#*]P), the "Feed and Paper cut" escape sequence (ESC[*#*]fP), or **CutPaper** is executed after the paper is fed by the carriage return (CR) or line feed (LF), distance from the last print line to the cut position is not reduced because paper is cut after executing the paper feed for saved dot lines.
See "Technical Reference" for details.

PageModePrint Method

Syntax **PageModePrint(PageModePrintControl *control*);**

Parameter	Meaning
<i>control</i>	Specifies the control type of Page Mode.

·Values of *control*

Value	Meaning
<i>PageModePrintControl.Cancel</i>	Clears the page and exits Page Mode without any printing of any print area.
<i>PageModePrintControl.Normal</i>	Prints the print area and destroys the canvas and exits Page Mode.
<i>PageModePrintControl.PageMode</i>	Enters Page Mode.
<i>PageModePrintControl.PrintSave</i>	Prints the print data of the Page Mode print area and saves the data. This is used for repeated printings.

Description Enters or exits Page Mode for the station specified in **PageModeStation**.

If *PageModePrintControl.PageMode* is specified for *control*, then Page Mode is started. Subsequently, the print data can be buffered with **PrintNormal**, **PrintBarCode**, **PrintBitmap**, or **PrintMemoryBitmap** until **PageModePrint** is called by specifying *PageModePrintControl.PrintSave*, *PageModePrintControl.Normal*, or *PageModePrintControl.Cancel*. Methods called during this time only buffer the print data and they do not start printing. Also, the value of **AsyncMode** does not affect the Page Mode function. No **OutputId** will be assigned and no **OutputCompleteEvent** will be notified for each operation.

If *PageModePrintControl.PrintSave* is specified for *control*, then Page Mode is continued. If some print data is buffered by one of **PrintNormal**, **PrintBarCode**, **PrintBitmap**, and **PrintMemoryBitmap**, then the data is saved and printed. This control is used to print the same page layout with additional print items inside of the page.


If *PageModePrintControl.Normal* is specified for *control*, then Page Mode is exited to return to the normal state.

If some print data is buffered by one of **PrintNormal**, **PrintBarCode**, **PrintBitmap**, and **PrintMemoryBitmap**, then the data is printed. The buffered data will not be saved.

If *PageModePrintControl.Cancel* is specified for *control*, then Page Mode is exited to return to the normal state.

If some print data is buffered by one of **PrintNormal**, **PrintBarCode**, **PrintBitmap**, and **PrintMemoryBitmap**, then the data is not printed or saved.

When **PageModePrint** is called while *PageModePrintControl.Normal* or *PageModePrintControl.PrintSave* is specified for *control*, all of the print data on the Page Mode print area defined by **PageModePrintArea** will be printed, and the paper is fed to the end of the area. If more than one Page Mode print area is defined, then after **PageModePrint** is called, all of the data that is to be printed in the respective Page Mode print area(s) will be printed, and the paper will be fed to the end of the Page Mode print area located the farthest "down" the sheet of paper. (See the figure below.)

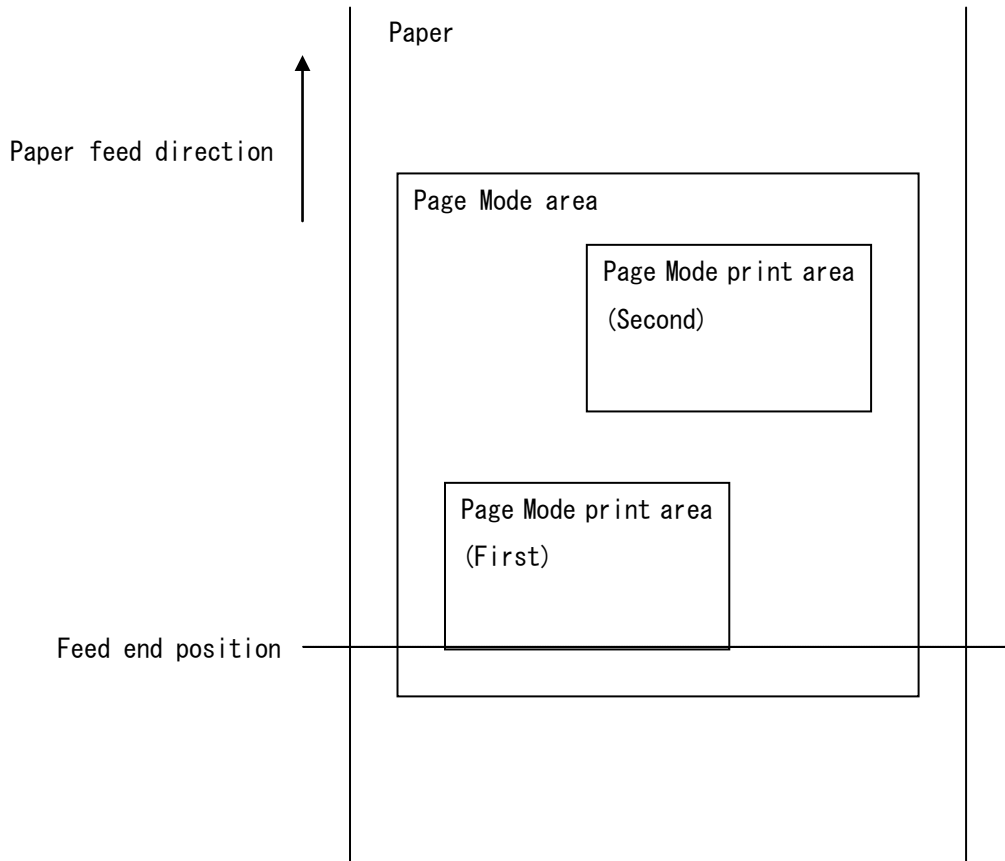

This method is executed asynchronously if **AsyncMode** is *true*, or synchronously if **AsyncMode** is *false*.

Calling **ClearOutput** cancels Page Mode to return to the normal state. The buffered print data is also cleared.

The Page Mode function can be used within a transaction print, but not within a rotate print.

Specify *PrinterStation.Receipt* for **PageModeStation** before calling this method.

PrintBarcode Method

Syntax

```
void PrintBarcode(PrinterStation station,
                 string data,
                 BarcodeSymbology symbology,
                 int height,
                 int width,
                 int alignment,
                 BarcodeTextPosition textPosition);
```

Parameter	Meaning
<i>station</i>	Specifies the station to be used. Specify <i>PrinterStation.Receipt</i> .
<i>data</i>	Specifies the string of the barcode.
<i>symbology</i>	Specifies the barcode type to be used. See values below.
<i>height</i>	<p>Specifies the height of the barcode. Expressed in the unit specified for MapMode. When MapMode is <i>MapMode.Dots</i>, specify the height from 1 to 255.</p> <p><i>height</i> of the following barcodes are ignored and set automatically by <i>width</i>, Specify from 1 to 255.</p> <ul style="list-style-type: none"> • QR Code • GS1 Databar Omni-directional*¹ • GS1 Databar Expanded*¹ • GS1 Databar Expanded Stacked*¹ • GS1 Databar Limited*¹ • GS1 Databar Truncated*¹ <p><i>height</i> of the following barcodes are ignored and set with a fixed value. Specify from 1 to 255.</p> <ul style="list-style-type: none"> • GS1 Databar Stacked Omni-directional*¹ • GS1 Databar Stacked*¹ <p>During Page Mode by PageModePrint, specify the value within the range of print area specified by PageModePrintArea and PageModeVerticalPosition.</p>
<i>width</i>	<p>Specifies the width of the barcode. Expressed in the unit given by MapMode.</p> <p>The width of the barcode actually printed is the best fit within the width specified by <i>width</i>.</p> <p>When MapMode is <i>MapMode.Dots</i>, specify the width from 1 to RecLineWidth for upright position.</p> <p>When rotating the barcode 90° right/left by RotateSpecial or RotatePrint, specify in the range not exceeding the maximum value of the printer. (See PageModeArea for the maximum value of the printer.)</p> <p>During Page Mode by PageModePrint, specify the value within the range of print area specified by PageModePrintArea and PageModeHorizontalPosition.</p>
<i>alignment</i>	Specifies the position of the barcode. See values below.

Parameter	Meaning
<i>textPosition</i>	Specifies the position of the text printed in the barcode. See values below.

*1: Not supported in RP-E10.

• Values of *symbology*

Value	Meaning
<i>BarCodeSymbology.Codabar</i>	Codabar (NW-7)
<i>BarCodeSymbology.Code128</i>	Code128
<i>BarCodeSymbology.Code128Parsed</i>	Code128 Parsed
<i>BarCodeSymbology.Code39</i>	Code39
<i>BarCodeSymbology.Code93</i>	Code93
<i>BarCodeSymbology.Ean13S</i>	EAN13 (JAN13) with supplemental barcode
<i>BarCodeSymbology.EanJan13</i>	EAN13 (JAN13)
<i>BarCodeSymbology.EanJan8</i>	EAN8 (JAN8)
<i>BarCodeSymbology.Gs1DataBar</i> ^{*1}	GS1 Databar Omni-directional
<i>BarCodeSymbology.Gs1DataBarExpanded</i> ^{*1}	GS1 Databar Expanded
<i>BarCodeSymbology.Gs1DataBarStackedOmniDirectional</i> ^{*1} or <i>BarCodeSymbology.Other + 8</i>	GS1 Databar Stacked Omni-directional
<i>BarCodeSymbology.Gs1DataBarExpandedStacked</i> ^{*1} or <i>BarCodeSymbology.Other + 9</i>	GS1 Databar Expanded Stacked
<i>BarCodeSymbology.Itf</i>	Interleaved 2 of 5
<i>BarCodeSymbology.Other + 5</i>	QR Code (Mixed mode)
<i>BarCodeSymbology.Other + 6</i> ^{*1}	GS1 Databar Limited
<i>BarCodeSymbology.Other + 7</i> ^{*1}	GS1 Databar Stacked
<i>BarCodeSymbology.Other + 10</i> ^{*1}	GS1 Databar Truncated
<i>BarCodeSymbology.Pdf417</i>	PDF417
<i>BarCodeSymbology.Upca</i>	UPC-A
<i>BarCodeSymbology.Upce</i>	UPC-E

*1: Not supported in RP-E10.

• Values of *alignment*

Value	Meaning
<i>PrinterBarCodeCenter</i>	Printed with center.
<i>PrinterBarCodeLeft</i>	Printed with left justify.
<i>PrinterBarCodeRight</i>	Printed with right justify.
Other values	Printed with the left margin of the specified value. Expressed in the unit given by MapMode .

When rotation 90° right/left is specified by **RotateSpecial**, **RotatePrint**, and during Page Mode by **PageModePrint**, the setting of *alignment* is invalid and the data is always printed with left justify.

•Values of *textPosition*

Value	Meaning
<i>BarCodeTextPosition.Above</i>	Prints the text above the barcode.
<i>BarCodeTextPosition.Below</i>	Prints the text below the barcode.
<i>BarCodeTextPosition.None</i>	No text is printed.

Call this method when printing the barcode at the specified printer.

This method is executed synchronously if **AsyncMode** is *false*, and asynchronously if **AsyncMode** is *true*.

If **RotateSpecial** indicates that the barcode is rotated, the barcode is printed in rotated mode. *height*, *width*, and *textPosition* are applied to the barcode before it is rotated. For example, when specifying *Rotation.Left90* for **RotateSpecial** and calling this method specifying *BarCodeTextPosition.Below* for *textPosition* of this method, the text is placed below the barcode, and the text and barcode are rotated 90° to the left and printed.

The barcode quiet zone is not secured. Verify that the barcode can be read with your actual device beforehand.

However, the following barcode quiet zones are unnecessary or secured:

- GS1 Databar Omni-directional
- GS1 Databar Expanded
- GS1 Databar Stacked Omni-directional
- GS1 Databar Expanded Stacked
- GS1 Databar Limited
- GS1 Databar Stacked
- GS1 Databar Truncated

The limitations for each barcode are described below.

[Codabar (NW-7)]

Parameter	Limitation
<i>data</i>	The head and end of line must be one of 'A' to 'D'. Other data must be at least one of '0' to '9', '\$', '+', ':', '-', '.', and '/'.
<i>width</i>	<p>When MapMode = <i>MapMode.Dots</i>: RP-F10, RP-G10: $width = (((6 \times X) + (2 \times X \times N)) \times D) + ((X \times N - X) \times D') + (-1 \times X)$ $20 \times D + 2 \times D' - 2 \leq width \leq 72 \times D + 12 \times D' - 6$ RP-E10: $width = ((6 \times X + 2 \times X \times N) \times D) + ((X \times N - X) \times D') + (X \times (10 \times 2 - 1))$ $(20 \times D + 2 \times D' + 38) \leq width \leq (72 \times D + 12 \times D' + 114)$</p> <p>D: the number of barcode characters D': the number of data characters (the number of 'A' to 'D', '+', ':', '/', '-' included in barcode data) X: fine element width $2 \leq X \leq 6$</p>

Parameter	Limitation
<i>width</i>	N: ratio of wide element width to fine element width (Set to 2, 2.5, or 3) X and N are automatically set according to <i>width</i> .

[Code128]

Parameter	Limitation
<i>data</i>	Specify any value consisting of decimal numbers from 0 to 105. Each numeric value is treated as the corresponding character shown in the table below. The first letter must be a decimal number 103, 104, or 105, and the barcode data of at least one letter must follow it.
<i>width</i>	When MapMode = <i>MapMode.Dots</i> : RP-F10, RP-G10: $width = X \times ((D + 2) \times 11) + 2$ $22 \times D + 48 \leq width \leq 66 \times D + 144$ RP-E10: $width = X \times ((10 \times 2) + ((D + 2) \times 11) + 2)$ $(22 \times D + 88) \leq width \leq (66 \times D + 264)$ D: the number of barcode characters (including start code) X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>width</i> .

· Character set of Code128

Number	Character			Number	Character		
	Code A	Code B	Code C		Code A	Code B	Code C
0	SPACE*1	SPACE*1	00	53	U	U	53
1	!	!	01	54	V	V	54
2	"	"	02	55	W	W	55
3	#	#	03	56	X	X	56
4	\$	\$	04	57	Y	Y	57
5	%	%	05	58	Z	Z	58
6	&	&	06	59	[[59
7	'	'	07	60	\	\	60
8	((08	61]]	61
9))	09	62	^	^	62
10	*	*	10	63	_	_	63
11	+	+	11	64	NULL	`	64
12	,	,	12	65	SOH	a	65
13	-	-	13	66	STX	b	66
14	.	.	14	67	ETX	c	67
15	/	/	15	68	EOT	d	68

Number	Character			Number	Character		
	Code A	Code B	Code C		Code A	Code B	Code C
16	0	0	16	69	ENG	e	69
17	1	1	17	70	ACK	f	70
18	2	2	18	71	BEL	g	71
19	3	3	19	72	BS	h	72
20	4	4	20	73	HT	i	73
21	5	5	21	74	LF	j	74
22	6	6	22	75	VT	k	75
23	7	7	23	76	FF	l	76
24	8	8	24	77	CR	m	77
25	9	9	25	78	SO	n	78
26	:	:	26	79	SI	o	79
27	;	;	27	80	DLE	p	80
28	<	<	28	81	DC1	q	81
29	=	=	29	82	DC2	r	82
30	>	>	30	83	DC3	s	83
31	?	?	31	84	DC4	t	84
32	@	@	32	85	NAK	u	85
33	A	A	33	86	SYN	v	86
34	B	B	34	87	ETB	w	87
35	C	C	35	88	CAN	x	88
36	D	D	36	89	EM	y	89
37	E	E	37	90	SUB	z	90
38	F	F	38	91	ESC	{	91
39	G	G	39	92	FS		92
40	H	H	40	93	GS	}	93
41	I	I	41	94	RS	~	94
42	J	J	42	95	US	DEL	95
43	K	K	43	96	FNC3	FNC3	96
44	L	L	44	97	FNC2	FNC2	97
45	M	M	45	98	SHIFT	SHIFT	98
46	N	N	46	99	CODE C	CODE C	99
47	O	O	47	100	CODE B	FNC4	CODE B
48	P	P	48	101	FNC4	CODE A	CODE A
49	Q	Q	49	102	FNC1	FNC1	FNC1
50	R	R	50	103	START(CODE A)		
51	S	S	51	104	START(CODE B)		
52	T	T	52	105	START(CODE C)		

*1: Input a space.

[Code128 Parsed]

Parameter	Limitation
<i>data</i>	<p>The head of line must be the special code (CODE A, CODE B, or CODE C) for the code set to use, and the barcode data of at least one letter must follow it. See "Code128 Special Code Table" for the special code. See "Input example of <i>data</i>" for input of <i>data</i>. The effective range of <i>data</i> differs by code set.</p> <ul style="list-style-type: none"> • Code A : 0x00 to 0x5f, FNC1, FNC2, FNC3, FNC4, SHIFT, CODE B, CODE C • Code B : 0x20 to 0x7f, FNC1, FNC2, FNC3, FNC4, SHIFT, CODE A, CODE C • Code C : 0x30 to 0x39, FNC1, CODE A, CODE B
<i>width</i>	<p>When MapMode = <i>MapMode.Dots</i>: RP-F10, RP-G10: $width = X \times (((D + 2) \times 11) + 2)$ $1^{*1} \leq width \leq 66 \times D + 144$ RP-E10: $width = X \times ((10 \times 2) + ((D + 2) \times 11) + 2)$ $1^{*1} \leq width \leq 66 \times D + 264$</p> <p>D: the number of barcode characters (including start code) X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>width</i>.</p>

*1: When 1 to $22 \times D + 48$ is set, *width* is set to $22 \times D + 48$.

• Code128 Special Code Table

<i>data</i>	Special Code
"{S"	SHIFT
"{A"	CODE A
"{B"	CODE B
"{C"	CODE C
"{1"	FNC1
"{2"	FNC2
"{3"	FNC3
"{4"	FNC4
"{"	'{'

Input example of *data*

data is comprised of ASCII characters, which the service maps to the corresponding value for the selected code set. In Code A and Code B, this will be a one to one mapping. In Code C, each pair of digits is converted to a single Code C data character in the range 0x00 through 0x63. (If the Code C data contains an odd number of digits, then a leading 0 digit is added by the service before conversion.) A sentinel character, the left curly bracket "{", followed by a certain value, is used to indicate a special character.

When creating a barcode of the barcode character "0123", the input of *data* is as follows according to the code set selected.

Selecting Code A : *data*="{A0123"

Selecting Code B : *data*="{B0123"

Selecting Code C : *data*="{C0123" or *data*="{C123"

[Code39]

Parameter	Limitation
<i>data</i>	At least one of '0' to '9', 'A' to 'Z', ' ', '\$', '%', '+', '-', ':', '/' must be specified.
<i>width</i>	<p>When MapMode = <i>MapMode.Dots</i>:</p> <p>RP-F10, RP-G10: $width = (((X \times 7) + (X \times N \times 3)) \times (D + 2)) + (-1 \times X)$ $26 \times D + 50 \leq width \leq 96 \times D + 186$</p> <p>RP-E10: $width = (((X \times 7) + (X \times N \times 3)) \times (D + 2)) + ((10 \times 2 - 1) \times X)$ $(26 \times D + 90) \leq width \leq (96 \times D + 306)$</p> <p>D: the number of barcode characters X: fine element width $2 \leq X \leq 6$ N: ratio of wide element width to fine element width (Set to 2, 2.5, or 3) X and N are automatically set according to <i>width</i>.</p>

[Code93]

Parameter	Limitation
<i>data</i>	Specify any value consisting of decimal numbers from 0 to 46. Each numeric value is treated as the corresponding character shown in the table below.
<i>width</i>	<p>When MapMode = <i>MapMode.Dots</i>:</p> <p>RP-F10, RP-G10: $width = X \times ((D + 2 + 2) \times 9) + 1$ $18 \times D + 74 \leq width \leq 54 \times D + 222$</p> <p>RP-E10: $width = X \times ((10 \times 2) + ((D + 2 + 2) \times 9) + 1)$ $(18 \times D + 114) \leq width \leq (54 \times D + 342)$</p>
<i>width</i>	<p>D: the number of barcode characters X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>width</i>.</p>

• Character set of Code93

Number	Character	Number	Character	Number	Character	Number	Character
0	0	12	C	24	O	36	-
1	1	13	D	25	P	37	.
2	2	14	E	26	Q	38	SPACE ^{*1}
3	3	15	F	27	R	39	\$
4	4	16	G	28	S	40	/
5	5	17	H	29	T	41	+
6	6	18	I	30	U	42	%
7	7	19	J	31	V	43	(\$)
8	8	20	K	32	W	44	(%)
9	9	21	L	33	X	45	(/)
10	A	22	M	34	Y	46	(+)
11	B	23	N	35	Z		

*1: Input a space.

[EAN13 (JAN13) with supplemental barcode]

Parameter	Limitation
<i>data</i>	Specify 14, 15, 17, or 18 letters consisting of '0' to '9'. When 15 letters or 18 letters are entered, the 13th character does not affect the printing data.
<i>width</i>	<p>When MapMode = <i>MapMode.Dots</i>:</p> <p>RP-F10, RP-G10:</p> <ul style="list-style-type: none"> When 14 or 15 letters are specified $width = 122 \times X$ $244 \leq width \leq 732$ When 17 or 18 letters are specified $width = 149 \times X$ $298 \leq width \leq 894$ <p>RP-E10:</p> <ul style="list-style-type: none"> When 14 or 15 letters are specified $width = 138 \times X$ $276 \leq width \leq 828$ When 17 or 18 letters are specified $width = 165 \times X$ $330 \leq width \leq 990$ <p>X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>width</i>.</p>

[EAN13 (JAN13)]

Parameter	Limitation
<i>data</i>	Specify 12 or 13 letters consisting of '0' to '9'. The 13th letter does not affect the barcode printing data.
<i>width</i>	When MapMode = <i>MapMode.Dots</i> : RP-F10, RP-G10: $width = 95 \times X$ $190 \leq width \leq 570$ RP-E10: $width = 113 \times X$ $226 \leq width \leq 678$ X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>width</i> .

[EAN8 (JAN8)]

Parameter	Limitation
<i>data</i>	Specify 7 or 8 letters consisting of '0' to '9'. The 8th letter does not affect the barcode printing data.
<i>width</i>	When MapMode = <i>MapMode.Dots</i> : RP-F10, RP-G10: $width = 67 \times X$ $134 \leq width \leq 402$ RP-E10: $width = 67 \times X$ $162 \leq width \leq 486$ X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>width</i> .

[GS1 Databar Omni-directional]*¹

Parameter	Limitation
<i>data</i>	Specify 13 letters consisting of '0' to '9'.
<i>width</i>	When MapMode = <i>MapMode.Dots</i> : $width = 96 \times X$ $1^{*2} \leq width \leq 576$ X: module width $2 \leq X \leq 6$ X is automatically set according to <i>width</i> .

*1: Not supported in RP-E10.

*2: When 1 to 287 is set, *width* is set to 192.

[GS1 Databar Expanded]*1

Parameter	Limitation
<i>data</i>	Specify '0' to '9', 'A' to 'Z', 'a' to 'z', space, '!', '"', '%', '&', '(', ')', '*', '+', ',', '-', '.', '/', ':', ';', '<', '>', '=', '?', '_' as 2 or more letters. Input "{1" for FNC1. Be sure to input the check digit since it is not automatically calculated by the printer.
<i>width</i>	Input the value other than 0.

*1: Not supported in RP-E10.

[GS1 Databar Stacked Omni-directional]*1

Parameter	Limitation
<i>data</i>	Specify 13 letters consisting of '0' to '9'.
<i>height</i>	Input the value other than 0. The value is set as <i>height</i> = 138 regardless of the input value.
<i>width</i>	When MapMode = <i>MapMode.Dots</i> : Input the value other than 0. The value is set as <i>width</i> = 100 regardless of the input value.

*1: Not supported in RP-E10.

Module width is fixed at 2.

[GS1 Databar Expanded Stacked]*1

Parameter	Limitation
<i>data</i>	Two or more letters of '0' to '9', 'A' to 'Z', 'a' to 'z', space, '!', '"', '%', '&', '(', ')', '*', '+', ',', '-', '.', '/', ':', ';', '<', '>', '=', '?', '_' must be specified. Input "{1" for FNC1. Be sure to input the check digit since it is not automatically calculated by the printer.
<i>width</i>	Input the value other than 0.

*1: Not supported in RP-E10.

Module width is fixed at 2.

[Interleaved 2 of 5]

Parameter	Limitation
<i>data</i>	Specify any value consisting of '0' to '9'. Note that the number of specified letters must be an even number except for 0.
<i>width</i>	<p>When MapMode = <i>MapMode.Dots</i>:</p> <p>RP-F10, RP-G10: $width = ((D \times 2 + 1) \times X \times N) + ((D \times 3 + 6) \times X)$ $14 \times D + 16 \leq width \leq 54 \times D + 54$</p> <p>RP-E10: $width = ((D \times 2 + 1) \times X \times N) + ((D \times 3) + 6 + (10 \times 2)) \times X$ $(14 \times D + 56) \leq width \leq (54 \times D + 174)$</p> <p>D: the number of barcode characters X: fine element width $2 \leq X \leq 6$ N: ratio of wide element width to fine element width (Set to 2, 2.5, or 3) X and N are automatically set according to <i>width</i>.</p>

[QR Code]

Parameter	Limitation
<i>data</i>	Specify characters of the following range: <ul style="list-style-type: none"> • ASCII characters • 8 bits Latin/Katakana characters based on JIS X 0201 • Shift-JIS code based on JIS X 0208
<i>width</i>	<p>RP-F10, RP-G10: $width = (4V + 17) \times M$ $42 \leq width$</p> <p>RP-E10: $width = (4V + 17) \times M + (4M \times 2)$ $(58 \leq width)$</p> <p>V: version of QR Code (RP-F10, RP-G10: 1 to 18) (RP-E10: 1 to 40)</p> <p>M: module size (RP-F10, RP-G10: 2 to 16) (RP-E10: 2 to 11)</p> <p>For version, the smallest value that input data can be converted to barcode is selected. For module size, the maximum size that does not exceed <i>width</i> is selected after the version is determined.</p>

QR Code model is fixed at 2 and the error correction level is fixed at M. Printing size is based on *width*, and *height* is ignored since QR Code is a square.

If data other than the printable characters is specified, *ErrorCode.Illegal* is thrown.

[GS1 Databar Limited]*¹

Parameter	Limitation
<i>data</i>	Specify 13 letters consisting of '0' to '9'.
<i>width</i>	When MapMode = <i>MapMode.Dots</i> : The effective range of <i>height</i> depends on <i>width</i> . $width = 79 \times X$ $1^*2 \leq width \leq 474$ X: module width $2 \leq X \leq 6$ X is automatically set according to <i>width</i> .

*1: Not supported in RP-E10.

*2: When 1 to 236 is set, *width* is set to 158.

[GS1 Databar Stacked]*¹

Parameter	Limitation
<i>data</i>	Specify 13 letters consisting of '0' to '9'.
<i>height</i>	Input the value other than 0. The value is set as <i>height</i> = 26 regardless of the input value.
<i>width</i>	When MapMode = <i>MapMode.Dots</i> : Input the value other than 0. The value is set as <i>width</i> = 100 regardless of the input value.

*1: Not supported in RP-E10.

Module width is fixed at 2.

[GS1 Databar Truncated]*¹

Parameter	Limitation
<i>data</i>	Specify 13 letters consisting of '0' to '9'.
<i>width</i>	When MapMode = <i>MapMode.Dots</i> : The effective range of <i>height</i> depends on <i>width</i> . $width = 96 \times X$ $1^*2 \leq width \leq 576$ X: module width $2 \leq X \leq 6$ X is automatically set according to <i>width</i> .

*1: Not supported in RP-E10.

*2: When 1 to 287 is set, *width* is set to 192.

[PDF417]

Parameter	Limitation
<i>data</i>	It must be a character string in which 0x00 to 0x7F follow the ASCII code and 0x80 to 0xFF follow the extended character set of PC437 English list.
<i>width</i> <i>height</i>	RP-F10, RP-G10: $width = (17 \times C + 69) \times X$ $180 \leq width$ $height = R \times Y$ $14 \leq height \leq 255$ RP-E10: $width = (17 \times C + 69) \times X + (X \times 4)$ $180 \leq width$ $height = R \times Y + (X \times 4)$ $14 \leq height \leq 255$ X: module width (2 to 4) Y: module height (2 to 127) C: the number of vertical columns (1 to 30) R: the number of rows (3 to 90) For the number of rows and the number of vertical columns, the smallest value that input data can be converted to barcode is selected. For module width and module height, the maximum size that does not exceed <i>width</i> and <i>height</i> is selected after the number of rows and the number of vertical columns are determined.

Print mode is the normal mode and the error correction level is fixed to 4.

[UPC-A]

Parameter	Limitation
<i>data</i>	Specify 11 or 12 letters consisting of '0' to '9'. The 12th letter does not affect the barcode printing data.
<i>width</i>	When MapMode = <i>MapMode.Dots</i> : RP-F10, RP-G10: $width = 95 \times X$ $190 \leq width \leq 570$ RP-E10 $width = 113 \times X$ $226 \leq width \leq 678$ X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>width</i> .

[UPC-E]

Parameter	Limitation
<i>data</i>	Specify 11 or 12 letters consisting of '0' to '9'. The 12th letter does not affect the barcode printing data.
<i>width</i>	When MapMode = <i>MapMode.Dots</i> : RP-F10, RP-G10: $width = 51 \times X$ $102 \leq width \leq 306$ RP-E10: $width = 65 \times X$ $130 \leq width \leq 390$ X: fine element width $2 \leq X \leq 6$ X is automatically set according to <i>width</i> .

Additionally, the allowable character must follow the rules below.

1. The 1st letter is "0".
2. The UPC-A left code indicates the 2nd to the 6th characters, the UPC-A right code indicates the 7th to the 11th characters, and the code to be abbreviated is actually printed as UPC-E. If the specified UPC-A initial character is other than 0 or a character not included in the following list is specified, *ErrorCode.Illegal* is thrown.

Maker Code UPC-A Left Code					Item Code UPC-A Right Code					Abbreviated Code					
F1	F2	F3	F4	F5	A1	A2	A3	A4	A5	Z1	Z2	Z3	Z4	Z5	Z6
0-9	0-9	0	0	0	0	0	0-9	0-9	0-9	F1	F2	A3	A4	A5	0
0-9	0-9	1	0	0	0	0	0-9	0-9	0-9	F1	F2	A3	A4	A5	1
0-9	0-9	2	0	0	0	0	0-9	0-9	0-9	F1	F2	A3	A4	A5	2
0-9	0-9	3-9	0	0	0	0	0	0-9	0-9	F1	F2	F3	A4	A5	3
0-9	0-9	0-9	1-9	0	0	0	0	0	0-9	F1	F2	F3	F4	A5	4
0-9	0-9	0-9	0-9	1-9	0	0	0	0	5-9	F1	F2	F3	F4	F5	A5

PrintBitmap Method

Syntax

void PrintBitmap(PrinterStation station, string fileName, int width, int alignment);

Parameter	Meaning
<i>station</i>	Specifies the station to be used. Specify <i>PrinterStation.Receipt</i> .
<i>fileName</i>	Specifies the name of bitmap file. For the supported image file, see below.
<i>width</i>	Specifies the print width of bitmap. See values below.
<i>alignment</i>	Specifies the print position of bitmap. See values below.

•Supported bitmap file

Item	Specifications
Extension	bmp
Format	Windows Bitmap
Color	1, 4, 8, 24, or 32 bits
Compression format	Uncompressed only

•Values of *width*

Value	Meaning
<i>PrinterBitmapAsIs</i> (-11)	Prints the bitmap with 1 pixel per printer dot.
Other values	Expresses the bitmap width in the unit specified for MapMode . If MapMode is <i>MapMode.Dots</i> , specify the value from 1 to RecLineWidth . When printing bitmap in a rotated 90° to right/left mode by RotatePrint is executed, specify the value from 1 to 2400. During Page Mode by PageModePrint , specify the value within the range of print area defined by PageModePrintArea and PageModeHorizontalPosition .

The value is rounded up to a multiple of 8 inside the Service Object.

•Values of *alignment*

Value	Meaning
<i>PrinterBitmapCenter</i>	Printed with center.
<i>PrinterBitmapLeft</i>	Printed with left justify.
<i>PrinterBitmapRight</i>	Printed with right justify.
Other values	Printed with the left margin of the specified value. Expressed in the unit given by MapMode .

When rotation 90° right/left is specified by **RotatePrint**, and during Page Mode by **PageModePrint**, the setting of *alignment* is invalid and the data is always printed with left justify.

Description

Call this method when printing the bitmap on the specified station.

The highest performance cannot be achieved since the bitmap data is sent to the printer after **PrintBitmap** is called. It is recommended to print the bitmap data using **SetBitmap** and escape sequence.

If any character data is already sent but not yet printed, that character data is printed first, a linefeed is automatically added, and then the bitmap is printed on the next print line. Any character data sent after **PrintBitmap** is printed on the print line following the bitmap. This method is executed synchronously if **AsyncMode** is *false*, and asynchronously if **AsyncMode** is *true*.

width controls the transformation of bitmap data. If *width* is *PrinterBitmapAsIs*, then no transformation is executed. The bitmap is printed with 1 pixel per printer dot.

If *width* is not 0, then the bitmap will be transformed by stretching or compressing the bitmap such that its width is the specified width and the aspect ratio is unchanged.

PrintImmediate Method

Syntax **void PrintImmediate(PrinterStation *station*, string *data*);**

Parameter	Meaning
<i>station</i>	Specifies the station to be used. Specify <i>PrinterStation.Receipt</i> .
<i>data</i>	Specifies the characters to be printed. Consists of printable characters, escape sequences, carriage returns (CR), and line feeds (LF).

Description This method is used for printing immediately during asynchronous output. When this method is specified during asynchronous output, processing of this method is executed before the next asynchronous output, after asynchronous output currently being processed.

PrintImmediate is intended for use in exception conditions when asynchronous output is not resolved, for example, in an error event handler.

The print data that exceeds the maximum number of characters per line is printed on the next print line.

If there is data remaining unprinted in the printer buffer, printing is executed after all the buffered data is printed.

The values and meanings of special characters within *data* are as follows.

Symbol	Operation
LF	Prints data in the buffer, and feeds to the next line.
CR	Replaceable with the same operation as line feed (LF).
LF & CR	Carriage return (CR) is replaceable with the same operation as line feed (LF). Therefore, operation of line feed (LF) is executed twice.
CR & LF	Carriage return (CR) is ignored. Operation of line feed (LF) is executed once.

In RP-F10 and RP-G10, when the printer function setting "Paper Saving Setting (Paper Saving)" is enabled, the value specified in the printer function setting "Paper Saving Setting (Paper Saving)" is applied to the line spacing when the carriage return (CR) or line feed (LF) is executed. (The value specified by **RecLineSpacing** is ignored.)

However, when any of the "Paper cut" escape sequence (ESC[*#*]P), the "Feed and Paper cut" escape sequence (ESC[*#*]fP), or **CutPaper** is executed after the paper is fed by the carriage return (CR) or line feed (LF), distance from the last print line to the cut position is not reduced because paper is cut after executing the paper feed for saved dot lines.

See "Technical Reference" for details.

PrintMemoryBitmap Method

Syntax **void PrintMemoryBitmap(PrinterStation station,**
 Bitmap data,
 int width,
 int alignment);

Parameter	Meaning
<i>station</i>	Specifies the station to be used. Specify <i>PrinterStation.Receipt</i> .
<i>data</i>	Specifies the byte array holding the bitmap data. For the supported image file, see PrintBitmap .
<i>width</i>	Specifies the print width of bitmap. See PrintBitmap for values.
<i>alignment</i>	Specifies the print position of bitmap. See PrintBitmap for values.

Description Call this method when printing the bitmap on the specified station.
For the operation specifications, see **PrintBitmap**.
This method is executed synchronously if **AsyncMode** is *false*, and asynchronously if **AsyncMode** is *true*.

PrintNormal Method

Syntax **void PrintNormal(PrinterStation station, string data);**

Parameter	Meaning
<i>station</i>	Specifies the station to be used. Specify <i>PrinterStation.Receipt</i> .
<i>data</i>	Specifies the characters to be printed. Consists of printable characters, escape sequences, carriage returns (CR), and line feeds (LF).

Description Call this method when printing *data* on the printer.
The print data that exceeds the maximum number of characters per line is printed on the next print line.
If unprinted data remains in the printer buffer, printing is executed after all the buffered data is printed.
This method is executed synchronously if **AsyncMode** is *false*, and asynchronously if **AsyncMode** is *true*.

The values and meanings of special characters within *data* are as follows.

Symbol	Operation
LF	Prints data in the buffer, and feed to the next line.
CR	Replaceable with the same operation as line feed (LF).
LF & CR	Carriage return (CR) is replaceable with the same operation as line feed (LF). Therefore, operation of line feed (LF) is executed twice.

Symbol	Operation
CR & LF	Carriage return (CR) is ignored. Operation of line feed (LF) is executed once.

In RP-F10 and RP-G10, when the printer function setting "Paper Saving Setting (Paper Saving)" is enabled, the value specified in the printer function setting "Paper Saving Setting (Paper Saving)" is applied to the line spacing when the carriage return (CR) or line feed (LF) is executed. (The value specified by **RecLineSpacing** is ignored.)

However, when any of the "Paper cut" escape sequence (ESC[*#*]P), the "Feed and Paper cut" escape sequence (ESC[*#*]fP), or **CutPaper** is executed after the paper is fed by the carriage return (CR) or line feed (LF), distance from the last print line to the cut position is not reduced because paper is cut after executing the paper feed for saved dot lines.

See "Technical Reference" for details.

RotatePrint Method

Syntax

```
void RotatePrint(PrinterStation station, PrintRotation rotation);
```

Parameter	Meaning
<i>station</i>	Specifies the station to be used. Specify <i>PrinterStation.Receipt</i> .
<i>rotation</i>	Specifies the rotation direction. See values below.

• Values of *rotation*

Value	Meaning
<i>PrintRotation.Right90</i>	Starts rotated printing 90° to the right (clockwise).
<i>PrintRotation.Left90</i>	Starts rotated printing 90° to the left (counterclockwise).
<i>PrintRotation.Rotate180</i>	Starts rotated printing 180°, that is, prints upside-down.
<i>PrintRotation.Barcode</i>	Starts rotated barcode printing. This value is ORed with one of the above start rotated print values.
<i>PrintRotation.Bitmap</i>	Starts rotated bitmap printing. This value is ORed with one of the above start rotated print values.
<i>PrintRotation.Normal</i>	Ends rotated printing.

Description

Executes the rotated printing.

This method is executed synchronously if **AsyncMode** is *false*, and asynchronously if **AsyncMode** is *true*.

When *rotation* contains *PrintRotation.Rotate180*, the upside-down print mode is started. Subsequent calls to **PrintNormal** or **PrintImmediate** will print the data upside-down until **RotatePrint** is called with *rotation* set to *PrintRotation.Normal*. Lines are printed in the order that they are sent to the Service Object, with the start of each line justified at the right margin of the printer. When *rotation* does not contain *PrintRotation.Barcode* or *PrintRotation.Bitmap*, only the print methods **PrintNormal** and **PrintImmediate** are used during the upside-down print mode.

When *rotation* contains *PrintRotation.Right90* or *PrintRotation.Left90*, the sideways print mode is started. Until **RotatePrint** is called with *rotation* set to *PrintRotation.Normal*, the data called by **PrintNormal** is buffered. The value of **AsyncMode** does not affect the operation. In other words, no **OutputId** will be assigned to the request, nor will **OutputCompleteEvent** be notified. Each print line is rotated by 90°. If all lines do not have the same length, the start positions of the lines are aligned. When *rotation* does not contain *PrintRotation.Barcode* or *PrintRotation.Bitmap*, only **PrintNormal** is used in the sideways print mode.

When *rotation* contains *PrintRotation.Normal*, the rotated print mode is exited. If some data is buffered by **PrintNormal** while the sideways rotated print mode is in effect, the buffered data is printed. The whole block of rotated lines is treated as one message.

When *rotation* contains *PrintRotation.Barcode* or *PrintRotation.Bitmap*, all of barcodes (printed by **PrintBarCode** or the "Print in-line barcode" escape sequence (ESC|#R)) and bitmaps (printed by **PrintBitmap** or the "Print bitmap" escape sequence (ESC|#B)) can be printed in a rotated mode by **RotatePrint**. The rotation direction of barcodes and bitmaps are limited by **RecBarCodeRotationList** and **RecBitmapRotationList** respectively. When *rotation* contains *PrintRotation.Barcode*, the contents of **RotateSpecial** are ignored. Calling **ClearOutput** cancels the rotated print mode. Any buffered lines of sideways rotated print are also cleared.

The Service Object calculates so that the width in the sideways print mode becomes best size. The maximum width is 2400 dots in the sideways print mode. If the print data per line exceeds this range, non-printed data is printed by feeding to the next print line. If the bitmap print or barcode print by the "Print in-line barcode" escape sequence (ESC|#R) or the "Print bitmap" escape sequence (ESC|#B) is specified on **PrintNormal** during the rotation mode, the print data rotates regardless of whether or not *PrintRoatation.Bitmap* and *PrintRotation.Barcode* is specified in *rotation* with OR.

SetBitmap Method

Syntax **void SetBitmap**(int *bitmapNumber*,
 PrinterStation *station*,
 string *fileName*,
 int *width*,
 int *alignment*);

Parameter	Meaning
<i>bitmapNumber</i>	Specifies the number to be assigned to this bitmap. The valid values are 1 to 20.

Parameter	Meaning
<i>station</i>	Specifies the station to be used. Specify <i>PrinterStation.Receipt</i> .
<i>fileName</i>	Specifies the name of bitmap file. If an empty string is set, the bitmap setting is canceled. For the supported image file, see PrintBitmap .
<i>width</i>	Specifies the print width of bitmap. See PrintBitmap for values.
<i>alignment</i>	Specifies the print position of bitmap. See PrintBitmap for values.

Description Call this method to save the information about the bitmap to be printed.
The bitmap may then be printed by calling **PrintNormal** or **PrintImmediate** with the "Print Bitmap" escape sequence (ESC|#B) in the print data. The "Print Bitmap" escape sequence (ESC|#B) usually contains the character strings for printing the start and end process headers.

If any character data was sent before the "Print Bitmap" escape sequence (ESC|#B) and has not been printed, that character data is printed first, a linefeed is automatically placed, and then the bitmap is printed. Any character data sent after the "Print Bitmap" escape sequence (ESC|#B) is printed on the line next to the bitmap.

Service Object prepares for printing with downloading bitmap data to the NV graphics area of the printer. When bitmap print is specified by escape sequence, only command which conducts printing is transmitted to provide better performance.

SetLogo Method

Syntax `void SetLogo(PrinterLogoLocation location, string data);`

Parameter	Meaning
<i>location</i>	Specifies the logo to be set.
<i>data</i>	Specifies the characters that produce the logo. Consists of printable characters, escape sequences, carriage returns (CR), and line feeds (LF).

•Values of *location*

Value	Meaning
<i>PrinterLogoLocation.Bottom</i>	Produces a bottom logo.
<i>PrinterLogoLocation.Top</i>	Produces a top logo.

Description Saves a data string as the top or bottom logo.
The logo can be printed by calling **PrintNormal** or **PrintImmediate** with "Print Top Logo" escape sequence (ESC|tL) or "Print Bottom Logo" escape sequence (ESC|bL) in the print data.

TransactionPrint Method

Syntax **void TransactionPrint(PrinterStation *station*, PrinterTransactionControl *control*);**

Parameter	Meaning
<i>station</i>	Specifies the station to be used. Specify <i>PrinterStation.Receipt</i> .
<i>control</i>	Specifies the type of the transaction. See below for values.

·Values of *control*

Value	Meaning
<i>PrinterTransactionControl.Normal</i>	Ends a transaction by printing the buffered data.
<i>PrinterTransactionControl.Transaction</i>	Starts a transaction.

Description Enters or exits transaction mode.

If *control* is *PrinterTransactionControl.Transaction*, then transaction mode is entered. Subsequent calls to **PrintNormal**, **RotatePrint**, **PrintBarCode**, **PrintBitmap**, or **PageModePrint** will buffer the print data until **TransactionPrint** is called with *control* set to *PrinterTransactionControl.Normal*.

The value of **AsyncMode** does not affect the operation. In other words, no **OutputId** is assigned to the request and no **OutputCompleteEvent** is enqueued.

If *control* is *PrinterTransactionControl.Normal*, then transaction mode is exited. If some data was buffered by calls to **PrintNormal**, **RotatePrint**, **PrintBarCode**, **PrintBitmap**, or **PageModePrint**, then the buffered data is printed. The entire transaction is treated as one message.

This method is executed synchronously if **AsyncMode** is *false*, and asynchronously if **AsyncMode** is *true*.

Calling **ClearOutput** cancels transaction mode. Any buffered print lines are also cleared.

ValidateData Method

Syntax **void ValidateData(PrinterStation *station*, string *data*);**

Parameter	Meaning
<i>station</i>	Specifies the station to be used. Specify <i>PrinterStation.Receipt</i> .
<i>data</i>	Specifies the data to be validated. Consists of printable characters, escape sequences, carriage returns (CR), and line feeds (LF).

Description Before calling **PrintNormal** or **PrintImmediate**, call this method when determining whether a data sequence, possibly including one or more escape sequences, is valid for the specified station.

 This method does not cause any printing but is used to determine the capability of the station.

 When not valid, the exception error is thrown. For details about the thrown exception errors, see "Appendix A Exceptions".

4.1.7 Events

This section describes the details of PosPrinter events.

DirectIOEvent Event

This event is not supported.

Syntax **DirectIOEventHandler DirectIOEvent;**

ErrorEvent Event

Syntax **DeviceErrorEventHandler ErrorEvent;**

Description This event is notified when an error is detected and **State** of the Service Object transitions into the error state.

When *DeviceErrorEventArgs.ErrorCode* is *ErrorCode.Extended*,
DeviceErrorEventArgs.ErrorCodeExtended is set to one of the following values:

Value	Meaning
<i>ExtendedErrorCoverOpen</i> (201)	The printer cover is open.
<i>ExtendedErrorRecEmpty</i> (203)	The receipt is out of paper.
<i>ExtendedErrorVpPower</i> (1001)	Vp voltage error has occurred.
<i>ExtendedErrorCutterError</i> (1002)	Autocutter error has occurred.
<i>ExtendedErrorHeadTemp</i> (1005)	Head-temperature error has occurred.
<i>ExtendedErrorFatal</i> (1010)	A non-recoverable error has occurred.

The *DeviceErrorEventArgs.ErrorResponse* can be set to either of the following values by the application. The default is *ErrorResponse.Retry*.

Value	Meaning
<i>ErrorResponse.Clear</i>	Exits the error state and clears the asynchronous output.
<i>ErrorResponse.Retry</i>	Exits the error state and retries the asynchronous output.

OutputCompleteEvent Event

Syntax **OutputCompleteEventHandler OutputCompleteEvent;**

Description This event is notified when the previously started asynchronous output request has completed successfully.

OutputId indicates the ID number of the completed asynchronous output request.

StatusUpdateEvent Event

Syntax **StatusUpdateEventHandler StatusUpdateEvent;**

Description This event is notified when an important state change has occurred in the device.
The Service Object notifies the first **StatusUpdateEvent** when the device is enabled.

StatusUpdateEventArgs.Status is set to one of the following values:

Value	Meaning
<i>StatusCoverOpen</i> (11)	The printer cover is open.
<i>StatusCoverOK</i> (12)	The printer cover is closed.
<i>StatusReceiptEmpty</i> (24)	The receipt is out of paper.
<i>StatusReceiptPaperOK</i> (26)	The receipt paper is ready.
<i>StatusIdle</i> (1001)	All the asynchronous outputs finished either successfully or by being cleared. State is now <i>ControlState.Idle</i> . FlagWhenIdle must be <i>true</i> for this event to be notified. And the Service Object automatically resets the property to <i>false</i> before the event is notified.
<i>StatusPowerOnline</i> (2001)* ¹	The device is powered on and ready.
<i>StatusPowerOffOffline</i> (2004)* ¹	The device is powered off or offline.

*1: Notified when **PowerNotify** = *PowerNotification.Enabled*.

When the Bluetooth model is used, it takes about 30 seconds to notify *StatusPowerOffOffline*(2004) after the power condition of the device is either power off or offline. And it takes about 10 seconds to notify *StatusPowerOnline*(2001) after the power condition of the device is on and ready.

4.2 CashDrawer

4.2.1 Summary

(1) Common Properties

Property Name	Type	Access	Availability Condition	Default
CapCompareFirmwareVersion	bool	R	Open	<i>false</i>
CapPowerReporting	PowerReporting	R	Open	<i>Standard</i>
CapStatisticsReporting	bool	R	Open	<i>false</i>
CapUpdateFirmware	bool	R	Open	<i>false</i>
CapUpdateStatistics	bool	R	Open	<i>false</i>
CheckHealthText	string	R	Open	<i>""</i>
Claimed	bool	R	Open	<i>false</i>
DeviceDescription	string	R	Open	"SII RP-x10 Cash Drawer"
DeviceEnabled	bool	R/W	Open	<i>false</i>
DeviceName	string	R	Open	"RP-x10 Cash Drawer"
FreezeEvents	bool	R/W	Open	<i>false</i>
PowerNotify	PowerNotification	R/W	Open	<i>Disabled</i>
PowerState	PowerState	R	Open	<i>Unknown</i>
ServiceObjectDescription	string	R	Open	"SII RP-x10 Cash Drawer Service Object, Copyright(C) 20xx Seiko Instruments Inc."
ServiceObjectVersion	Version	R	Open	1.12.x.x
State	ControlState	R	Open	Idle
SynchronizingObject	System. ComponentModel. ISynchronizeInvoke	R/W	Open	Depends on application.

(2) Specific Properties

Property Name	Type	Access	Availability Condition	Default
CapStatus	bool	R	Open	<i>true</i>
CapStatusMultiDrawerDetect	bool	R	Open	<i>false</i>
DrawerOpened	bool	R	Open, & Enable	Depends on the cash drawer status.

(3) Common Methods

Method Name	Availability Condition
CheckHealth	Open, & Enable
Claim	Open
Close	Open
CompareFirmwareVersion	Open, Claim, & Enable
DirectIO	Open, & Enable
Open	-
Release	Open & Claim
ResetStatistic(string)	Open, & Enable
ResetStatistics()	Open, & Enable
ResetStatistics(StatisticCategories)	Open, & Enable
ResetStatistics(string[])	Open, & Enable
RetrieveStatistic(string)	Open, & Enable
RetrieveStatistics()	Open, & Enable
RetrieveStatistics(StatisticCategories)	Open, & Enable
RetrieveStatistics(string[])	Open, & Enable
UpdateFirmware	Open, Claim, & Enable
UpdateStatistic	Open, & Enable
UpdateStatistics(Statistic[])	Open, & Enable
UpdateStatistics(StatisticCategories, Object)	Open, & Enable

(4) Specific Methods

Method Name	Availability Condition
OpenDrawer	Open, & Enable
WaitForDrawerClose	Open, & Enable

(5) Events

Event Name	Availability Condition
StatusUpdateEvent	Open, & Enable

4.2.2 Common Properties

This section describes the details of the common properties for CashDrawer.
For details of the thrown exception errors, see "Appendix A Exceptions".

CapCompareFirmwareVersion Property

Type **bool**

Description Indicates whether the version of the firmware can be compared.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The function that compares firmware versions is not supported.

This property is initialized to *false* by **Open**.

CapPowerReporting Property

Type **PowerReporting**

Description Identifies the reporting capabilities of the device.
The following table shows the valid property values.

Value	Meaning
<i>PowerReporting.Standard</i>	The following 2 types of power states can be determined and reported. <ul style="list-style-type: none">• <i>PowerState.OffOffline</i> (power off or offline)• <i>PowerState.Online</i>

This property is initialized to *PowerReporting.Standard* by **Open**.

CapStatisticsReporting Property

Type **bool**

Description Indicates the statistics accumulation function of the device.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	No statistical data regarding the device is available.

This property is initialized to *false* by **Open**.

CapUpdateFirmware Property

Type **bool**

Description Indicates whether the device supports firmware updating.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	Firmware update is not supported.

This property is initialized to *false* by **Open**.

CapUpdateStatistics Property

Type **bool**

Description Indicates the function that some or all the device statistics can be reset.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	None of the statistical data can be reset/updated.

This property is initialized to *false* by **Open**.

CheckHealthText Property

Type **string**

Description Holds the results of the most recent call to **CheckHealth**.
The results of diagnosis are as follows.

Method Parameter	Method Result	CheckHealthText
<i>HealthCheckLevel.External</i>	Success	"External HCheck: Successful"
	Fail	"External HCheck: Failure"
<i>HealthCheckLevel.Interactive</i> ^{*1}	Success	"Interactive HCheck: Successful"
	Fail	"Interactive HCheck: Failure"
<i>HealthCheckLevel.Internal</i>	Success	"Internal HCheck: Successful"
	Fail	"Internal HCheck: Failure"

^{*1}: In the case of *HealthCheckLevel.Interactive*, if the dialog box is closed without testing after execution, "Interactive HCheck: Canceled" is set.

This property is initialized to empty string by **Open**.

Claimed Property

Type **bool**

Description Indicates whether the device is claimed for exclusive access.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The device is released for sharing with other applications.
<i>true</i>	The exclusive access to the device is obtained.

This property is initialized to *false* by **Open**.

DeviceDescription Property

Type **string**

Description Identifies the device and any pertinent information about it.
This property depends on **DeviceName**.
This property is initialized in either of the following values by **Open**.

DeviceName	Value
"RP-F10/G10 Cash Drawer"	"SII RP-F10/G10 Cash Drawer"
"RP-E10 Cash Drawer"	"SII RP-E10 Cash Drawer"

DeviceEnabled Property R/W

Type **bool**

Description Indicates whether the device has been placed in an operational state.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The device has been disabled. If changed to <i>false</i> , then the device is disabled.
<i>true</i>	The device has been placed in an operational state. If changed to <i>true</i> , then the device is brought to an operational state.

The application must set this property to *true* before using the device.

If **State** is other than *ControlState.Idle*, **DeviceEnabled** cannot be changed from *true* to *false*.

This property is initialized to *false* by **Open**.

DeviceName Property

Type **string**

Description Identifies the device and any pertinent information about it.
This property depends on the default setting.
This property is initialized in either of the following values by **Open**.

Printer to Which the Cash Drawer is Connected	Value
RP-F10	"RP-F10/G10 Cash Drawer"
RP-G10	
RP-E10	"RP-E10 Cash Drawer"

FreezeEvents Property R/W

Type **bool**

Description Selects whether to notify events.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The application allows events to be delivered. If some events have been held while events were frozen and all other conditions are correct for delivering the events, changing FreezeEvents to <i>false</i> will allow these events to be delivered.
<i>true</i>	The application has requested that the Service Object not deliver events. Events will be enqueued by the Service Object but not delivered until the application changes FreezeEvents to <i>false</i> .

An application may choose to freeze events for a specific sequence of code where interruption by an event is not desirable.

This property is initialized to *false* by **Open**.

PowerNotify Property R/W

Type **PowerNotification**

Description Contains the type of power notification selection made by the application.
The following table shows the valid property values.

Value	Meaning
<i>PowerNotification.Disabled</i>	The Service Object will not provide any power notifications to the application. No power notification StatusUpdateEvents will be fired, and PowerState will not be set.

Value	Meaning
<i>PowerNotification.Enabled</i>	The Service Object will fire the power notification StatusUpdateEvents and update PowerState beginning when DeviceEnabled is set to <i>true</i> . The level of functionality depends upon CapPowerReporting .

PowerNotify may only be set while the device is disabled; that is, while **DeviceEnabled** is *false*.

This property is initialized to *PowerNotification.Disabled* by **Open**.

PowerState Property

Type **PowerState**

Description Identifies the current power condition of the device.
The following table shows the valid property values.

Value	Meaning
<i>PowerState.OffOffline</i>	The device is powered off or offline.
<i>PowerState.Online</i>	The device is powered on and ready.
<i>PowerState.Unknown</i>	Cannot determine the device's power state for one of the following reasons: <ul style="list-style-type: none"> • PowerNotify = <i>PowerNotification.Disabled</i> • DeviceEnabled = <i>false</i>

When the Bluetooth model is used, it takes about 30 seconds to update **PowerState** to *PowerState.OffOffline* after the power condition of the device is either power off or offline. And it takes about 10 seconds to update **PowerState** to *PowerState.Online* after the power condition of the device is on and ready.

This property is initialized to *PowerState.Unknown* by **Open**.

ServiceObjectDescription Property

Type **string**

Description A character string that identifies the Service Object is set to this property.
This property depends on **DeviceName**.
This property is initialized in either of the following values by **Open**.

DeviceName	Value
"RP-F10/G10 Cash Drawer"	"SII RP-F10/G10 Cash Drawer Service Object, Copyright (C) 20xx Seiko Instruments Inc."
"RP-E10 Cash Drawer"	"SII RP-E10 Cash Drawer Service Object, Copyright (C) 20xx Seiko Instruments Inc."

ServiceObjectVersion Property

Type	Version
Description	<p>Holds the Service Object version number.</p> <p>Version numbers consist of four integers, Major, Minor, Build, and Revision.</p> <p>The Major and Minor version numbers should be set to the UPOS version that the Service Object implements.</p> <p>For example, when Build version is A, Revision version is B, this property is initialized "1.12.A.B" by Open.</p>

State Property

Type	ControlState
Description	<p>Contains the current state of the device.</p> <p>The following table shows the valid property values.</p>

Value	Meaning
<i>ControlState.Busy</i>	The device is in a normal state and is busy executing output.
<i>ControlState.Closed</i>	The device is closed.
<i>ControlState.Error</i>	An error has been reported, and the application must recover the Control to a normal state before normal I/O can resume. This state is only possible inside the ErrorEvent event handler.
<i>ControlState.Idle</i>	The device is in a good state and is not busy.

This property is always readable.

This property is initialized to *ControlState.Idle* by **Open**.

SynchronizingObject Property

Type	System.ComponentModel.ISynchronizeInvoke
Description	<p>Contains an instance of the ISynchronizeInvoke class. Applications can use this property to specify the thread events that are to be delivered on.</p> <p>If SynchronizingObject is set to null, events are delivered on an internal thread owned by the Service Object.</p> <p>Applications using Windows Forms should set SynchronizationObject to the <i>this</i> pointer of the main Form class so that events are delivered on the main application thread as required by the Form class.</p>

4.2.3 Specific Properties

This section describes the details of the specific properties for CashDrawer.
For details of the thrown exception errors, see "Appendix A Exceptions".

CapStatus Property

Type **bool**

Description Indicates whether the status of the cash drawer, open or closed, can be reported.
The following table shows the valid property values.

Value	Meaning
<i>true</i>	The cash drawer can report its status, open or closed.

This property is initialized to *true* by **Open**.

CapStatusMultiDrawerDetect Property

Type **bool**

Description Indicates whether the status of each cash drawer in multiple cash drawer configuration can be reported.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The status unique to each cash drawer in multiple cash drawer configuration cannot be reported.

This property is initialized to *false* by **Open**.

DrawerOpened Property

Type **bool**

Description Gets the Boolean value that indicates whether the cash drawer is open.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The cash drawer is closed.
<i>true</i>	The cash drawer is open.

The value indicated by this property is different depending on the setting value of [InvertDrawerStatus] in the configuration program.

·In the case of selecting [Disable]:

When the sensor status is "Low", this property indicates *true*.

·In the case of selecting [Enable]:

When the sensor status is "High", this property indicates *true*.

This property is initialized while the device is enabled and keeps the current state.

4.2.4 Common Methods

This section describes the details of the common methods for CashDrawer.
For details of the thrown exception errors, see "Appendix A Exceptions".

CheckHealth Method

Syntax `string CheckHealth(HealthCheckLevel level);`

Parameter	Meaning
<i>level</i>	Specifies the type of health check to be executed on the device.

• Values of *level*

Value	Meaning
<i>HealthCheckLevel.External</i>	Executes a complete test using the device. Attempts to open the cash drawer. When the cash drawer is in open state, "External HCheck: Successful" is returned. This method fails when another application has exclusive access to the device.
<i>HealthCheckLevel.Interactive</i>	Executes an interactive test of the device. Displays a modal dialog box to execute a complete test using the device and display results.
<i>HealthCheckLevel.Internal</i>	Executes a health check without using the device physically. "Internal HCheck: Successful" is always returned.

Description Tests the status of the device.
A text description of the results of this method is placed in **CheckHealthText**.

Claim Method

Syntax `void Claim(int timeout);`

Parameter	Meaning
<i>timeout</i>	Specifies the maximum waiting time (in milliseconds) for exclusive access. If it is 0, the method returns the result immediately even if exclusive access of the device cannot be obtained. If <i>WaitForever</i> (-1) is set, the method waits until exclusive access is obtained.

Description Requests exclusive access to the device.
Acquisition of exclusive access is not essential since the CashDrawer device is a sharable device.
When it is successful, **Claimed** is set to *true*.
When the power is OFF or the cable is not connected, **Claim** is not available.

Close Method

Syntax **void Close();**

Description Releases the device and its resources.
If **DeviceEnabled** is *true*, the device is first disabled.
If **Claimed** is *true*, exclusive access to the device is first released.
Do not execute this method while the event is in progress (or in the event handler).

CompareFirmwareVersion Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **CompareFirmwareResult CompareFirmwareVersion(string firmwareFileName);**

DirectIO Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **DirectIOData DirectIO(int command, int data, object obj);**

Open Method

Syntax **void Open();**

Description Opens the device.
When **Open** is successful, the common properties and other class-specific properties are initialized.

Release Method

Syntax **void Release();**

Description Releases exclusive access to the device.
This method does not affect the device enabled state.
Do not execute this method while the event is in progress (or in the event handler).

ResetStatistic(string) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void ResetStatistic(string statistic);**

ResetStatistics() Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void ResetStatistics();**

ResetStatistics(StatisticCategories) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void ResetStatistics(StatisticCategories *statistics*);**

ResetStatistics(string[]) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void ResetStatistics(string[] *statistics*);**

RetrieveStatistic(string) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **string RetrieveStatistic(string *statistic*);**

RetrieveStatistics() Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **string RetrieveStatistics();**

RetrieveStatistics(StatisticCategories) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **string RetrieveStatistics(StatisticCategories *statistics*);**

RetrieveStatistics(string[]) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **string RetrieveStatistics(string[] *statistics*);**

UpdateFirmware Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void UpdateFirmware(string *firmwareFileName*);**

UpdateStatistic Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void UpdateStatistic(string *name*, object *value*);**

UpdateStatistics(Statistic[]) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void UpdateStatistics(Statistic[] *statistics*);**

UpdateStatistics(StatisticCategories, Object) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void UpdateStatistics(StatisticCategories *statistics*, object *value*);**

4.2.5 Specific Methods

This section describes the details of the specific methods for CashDrawer. For details of the thrown exception errors, see "Appendix A Exceptions".

OpenDrawer Method

Syntax	void OpenDrawer();
Description	Opens the cash drawer. This method fails when another application has exclusive access to the device.

WaitForDrawerClose Method

Syntax	void WaitForDrawerClose(int <i>beepTimeout</i>, int <i>beepFrequency</i>, int <i>beepDuration</i>, int <i>beepDelay</i>);
Description	Waits until the cash drawer is closed. This method does not return control to the application until DrawerOpened is <i>false</i> or the printer is powered off. The alert beeper is not supported. This method fails when another application has exclusive access to the device.

4.2.6 Events

This section describes the details of CashDrawer events.

StatusUpdateEvent Event

Syntax **StatusUpdateEventHandler StatusUpdateEvent;**

Description This event is notified when the open/close state of the cash drawer is changed.
When **CapStatus** is *false*, the device cannot report the state change and this event is not notified.

StatusUpdateEventArgs.Status is set to one of the following values:

Value	Meaning
<i>StatusClosed</i> (0)	The cash drawer is closed.
<i>StatusOpen</i> (1)	The cash drawer is open.
<i>StatusIdle</i> (1001)	All the asynchronous outputs finished either successfully or by being cleared. State is now <i>ControlState.Idle</i> . FlagWhenIdle must be <i>true</i> for this event to be notified. Then, the Service Object automatically resets the property to <i>false</i> before the event is notified.
<i>StatusPowerOnline</i> (2001)* ¹	The device is powered on and ready.
<i>StatusPowerOffOffline</i> (2004)* ¹	The device is powered off or offline.

*1: This is notified when **PowerNotify** = *PowerNotification.Enabled*.

When the Bluetooth model is used, it takes about 30 seconds to notify *StatusPowerOffOffline*(2004) after the power condition of the device is either power off or offline.
And it takes about 10 seconds to notify *StatusPowerOnline*(2001) after the power condition of the device is on and ready.

4.3 Scanner

Supported only by RP-F10.

4.3.1 Summary

(1) Common Properties

Property Name	Type	Access	Availability Condition	Default
AutoDisable	bool	R/W	Open	<i>false</i>
CapCompareFirmwareVersion	bool	R	Open	<i>false</i>
CapPowerReporting	PowerReporting	R	Open	<i>Standard</i>
CapStatisticsReporting	bool	R	Open	<i>false</i>
CapUpdateFirmware	bool	R	Open	<i>false</i>
CapUpdateStatistics	bool	R	Open	<i>false</i>
CheckHealthText	string	R	Open	""
Claimed	bool	R	Open	<i>false</i>
DataCount	int	R	Open	0
DataEventEnabled	bool	R/W	Open	<i>false</i>
DeviceDescription	string	R	Open	"SII RP-F10 Scanner"
DeviceEnabled	bool	R/W	Open & Claim	<i>false</i>
DeviceName	string	R	Open	"RP-F10 Scanner"
FreezeEvents	bool	R/W	Open & Claim	<i>false</i>
PowerNotify	PowerNotification	R/W	Open	<i>Disabled</i>
PowerState	PowerState	R	Open	<i>Unknown</i>
ServiceObjectDescription	string	R	Open	"SII RP-F10 Scanner Service Object, Copyright(C) 20xx Seiko Instruments Inc."
ServiceObjectVersion	Version	R	Open	1.12.x.x
State	ControlState	R	-	<i>Idle</i>
SynchronizingObject	System.ComponentModel.ISynchronizeInvoke	R/W	Open	Depends on the application.

(2) Specific Properties

Property Name	Type	Access	Availability Condition	Default
DecodeData	bool	R/W	Open	<i>false</i>
ScanData	byte[]	R	Open	[]
ScanDataLabel	byte[]	R	Open	[]
ScanDataType	BarCodeSymbology	R	Open	<i>Unknown</i>

(3) Common Methods

Method Name	Availability Condition
CheckHealth	Open, Claim, & Enable
Claim	Open
ClearInput	Open & Claim
ClearInputProperties	Open & Claim
Close	Open
CompareFirmwareVersion	Open, Claim, & Enable
DirectIO	Open, Claim, & Enable
Open	-
Release	Open & Claim
ResetStatistic(string)	Open, Claim, & Enable
ResetStatistics()	Open, Claim, & Enable
ResetStatistics(StatisticCategories)	Open, Claim, & Enable
ResetStatistics(string[])	Open, Claim, & Enable
RetrieveStatistic(string)	Open, Claim, & Enable
RetrieveStatistics()	Open, Claim, & Enable
RetrieveStatistics(StatisticCategories)	Open, Claim, & Enable
RetrieveStatistics(string[])	Open, Claim, & Enable
UpdateFirmware	Open, Claim, & Enable
UpdateStatistic	Open, Claim, & Enable
UpdateStatistics(Statistic[])	Open, Claim, & Enable
UpdateStatistics(StatisticCategories, Object)	Open, Claim, & Enable

(4) Events

Event Name	Availability Condition
DataEvent	Open, Claim, & Enable ^{*1}
DirectIOEvent	Open & Claim
ErrorEvent	Open, Claim, & Enable
StatusUpdateEvent	Open, Claim, & Enable

^{*1}: The availability condition differs from that of UPOS V 1.12.

4.3.2 Common Properties

This section describes the details of the common properties for Scanner.
For details of the thrown exception errors, see "Appendix A Exceptions".

AutoDisable Property R/W

Type **bool**

Description This property applies only to event-driven input devices. This property provides the application with an additional option for controlling the receipt of input data. If an application wants to receive and process only one input, or only one input at a time, then this property should be set to *true*.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The Service Object does not automatically disable the device when data is received.
<i>true</i>	As soon as the Service Object receives and enqueues data to be fired as a DataEvent , then DeviceEnabled is set to <i>false</i> . Before any additional input can be received, the application must set DeviceEnabled to <i>true</i> .

This property is initialized to *false* by **Open**.

CapCompareFirmwareVersion Property

Type **bool**

Description Indicates whether the version of the firmware can be compared.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The function that compares firmware versions is not supported.

This property is initialized to *false* by **Open**.

CapPowerReporting Property

Type **PowerReporting**

Description Identifies the reporting capabilities of the device.
The following table shows the valid property values.

Value	Meaning
<i>PowerReporting.Standard</i>	The following 2 types of power states can be determined and reported. <ul style="list-style-type: none">• <i>PowerState.OffOffline</i> (power off or offline)• <i>PowerState.Online</i>

This property is initialized to *PowerReporting.Standard* by **Open**.

CapStatisticsReporting Property

Type **bool**

Description Indicates the statistics accumulation function of the device.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The statistics accumulation function of the device is not supported.

This property is initialized to *false* by **Open**.

CapUpdateFirmware Property

Type **bool**

Description Indicates whether the device supports firmware updating.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	Firmware update is not supported.

This property is initialized to *false* by **Open**.

CapUpdateStatistics Property

Type **bool**

Description Indicates the function that some or all the device statistics can be reset.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The statistic reset function of the device is not supported.

This property is initialized to *false* by **Open**.

CheckHealthText Property

Type **string**

Description Holds the results of the most recent call to **CheckHealth**.
The results of diagnosis are as follows.

Method Parameter	Method Result	CheckHealthText
<i>HealthCheckLevel.External</i>	Success	"External HCheck: Successful"
	Fail	"External HCheck: Failure"
<i>HealthCheckLevel.Interactive</i>	Success	"Interactive HCheck: Successful"
	Fail	"Interactive HCheck: Failure"
<i>HealthCheckLevel.Internal</i>	Success	"Internal HCheck: Successful"
	Fail	"Internal HCheck: Failure"

This property is initialized to empty string by **Open**.

Claimed Property

Type **bool**

Description Indicates whether the device is claimed for exclusive access.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The device is released for sharing with other applications.
<i>true</i>	The exclusive access to the device is obtained.

This property is initialized to *false* by **Open**.

DataCount Property

Type **int**

Description Holds the number of enqueued **DataEvent** at the control.
The application may interrogate this property to determine whether additional input is enqueued from a device, but has not yet been delivered because of other application processing or freezing of events, or other causes.

This property is initialized to 0 by **Open**.

DataEventEnabled Property R/W

Type **bool**

Description Delivers a **DataEvent** after input data is enqueued.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	Input data is queued in the Service Object. Also, if an input error occurs, the ErrorEvent is not delivered while DataEventEnabled is <i>false</i> .
<i>true</i>	A DataEvent will be delivered as soon as input data is enqueued. If some input data is already queued, a DataEvent is delivered immediately when this property is changed to <i>true</i> . However, if FreezeEvents is <i>true</i> or another event is already being processed at the application, input data will be enqueued at the Service Object until the buffer condition is corrected.

This property is initialized to *false* by **Open**.

DeviceDescription Property

Type **string**

Description Identifies the device and any pertinent information about it.
This property depends on **DeviceName**.
This property is initialized to the following values by **Open**.

DeviceName	Value
"RP-F10 Scanner"	"SII RP-F10 Scanner"

DeviceEnabled Property R/W

Type **bool**

Description Indicates whether the device has been placed in an operational state.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The device has been disabled. If changed to <i>false</i> , then the device is disabled.
<i>true</i>	The device has been placed in an operational state. If changed to <i>true</i> , then the device is brought to an operational state.

The application must set this property to *true* before using the device.

If **State** is other than *ControlState.Idle*, **DeviceEnabled** cannot be changed from *true* to *false*.

This property is initialized to *false* by **Open**.

DeviceName Property

Type **string**

Description Identifies the device and any pertinent information about it.
This property is initialized to the following values by **Open**.

Printer	Value
RP-F10	"RP-F10 Scanner"

FreezeEvents Property R/W

Type **bool**

Description Selects whether to notify events.
The following table shows the valid property values.

Value	Meaning
<i>false</i>	The application allows events to be delivered. If some events have been held while events were frozen and all other conditions are correct for delivering the events, changing FreezeEvents to <i>false</i> will allow these events to be delivered.
<i>true</i>	The application has requested that the Service Object not deliver events. Events will be enqueued by the Service Object but not delivered until the application changes FreezeEvents to <i>false</i> .

An application may choose to freeze events for a specific sequence of code where interruption by an event is not desirable.

This property is initialized to *false* by **Open**.

PowerNotify Property R/W

Type **PowerNotification**

Description Contains the type of power notification selection made by the application.
The following table shows the valid property values.

Value	Meaning
<i>PowerNotification.Disabled</i>	The Service Object will not provide any power notifications to the application. No power notification StatusUpdateEvents will be fired, and PowerState will not be set.
<i>PowerNotification.Enabled</i>	The Service Object will fire the power notification StatusUpdateEvents and update PowerState beginning when DeviceEnabled is set to <i>true</i> . The level of functionality depends upon CapPowerReporting .

PowerNotify may only be set while the device is disabled; that is, while **DeviceEnabled** is *false*.

This property is initialized to *PowerNotification.Disabled* by **Open**.

PowerState Property

Type **PowerState**

Description Identifies the current power condition of the device.
The following table shows the valid property values.

Value	Meaning
<i>PowerState.OffOffline</i>	The device is powered off or offline.
<i>PowerState.Online</i>	The device is powered on and ready for use.
<i>PowerState.Unknown</i>	Cannot determine the device's power state for one of the following reasons: <ul style="list-style-type: none">• PowerNotify = <i>PowerNotification.Disabled</i>.• DeviceEnabled = <i>false</i>.

This property is initialized to *PowerState.Unknown* by **Open**.

ServiceObjectDescription Property

Type **string**

Description A character string that identifies the Service Object is set to this property.
This property is initialized to the following values by **Open**.

DeviceName	Value
"RP-F10 Scanner"	"SII RP-F10 Scanner Service Object, Copyright (C) 20xx Seiko Instruments Inc."

ServiceObjectVersion Property

Type **Version**

Description Holds the Service Object version number.
Version numbers consist of four integers, Major, Minor, Build, and Revision.
The Major and Minor version numbers should be set to the UPOS version that the Service Object implements.
For example, when Build version is A, Revision version is B, this property is initialized "1.12.A.B" by **Open**.

State Property

Type **ControlState**

Description Contains the current state of the device.
The following table shows the valid property values.

Value	Meaning
<i>ControlState.Closed</i>	The device is closed.
<i>ControlState.Idle</i>	The device is in a good state and is not busy.

This property is always readable.

This property is initialized to *ControlState.Idle* by **Open**.

SynchronizingObject Property

Type **System.ComponentModel.ISynchronizeInvoke**

Description Contains an instance of the **ISynchronizeInvoke** class. Applications can use this property to specify the thread events that are to be delivered on.
If **SynchronizingObject** is set to null, events are delivered on an internal thread owned by the Service Object.
Applications using Windows Forms should set **SynchronizationObject** to the *this* pointer of the main **Form** class so that events are delivered on the main application thread as required by the **Form** class.

4.3.3 Specific Properties

This section describes the details of the specific properties for Scanner.
For details of the thrown exception errors, see "Appendix A Exceptions".

DecodeData Property

Type **bool**

Description The following table shows the valid property values.

Value	Meaning
<i>false</i>	Not decode ScanData .
<i>true</i>	Decode ScanData into ScanDataLabel and ScanDataType *1.

*1: **ScanDataType** is not supported.

This property is initialized to *false* by **Open**.

ScanData Property

Type **bool**

Description Holds the barcode data read from the scanner.

This property is initialized to [] string by **Open**.

ScanDataLabel Property

Type **bool**

Description Barcode data held in **ScanData** is decoded into this property according to the value of **DecodeData**.

The following table shows the valid property values.

DecodeData	ScanDataLabel
<i>false</i>	An empty string ("") is set to this property.
<i>true</i>	Characters that can be displayed in text such as alphanumeric characters and symbols are decoded to this property.

This property is initialized to [] by **Open**.

DecodeData Property

Type **BarCodeSymbology**

Description This property is not supported.

BarCodeSymbology.Unknown is always set to this property.

4.3.4 Common Methods

This section describes the details of the common methods for Scanner.
For details of the thrown exception errors, see "Appendix A Exceptions".

CheckHealth Method

Syntax **string CheckHealth(HealthCheckLevel *level*);**

Parameter	Meaning
<i>level</i>	Specifies the type of health check to be executed on the device.

• Values of *level*

Value	Meaning
<i>HealthCheckLevel.External</i>	Confirms whether the scanner is connected.
<i>HealthCheckLevel.Interactive</i>	Executes an interactive test of the device, displays the modal dialog, and waits for the scanner to scan the barcode data.
<i>HealthCheckLevel.Internal</i>	Confirms whether the scanner is connected.

Description Tests the status of the device.
A text description of the results of this method is placed in **CheckHealthText**.
CheckHealth is always executed synchronously.

Claim Method

Syntax **void Claim(int *timeout*);**

Parameter	Meaning
<i>timeout</i>	Specifies the maximum waiting time (in milliseconds) for exclusive access. If it is 0, the method returns the result immediately even if exclusive access of the device cannot be obtained. If <i>WaitForever</i> (-1) is set, the method waits until exclusive access is obtained.

Description Requests exclusive access to the device.
The Scanner device cannot be used until the exclusive access is obtained.
When it is successful, **Claimed** is set to *true*.
When the power is OFF or the cable is not connected, **Claim** is not available.

ClearInput Method

Syntax	void ClearInput();
Description	Call to clear all device input that has been buffered. Any data events or input error events that are enqueued (usually waiting for DataEventEnabled to be set to <i>true</i> and FreezeEvents to be set to <i>false</i>) are also cleared.

ClearInputProperties Method

Syntax	void ClearInputProperties();
Description	Call to clear all data properties delivered from DataEvent . This method does not reset DataCount and State .

Close Method

Syntax	void Close();
Description	Releases the device and its resources. If DeviceEnabled is <i>true</i> , the device is first disabled. If Claimed is <i>true</i> , exclusive access to the device is first released. Do not execute this method while the event is in progress (or in the event handler).

CompareFirmwareVersion Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax	CompareFirmwareResult CompareFirmwareVersion(string firmwareFileName);
--------	---

DirectIO Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax	DirectIOData DirectIO(int command, int data, object obj);
--------	--

Open Method

Syntax	void Open();
Description	Opens the device. When Open is successful, the common properties and other class-specific properties are initialized.

Release Method

Syntax **void Release();**

Description Releases exclusive access to the device.
If **DeviceEnabled** is *true*, and the device is an exclusive-use device, then the device is first disabled.
Do not execute this method while the event is in progress (or in the event handler).

ResetStatistic(string) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void ResetStatistic(string *statistic*);**

ResetStatistics() Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void ResetStatistics();**

ResetStatistics(StatisticCategories) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void ResetStatistics(StatisticCategories *statistics*);**

ResetStatistics(string[]) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void ResetStatistics(string[] *statistics*);**

RetrieveStatistic(string) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **string RetrieveStatistic(string *statistic*);**

RetrieveStatistics() Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **string RetrieveStatistics();**

RetrieveStatistics(StatisticCategories) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **string** RetrieveStatistics(**StatisticCategories** *statistics*);

RetrieveStatistics(string[]) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **string** RetrieveStatistics(**string[]** *statistics*);

UpdateFirmware Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void** UpdateFirmware(**string** *firmwareFileName*);

UpdateStatistic Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void** UpdateStatistic(**string** *name*, **object** *value*);

UpdateStatistics(Statistic[]) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void** UpdateStatistics(**Statistic[]** *statistics*);

UpdateStatistics(StatisticCategories, Object) Method

This method is not supported. For the thrown exception errors, see "Appendix A Exceptions".

Syntax **void** UpdateStatistics(**StatisticCategories** *statistics*, **object** *value*);

4.3.5 Events

This section describes the details of Scanner events.

DataEvent Event

Syntax **DeviceDataEventHandler DataEvent;**

Description Notifies to the application that input data from the scanner is available.
Barcode data is set to **ScanData**, **ScanDataLabel** and **ScanDataType**^{*1} before this event is notified.

^{*1}: **ScanDataType** is not supported.

DirectIOEvent Event

This event is not supported.

Syntax **DirectIOEventHandler DirectIOEvent;**

ErrorEvent Event

This event is not supported.

Syntax **DeviceErrorEventHandler ErrorEvent;**

StatusUpdateEvent Event

Syntax **StatusUpdateEventHandler StatusUpdateEvent;**

Description This event is notified when an important state change has occurred in the device.
The Service Object notifies the first **StatusUpdateEvent** when the device is enabled.

StatusUpdateEventArgs.Status is set to one of the following values:

Value	Meaning
<i>StatusPowerOnline(2001)</i> ^{*1}	The device is powered on and ready.
<i>StatusPowerOffOffline(2004)</i> ^{*1}	The device is powered off or offline.

^{*1}: Notified when **PowerNotify** = *PowerNotification.Enabled*.

Appendix A Exceptions

A.1 PosPrinter Exception Error List

(1) Property

ErrorCode	ErrorCode Extended	Meaning
Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
Illegal	0	This property is not supported. Parameter has an error.
NotClaimed	0	Exclusive access is not available. Call Claim to gain exclusive access.

(2) Method

Method	ErrorCode	ErrorCode Extended	Meaning
BeginInsertion BeginRemoval ChangePrintSide CompareFirmwareVersion EndInsertion EndRemoval MarkFeed PrintTwoNormal UpdateFirmware UpdateStatistic(s)	Illegal	0	This method is not supported.
CheckHealth	Busy	0	Cannot perform while output is in progress or an error occurs.
	Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
	Illegal	0	Parameter has an error.
	NotClaimed	0	Exclusive access is not available. Call Claim to gain exclusive access.
Claim	Claimed	0	Attempt was made to access a device that is exclusively accessed by another process.
	Failure	0	Communication with the printer failed.

Method	ErrorCode	ErrorCode Extended	Meaning
Claim	Illegal	0	Parameter has an error.
	NoHardware	0	The printer is powered off or the cable is not connected.
	Timeout	0	Another application has exclusive access to the device and the <i>timeout</i> (in milliseconds) has elapsed before the device is released. Or the device did not become available even though the <i>timeout</i> (in milliseconds) has elapsed.
ClearOutput	NotClaimed	0	Exclusive access is not available. Call Claim to gain exclusive access.
ClearPrintArea	Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
	NotClaimed	0	Exclusive access is not available. Call Claim to gain exclusive access.
Close	Busy	0	State is set to <i>ControlState.Busy</i> . This means that the device is busy and cannot be stopped.
	Closed	0	The device is already closed.
Open	Illegal	0	The device is already open.
CutPaper DirectIO PageModePrint PrintBarcode PrintBitmap PrintMemoryBitmap PrintNormal PrintImmediate RotatePrint SetBitmap TransactionPrint	Busy	0	Cannot perform while output is in progress or an error occurs.
	Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
	Extended	201	The printer cover is open.
	Extended	203	The receipt is out of paper.
	Extended	1001	A Vp voltage error occurred.
	Extended	1002	An autocutter error has occurred.
	Extended	1005	A head temperature error occurred.
	Extended	1010	An unrecoverable error occurred.
	Failure	0	Communication with the printer failed.
	Illegal	0	Parameter has an error. Rotated printing or page printing is in progress. (CutPaper) PageModeStation is not specified. (PageModePrint)
	NoHardware	0	The printer is powered off or the cable is not connected.
	NotClaimed	0	Exclusive access is not available. Call Claim to gain exclusive access.
	Timeout	0	Data transmit timeout or data receive timeout has occurred.
Release	NotClaimed	0	The device is not exclusive.
ValidateData	Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
	Failure	0	At least one of the escape sequences is not supported. No alternatives can be selected.

Method	ErrorCode	ErrorCode Extended	Meaning
ValidateData	Illegal	0	At least one of the escape sequences is out of the range. However, the Service Object can select valid alternatives. Also, this value is placed when the escape sequence is not supported by the Page Mode or rotated 90° left or right print mode.
	Illegal	0	Parameter has an error.
	NotClaimed	0	Exclusive access is not available. Call Claim to gain exclusive access.

ErrorCode.Illegal is thrown for **ValidateData** in the following cases:

Escape Sequence	Condition
Paper cut	It is in one of the following states. <ul style="list-style-type: none"> Percentage '#' is not precisely supported. Not supported during rotated 90° right/left mode by RotatePrint. Not supported during Page Mode by PageModePrint.
Feed and Paper cut	It is in one of the following states. <ul style="list-style-type: none"> Percentage '#' is not precisely supported. Not supported during rotated 90° right/left mode by RotatePrint. Not supported during Page Mode by PageModePrint.
Print bitmap	No printable bitmap exists.
Feed lines	It is in one of the following states. <ul style="list-style-type: none"> The number of lines '#' is not correct. Not supported during rotated 90° right/left mode by RotatePrint. Not supported during Page Mode by PageModePrint.
Feed units	It is in one of the following states. <ul style="list-style-type: none"> The amount of feed '#' is not precisely supported due to occurrence of rounding error of one dot depending on the setting of MapMode. The amount of feed '#' is not correct. Not supported during rotated 90° right/left mode by RotatePrint. Not supported during Page Mode by PageModePrint.
Pass through embedded data	The number of bytes of embedded data '#' is not correct.
Print in-line barcode	The character string following ESC #R is not correct.
Underline	The thickness '#' is not correct.
Scale vertically	The scale factor '#' is not correct.
Scale horizontally	The scale factor '#' is not correct.
Left justify	It is in one of the following states. <ul style="list-style-type: none"> Not supported during rotated 90° right/left mode by RotatePrint. Not supported during Page Mode by PageModePrint.
Center	It is in one of the following states. <ul style="list-style-type: none"> Not supported during rotated 90° right/left mode by RotatePrint. Not supported during Page Mode by PageModePrint.
Right justify	It is in one of the following states. <ul style="list-style-type: none"> Not supported during rotated 90° right/left mode by RotatePrint. Not supported during Page Mode by PageModePrint.

ErrorCode.Failure is thrown for **ValidateData** in the following cases:

Escape Sequence	Condition
Feed, Paper cut, and Stamp	Not supported.
Print bitmap	The bitmap number '#' is not correct.
Print stamp	Not supported.
Feed reverse	Not supported.
Font typeface	Not supported.
Italic	Not supported.
Custom color	Not supported.
Red color	Not supported.
Shading character	Not supported.
Color option	Not supported.
SubScript	Not supported.
SuperScript	Not supported.
Strike-through	Not supported.

A.2 CashDrawer Exception Error List

(1) Property

ErrorCode	ErrorCode Extended	Meaning
Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
Illegal	0	This property is not supported. Parameter has an error.

(2) Method

Method	ErrorCode	ErrorCode Extended	Meaning
CompareFirmwareVersion UpdateFirmware UpdateStatistic(s) ResetStatistic(s) RetrieveStatistic(s)	Illegal	0	This method is not supported.
CheckHealth	Busy	0	Cannot perform while output is in progress or an error occurs.
	Claimed	0	Attempt was made to access a device that is exclusively accessed by another process.
	Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
	Failure	0	Could not confirm that the cash drawer was opened.
	Illegal	0	Parameter has an error.
Claim	Claimed	0	Attempt was made to access a device that is exclusively accessed by another process.
	Failure	0	Communication with the printer failed.
	Illegal	0	Parameter has an error.
	NoHardware	0	The printer is powered off or the cable is not connected.
	Timeout	0	Another application has exclusive access to the device and the <i>timeout</i> (in milliseconds) has elapsed before the device is released. Or the device did not become available even though the <i>timeout</i> (in milliseconds) has elapsed.
Close	Closed	0	The device is already closed.
Open	Illegal	0	The device is already open.
OpenDrawer	Claimed	0	Attempt was made to access a device that is exclusively accessed by another process.
	Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .

Method	ErrorCode	ErrorCode Extended	Meaning
OpenDrawer	Failure	0	Communication with the printer failed.
	NoHardware	0	The printer is powered off or the cable is not connected.
	Timeout	0	Data transmit timeout or data receive timeout has occurred.
WaitForDrawerClose	Claimed	0	Attempt was made to access a device that is exclusively accessed by another process.
	Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
	NoHardware	0	The printer is powered off or the cable is not connected.
Release	NotClaimed	0	The device is not exclusive.

A.3 Scanner Exception Error List

Supported only by RP-F10.

(1) Property

ErrorCode	ErrorCode Extended	Meaning
Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
Illegal	0	This property is not supported. Parameter has an error.
NotClaimed	0	Exclusive access is not available. Call Claim to gain exclusive access.

(2) Method

Method	ErrorCode	ErrorCode Extended	Meaning
CompareFirmwareVersion DirectIO ResetStatistic(s) RetrieveStatistic(s) UpdateFirmware UpdateStatistic(s)	Illegal	0	This method is not supported.
CheckHealth	Busy	0	Cannot perform while output is in progress or an error occurs.
	Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
	Failure	0	Communication with the scanner failed.
	Illegal	0	Parameter has an error.
	Nohardware	0	The scanner is powered off or the cable is not connected.
	NotClaimed	0	Exclusive access is not available. Call Claim to gain exclusive access.
	Timeout	0	Another application has exclusive access to the device and the <i>timeout</i> (in milliseconds) has elapsed before the device is released. Or the device did not become available even though the <i>timeout</i> (in milliseconds) has elapsed.
Claim	Claimed	0	Attempt was made to access a device that is exclusively accessed by another process.
	Failure	0	Communication with the scanner failed.
	Illegal	0	Parameter has an error.
	NoHardware	0	The scanner is powered off or the cable is not connected.

Method	ErrorCode	ErrorCode Extended	Meaning
Claim	Timeout	0	Another application has exclusive access to the device and the <i>timeout</i> (in milliseconds) has elapsed before the device is released. Or the device did not become available even though the <i>timeout</i> (in milliseconds) has elapsed.
ClearInput ClearInputProperties	NotClaimed	0	Exclusive access is not available. Call Claim to gain exclusive access.
	Disabled	0	Not enabled. Call this after setting DeviceEnabled to <i>true</i> .
Close	Closed	0	The device is already closed.
Open	Failure	0	Initialization failed.
	Illegal	0	The device is already open.
Release	NotClaimed	0	The device is not exclusive.

Appendix B Statistics

(1) StatisticCategories.Upos

XML Definition Name	Response	Can Be Reset
JournalCoverOpenCount	0	-
ReceiptLineFeedCount	Number of receipt line feeds performed (unit: 100 dot-line)	✓
PrintSideChangeCount	0	-
ReceiptCharacterPrintedCount	0	-
ReceiptCoverOpenCount	0	-
ManufactureDate	Unknown	-
PaperCutCount	Number of paper cuts	-
UnifiedPOSVersion	1.12	-
SlipCoverOpenCount	0	-
HoursPoweredCount	Number of hours powered on (unit: hour)	✓
FirmwareRevision	Firmware version	-
SerialNumber	Unknown	-
ReceiptLinePrintedCount	0	-
InstallationDate	Unknown	-
MechanicalRevision	RP-F10, RP-G10 25 RP-E10 1A	-
FailedPaperCutCount	0	-
StampFiredCount	0	-
FailedPrintSideChangeCount	0	-
JournalCharacterPrintedCount	0	-
SlipCharacterPrintedCount	0	-
ManufacturerName	Seiko Instruments Inc.	-

XML Definition Name	Response	Can Be Reset
PrinterFaultCount	0	-
MaximumTempReachedCount	0	-
ModelName	RP-F10/G10 RP-E10	-
CommunicationErrorCount	0	-
JournalLinePrintedCount	0	-
SlipLineFeedCount	0	-
HomeErrorCount	0	-
FormInsertionCount	0	-
Interface	Unknown	-
DeviceCategory	POSPrinter	-
BarcodePrintedCount	0	-
NVRAMWriteCount	0	-
SlipLinePrintedCount	0	-

(2) StatisticCategories.Manufacturer

XML Definition Name	Response	Can Be Reset
HoursPoweredCount_Accumulated	Number of hours powered on (unit: hour) (accumulated)	-
PaperCutCount_Accumulated	Number of paper cuts (accumulated)	-
ReceiptLineFeedCount_Accumulated	Number of receipt line feeds performed (unit: 100 dot-line) (accumulated)	-