



SII Print Class Library for iOS Application Programmer's Guide

Rev.13

[Products]

MP-B20 Series

Seiko Instruments Inc.

Rev.01	March 2017
Rev.02	February 2018
Rev.03	February 2018
Rev.04	February 2019
Rev.05	August 2019
Rev.06	March 2020
Rev.07	March 2022
Rev.08	October 2022
Rev.09	December 2022
Rev.10	April 2023
Rev.11	February 2024
Rev.12	March 2024
Rev.13	January 2025

Copyright © 2017-2025 Seiko Instruments Inc.
All rights reserved.

IOS is a trademark or registered trade mark of Cisco in the U.S. and other countries and is used under license.

iPad®, iPad Air®, iPad mini™, iPhone®, iPod® are trademarks of Apple Inc., registered in the U.S. and other countries.

App StoreSM is a service mark of Apple Inc.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

Company names or product names may be a trademark or registered trademark.

SII reserves the right to make changes without notice to the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical, arithmetic, or listing errors.

INTRODUCTION

This document describes the "SII Print Class Library for iOS" for MP-B20 series (hereinafter referred to as "SII print class library") provided by Seiko Instruments Inc. (hereinafter referred to as "SII").

Target Printer

This section lists the printer supported by SII print class library.

Printer	Interface
MP-B20 Series	Bluetooth

Terms

This section describes terms used in this manual.

Terms	Description
Printer Command	Command for controlling the printer described in "MP-B20 SERIES THERMAL PRINTER TECHNICAL REFERENCE".

Table of Contents

Chapter 1	Product Overview	1-1
1.1	Function Provided by SII Print Class Library	1-1
1.2	SII Print Class Library Overview	1-1
1.2.1	SII Print Class Library Configuration	1-1
1.2.2	Function Provided by Library	1-2
1.2.3	Development of Application that Performs Bluetooth Communication with SII Printer	1-2
Chapter 2	Product Specification	2-1
2.1	Operating Environment.....	2-1
2.1.1	Applicable iOS Devices	2-1
2.1.2	Applicable iOS Versions.....	2-1
2.2	Operating Conditions	2-2
2.3	Precaution.....	2-2
Chapter 3	How to Use library	3-1
3.1	Developmental Environment for iOS Application	3-1
3.2	Provided Files	3-2
3.3	Build Library into Xcode Project	3-3
3.3.1	Objective-C.....	3-3
3.3.2	Swift.....	3-7
Chapter 4	Function of Library	4-1
4.1	Log File Output Function	4-1
4.1.1	How to Set Log Output.....	4-1
4.1.2	Log Output Settings	4-1
4.1.3	Log File.....	4-2
4.2	API Reference	4-3
4.2.1	SIIPrinterManager Class	4-4
(1)	Method List	4-4
(2)	Property List.....	4-5
(3)	Constant List.....	4-5
①	Printer model	4-5
②	Port type	4-5
③	Response type.....	4-6
④	Battery remaining capacity level.....	4-6
⑤	International character set	4-6
⑥	Codepage	4-7
⑦	Barcode or PDF417	4-8
(4)	Constant List of Enumerated Type	4-9

①Bold print (CharacterBold)	4-9
②Underline (CharacterUnderline)	4-9
③Reverse print (CharacterReverse)	4-9
④Inversion print (CharacterInversion)	4-9
⑤Character font (CharacterFont)	4-10
⑥Character Scale (CharacterScale)	4-10
⑦Alignment (PrintAlignment).....	4-11
⑧Barcode symbol (BarcodeSymbol).....	4-11
⑨Module size (ModuleSize)	4-12
⑩HRI character print position (HriPosition).....	4-14
⑪N:W ratio (NwRatio).....	4-14
⑫Error correction level (ErrorCorrection)	4-14
⑬PDF417 symbol (Pdf417Symbol)	4-15
⑭QR Code Model (QrModel).....	4-15
⑮Data Matrix Module (DataMatrixModule).....	4-15
⑯MaxiCode Mode (MaxiCodeMode).....	4-16
⑰Cutting method (CuttingMethod)	4-16
⑱Dithering (Dithering)	4-17
⑲Image rotation direction (Rotate).....	4-17
⑳Image scaling (ImageScale).....	4-17
㉑Batch processing selection (TransactionFunction).....	4-17
(5)Method Details	4-18
init Instance	4-18
connect Start communicating with printer	4-18
disconnect Stop communicating with printer	4-18
sendText Send text data	4-19
sendTextEx Send format specified text data.....	4-19
printBarcode Print barcode	4-20
printPDF417 Print PDF417	4-24
printQRcode Print QR Code	4-25
printDataMatrix Print Data Matrix.....	4-26
printMaxiCode Print MaxiCode	4-26
printGS1DataBarStacked Print GS1 Databar Stacked	4-27
printGS1DataBarStackedOmnidirectional Print GS1 Databar Stacked Omni-directional.....	4-27
printGS1DataBarExpandedStacked Print GS1 Databar Expanded Stacked.....	4-28
printAztecCode Print Aztec Code	4-28
cutPaper Cut paper	4-29
feedPosition Paper form feed	4-29
openDrawer Open cash drawer	4-29
buzzer Sound buzzer	4-29
externalBuzzer Sound external buzzer	4-29
sendBinary Send binary data	4-29
sendDataFile Send specified file	4-30
printPDF Print PDF page	4-31

getStatus	Get printer status	4-32
abort	Abort waiting state of printer.....	4-33
registerLogo	Register logo	4-33
printLogo	Print logo	4-34
unregisterLogo	Delete registered logo	4-34
registerStyleSheet	Register style sheet.....	4-34
unregisterStyleSheet	Delete registered style sheet.....	4-34
resetPrinter	Reset printer	4-34
getPrinterResponse	Get various responses from printer	4-35
startDiscoveryPrinter	Start printer search (Bluetooth)	4-36
startDiscoveryPrinter	Start printer search (TCP/IP).....	4-37
cancelDiscoveryPrinter	Cancel printer search	4-37
getFoundPrinter	Get found printer information.....	4-37
getVersion	Get SDK version	4-37
controlTransaction	Start/End batch processing	4-38
(6)Property Details		4-39
sendTimeout	Get/Set send timeout period.....	4-39
receiveTimeout	Get/Set receive timeout period.....	4-39
internationalCharacter	Get/Set international character set.....	4-39
codePage	Get/Set codepage	4-40
printerModel	Get printer model.....	4-40
portType	Get connecting port type	4-40
isConnect	Verify connection state with printer	4-40
socketKeepingTime	Get/Set socket keeping time	4-41
delegate	Register delegate	4-41
4.2.2 SIIPrinterInfo Class		4-42
4.2.3 SIIPrinterException Class		4-43
(1)Method List		4-43
(2)Property List.....		4-43
(3)Constant List.....		4-43
①Error code		4-43
(4)Method Details		4-45
SIIPrinterException Constructor.....		4-45
(5)Property Details		4-45
errorCode	Get error codes	4-45
errorMessage	Get error message	4-45
4.2.4 SIIPrinterManagerDelegate Protocol		4-46
(1)Method List		4-46
(2)Method Details.....		4-46
didStatusChange	Notify printer status	4-46
4.2.5 SIISmartLabelManager Class		4-47

Chapter 5	Sample Program	5-1
5.1	Screen Layout.....	5-1
5.1.1	Main Screen	5-1
5.1.2	[Settings] Screen	5-3
5.2	Precaution.....	5-3
Chapter 6	Disclaimer	6-1
Appendix A	Character Set	A-1
A-1	Codepage Table (Character Code Table)	A-1
A-2	International Character Set.....	A-11
Appendix B	Barcode Size List	
B.1	Barcode Size List.....	B-1
B.1.1	printBarcode	B-1
B.1.2	printPDF417	B-7
B.1.3	printQRCode	B-8
B.1.4	printDataMatrix	B-9
B.1.5	printMaxicode	B-11
B.1.6	printGS1DataBarStacked	B-12
B.1.7	printGS1DataBarStackedOmnidirectional.....	B-13
B.1.8	printGS1DataBarExpandedStacked.....	B-14
Appendix C	Open Source Software License	B-1
C.1	MIT License	C-1
C.2	Apache License 2.0	C-2

Chapter 1

Product Overview

This chapter describes the product overview of SII print class library.

1.1 Function Provided by SII Print Class Library


The SII print class library including the library and the sample programs provides the functions to use SII printer MP-B20 series (hereinafter referred to as "printer") in iOS applications.

Moreover, SII print class library provides Xcode projects as a sample program for SII print class library.

1.2 SII Print Class Library Overview

1.2.1 SII Print Class Library Configuration

The library and the sample programs in SII print class library are indicated with dashed lines in the figure below.

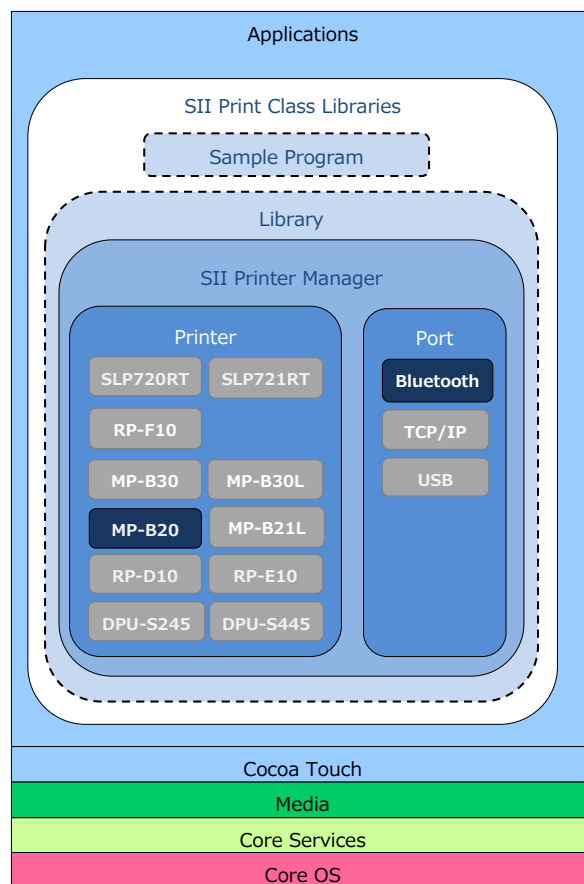

1.2.2 Function Provided by Library

By using the library, iOS applications can easily send print data and printer commands to printer through communication port (Bluetooth) on an iOS device. Also, the applications can get printer status.

The library provides the following functions.

- Connecting to / disconnecting from a printer
- Sending data to a printer (print data and/or printer commands^{*1})
- Printing barcode and 2-dimensional barcode
- Sending a data file to a printer (print data and/or printer commands^{*1})
- Getting the printer status
- Aborting the waiting state of a printer
- Getting various responses from a printer
- Bulk registration of print commands
- Registering a printer status call back function
- Outputting a log file

^{*1}: Commands that reads the response from the printer are not available. In order to read responses from a printer, use `getStatus` or `getPrinterResponse`.

(NOTE) MP-B20 does not support the APIs relating to page mode, Display, the barcode scanner, or label printing function.

1.2.3 Development of Application that Performs Bluetooth Communication with SII Printer

When registering an application that performs Bluetooth communication with a printer to App Store, advance application from SII to Apple is necessary. For details, please contact SII.

Chapter 2

Product Specification

This chapter describes the product specification of the library.

2.1 Operating Environment

2.1.1 Applicable iOS Devices

Applicable iOS devices for the library are shown in the following list.

iPhone models

- iPhone X
- iPhone 8
- iPhone 8 Plus
- iPhone 7
- iPhone 7 Plus
- iPhone SE
- iPhone 6s
- iPhone 6s Plus
- iPhone 6
- iPhone 6 Plus

iPad models

- iPad Pro 12.9-inch (2nd generation)
- iPad Pro 10.5-inch
- iPad (5th generation)
- iPad Pro 9.7-inch
- iPad Pro 12.9-inch (1st generation)
- iPad mini 4
- iPad Air 2
- iPad mini 3

iPod models

- iPod touch (6th generation)

2.1.2 Applicable iOS Versions

Applicable iOS versions for the library are shown in the following list.

- iOS 16 to 16.7.1
- iPadOS 16 to 16.7.1
- iOS 17 to 17.6.1
- iPadOS 17 to 17.6.1
- iOS 18 to 18.2.1
- iPadOS 18 to 18.2.1

2.2 Operating Conditions

This section describes the operating conditions for the library.

Set the Function Setting and Bluetooth Communication Setting of the printer from [Value] in the following table before using the library.

See "MP-B20 SERIES Thermal Printer USER'S GUIDE" for details about Function Setting, Bluetooth Communication Setting and the factory default settings.

- Function Setting

MS	Function	Value
1-1	Interface Selection (Interface)	1: Wireless
3-1	Automatic Status Response Selection (Auto Status Back)	0: Enable
3-2	Initialized Response Selection (Init. Response)	0: Enable
3-3	Realtime Command Selection (Realtime Command)	0: Enable
3-4	Data Discard Selection When Error Occurs (Error Through)	0: Enable

- Bluetooth Communication Setting

See the printer command "Set Bluetooth Communication" in "MP-B20 SERIES THERMAL PRINTER TECHNICAL REFERENCE" for details about Bluetooth communication setting.

Function	Value
iOS Auto Connection	1: Enable* ¹ 0: Disable

*1: Select "Enable" when using `resetPrinter` method.

2.3 Precaution

This library is not thread safe. When this library is used on multiple threads, abnormal termination may occur.

A concurrent connection from multiple apps to one printer is not supported when multiple apps are worked simultaneously by Multitasking on iPad with iPadOS.

Chapter 3

How to Use Library

This chapter describes development environment for iOS application and how to use the library.

3.1 Developmental Environment for iOS Application

In order to develop iOS applications, following tools are required.

- Xcode 12.0 or later

The description in and after this chapter is on the premise that the environment where each tool is available is prepared.

3.2 Provided Files

The file configuration of the SII print class library is as follows.

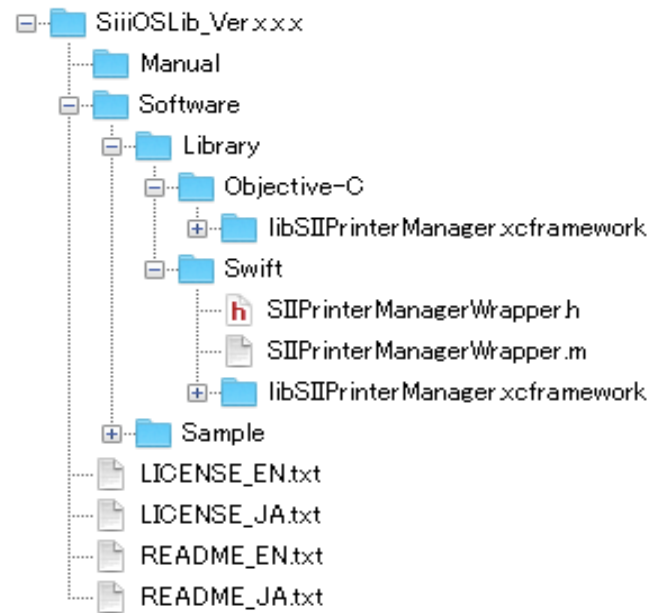


Figure 3-1

The file format of the library is XCFramework. The file name of the library is libSIIPrinterManager.xcframework.

3.3 Build Library into Xcode Project

Using the project of the sample program (SiiLibSample) included in the SII print class library as an example, this section describes by development language how to build the library into the project.

See "Chapter 5 Sample Program" for the sample programs included in SII print class library.


Development language	Description
Objective-C	See "3.3.1 Objective-C" for details to build the library as Objective-C.
Swift	See "3.3.2 Swift" for details to build the library as Swift.

(NOTE) If the following libraries provided SII Print Class Library for iOS Ver. 3.8.0 or earlier versions are included in the target project, delete them all.


- libSiiPrinterManager.a
- SiiPrinterEnum.h
- SiiPrinterException.h
- SiiPrinterManager.h
- SiiSmartLabelManager.h

3.3.1 Objective-C


- (1) Open the Xcode project.
- (2) Drag the following files to any hierarchy in the target project in the [Project Navigator] of the navigation window.
 - libSiiPrinterManager.xcframework

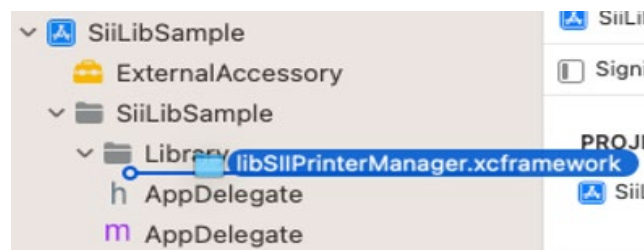


- (3) Check the box [Copy items if needed], and click the [Finish] button.

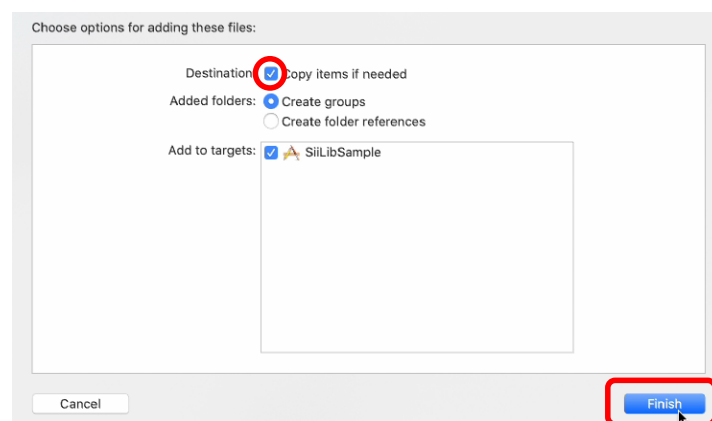



- (4) Build the ExternalAccessory.framework.
Select the target project in the [TARGETS], and open the [General] - [Frameworks, Libraries and Embedded Content].

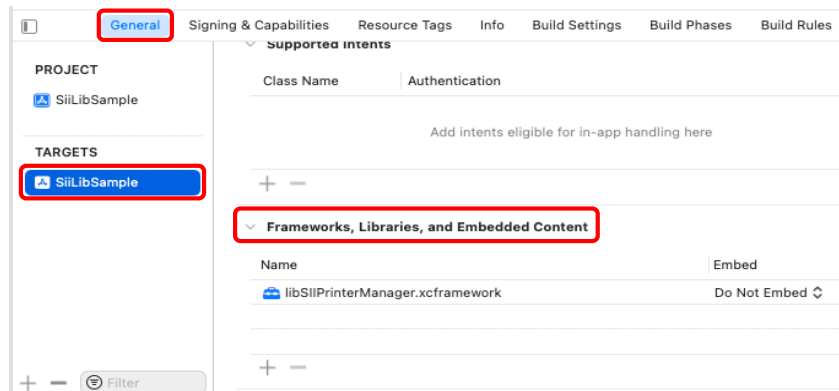


- (5) Click the [+] button opened the [Frameworks, Libraries and Embedded Content].

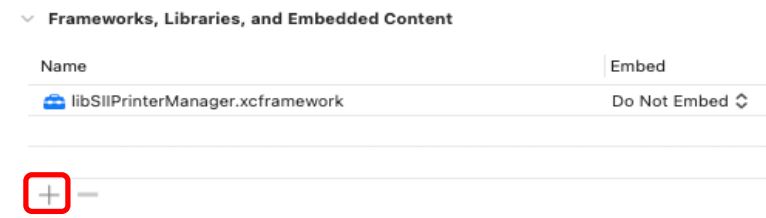

- (6) Select the ExternalAccessory.framework from the list and click the [Add] button.

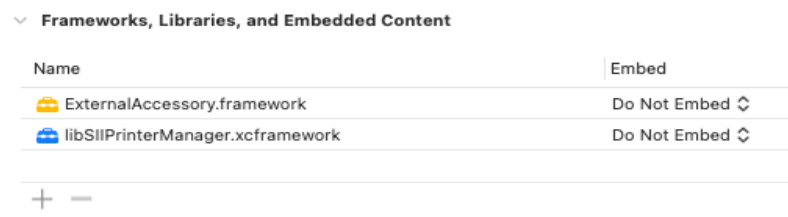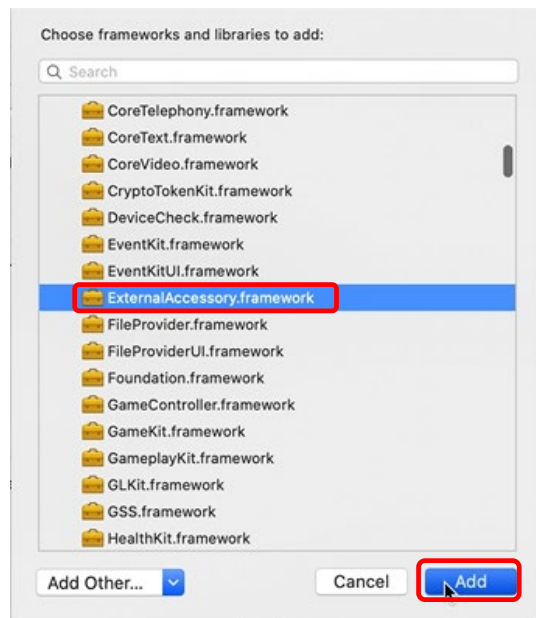

- (7) Set the protocol name to use in the ExternalAccessory.framework. Select property list (.plist) in the [Project Navigator].

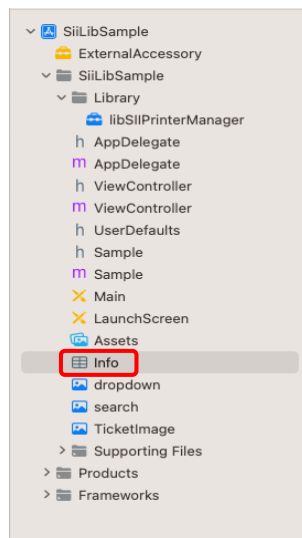

- (8) Select the [Information Property List] - ⊕.

SiiLibSample > SiiLibSample > Info.plist > No Selection		
Key	Type	Value
▼ Information Property List	Dictionary (15 items)	
Localization native development re...	String	\$(DEVELOPMENT_LANGUAGE)
Executable file	String	\$(EXECUTABLE_NAME)
Bundle identifier	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
InfoDictionary version	String	6.0

- (9) Select the [Supported external accessory protocols] from the list.

SiiLibSample > SiiLibSample > Info.plist > No Selection		
Key	Type	Value
▼ Information Property List	Dictionary (16 items)	
App Category	String	
Supported external accessory p...	String	\$(DEVELOPMENT_LANGUAGE)
Supported interface orientations	String	\$(EXECUTABLE_NAME)
Supported interface orientation...	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
Supported interface orientation...	String	6.0
Supports Automatic Graphics S...	String	\$(PRODUCT_NAME)
Supports Controller User Intera...	String	\$(PRODUCT_BUNDLE_PACKAGE_TYPE)
Supports Document Browser	String	1.0
Supports HDR color mode	String	1

- (10) Open the added [Supported external accessory protocols].
The [Item 0] displayed in the opened [Supported external accessory protocols], enter com.sii-ps.sieap as the Value.


SiiLibSample > SiiLibSample > Info.plist > No Selection		
Key	Type	Value
▼ Information Property List	Dictionary (16 items)	
▼ Supported external accessory prot...	Array (1 item)	
Item 0	String	com.sii-ps.sieap
Localization native development re...	String	\$(DEVELOPMENT_LANGUAGE)
Executable file	String	\$(EXECUTABLE_NAME)
Bundle identifier	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
InfoDictionary version	String	6.0

Use the following import statement when importing libraries.
`#import <SIIPrinterManager/SIIPrinterManager.h>`


By completing these procedures, the library function becomes available.

3.3.2 Swift


- (1) Open the Xcode project.
- (2) Drag the following files to any hierarchy in the target project in [Project Navigator] of the navigator window.
 - libSiiPrinterManager.xcframework
 - SiiPrinterManagerWrapper.h
 - SiiPrinterManagerWrapper.m

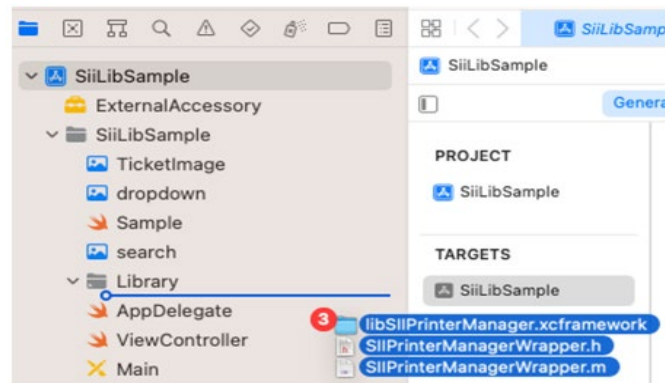


- (3) Check the box [Copy items if needed], click the [Finish] button.

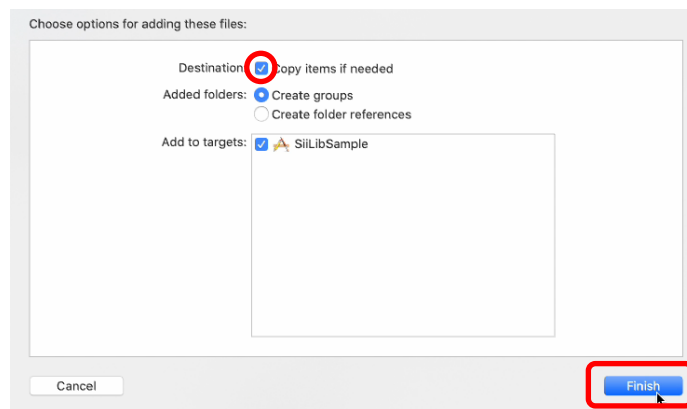

- (4) The dialog is displayed. Select the [Create Bridging Header] button and create xxxxxxxx-Bridging-Header.h.

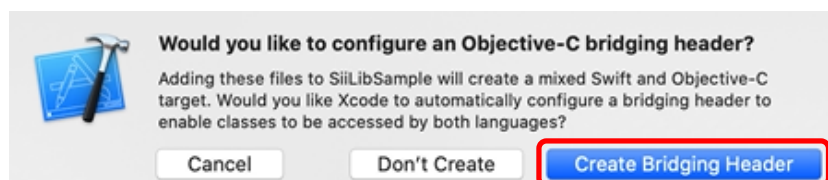


- (5) Select the created xxxxxxxx-Bridging-Header.h.

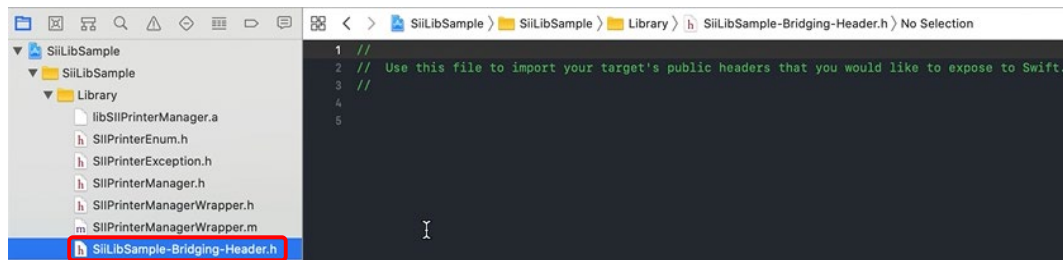


- (6) Import the SIIPrinterManager.h and the SIIPrinterManagerWrapper.h into the xxxxxxxx-Bridging-Header.h.

```
1 //
2 // Use this file to import your target's public headers that you would like to expose to Swift.
3 //
4
5 #import <SIIPrinterManager/SIIPrinterManager.h>
6 #import "SIIPrinterManagerWrapper.h"
7
```


- (7) Build the ExternalAccessory.framework.
Select the target project in the [TARGETS], and open the [General] - [Frameworks, Libraries and Embedded Content].

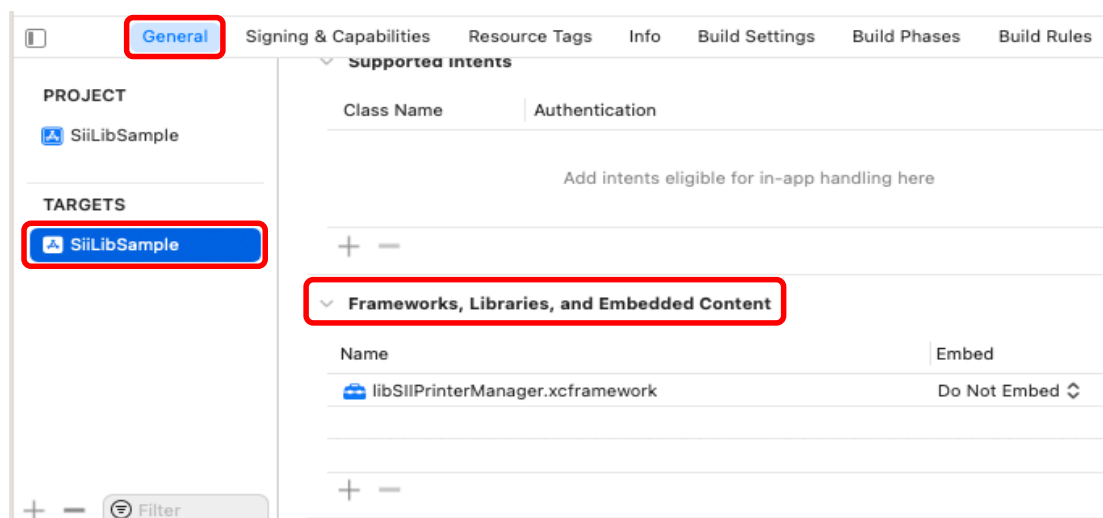

- (8) Click the [+] button opened the [Frameworks, Libraries and Embedded Content].

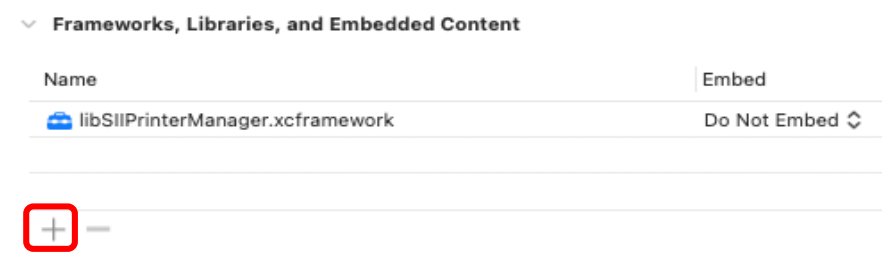


- (9) Select the ExternalAccessory.framework from the list and click the [Add] button.

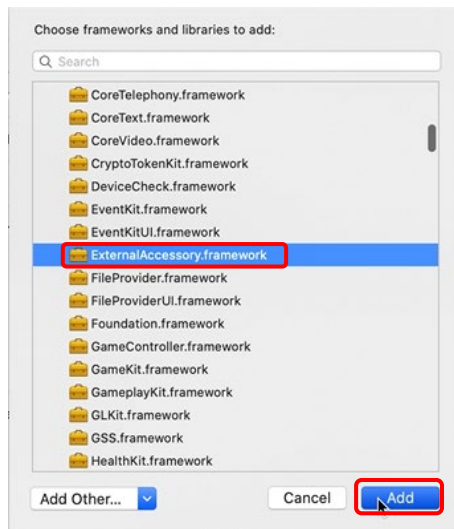

Frameworks, Libraries, and Embedded Content

Name	Embed
ExternalAccessory.framework	Do Not Embed ⬆⬇⬇
libSiiPrinterManager.xcframework	Do Not Embed ⬆⬇⬇


- (10) Set the protocol name to use in the ExternalAccessory.framework. Select property list (.plist) in the [Project Navigator].

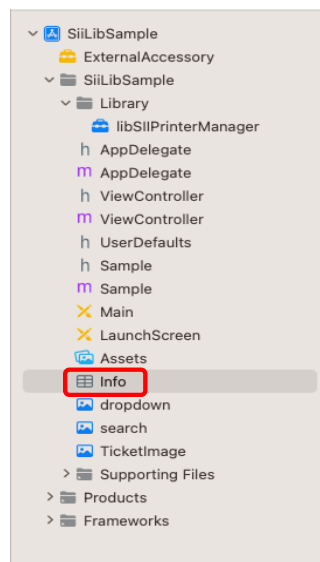

- (11) Select the [Information Property List] - ⊕.


Key	Type	Value
Information Property List	Dictionary	(15 items)
Localization native development re...	String	\$(DEVELOPMENT_LANGUAGE)
Executable file	String	\$(EXECUTABLE_NAME)
Bundle identifier	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
InfoDictionary version	String	6.0

(12) Select the [Supported external accessory protocols] from the list.

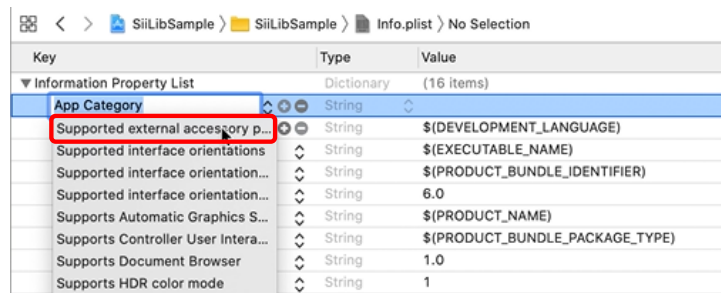

Key	Type	Value
Information Property List	Dictionary	(16 items)
App Category	String	
Supported external accessory p...	String	\$(DEVELOPMENT_LANGUAGE)
Supported interface orientations	String	\$(EXECUTABLE_NAME)
Supported interface orientation...	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
Supported interface orientation...	String	6.0
Supports Automatic Graphics S...	String	\$(PRODUCT_NAME)
Supports Controller User Intera...	String	\$(PRODUCT_BUNDLE_PACKAGE_TYPE)
Supports Document Browser	String	1.0
Supports HDR color mode	String	1

(13) Open the added [Supported external accessory protocols].
The [Item 0] displayed in the opened [Supported external accessory protocols], enter com.sii-ps.sieap as the Value.

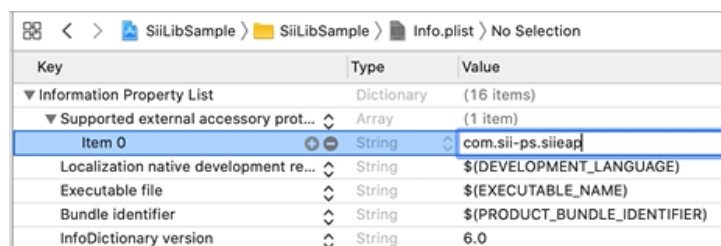

Key	Type	Value
Information Property List	Dictionary	(16 items)
Supported external accessory prot...	Array	(1 item)
Item 0	String	com.sii-ps.sieap
Localization native development re...	String	\$(DEVELOPMENT_LANGUAGE)
Executable file	String	\$(EXECUTABLE_NAME)
Bundle identifier	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
InfoDictionary version	String	6.0

By completing these procedures, the library function becomes available.

Chapter 4

Function of Library

This chapter describes the APIs for each class implemented in the library.

4.1 Log File Output Function

The logs can be retrieved and the log files can be output using the library.

4.1.1 How to Set Log Output

Log output settings can be configured by adding the config.ini file with the following content to the specific directory of the ios application that incorporates the library.

```
config.ini  
  
LOGLEVEL=x  
LOGSIZEMAX=xMB  
LOGOUTPUT=x
```

Reference: See "4.1.2 Log Output Settings" for details on the settings for x.

4.1.2 Log Output Settings

Item	Description	Settings
LOGLEVEL	Log level	0 : Not record the log. 1 : Records an error log when PrinterException occurs. 2 : Records API execution history.
LOGSIZEMAX	Log file maximum size	1MB : Log file maximum size is 1 MB 5MB : Log file maximum size is 5 MB 10MB : Log file maximum size is 10 MB 50MB : Log file maximum size is 50 MB
LOGOUTPUT	Console output enabled/disabled	0 : Console output is disabled 1 : Console output is enabled

4.1.3 Log File

Log files are saved as local files in the Android application that incorporates the library.

Log file name : PrinterManagerX.log (range of X is 0 to 4)

The 1st log file is created as PrinterManager0.log. If the log file maximum size is exceeded, changes the file name to PrinterManager1.log and creates a new PrinterManager0.log.

Up to 5 log files can be created.

4.2 API Reference

This library includes the following classes.

Class Name	Description	Supported ^{*1}
SIIPrinterManager	Provides the API used for communication with the printer and for printing. See " 4.2.1 SIIPrinterManager Class " for more details.	✓
SIIPrinterInfo	Stores the printer information searched by startDiscoveryPrinter .	-
SIIPrinterException	Exception class that is thrown at API call. See " 4.2.3 SIIPrinterException Class " for more details.	✓
SIIPrinterManagerDelegate	Provides the API to get notice from the printer. See " 4.2.4 SIIPrinterManagerDelegate Protocol " for details.	✓
SIISmartLabelManager	Provides the API to specify label files or replace data.	-

*1: ✓: Supported, - : not supported in MP-B20

(NOTE) MP-B20 does not support the APIs relating to page mode, Display, the barcode scanner, or label printing function.

4.2.1 SIIPrinterManager Class

(1) Method List

Methods provided by the `SIIPrinterManager` class are shown in the following table.

Name	Description	Supported ^{*1}
<code>init</code>	Instance	✓
<code>connect</code>	Start communicating with printer	✓
<code>disconnect</code>	Stop communicating with printer	✓
<code>sendText</code>	Send text data	✓
<code>sendTextEx</code>	Send format specified text data	✓
<code>printBarcode</code>	Print barcode	✓
<code>printPDF417</code>	Print PDF417	✓
<code>printQRcode</code>	Print QR Code	✓
<code>printDataMatrix</code>	Print Data Matrix	✓
<code>printMaxiCode</code>	Print MaxiCode	✓
<code>printGS1DataBarStacked</code>	Print GS1 Databar Stacked	✓
<code>printGS1DataBarStackedOmnidirectional</code>	Print GS1 Databar Stacked Omni-directional	✓
<code>printGS1DataBarExpandedStacked</code>	Print GS1 Databar Expanded Stacked	✓
<code>printAztecCode</code>	Print Aztec Code	-
<code>cutPaper</code>	Cut paper ^{*2}	✓
<code>feedPosition</code>	Paper form feed	-
<code>openDrawer</code>	Open cash drawer	-
<code>buzzer</code>	Sound buzzer	-
<code>externalBuzzer</code>	Sound external buzzer	-
<code>sendBinary</code>	Send binary data	✓
<code>sendDataFile</code>	Send specified file	✓
<code>printPDF</code>	Print PDF page	✓
<code>getStatus</code>	Get printer status	✓
<code>abort</code>	Abort waiting state of printer	✓
<code>registerLogo</code>	Register logo	✓
<code>printLogo</code>	Print logo	✓
<code>unregisterLogo</code>	Delete registered logo	✓
<code>registerStyleSheet</code>	Register style sheet	-
<code>unregisterStyleSheet</code>	Delete registered style sheet	-
<code>resetPrinter</code>	Reset printer	✓
<code>getPrinterResponse</code>	Get various responses from printer	✓
<code>startDiscoveryPrinter</code>	Start printer search (Bluetooth)	✓
<code>startDiscoveryPrinter</code>	Start printer search (TCP/IP)	-

Name	Description	Supported*1
cancelDiscoveryPrinter	Cancel printer search	-
getFoundPrinter	Get found printer information	-
getVersion	Get SDK version	✓
controlTransaction	Start/End batch processing	✓

*1: ✓: Supported, - : not supported in MP-B20

*2: Feeds the paper to the paper cut position.

(2) Property List

Properties provided by the **SIIPrinterManager** class are shown in the following table.

Name	Access	Description	Supported*1
sendTimeout	R/W	Get/Set send timeout period	✓
receiveTimeout	R/W	Get/Set receive timeout period	✓
internationalCharacter	R/W	Get/Set international character set	✓
codePage	R/W	Get/Set codepage	✓
printerModel	R	Get printer model	✓
portType	R	Get connecting port type	✓
isConnect	R	Verify connection state with printer	✓
socketKeepingTime	R/W	Get/Set socket keeping time	-
delegate	R/W	Register delegate	✓

*1: ✓: Supported, - : not supported in MP-B20

(3) Constant List

① Printer model

Constant used for starting communication with a printer or getting printer model is shown in the following table.

Constant Name	Description	Value
SII_PM_PRINTER_MODEL_MP_B20	MP-B20	298

② Port type

Constant used for starting communication with a printer or getting the connecting port type is shown in the following table.

Constant Name	Description	Value
SII_PM_PRINTER_PORT_TYPE_BLUETOOTH	Bluetooth	0

③ Response type

Constants used for getting various responses from a printer are shown in the following table.

Constant Name	Description	Value
SII_PM_PRINTER_RESPONSE_REQUEST	Execution response request	0
SII_PM_PRINTER_RESPONSE_USER_AREA	Send remaining capacity of user area	1
SII_PM_PRINTER_RESPONSE_ARRANGE_USER_AREA	Send remaining capacity of user area after defragment	2
SII_PM_PRINTER_RESPONSE_NV_GRAPHICS	Send NV graphics memory capacity	3
SII_PM_PRINTER_RESPONSE_KEY_CODE	Send key code list of defined NV graphics	4
SII_PM_PRINTER_RESPONSE_BATTERY_STATUS	Battery remaining capacity level	5
SII_PM_PRINTER_RESPONSE_FIRMWARE_VERSION	Send firmware version	6

④ Battery remaining capacity level

Constants used for getting battery remaining capacity level various responses from a printer are shown in the following table.

Constant Name	Description	Value
SII_PM_BATTERY_STATUS_FULL	Battery remaining capacity: approx. 80%	0
SII_PM_BATTERY_STATUS_MIDDLE	Battery remaining capacity: approx. 40%	1
SII_PM_BATTERY_STATUS_LOW	Battery remaining capacity: approx. 10%	2
SII_PM_BATTERY_STATUS_EMPTY	No battery	3

⑤ International character set

Constants used for setting / getting international character set are shown in the following table.

Constant Name	Description	Value
SII_PM_COUNTRY_USA	USA	0
SII_PM_COUNTRY_FRANCE	France	1
SII_PM_COUNTRY_GERMANY	Germany	2
SII_PM_COUNTRY_ENGLAND	England	3
SII_PM_COUNTRY_DENMARK_1	Denmark I	4
SII_PM_COUNTRY_SWEDEN	Sweden	5
SII_PM_COUNTRY_ITALY	Italy	6

Constant Name	Description	Value
SII_PM_COUNTRY_SPAIN	Spain I	7
SII_PM_COUNTRY_JAPAN	Japan	8
SII_PM_COUNTRY_NORWAY	Norway	9
SII_PM_COUNTRY_DENMARK_2	Denmark II	10
SII_PM_COUNTRY_SPAIN_2	Spain II	11
SII_PM_COUNTRY_LATIN_AMERICA	Latin America	12
SII_PM_COUNTRY_ARABIA	Arabia	17

⑥ Codepage

Constants used for setting / getting codepage are shown in the following table.

Constant Name	Description	Value
SII_PM_CODE_PAGE_437	USA, Standard Europe (Code Page 437)	0
SII_PM_CODE_PAGE_KATAKANA	Katakana	1
SII_PM_CODE_PAGE_850	Multilingual (Code Page 850)	2
SII_PM_CODE_PAGE_860	Portuguese (Code Page 860)	3
SII_PM_CODE_PAGE_863	Canadian-French (Code page 863)	4
SII_PM_CODE_PAGE_865	Nordic (Code Page 865)	5
SII_PM_CODE_PAGE_857 ^{*1}	Turkish (Code Page 857)	13
SII_PM_CODE_PAGE_737	Greek (Code Page 737)	14
SII_PM_CODE_PAGE_1252	Latin (Code Page 1252)	16
SII_PM_CODE_PAGE_866	Russian (Code Page 866)	17
SII_PM_CODE_PAGE_852	Eastern Europe (CodePage 852)	18
SII_PM_CODE_PAGE_858	Euro (Code Page 858)	19
SII_PM_CODE_PAGE_855	Cyrillic (Code Page 855)	34
SII_PM_CODE_PAGE_864 ^{*1*2}	Arabic (Code Page 864)	37
SII_PM_CODE_PAGE_1250	Central European (Code Page 1250)	45
SII_PM_CODE_PAGE_1251	Cyrillic (Code Page 1251)	46
SII_PM_CODE_PAGE_1253 ^{*3}	Greek (Code Page 1253)	47
SII_PM_CODE_PAGE_1254	Turkish (Code Page 1254)	48

*1: 20ACh of the Unicode cannot be printed.

*2: Font B cannot be printed.

*3: 00AAh of the Unicode cannot be printed.

⑦ Barcode or PDF417

Constants used for printing barcode or PDF417 are shown in the following table.

Constant Name	Description	Value
SII_PM_BARCODE_HEIGHT_DEFAULT	Default value of barcode height	162
SII_PM_PDF417_MODULE_HEIGHT_DEFAULT	Default value of PDF417 height	10
SII_PM_PDF417_ROW_AUTO	Automatic selection of the number of rows	0
SII_PM_PDF417_COLUMN_AUTO	Automatic selection of the number of columns	0

(4) Constant List of Enumerated Type

① Bold print (CharacterBold)

Constants of enumerated type used for bold print are shown in the following table.

Constant Name	Description
SII_PM_BOLD_CANCEL	Release bold print
SII_PM_BOLD	Specify bold print

② Underline (CharacterUnderline)

Constants of enumerated type used for specifying the underline are shown in the following table.

Constant Name	Description
SII_PM_UNDERLINE_CANCEL	Release underline print.
SII_PM_UNDERLINE_1	Specify 1 dot width underline print.
SII_PM_UNDERLINE_2	Specify 2 dot width underline print.

③ Reverse print (CharacterReverse)

Constants of enumerated type used for the reverse print are shown in the following table.

Constant Name	Description
SII_PM_REVERSE_CANCEL	Release reverse print
SII_PM_REVERSE	Specify reverse print

④ Inversion print (CharacterInversion)

Constants of enumerated type used for inversion print are shown in the following table.
Inversion print cannot be added to the text data before inserting a new line feed.

Constant Name	Description
SII_PM_INVERSION_CANCEL	Cancel inversion print
SII_PM_INVERSION	Specify inversion print

⑤ Character font (CharacterFont)

Constants of enumerated type used for the character font are shown in the following table.

Constant Name	Description
SII_PM_FONT_A	Font A (24 × 12)
SII_PM_FONT_B	Font B (16 × 8)

⑥ Character Scale (CharacterScale)

Constants of enumerated type used for character scale are shown in the following table.

Constant Name	Description
SII_PM_VERTICAL_1_HORIZONTAL_1	Height × 1 and width × 1
SII_PM_VERTICAL_1_HORIZONTAL_2	Height × 1 and width × 2
SII_PM_VERTICAL_1_HORIZONTAL_3	Height × 1 and width × 3
SII_PM_VERTICAL_1_HORIZONTAL_4	Height × 1 and width × 4
SII_PM_VERTICAL_2_HORIZONTAL_1	Height × 2 and width × 1
SII_PM_VERTICAL_2_HORIZONTAL_2	Height × 2 and width × 2
SII_PM_VERTICAL_2_HORIZONTAL_3	Height × 2 and width × 3
SII_PM_VERTICAL_2_HORIZONTAL_4	Height × 2 and width × 4
SII_PM_VERTICAL_2_HORIZONTAL_6	Height × 2 and width × 6
SII_PM_VERTICAL_3_HORIZONTAL_1	Height × 3 and width × 1
SII_PM_VERTICAL_3_HORIZONTAL_2	Height × 3 and width × 2
SII_PM_VERTICAL_3_HORIZONTAL_3	Height × 3 and width × 3
SII_PM_VERTICAL_3_HORIZONTAL_4	Height × 3 and width × 4
SII_PM_VERTICAL_4_HORIZONTAL_1	Height × 4 and width × 1
SII_PM_VERTICAL_4_HORIZONTAL_2	Height × 4 and width × 2
SII_PM_VERTICAL_4_HORIZONTAL_3	Height × 4 and width × 3
SII_PM_VERTICAL_4_HORIZONTAL_4	Height × 4 and width × 4
SII_PM_VERTICAL_4_HORIZONTAL_6	Height × 4 and width × 6
SII_PM_VERTICAL_4_HORIZONTAL_8	Height × 4 and width × 8
SII_PM_VERTICAL_6_HORIZONTAL_2	Height × 6 and width × 2
SII_PM_VERTICAL_6_HORIZONTAL_4	Height × 6 and width × 4
SII_PM_VERTICAL_6_HORIZONTAL_6	Height × 6 and width × 6
SII_PM_VERTICAL_6_HORIZONTAL_8	Height × 6 and width × 8
SII_PM_VERTICAL_8_HORIZONTAL_4	Height × 8 and width × 4
SII_PM_VERTICAL_8_HORIZONTAL_6	Height × 8 and width × 6
SII_PM_VERTICAL_8_HORIZONTAL_8	Height × 8 and width × 8

⑦ Alignment (`PrintAlignment`)

Constants of enumerated type used for alignment are shown in the following table.
Alignment cannot be added to the text data before inserting a new line feed.

Constant Name	Description
SII_PM_ALIGNMENT_LEFT	Left aligned
SII_PM_ALIGNMENT_CENTER	Align center
SII_PM_ALIGNMENT_RIGHT	Right aligned

⑧ Barcode symbol (`BarcodeSymbol`)

Constants of enumerated type used for barcode symbol are shown in the following table.

Constant Name	Description	Syntax ^{*1}
SII_PM_BARCODE_UPC_A	UPC-A	(a)
SII_PM_BARCODE_UPC_E	UPC-E	(a)
SII_PM_BARCODE_EAN13	EAN13	(a)
SII_PM_BARCODE_JAN13	JAN13	(a)
SII_PM_BARCODE_EAN8	EAN8	(a)
SII_PM_BARCODE_JAN8	JAN8	(a)
SII_PM_BARCODE_CODE39	CODE39	(a), (b)
SII_PM_BARCODE_CODE93	CODE93	(c)
SII_PM_BARCODE_CODE128	CODE128	(c)
SII_PM_BARCODE_ITF	ITF	(a),(b)
SII_PM_BARCODE_CODABAR	CODABAR	(a), (b)
SII_PM_BARCODE_EAN13_ADDON	EAN13 add-on	(a)
SII_PM_BARCODE_JAN13_ADDON	JAN13 add-on	(a)
SII_PM_BARCODE_GS1_OMNI_DIRECTIONAL	GS1 Databar Omni-directional	(a)
SII_PM_BARCODE_GS1_TRUNCATED	GS1 Databar Truncated	(a)
SII_PM_BARCODE_GS1_LIMITED	GS1 Databar Limited	(a)
SII_PM_BARCODE_GS1_EXPANDED	GS1 Databar Expanded	(a)

*1: See "4.2.1(5) Method Details `printBarcode` " for more details of syntax.

⑨ Module size (ModuleSize)

Constants of enumerated type used for width, nominal fine element width, and module size of barcode are shown in the following table.

Constant Name	Description	Using Method
SII_PM_BARCODE_MODULE_WIDTH_2	Fine element 2 dots Module width 0.250 mm	printBarcode
SII_PM_BARCODE_MODULE_WIDTH_3	Fine element 3 dots Module width 0.375 mm	
SII_PM_BARCODE_MODULE_WIDTH_4	Fine element 4 dots Module width 0.500 mm	
SII_PM_BARCODE_MODULE_WIDTH_5	Fine element 5 dots Module width 0.625 mm	
SII_PM_BARCODE_MODULE_WIDTH_6	Fine element 6 dots Module width 0.750 mm	
SII_PM_PDF417_MODULE_WIDTH_2	Nominal fine element width 2 dots	printPDF417
SII_PM_PDF417_MODULE_WIDTH_3	Nominal fine element width 3 dots	
SII_PM_PDF417_MODULE_WIDTH_4	Nominal fine element width 4 dots	
SII_PM_PDF417_MODULE_WIDTH_5	Nominal fine element width 5 dots	
SII_PM_PDF417_MODULE_WIDTH_6	Nominal fine element width 6 dots	
SII_PM_PDF417_MODULE_WIDTH_7	Nominal fine element width 7 dots	
SII_PM_PDF417_MODULE_WIDTH_8	Nominal fine element width 8 dots	printQRcode
SII_PM_QR_MODULE_SIZE_2	2 dots	
SII_PM_QR_MODULE_SIZE_3	3 dots	
SII_PM_QR_MODULE_SIZE_4	4 dots	
SII_PM_QR_MODULE_SIZE_5	5 dots	
SII_PM_QR_MODULE_SIZE_6	6 dots	
SII_PM_QR_MODULE_SIZE_7	7 dots	
SII_PM_QR_MODULE_SIZE_8	8 dots	
SII_PM_QR_MODULE_SIZE_9	9 dots	
SII_PM_QR_MODULE_SIZE_10	10 dots	
SII_PM_QR_MODULE_SIZE_11	11 dots	
SII_PM_QR_MODULE_SIZE_12	12 dots	
SII_PM_QR_MODULE_SIZE_13	13 dots	
SII_PM_QR_MODULE_SIZE_14	14 dots	
SII_PM_QR_MODULE_SIZE_15	15 dots	
SII_PM_QR_MODULE_SIZE_16	16 dots	

Constant Name	Description	Using Method
SII_PM_DATAMATRIX_MODULE_SIZE_2	2 dots	printDataMatrix
SII_PM_DATAMATRIX_MODULE_SIZE_3	3 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_4	4 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_5	5 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_6	6 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_7	7 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_8	8 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_9	9 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_10	10 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_11	11 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_12	12 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_13	13 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_14	14 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_15	15 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_16	16 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_2	2 dots	•printGS1DataBarStacked •printGS1DataBarStacked Omnidirectional •printGS1DataBarExpanded Stacked
SII_PM_GS1DATABAR_MODULE_SIZE_3	3 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_4	4 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_5	5 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_6	6 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_7	7 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_8	8 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_9	9 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_10	10 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_11	11 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_12	12 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_13	13 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_14	14 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_15	15 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_16	16 dots	

⑩ HRI character print position (`HriPosition`)

Constants of enumerated type used for HRI character print position are shown in the following table.

Constant Name	Description
<code>SII_PM_HRI_NONE</code>	Do not print
<code>SII_PM_HRI_POSITION_ABOVE</code>	Above barcode
<code>SII_PM_HRI_POSITION_BELOW</code>	Below barcode
<code>SII_PM_HRI_POSITION_ABOVE_BELOW</code>	Above and below barcode (both)

⑪ N:W ratio (`NwRatio`)

Constants of enumerated type used for the N:W ratio are shown in the following table.

Constant Name	Description
<code>SII_PM_NWRATIO_1TO2</code>	1:2
<code>SII_PM_NWRATIO_1TO2_5</code>	1:2.5
<code>SII_PM_NWRATIO_1TO3</code>	1:3

⑫ Error correction level (`ErrorCorrection`)

Constants of enumerated type used for error correction level are shown in the following table.

Constant Name	Description	Using Method
<code>SII_PM_PDF417_ERROR_CORRECTION_0</code>	Error correction level 0	printPDF417
<code>SII_PM_PDF417_ERROR_CORRECTION_1</code>	Error correction level 1	
<code>SII_PM_PDF417_ERROR_CORRECTION_2</code>	Error correction level 2	
<code>SII_PM_PDF417_ERROR_CORRECTION_3</code>	Error correction level 3	
<code>SII_PM_PDF417_ERROR_CORRECTION_4</code>	Error correction level 4	
<code>SII_PM_PDF417_ERROR_CORRECTION_5</code>	Error correction level 5	
<code>SII_PM_PDF417_ERROR_CORRECTION_6</code>	Error correction level 6	
<code>SII_PM_PDF417_ERROR_CORRECTION_7</code>	Error correction level 7	
<code>SII_PM_PDF417_ERROR_CORRECTION_8</code>	Error correction level 8	
<code>SII_PM_QR_ERROR_CORRECTION_L</code>	Error correction level L	printQRcode
<code>SII_PM_QR_ERROR_CORRECTION_M</code>	Error correction level M	
<code>SII_PM_QR_ERROR_CORRECTION_H</code>	Error correction level H	
<code>SII_PM_QR_ERROR_CORRECTION_Q</code>	Error correction level Q	

⑬ PDF417 symbol (Pdf417Symbol)

Constants of enumerated type used for PDF417 symbols are shown in the following table.

Constant Name	Description
SII_PM_PDF417_STANDARD	PDF417
SII_PM_PDF417_COMPACT	Compact PDF417

⑭ QR Code Model (QrModel)

Constants of enumerated type used for QR Code Model are shown in the following table.

Constant Name	Description
SII_PM_QR_MODEL_1	QR Code Model 1
SII_PM_QR_MODEL_2	QR Code Model 2

⑮ Data Matrix Module (DataMatrixModule)

Constants of enumerated type used for Data Matrix module are shown in the following table.

Constant Name	Description
SII_PM_DATA_MATRIX_AUTO	Module numbers: Automatic
SII_PM_DATA_MATRIX_10_10	Module numbers: 10 × 10
SII_PM_DATA_MATRIX_12_12	Module numbers: 12 × 12
SII_PM_DATA_MATRIX_14_14	Module numbers: 14 × 14
SII_PM_DATA_MATRIX_16_16	Module numbers: 16 × 16
SII_PM_DATA_MATRIX_18_18	Module numbers: 18 × 18
SII_PM_DATA_MATRIX_20_20	Module numbers: 20 × 20
SII_PM_DATA_MATRIX_22_22	Module numbers: 22 × 22
SII_PM_DATA_MATRIX_24_24	Module numbers: 24 × 24
SII_PM_DATA_MATRIX_26_26	Module numbers: 26 × 26
SII_PM_DATA_MATRIX_32_32	Module numbers: 32 × 32
SII_PM_DATA_MATRIX_36_36	Module numbers: 36 × 36
SII_PM_DATA_MATRIX_40_40	Module numbers: 40 × 40
SII_PM_DATA_MATRIX_44_44	Module numbers: 44 × 44
SII_PM_DATA_MATRIX_48_48	Module numbers: 48 × 48
SII_PM_DATA_MATRIX_52_52	Module numbers: 52 × 52
SII_PM_DATA_MATRIX_64_64	Module numbers: 64 × 64
SII_PM_DATA_MATRIX_72_72	Module numbers: 72 × 72
SII_PM_DATA_MATRIX_80_80	Module numbers: 80 × 80

Constant Name	Description
SII_PM_DATA_MATRIX_88_88	Module numbers: 88 × 88
SII_PM_DATA_MATRIX_96_96	Module numbers: 96 × 96
SII_PM_DATA_MATRIX_104_104	Module numbers: 104 × 104
SII_PM_DATA_MATRIX_120_120	Module numbers: 120 × 120
SII_PM_DATA_MATRIX_132_132	Module numbers: 132 × 132
SII_PM_DATA_MATRIX_144_144	Module numbers: 144 × 144
SII_PM_DATA_MATRIX_8_18	Module numbers: 8 × 18
SII_PM_DATA_MATRIX_8_32	Module numbers: 8 × 32
SII_PM_DATA_MATRIX_12_26	Module numbers: 12 × 26
SII_PM_DATA_MATRIX_12_36	Module numbers: 12 × 36
SII_PM_DATA_MATRIX_16_36	Module numbers: 16 × 36
SII_PM_DATA_MATRIX_16_48	Module numbers: 16 × 48

⑩ MaxiCode Mode (`MaxiCodeMode`)

Constants of enumerated type used for MaxiCode mode are shown in the following table.

Constant Name	Description
SII_PM_MAXI_CODE_2	Mode2
SII_PM_MAXI_CODE_3	Mode3
SII_PM_MAXI_CODE_4	Mode4
SII_PM_MAXI_CODE_5	Mode5

⑪ Cutting method (`CuttingMethod`)

Constants of enumerated type used for cutting method are shown in the following table.

Constant Name	Description
SII_PM_CUT_FULL	No cut
SII_PM_CUT_PARTIAL	Paper feed to cut position

⑮ Dithering (*Dithering*)

Constants of enumerated type used for dithering are shown in the following table.

Constant Name	Description
SII_PM_DITHERING_DISABLE	Dithering is disable
SII_PM_DITHERING_ERRORDIFFUSION	Dithering is enable

⑯ Image rotation direction (*Rotate*)

Constants of enumerated type used for image rotation direction are shown in the following table.

Constant Name	Description
SII_PM_ROTATE_NONE	No rotation
SII_PM_ROTATE_180	Rotate 180 degrees

⑰ Image scaling (*ImageScale*)

Constants of enumerated type used for image scaling are shown in the following table.

Constant Name	Description
SII_PM_IMAGE_SCALE_NONE	No scaling
SII_PM_IMAGE_SCALE_WIDTH_FIT	Scale to fit print width

⑱ Batch processing selection (*TransactionFunction*)

Constants of enumerated type used for batch processing selection are shown in the following table.

Constant Name	Description
SII_PM_TRANSACTION_CLEAR	Cancel batch processing
SII_PM_TRANSACTION_START	Start batch processing
SII_PM_TRANSACTION_PRINT	Finish batch printing and batch processing

(5) Method Details

init		Instance
Syntax	- (id) init ;	
Description	This method initializes the instance of SIIPrinterManager class.	
Return value	When succeeded, the initialized instance of SIIPrinterManager class is returned. When failed, nil is returned.	
Using Example	<pre>SIIPrinterManager *printerManager = [[SIIPrinterManager alloc] init];</pre>	

connect		Start communicating with printer
Starts communication with a printer.		
Syntax	<pre>(void) connect: (NSInteger)printerModel address: (NSString)address portType: (NSInteger)portType;</pre>	
Parameter	printerModel	Printer model constant. See "4.2.1(3)① Printer model" for available constants.
	address	Bluetooth device name (Bluetooth Accessory) Example: "MP-B20"
	portType	Port type constant Specify SII_PM_PRINTER_PORT_TYPE_BLUETOOTH .
Error	SIIPrinterException is thrown when an error occurs while calling the method. See " 4.2.3 SIIPrinterException Class " for details of error.	
Description	<p>This method starts communication with a paired printer with iOS device through Bluetooth connection. Call this method before using other SIIPrinterManager class methods.</p> <p>This method connects to the paired Bluetooth device (Bluetooth accessory) specified by address.</p> <p>In order to operate a printer properly, printer settings may be changed at the connection in this method.</p>	
Note	A concurrent connection from multiple apps to one printer is not supported.	

disconnect	Stop communicating with printer
Stops communication with the printer.	
Syntax	- (void) disconnect ;
Error	SIIPrinterException is thrown when an error occurs while calling the method. See " 4.2.3 SIIPrinterException Class " for details of error.
Note	It is recommended to get execution response by SII_PM_PRINTER_RESPONSE_REQUEST of getPrinterResponse before executing this method. If not, the following problems may be occurred:

- The printer is stopped communication by this method before the print data sending from iOS device to the printer is completed, and a part of the data may be deleted.
- In Bluetooth communication, when either **disconnect** or **connect** is executed while the printer is in buffer full state^{*1}, the printer is stopped communication between iOS device and the printer.

^{*1}: Buffer full state means the printer buffer is full state with the print data.

The size becoming buffer full state is approx. 4K bytes.

When this method is executed without executing **getPrinterResponse** in your program, evaluate your program to confirm no problems arise.

sendText

Send text data

Sends the text data.

Syntax	- (void) sendText: (NSString *)text;
Parameter	text Text data to send to the printer Data size that can be specified at 1 time is 16 KB (16384 bytes).
Error	SIIPrinterException is thrown when an error occurs while calling the method. See "4.2.3 SIIPrinterException Class" for details of error.
Description	This method encodes the specified text data to printable text data based on the settings of internationalCharacter and codePage , and then sends it to a printer. This method does not add any line feed code in the last of the text data. In order to print to the last of the text data, add a line feed code to the last of the text data.

sendTextEx

Send format specified text data

Sends specified text data to the printer.

The method of syntax (a) can specify bold print, underline, reverse print, font, character scale and alignment to text data.

The method of syntax (b) can specify bold print, underline, font and character scale to text data.

The method of syntax (c) can specify bold print, underline, inversion print, reverse print, font, character scale and alignment to text data.

Syntax	(a)- (void) sendTextEx: (NSString *)text bold: (CharacterBold)bold underline: (CharacterUnderline)underline reverse: (CharacterReverse)reverse font: (CharacterFont)font scale: (CharacterScale)scale alignment: (PrintAlignment)alignment; (b)- (void) sendTextEx: (NSString *)text bold: (CharacterBold)bold underline: (CharacterUnderline)underline font: (CharacterFont)font scale: (CharacterScale)scale; (c)- (void) sendTextEx: (NSString *)text bold: (CharacterBold)bold underline: (CharacterUnderline)underline reverse: (CharacterReverse)reverse inversion: (CharacterInversion)inversion font: (CharacterFont)font scale: (CharacterScale)scale alignment: (PrintAlignment)alignment;
--------	--

Parameter	text	Text data to send to the printer Data size that can be specified at 1 time is 16KB (16384 bytes).
	bold	Bold print See "4.2.1(4) ① Bold print (CharacterBold)" for available constants.
	underline	Underline See "4.2.1(4) ② Underline (CharacterUnderline)" for available constants.
	reverse	Reverse print See "4.2.1(4) ③ Reverse print (CharacterReverse)" for available constants.
	inversion	Inversion print See "4.2.1(4) ④ Inversion print (CharacterInversion)" for available constants.
	font	Character font See "4.2.1(4) ⑤ Character font (CharacterFont)" for available constants.
	scale	Character scale See "4.2.1(4) ⑥ Character Scale (CharacterScale)" for available constants.
	alignment	Alignment See "4.2.1(4) ⑦ Alignment (PrintAlignment)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while calling the method. See " 4.2.3 SIIPrinterException Class " for details of error.	
Description	This method encodes format specified text data to printable text data based on the settings of internationalCharacter and codePage , and then sends it to a printer. This method does not add any line feed code in the last of the text data. In order to print to the last of the text data, add a line feed code to the last of the text data.	

printBarcode

Print barcode

Prints barcode.

The method of syntax (a) specifies the barcode data by character string.

The method of syntax (b) specifies the barcode data by character string, aligning barcode and N:W ratio.

The method of syntax (c) specifies the barcode data with the array of bytes and aligning barcode.

The method of syntax (d) is not supported.

Syntax (a) - (void) **printBarcode:** (BarcodeSymbol) barcodeSymbol
text: (NSString *) text
moduleSize: (ModuleSize) moduleSize
moduleHeight: (NSInteger) moduleHeight
hriPosition: (HriPosition) hriPosition
hriFont: (CharacterFont) hriFont
alignment: (PrintAlignment) alignment;

```

(b) - (void) printBarcode: (BarcodeSymbol)barcodeSymbol
      text: (NSString *)text
      moduleSize: (ModuleSize)moduleSize
      moduleHeight: (NSInteger)moduleHeight
      hriPosition: (HriPosition)hriPosition
      hriFont: (CharacterFont)hriFont
      alignment: (PrintAlignment)alignment
      nwRatio: (NwRatio)nwRatio;

(c) - (void) printBarcode: (BarcodeSymbol)barcodeSymbol
      data: (NSData*)data
      moduleSize: (ModuleSize)moduleSize
      moduleHeight: (NSInteger)moduleHeight
      hriPosition: (HriPosition)hriPosition
      hriFont: (CharacterFont)hriFont
      alignment: (PrintAlignment)alignment;

(d) - (void) printBarcode: (BarcodeSymbol)barcodeSymbol
      text: (NSString *)text
      moduleSize: (ModuleSize)moduleSize
      alignment: (PrintAlignment)alignment;

```

Parameter barcodeSymbol Barcode symbol
See "4.2.1(4) ⑧ Barcode symbol (BarcodeSymbol)" for available constants and corresponding syntax.

text (data) Barcode data to send to the printer
The input conditions for barcode are as follows.

Barcode	Number of Data	Inputtable Data Character String (Data)	Remarks
UPC-A	11 to 12 characters	'0' to '9'	
UPC-E	11 to 12 characters	'0' to '9'	
EAN13 JAN13	12 to 13 characters '	'0' to '9'	
EAN8 JAN8	7 to 8 characters	'0' to '9'	
CODE39	1 to 150 characters	'0' to '9' 'A' to 'Z' ' ', '\$', '%', '+', '-', '.', '/'	Start code and stop code ('*') are automatically added.
CODE93	1 to 150 bytes	(0x00 to 0x2E)	Input data with 0x2F or more at the end.
CODE128	2 to 150 bytes	(0x00 to 0x66)	When inputting the start code (0x67 to 0x69) of the CODE128 code set. Input data with 0x67 or more at the end.
		(0x00 to 0x7F)	When starting with a CODE128 special code start code ("A", "B", "C").
ITF	2 to 150 characters (However, an even number)	'0' to '9'	

Barcode	Number of Data	Inputtable Data Character String (Data)	Remarks
CODABAR	1 to 150 characters	'0' to '9' '\$', '+', '-', '.', '/', ':'	It is needed to specify one of 'A' to 'D' at the beginning and end.
EAN13 add-on JAN13 add-on	Add-on 2: 14 to 15 characters Add-on 5: 17 to 18 characters	'0' to '9'	
Customer Bar Code_JP	-	-	Not supported.
GS1 Databar Omni-directional	13 characters	'0' to '9'	Check digit is automatically added.
GS1 Databar Truncated	13 characters	'0' to '9'	Check digit is automatically added.
GS1 Databar Limited	13 characters	'0' to '9'	Check digit is automatically added.
GS1 Databar Expanded	2 to 255 characters	' ' to '"' '%' to '?' 'A' to 'Z' '_' 'a' to 'z' '{'	

moduleSize

Barcode width

See "4.2.1(4) ⑨ Module size (ModuleSize)" for available constants.

moduleHeight

Barcode height

- When barcodeSymbol is set to the followings, the valid range is 1 to 255.

SII_PM_BARCODE_UPC_A
 SII_PM_BARCODE_UPC_E
 SII_PM_BARCODE_EAN13
 SII_PM_BARCODE_JAN13
 SII_PM_BARCODE_EAN8
 SII_PM_BARCODE_JAN8
 SII_PM_BARCODE_CODE39
 SII_PM_BARCODE_CODE93
 SII_PM_BARCODE_CODE128
 SII_PM_BARCODE_ITF
 SII_PM_BARCODE_CODABAR
 SII_PM_BARCODE_EAN13_ADDON
 SII_PM_BARCODE_JAN13_ADDON

- When `barcodeSymbol` is set to the followings, the valid range is different by `barcodeSymbol` and `moduleSize`.

<code>barcodeSymbol</code>		
	<code>moduleSize</code>	Valid Range
SII_PM_BARCODE_GS1_OMNI_DIRECTIONAL		
	<code>SII_PM_BARCODE_MODULE_WIDTH_2</code>	66 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_3</code>	99 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_4</code>	132 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_5</code>	165 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_6</code>	198 to 255
SII_PM_BARCODE_GS1_TRUNCATED		
	<code>SII_PM_BARCODE_MODULE_WIDTH_2</code>	26 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_3</code>	39 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_4</code>	52 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_5</code>	65 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_6</code>	78 to 255
SII_PM_BARCODE_GS1_LIMITED		
	<code>SII_PM_BARCODE_MODULE_WIDTH_2</code>	20 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_3</code>	30 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_4</code>	40 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_5</code>	50 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_6</code>	60 to 255
SII_PM_BARCODE_GS1_EXPANDED		
	<code>SII_PM_BARCODE_MODULE_WIDTH_2</code>	68 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_3</code>	102 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_4</code>	136 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_5</code>	170 to 255
	<code>SII_PM_BARCODE_MODULE_WIDTH_6</code>	204 to 255

<code>hriPosition</code>	HRI character print position See "4.2.1(4)⑩ HRI character print position (<code>HriPosition</code>)" for available constants.
<code>hriFont</code>	HRI character font See "4.2.1(4)⑤ Character font (<code>CharacterFont</code>)" for available constants.
<code>alignment</code>	Alignment See "4.2.1(4)⑦ Alignment (<code>PrintAlignment</code>)" for available constants.

nwRatio

N:W ratio

See "4.2.1(4) ⑪ N:W ratio (NwRatio)" for available constants.
Depending on specified nwRatio and moduleSize, the wide element width is set in the following table.

moduleSize	nwRatio		
	SII_PM_ NWRATIO_1TO2	SII_PM_ NWRATIO_1TO2_5	SII_PM_ NWRATIO_1TO3
SII_PM_BARCODE_MODULE_WIDTH_2	0.500 mm (4 dots)	0.625 mm (5 dots)	0.750 mm (6 dots)
SII_PM_BARCODE_MODULE_WIDTH_3	0.750 mm (6 dots)	1.000 mm (8 dots)	1.125 mm (9 dots)
SII_PM_BARCODE_MODULE_WIDTH_4	1.000 mm (8 dots)	1.250 mm (10 dots)	1.500 mm (12 dots)
SII_PM_BARCODE_MODULE_WIDTH_5	1.250 mm (10 dots)	1.625 mm (13 dots)	1.875 mm (15 dots)
SII_PM_BARCODE_MODULE_WIDTH_6	1.500 mm (12 dots)	1.875 mm (15 dots)	2.250 mm (18 dots)

Error **SIIPrinterException** is thrown when an error occurs while calling the method.
See "4.2.3 SIIPrinterException Class" for details of error.

Reference See "Appendix B Barcode Size List" for details of the barcode size.

printPDF417

Print PDF417

Prints PDF417.

The method of syntax (a) specifies PDF417 symbol.

The method of syntax (b) is fixed to standard PDF417.

Syntax (a) - (void) **printPDF417**: (NSString *)text
errorCorrection: (ErrorCorrection)errorCorrection
row: (NSInteger)row
column: (NSInteger)column
moduleSize: (ModuleSize)moduleSize
moduleHeight: (ModuleHeight)moduleHeight
alignment: (PrintAlignment)alignment
pdf417Symbol: (Pdf417Symbol)pdf417Symbol;

(b) - (void) **printPDF417**: (NSString *)text
errorCorrection: (ErrorCorrection)errorCorrection
row: (NSInteger)row
column: (NSInteger)column
moduleSize: (ModuleSize)moduleSize
moduleHeight: (ModuleHeight)moduleHeight
alignment: (PrintAlignment)alignment;

Parameter text Barcode data to send to the printer

errorCorrection Error correction level
See "4.2.1(4) ⑫ Error correction level (ErrorCorrection)" for available constants.

row	The number of row The valid range is 0 to 90. When 0 is specified, the number of row is automatically set.
column	The number of columns in data area The valid range is 0 to 30. When 0 is specified, the number of column in the data area is automatically set.
moduleSize	Nominal fine element width See "4.2.1(4) ⑨ Module size (ModuleSize)" for available constants.
moduleHeight	Module height The valid range is 2 to 127. When the module height is set smaller, some barcode scanners may not read it. Set 3 or more for normal use.
alignment	Alignment See "4.2.1(4) ⑦ Alignment (PrintAlignment)" for available constants.
pdf417Symbol	PDF417 symbol See "4.2.1(4) ⑬ PDF417 symbol (Pdf417Symbol)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while calling the method. See "4.2.3 SIIPrinterException Class" for details of error.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

printQRcode

Print QR Code

Prints QR Code.

The method of syntax (a) specifies QR Code Model.

The method of syntax (b) is fixed to QR Code Model 2.

Syntax	(a) - (void) printQRcode: (NSString *)text errorCorrection: (ErrorCorrection)errorCorrection moduleSize: (ModuleSize)moduleSize alignment: (PrintAlignment)alignment model: (QrModel)model;
	(b) - (void) printQRcode: (NSString *)text errorCorrection: (ErrorCorrection)errorCorrection moduleSize: (ModuleSize)moduleSize alignment: (PrintAlignment)alignment;
Parameter	textBarcode data to send to the printer The version for either syntax (a) or (b) is automatically set depending on the number of data specified on text.
	errorCorrectionError correction level See "4.2.1(4) ⑫ Error correction level (ErrorCorrection)" for available constants.
	moduleSizeModule Size See "4.2.1(4) ⑨ Module size (ModuleSize)" for available constants.

alignment	Alignment See "4.2.1(4)⑦ Alignment (PrintAlignment)" for available constants.
model	QR Code Model See "4.2.1(4)⑭ QR Code Model (QrModel)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while calling the method. See " 4.2.3 SIIPrinterException Class " for details of error.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

printDataMatrix

Print Data Matrix

Prints Data Matrix.

Syntax	<pre> - (void) printDataMatrix:(NSString *)text dataMatrixModule:(DataMatrixModule) dataMatrixModule moduleSize:(ModuleSize) moduleSize alignment:(PrintAlignment) alignment; </pre>	
Parameter	text	Barcode data to send to the printer
	dataMatrixModule	The number of the Data Matrix modules See "4.2.1(4)⑮ Data Matrix Module (DataMatrixModule)" for available constants.
	moduleSize	Module Size See "4.2.1(4)⑨ Module size (ModuleSize)" for available constants.
	alignment	Alignment See "4.2.1(4)⑦ Alignment (PrintAlignment)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while calling the method. See " 4.2.3 SIIPrinterException Class " for details of error.	
Reference	See "Appendix B Barcode Size List" for details of the barcode size.	

printMaxiCode

Print MaxiCode

Prints MaxiCode.

Syntax	<pre> - (void) printMaxiCode:(NSString *)text maxiCodeMode:(MaxiCodeMode) maxiCodeMode alignment:(PrintAlignment) alignment; </pre>	
Parameter	text	Barcode data to send to the printer
		<ul style="list-style-type: none"> When <code>maxiCodeMode</code> is SII_PM_MAXI_CODE_2: Add the service class (3 digits), the country code (3 digits), and the postal code (9 digits) in the beginning of data. When <code>maxiCodeMode</code> is SII_PM_MAXI_CODE_3: Add the service class (3 digits), the country code (3 digits), and the postal code (6 digits) in the beginning of data.

moduleSize	Module Size See "4.2.1(4) ⑨ Module size (ModuleSize)" for available constants.
alignment	Alignment See "4.2.1(4) ⑦ Alignment (PrintAlignment)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while calling the method. See " 4.2.3 SIIPrinterException Class " for details of error.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

printGS1DataBarExpandedStacked

Print GS1 Databar Expanded Stacked

Prints GS1 Databar Expanded Stacked.

Syntax	- (void) printGS1DataBarExpandedStacked: (NSString *)text column: (NSInteger) column moduleSize: (ModuleSize) moduleSize alignment: (PrintAlignment) alignment;
Parameter	text Barcode data to send to the printer Input any number of characters using the following: ' ', '!', '"', '%', '&', '(', ')', '*', '+', ',', '-', '.', '/', ':', ';', '<', '=', '>', '?', '_', '0' to '9', 'A' to 'Z', 'a' to 'z'. Input '{1' to FNC1. Be sure to input the check digit because it is not automatically calculated by the printer.
	column The number of columns Specify the number of columns in 1 line. The valid range is the even number from 2 to 20.
	moduleSize Module Size See "4.2.1(4) ⑨ Module size (ModuleSize)" for available constants.
	alignment Alignment See "4.2.1(4) ⑦ Alignment (PrintAlignment)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while calling the method. See " 4.2.3 SIIPrinterException Class " for details of error.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

printAztecCode

Print Aztec Code

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax	- (void) printAztecCode: (NSString *)text layer: (NSInteger) layer errorCorrection: (NSInteger) errorCorrection moduleSize: (ModuleSize) moduleSize aztecSymbol: (AztecSymbol) aztecSymbol alignment: (PrintAlignment) alignment;
--------	---

Feeds the paper to the paper cut position. The paper cut is not executed.

Syntax - (void) **cutPaper:** (CuttingMethod) cuttingMethod;

Parameter **cuttingMethod** Cutting method.
See "4.2.1(4)⑰ Cutting method (CuttingMethod)" for available constants.

Error **SIIPrinterException** is thrown when an error occurs while calling the method.
See "4.2.3 SIIPrinterException Class" for details of error.

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax - (void) **feedPosition:** (FeedPosition) feedPosition;

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax - (void) **openDrawer:** (DrawerNum) drawerNum
onOffTime: (PulseWidth) onOffTime;

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax - (void) **buzzer:** (NSInteger) onTime
offTime: (NSInteger) offTime;

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax - (void) **externalBuzzer:** (BuzzerPattern) buzzerPattern
buzzerCount: (NSInteger) buzzerCount;

Sends binary data to the printer.

Syntax - (void) **sendBinary:** (NSData*) data;

Parameter **data** Binary data to send to a printer
Data size that can be specified at 1 time is 256 KB (262144 bytes).

Error **SIIPrinterException** is thrown when an error occurs while calling the method.
See "4.2.3 SIIPrinterException Class" for details of error.

Description In this method, specified binary data is sent to a printer without conversion.

By sending printer command as binary data with this method, printer functions which are not supported in the library become available. However, this method does not support commands which get responses from a printer.

sendDataFile

Send specified file

Sends file data.

The method of syntax (a), dithering can be specified.

The method of syntax (b), dithering is fixed to be disabled.

Syntax	(a) - (void) sendDataFile: (NSString *)fileName alignment: (PrintAlignment) alignment dithering: (Dithering) dithering;
	(b) - (void) sendDataFile: (NSString *)fileName alignment: (PrintAlignment) alignment;
Parameter	<p>fileName</p> <p>File path of data file to send to the printer The maximum file size that can be specified is 1 MB (1048576 bytes). The file extensions capable of sending and sending the file are describes below.</p> <ul style="list-style-type: none"> • .bmp, .jpg, .jpeg, .png Data is sent to the printer as image data. Colored image data is converted to monochrome image by binarization and sent to the printer. Printing is executed at one time after mapping the image data in memory of the printer. • .txt Data is sent to the printer as text data. Text data format supports UTF-8. This method encodes the text data to printable text data based on the settings of internationalCharacter and codePage, and then sends it to the printer. This method does not add any line feed code in the last of text data. In order to print to the last of the text data, add a line feed code to the last of the text data. • .bin, .dat Data is sent to the printer as the binary data without conversion. <p>alignment</p> <p>Alignment The alignment is valid only when the file extension specified on fileName is .bmp, .jpg, .jpeg, .png, or .txt. See "4.2.1(4) ⑦ Alignment (PrintAlignment)" for available constants.</p> <p>dithering</p> <p>Dithering The alignment is valid only when the file extension specified on fileName is .bmp, .jpg, .jpeg, .png, or .txt. See "4.2.1(4) ⑧ Dithering (Dithering)" for available constants.</p>
Error	<p>SIIPrinterException is thrown when an error occurs while calling the method. See "4.2.3 SIIPrinterException Class" for details of error.</p>

Prints the specified page of the selected PDF file.

Syntax	<pre> - (void) printPDF: (NSString *)fileName startIndex: (NSInteger)startIndex endIndex: (NSInteger)endIndex rotate: (Rotate)rotate imageScale: (ImageScale)imageScale bottomMargin: (NSInteger)bottomMargin alignment: (PrintAlignment)alignment dithering: (Dithering)dithering; </pre>	
Parameter	fileName	<p>Path of the PDF file</p> <p>The file extension for supporting PDF is .pdf.</p> <p>The maximum file size that can be specified is 1 MB (1048576 bytes).</p>
	startIndex	<p>Start number of the printed page</p> <p>The range is -1, 1 to the number of pages in the PDF file.</p> <p>When -1 is specified for <code>startIndex</code>, all pages are printed.</p> <p>When -1 is specified for <code>startIndex</code>, the value of <code>endIndex</code> is ignored.</p> <p>When 1 or more is specified for <code>startIndex</code>, pages from the page number specified in <code>startIndex</code> to the page number specified in <code>endIndex</code> are printed.</p> <p>When a value more than the value specified for <code>endIndex</code> is specified for <code>startIndex</code>, an error occurs.</p> <p>When an out-of-range value is specified for <code>startIndex</code> or <code>endIndex</code>, an error occurs.</p>
	endIndex	<p>End number of the printed page</p> <p>The range is 1 to 2147483647.</p> <p>When a value more than the number of pages in the PDF file is specified for <code>endIndex</code>, pages from the page number specified in <code>startIndex</code> to the last page of the PDF file are printed.</p>
	rotate	<p>Rotation direction of the image</p> <p>See "4.2.1(4)¹⁹ Image rotation direction (<code>Rotate</code>)" for available constants.</p>
	imageScale	<p>Image scaling</p> <p>See "4.2.1(4)²⁰ Image scaling (<code>ImageScale</code>)" for available constants.</p> <p>When <code>SII_PM_IMAGE_SCALE_WIDTH_FIT</code> is specified for <code>imageScale</code>, the image width is converted to the print width of the printer while maintaining the aspect ratio.</p>
	bottomMargin	<p>Bottom margin (dot)</p> <p>The range is -1, 0 to 2400.</p> <p>When -1 is specified for <code>bottomMargin</code>, the image is created and printed while maintaining the bottom margin.</p> <p>When a value between 0 and 2400 is specified for <code>bottomMargin</code>, the bottom margin is changed to the specified size.</p> <p>When a value between 0 and 2400 is specified for <code>bottomMargin</code>, blank pages are not printed.</p>
	dithering	<p>Dithering</p> <p>See "4.2.1(4)¹⁸ Dithering (<code>Dithering</code>)" for available constants.</p>

alignment Alignment
See "4.2.1(4)⑦ Alignment (PrintAlignment)" for available constants.

- Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "**4.2.3 SIIPrinterException Class**" for details on the error.
- Description PDF is converted to printable format for the printer and is sent to the printer.

The color image data is converted to monochrome image by binarization.
- Note No guarantee of printing operation when more than 100 pages are printed at a time.

getStatus Get printer status

Gets the latest printer status.

Syntax - (void) **getStatus**: (NSInteger[])buf;

Parameter buf Status retrieved from a printer

Error **SIIPrinterException** is thrown when an error occurs while calling the method.
See "**4.2.3 SIIPrinterException Class**" for details of error.

Description Status retrieved from a printer is stored to an NSInteger array.

The printer status is shown below.
When the connection failed, the printer status is shown in 0x80000000.

Bit	Function	Value	
		0	1
0	Voltage error	OK	Error
1	Hardware error	OK	Error
2	Head temperature error	OK	Error
3	Reserved	Fixed	-
4	Out-of-paper error	OK	Error
5	Reserved	Fixed	-
6	Reserved	Fixed	-
7	Reserved	Fixed	-
8	FEED Switch status	OFF	ON
9	Reserved	Fixed	-
10	Paper feed status	Stop	Operating
11	Return-waiting status	No	Yes
12	Reserved	Fixed	-
13	Reserved	-	Fixed
14	Reserved	-	Fixed
15	Reserved	-	Fixed
16	FLASH memory rewriting	No	Yes
17	Reserved	-	Fixed
18	Reserved	-	Fixed

Bit	Function	Value	
		0	1
19	Reserved	-	Fixed
20 to 22	Battery remaining capacity level	000: No battery 001: Low (Battery remaining capacity: approx. 10%) 011: Middle (Battery remaining capacity: approx. 40%) 111: Full (Battery remaining capacity: approx. 80%)	
23	Battery error	No	Yes
24 to 31	Reserved	-	Fixed

abort

Abort waiting state of printer

Aborts the waiting state of a printer.

Syntax - (void) **abort**;

Error **SIIPrinterException** is thrown when an error occurs while calling the method.
See "**4.2.3 SIIPrinterException Class**" for details of error.

Description When sending of image data by **sendDataFile** is aborted, a printer does not accept other processes until specified image data is received completely. (Method or sent data are misinterpreted and recognized as part of the image data.) To solve this situation, use this method to abort the waiting state of a printer.
Note that when executing this method, a part of unprocessed image data may be printed.

registerLogo

Register logo

Registers image data to NV graphics memory in the printer as a logo.

The method of syntax (a), dithering can be specified.

The method of syntax (b), dithering is fixed to be disabled.

Syntax (a) - (void) **registerLogo**: (NSString *)fileName
logoId: (NSString *)logoId
dithering: (Dithering)dithering;

(b) - (void) **registerLogo**: (NSString *)fileName
logoId: (NSString *)logoId;

Parameter **fileName** File path of image data to register as logo
The file extensions for supporting image data are .bmp, .jpg, .jpeg, and .png. When the image data is colored, it is converted to monochrome image by binarization and sent to the printer.

logoId Logo ID to register (key code)
Specify the logo ID to register to a printer by character string of 2 characters.
The valid characters are ASCII character code from 20h (space) to 7Eh (tilde) such as alphanumeric ('0' to '9', 'A' to 'Z', 'a' to 'z').

dithering Dithering
See "4.2.1(4) ⑱ Dithering (Dithering)" for available constants.

Error **SIIPrinterException** is thrown when an error occurs while calling the method.
See "**4.2.3 SIIPrinterException Class**" for details of error.

```
printLogo
```

Print logo

Prints the registered logo.

Syntax	<pre>- (void) printLogo: (NSString *) logoId alignment (PrintAlignment) alignment;</pre>	
Parameter	logoId	Logo ID to print (key code) Specify registered logo ID by character strings.
	alignment	Alignment See "4.2.1(4) ⑦ Alignment (PrintAlignment)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while calling the method. See " 4.2.3 SIIPrinterException Class " for details of error.	

```
unregisterLogo
```

Delete registered logo

Deletes the registered logo.

Syntax	- (void) unregisterLogo: (NSString *)logoId;
Parameter	logoId Logo ID to delete (key code) Specify registered logo ID by character strings.
Error	SIIPrinterException is thrown when an error occurs while calling the method. See " 4.2.3 SIIPrinterException Class " for details of error.

```
registerStyleSheet
```

Register style sheet

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax

```
- (void) registerStyleSheet: (NSString *) fileName  
                        cssId: (NSInteger) cssId;
```

```
unregisterStyleSheet
```

Delete registered style sheet

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax - (void) **unregisterStyleSheet:** (NSInteger)cssId;

```
resetPrinter
```

Reset printer

Resets the printer hardware.

Syntax	- (void) resetPrinter ;
Error	SIIPrinterException is thrown when an error occurs while calling the method. See " 4.2.3 SIIPrinterException Class " for details of error.

The connection with the printer is retained even after this method is executed.

Get various responses from printer

```
Syntax      - (void) getPrinterResponse: (NSInteger) responseId
              param: (NSObject *) param
              response: (void *) response;
```

Parameter	<code>responseId</code>	Response type constant See "4.2.1(3)③ Response type" for available constants.
	<code>param</code>	Command parameter The values for specifying varies depending on the response type constant. See the following table for possible values.
	<code>response</code>	Buffer that stores retrieved response data Buffer type varies depending on the response type constant. See the following table for buffer types.

Response Type Constant	
Parameter	Description
SII_PM_PRINTER_RESPONSE_REQUEST (Execution response request)	
param	Specify 0 to 15 (00h to 0Fh) in NSData type.
response	Specify an NSInteger array of length 1. When the response is retrieved successfully, the response code of the execution response request is stored with 128 to 143 (80h to 8Fh).
SII_PM_PRINTER_RESPONSE_USER_AREA (Send remaining capacity of user area)	
param	Specify nil.
response	Specify an NSInteger array of length 1. When the response is retrieved successfully, the remaining capacity of the user area is stored as a numerical value in bytes.
SII_PM_PRINTER_RESPONSE_ARRANGE_USER_AREA (Send remaining capacity of user area after defragment)	
param	Specify nil.
response	Specify an NSInteger array of length 1. When the response is retrieved successfully, the remaining capacity of the user area after defragment is stored as a numerical value in bytes.

Response Type Constant	
Parameter	Description
SII_PM_PRINTER_RESPONSE_NV_GRAPHICS (Send NV graphics memory capacity)	
param	Specify nil.
response	Specify an NSInteger array of length 1. When the response is retrieved successfully, the NV graphics memory capacity is stored as a numerical value in bytes.
SII_PM_PRINTER_RESPONSE_KEY_CODE (Send key code list of defined NV graphics)	
param	Specify nil.
response	Specify an NSMutableArray array. When the response is retrieved successfully, the key code of NV graphics is stored as a string array.
SII_PM_PRINTER_RESPONSE_BATTERY_STATUS (Battery remaining capacity level)	
param	Specify nil.
response	Specify an NSInteger array of length 1. When the response is retrieved successfully, battery remaining capacity level is stored in value. See "4.2.1(3)④ Battery remaining capacity level" for details of value. Battery remaining capacity level: SII_PM_BATTERY_STATUS_FULL : Full (Battery remaining capacity: approx. 80%) SII_PM_BATTERY_STATUS_MIDDLE : Middle (Battery remaining capacity: approx. 40%) SII_PM_BATTERY_STATUS_LOW : Low (Battery remaining capacity: approx. 10%) SII_PM_BATTERY_STATUS_EMPTY : No battery
SII_PM_PRINTER_RESPONSE_FIRMWARE_VERSION (Send firmware version)	
param	Specify nil.
response	Specify an NSMutableArray array. When the response is retrieved successfully, the firmware version is stored as a string array.

Error **SIIPrinterException** is thrown when an error occurs while calling the method.
See "4.2.3 SIIPrinterException Class" for details of error.

startDiscoveryPrinter

Start printer search (Bluetooth)

Searches Bluetooth device (Bluetooth accessory).

Syntax - (void) **startDiscoveryPrinter**: (NSPredicate *)predicate
completion: (EABluetoothAccessoryPickerCompletion) completion;

Parameter predicate Specify nil.

completion Event completion of
EABluetoothAccessoryPickerCompletion
Specify ^(NSError *error) to receive event completion of
EABluetoothAccessoryPickerCompletion.

Error **SIIPrinterException** is thrown when an error occurs while calling the method.

Description This method searches Bluetooth device (Bluetooth accessory). This method calls `showBluetoothAccessoryPickerWithNameFilter` of `EAAccessoryManager` internally. When executing this method, pairing with Bluetooth device is enable in the displayed window.

Example for specifying `^(NSError *)error`
(Statement of `EABluetoothAccessoryPickerCompletion`)

```
typedef
void(^EABluetoothAccessoryPickerCompletion)(NSError *error);
```

startDiscoveryPrinter

Start printer search (TCP/IP)

This method is not supported. When executing this method, it searches SII printer other than MP-B20.

Syntax - (void) **startDiscoveryPrinter:** (NSInteger) retryCount
timeout: (NSInteger) timeout
completion: (SIIDiscoveryPrinterCompletion) completion;

cancelDiscoveryPrinter

Cancel printer search

This method is not supported. When executing this method, it cancels executing **startDiscoveryPrinter** (TCP/IP).

Syntax - (void) **cancelDiscoveryPrinter;**

getFoundPrinter

Get found printer information

This method is not supported. When executing this method, it returns the printer information searched by **startDiscoveryPrinter** (TCP/IP) as NSArray type.

Syntax - (NSArray *) **getFoundPrinter;**

getVersion

Get SDK version

Gets the SDK version as a character string.

Syntax - (NSString *) **getVersion;**

Return value SDK version character string (Example: When the SDK version is Ver.1.0.0, the return value is "1.0.0")

Description This method can be executed regardless of whether `isConnect` is YES or NO.

Starts or ends batch processing.

Syntax	- (void) controlTransaction: (TransactionFunction) control;
Parameter	control Batch processing selection See "4.2.1(4)㉔ Batch processing selection (TransactionFunction)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while calling this method. See "4.2.3 SIIPrinterException Class " for details on the error.
Description	<p>The procedure of batch processing is as follows:</p> <ol style="list-style-type: none"> (1) Start batch processing. Specify SII_PM_TRANSACTION_START. (2) Execute the method. In the case of the batch processing target method, buffering of transmission data is started. The transmission data of the batch processing target method executed during buffering is buffered in the transmission buffer without being sent to the printer. The maximum size of transmission data to be buffered is system dependent. If the buffered transmission data exceeds the maximum size, the batch processing target method at the time of exceeding becomes an error. If an error occurs, the transmission data up to the error is retained. As for the retained transmission data, finish the batch processing in step (3). In the case of a method other than the batch processing target method, transmission data is immediately executed without being buffered. (3) Finish batch processing. When SII_PM_TRANSACTION_PRINT is specified, the buffered transmission data is sent to the printer. The buffered transmission data is retained even after sent to the printer. The retained transmission data is discarded by any of the following: <ul style="list-style-type: none"> • Specify SII_PM_TRANSACTION_CLEAR • Specify SII_PM_TRANSACTION_START • Execute disconnect <p>The batch processing target methods are as follows:</p> <ul style="list-style-type: none"> • sendText • sendTextEx • printBarcode • printPDF417 • printQRcode • printDataMatrix • printMaxiCode • printGS1DataBarStacked • printGS1DataBarStackedOmnidirectional • printGS1DataBarExpandedStacked • cutPaper • sendBinary • sendDataFile • printPDF • printLogo^{*1}

*1: **printLogo** under batch processing does not notify the error even when the registered logo does not exist.

(6) Property Details

`sendTimeout`

Get/Set send timeout period

Gets or sets the send timeout period.

Syntax	<code>@property NSInteger sendTimeout;</code>
Effective range	100 to 300000 (millisecond: ms) When the set value is below 100, the value is set to 100 ms. When the set value exceeds 300000, the value is set to 300000 ms.
Default	10000
Description	This method can get or set the send timeout period regardless of whether <code>isConnect</code> is Yes or No. The set timeout period becomes enabled at the next data sending.

`receiveTimeout`

Get/Set receive timeout period

Gets or sets the receive timeout period.

Syntax	<code>@property NSInteger receiveTimeout;</code>
Effective range	100 to 300000 (millisecond: ms) When the set value is below 100, the value is set to 100 ms. When the set value exceeds 300000, the value is set to 300000 ms.
Default	10000
Description	This method can get or set the receive timeout period regardless of whether <code>isConnect</code> is Yes or No. The set timeout period becomes enabled at the next data receiving.

`internationalCharacter`

Get/Set international character set

Gets or sets the value of international character set.

Syntax	<code>@property NSInteger internationalCharacter;</code>
Description	See "4.2.1(3)⑤ International character set" for settable constants. When invalid value is set, it is ignored. When this property is not set, it is initialized to following state depending on a language setting of an iOS device.

When a language setting of an iOS device is Japanese:

`SH_PM_COUNTRY_JAPAN`

When a language setting of an iOS device is other languages than Japanese:

`SH_PM_COUNTRY_USA`

When the text data is sent by `sendText`, `sendTextEx`, or `sendDataFile`, the print result for the following character differs depending on this property setting.

The character code differs depending on this property setting:

0x23, 0x24, 0x40, 0x5B, 0x5C, 0x5D, 0x5E, 0x60, 0x7B, 0x7C, 0x7D, 0x7E

Gets or sets the value of codepage.

Syntax	<code>@property NSInteger codePage;</code>
Description	See "4.2.1(3)⑥ Codepage" for settable constants. When invalid value is set, it is ignored. When this property is not set, it is initialized to following codepage depending on a language setting of an iOS device. When a language setting of an iOS device is Japanese: SII_PM_CODE_PAGE_KATAKANA When a language setting of an iOS device is other languages than Japanese: SII_PM_CODE_PAGE_1252 The encoder used for sending text data by sendText method, sendTextEx method, or sendDataFile method is changed depends on this property setting.

Gets the value of the connecting printer model.

Syntax	<code>@property(readonly) NSInteger printerModel;</code>
Default	-1
Return value	See "4.2.1(3)① Printer model" for available constants. When isConnect is NO, -1 is returned.

Gets the port type used for connecting with the printer.

Syntax	<code>@property(readonly) NSInteger portType;</code>
Default	-1
Return value	See "4.2.1(3)② Port type" for available constant. When isConnect is NO, -1 is returned.

Verifies connection state with the printer.

Syntax	<code>@property(readonly) BOOL isConnect;</code>
Return value	YES Connected to the printer NO Not connected to the printer
Description	This property retains the connect state as a BOOL value. When connect succeeds, this property is YES. After connect , when disconnect succeeds, this property becomes NO.

Do not use this property since this property is not supported.

Syntax @property NSInteger **socketKeepingTime**;

Registers a delegate object that receives notifications from the printer.

Syntax @property(weak, nonatomic) id<SIIPrinterManagerDelegate> **delegate**;

Description Specify an object conforming to **SIIPrinterManagerDelegate** protocol.
When this property is executed with the delegate object registered, the already registered delegate object becomes disabled, and a new delegate object is registered.

When specifying nil for this property, the notification of the printer status is stopped.

4.2.2 SIIPrinterInfo Class

This class stores the printer information searched by printer searching method for TCP/IP.
Do not use this class since this class is not supported.

4.2.3 SIIPrinterException Class

(1) Method List

Method provided by **SIIPrinterException** class is shown in the following table.

Name	Description
SIIPrinterException	Constructor

(2) Property List

Properties provided by **SIIPrinterException** class are shown in the following table.

Name	Access	Description
errorCode	R	Get error codes
errorMessage	R	Get error message

(3) Constant List

① Error code

Constants used for getting error codes are shown in following table.

Constant Name	Description	Value
SII_PM_ERROR_ACCESS_DENIED	Failed to get the handle.* ¹	-1
	An unavailable port was specified.	
	An unsupported method was specified.	
SII_PM_ERROR_SHARING_VIOLATION	An already opened port was specified.	-11
SII_PM_ERROR_PORT_NOT_OPENED	The port is not open.	-12
SII_PM_ERROR_DEVICE_NOT_CONNECTED	There is a problem with Bluetooth connection between the iOS device and the printer.	-21
SII_PM_ERROR_OFFLINE	Disconnected state or the printer is offline.	-22
SII_PM_ERROR_DEVICE_INITIALIZE_FAILED	Failed to change the printer settings. Data sending to the printer is not completed within the send timeout period, or data receiving from the printer is not completed within the receive timeout period.	-31
SII_PM_ERROR_DATA_SIZE_ZERO	0-byte data was specified.	-101
SII_PM_ERROR_OVER_MAX_DATA_SIZE	Maximum data size is exceeded.	-102
SII_PM_ERROR_ENCODE_FAILED	An error occurred in encoding text data.* ¹	-111
SII_PM_ERROR_TIMEOUT	Send timeout occurred.	-201
	Receive timeout occurred.	
SII_PM_ERROR_FILE_NOT_FOUND	The specified file is not found.	-301

Constant Name	Description	Value
SII_PM_ERROR_FILE_USED	The specified file is in use by another process.	-302
SII_PM_ERROR_FILE_INVALID	The specified file is invalid.	-303
SII_PM_ERROR_LOW_MEMORY	Memory shortage occurred when loading image data file.	-311
SII_PM_ERROR_OVER_MAX_IMAGE	Either or both of width and height of image data exceeds the number of printable maximum dots.	-312
SII_PM_ERROR_LOGO_NOT_DEFINED	The logo is not registered.	-313
SII_PM_ERROR_LOW_USER_AREA	Remaining user area is insufficient.	-401
SII_PM_ERROR_LOW_EXTERNAL_RAM	Remaining RAM capacity is insufficient.	-402
SII_PM_ERROR_INVALID_NO	The specified value for the logo ID is invalid.	-501
SII_PM_ERROR_INVALID_PARAM	The specified parameter is invalid.	-9999

*1: Abnormal processing might have occurred.

(4) Method Details

`SIIPrinterException`

Constructor

This is the exception class that is thrown when API for `SIIPrinterManager` class is called.

Syntax `SIIPrinterException`

(5) Property Details

`errorCode`

Get error codes

Gets error code for thrown exception.

Syntax `@property NSInteger errorCode;`

Return value See "4.2.3(3) Constant List" for more details.

`errorMessage`

Get error message

Gets error message for thrown exception.

Syntax `@property NSString *errorMessage;`

Description Character string to complement `errorCode` property can be retrieved.

4.2.4 SIIPrinterManagerDelegate Protocol

(1) Method List

Methods provided by `SIIPrinterManagerDelegate` protocol are shown in the following table.

Name	Description
didStatusChange	Notify printer status

(2) Method Details

didStatusChange	Notify printer status
-----------------	-----------------------

Notifies changes in the printer status.

```
Syntax      - (void) didStatusChange: (SIIPrinterManager *)printerManager
              status: (NSInteger)status;
```

Parameter	printerManager	Calling SIIPrinterManager object
	status	Printer status

Description	<p>This method is called the latest status at the following timing.</p> <ul style="list-style-type: none"> ·When connect is executed. ·When the printer status is changed.
-------------	---

This method is called when `isConnect` is YES.

The notification of the printer status is stopped by `disconnect`.

The notification of the printer status is stopped by setting nil to `delegate`.

When communication with the printer is disconnected, this method notifies 0x80000000. After disconnection from the printer, the library attempts to resume communication with the printer until **disconnect** is executed. When communication with the printer becomes possible, this method notifies the latest printer status. See **getStatus** for description of the printer status.

Do not execute the APIs of **SIIPrinterManager** within this method.

4.2.5 SIISmartLabelManager Class

SIISmartLabelManager class provides the function to covert the label file (*.sl, *slex) created using SII Layout Editor into the printable data from the printer.

Do not use this class because it is not supported.

Chapter 5


Sample Program

This chapter describes the sample program provided by SII print class library.

5.1 Screen Layout

SII print class library includes SiiLibSample as the sample program with Xcode project format. This section describes the screen of SiiLibSample.

5.1.1 Main Screen

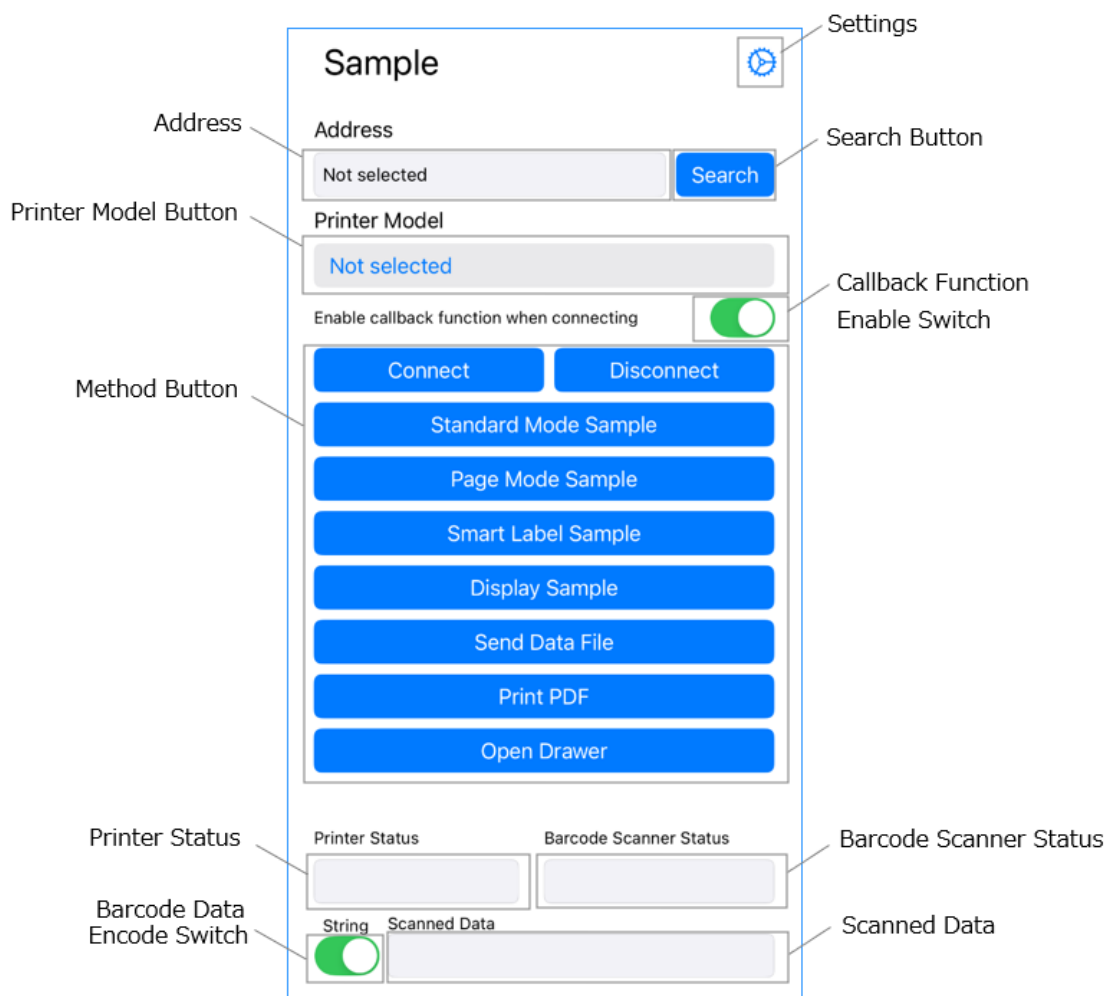


Item	Description
Settings	Tapping the [Settings] button opens the function setting screen. In order to go back to the main screen, tap [close] on the top left of the screen.
Address	Displays the information about the selected printer.
Printer Model Button	Specifies the printer model. When tapping [Printer Model Button], a list of printer models is displayed. By selecting from the list, the printer model can be entered. When the printer is selected from the printer search screen, the printer model is automatically displayed.
Search Button	Starts searching for printers. Transits to the printer search screen. A list of the searched printers is displayed. The printer is selected by tapping the searched printer and returns to the main screen.
Callback Function Enable Switch	Select whether to enable the callback function when connecting to the printer. On : Starts the callback function when connecting. Off : The callback function does not respond.
Method Button* ¹	In addition to the method buttons for executing connect and disconnect , the sample by the combination of some methods can be printed and checked for the operation of peripheral devices.
Printer Status	Displays the printer status. When [Callback Function Enable Switch] is On, the latest status is displayed.
Barcode Scanner Status	Displays the connection status of the barcode scanner. MP-B20 does not support the barcode scanner.
Barcode Data Encode Switch	Selects the conversion of barcode data read by the barcode scanner. MP-B20 does not support the barcode scanner.
Scanned Data	Displays the barcode data read by the barcode scanner. MP-B20 does not support the barcode scanner.

*1: Supported functions vary by model. Only supported functions can be operated.

5.1.2 [Settings] Screen

Various setting functions are displayed in [Settings].

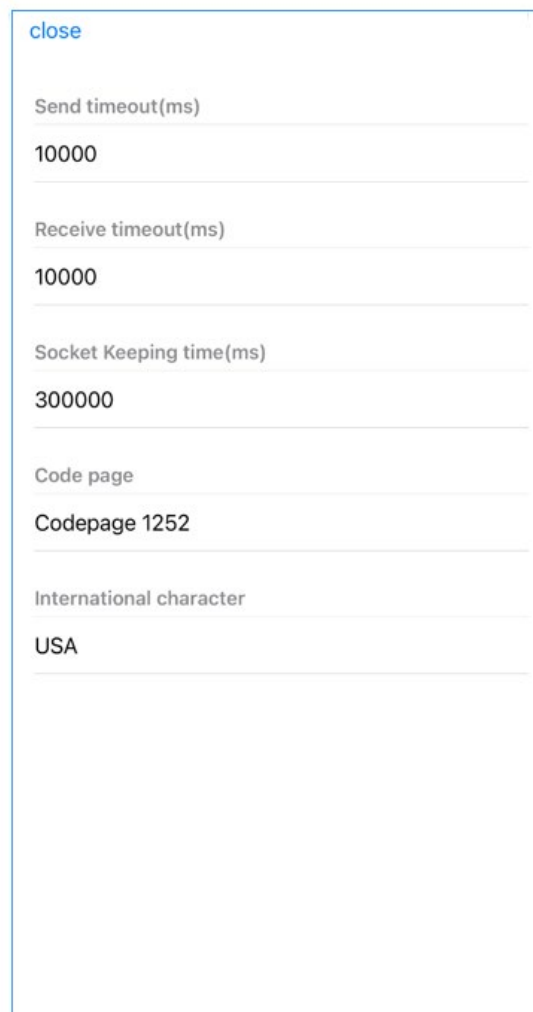

The screenshot displays a settings menu with a 'close' link at the top left. Below it are five settings, each with a label and a value field:

- Send timeout(ms)**: 10000
- Receive timeout(ms)**: 10000
- Socket Keeping time(ms)**: 300000
- Code page**: Codepage 1252
- International character**: USA

5.2 Precaution

The sample program is subject to change without notice.

No guarantee of proper operation and support are provided for the sample program.

Chapter 6

Disclaimer

We closely monitor the development of SII print class library in order to avoid problems. However, we are not responsible for any damages arising out of the use of SII print class library.

Appendix A

Character Set

A.1 Codepage Table (Character Code Table)

The codepages when **SII_PM_COUNTRY_USA** is set for the international character set are shown below. Print results of the specific character codes vary depending on the setting of the international character set. See "A.2 International Character Set" for the specific character codes.

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	φ	£	¥	℔	ƒ
A0	á	í	ó	ú	ñ	Ñ	ä	ö	í	¬	½	¼	¿	«	»	
B0	☐	☐	☐		†	‡	§	¶	§							
C0	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
D0	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	∩
F0	≡	±	≥	≤	∫	∫	÷	≈	°	•	•	√	n	2	■	

Figure A-1 SII_PM_CODE_PAGE_437 (USA, Standard Europe)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80																
90																
A0	。	「	」	、	・	ヲ	ア	イ	ウ	エ	オ	ヤ	ユ	ヨ	ッ	
B0	ー	ア	イ	ウ	エ	オ	カ	キ	ク	ケ	コ	サ	シ	ス	セ	ソ
C0	タ	チ	ツ	テ	ト	ナ	ニ	ヌ	ネ	ノ	ハ	ヒ	フ	ヘ	ホ	マ
D0	ミ	ム	メ	モ	ヤ	ユ	ヨ	ラ	リ	ル	レ	ロ	ワ	ン	ゝ	。
E0																
F0																

Figure A-2 SII_PM_CODE_PAGE_KATAKANA

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	â	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	Ø	×	f
A0	á	í	ó	ú	ñ	Ñ	ä	ö	¿	®	¬	½	¼	¡	«	»
B0	☐	☐	☐			Á	Â	À	©	¶	¶	¶	¶	¢	¥	₱
C0	⊥	⊥	⊥	⊥	⊥	ã	Ã	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	α
D0	ð	Đ	Ê	Ë	È	Í	Î	Ï	⌋	⌋	■	■	■	■	■	■
E0	Ó	β	Ô	Ò	Õ	μ	þ	þ	Ú	Û	Ü	ý	Ý	-	'	
F0	-	±	=	¾	¶	§	÷	,	°	…	.	¹	³	²	■	

Figure A-3 SII_PM_CODE_PAGE_850 (Multilingual)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ã	à	Á	ç	ê	Ê	è	Í	Ô	ì	Ã	Â
90	É	À	È	ô	õ	ò	Ú	ù	Ì	Õ	Ü	¢	£	Ù	Þ	Ó
A0	á	í	ó	ú	ñ	Ñ	ä	ö	ï	ò	¬	½	¼	¡	«	»
B0	⌘	⌘	⌘													
C0	L	L	T		-	+	+	+	+	+	+	+	+	+	+	+
D0	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	Π
F0	≡	±	≥	≤		J	÷	≈	°	•	•	√	n	2	■	

Figure A-4 SII_PM_CODE_PAGE_860 (Portuguese)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	Â	à	¶	ç	ê	ë	è	ï	î	≡	À	§
90	É	È	Ê	ô	Ë	Ï	Ô	Ù	⌘	Ô	Ü	¢	£	Ù	Û	f
A0		'	ó	ú	¨	³	-	î	¬	¬	½	¼	¾	«	»	
B0	⌘	⌘	⌘													
C0	L	L	T		-	+	+	+	+	+	+	+	+	+	+	+
D0	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	Π
F0	≡	±	≥	≤		J	÷	≈	°	•	•	√	n	2	■	

Figure A-5 SII_PM_CODE_PAGE_863 (Canadian-French)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	Ø	Pt	f
A0	á	í	ó	ú	ñ	Ñ	ä	ö	¿	¬	½	¼	í	«	»	
B0	☐	☐	☐													
C0	L	L	T		+	+	+	+	+	+	+	+	+	+	+	+
D0	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	Π
F0	≡	±	≥	≤		J	÷	≈	°	.	.	√	n	2	■	

Figure A-6 SII_PM_CODE_PAGE_865 (Nordic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	Ø	Ş	ş
A0	á	í	ó	ú	ñ	Ñ	Ğ	ğ	¿	®	¬	½	¼	í	«	»
B0	☐	☐	☐			Á	Â	À	©							
C0	L	L	T		+	+	+	+	+	+	+	+	+	+	+	+
D0	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌
E0	ó	β	ô	ò	õ	õ	μ		x	ú	û	ü	ì	ÿ	-	'
F0	-	±	¾	¶	§	÷	,	°	..	.	1	3	2	■		

Figure A-7 SII_PM_CODE_PAGE_857 (Turkish)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	A	B	Γ	Δ	E	Z	H	Θ	I	K	Λ	M	N	Ξ	O	Π
90	P	Σ	T	Υ	Φ	X	Ψ	Ω	α	β	γ	δ	ε	ζ	η	θ
A0	ι	κ	λ	μ	ν	ξ	ο	π	ρ	σ	ς	τ	υ	φ	χ	ψ
B0	⋈	⋈	⋈		†	‡		π	‡			π			‡	‡
C0	L	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
D0	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
E0	ω	ά	έ	ή	ϊ	ί	ό	ύ	ϋ	ώ	Ά	Έ	Ή	Ί	Ό	Υ
F0	Ω	±	≥	≤	İ	ÿ	÷	≈	°	.	.	√	n	2		

Figure A-8 SII_PM_CODE_PAGE_737 (Greek)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	’	“	”	•	-	-	~	™	š	<	œ		ž	
90											š	>	œ		ž	ÿ
A0	ı	¢	£	¤	¥	¦	§	¨	©	ª	«	¬	-	®	¯	
B0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾	¿
C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D0	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
E0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F0	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ

Figure A-9 SII_PM_CODE_PAGE_1252 (Latin)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
90	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я
A0	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
B0	␣	␣	␣		†	‡	§	¶	‡	§	¶	‡	§	¶	‡	§
C0	␣	␣	␣		†	‡	§	¶	‡	§	¶	␣	␣	␣	␣	␣
D0	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣
E0	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я
F0	Ё	ё	Є	є	İ	ı	Ÿ	ÿ	°	•	•	√	№	α	■	

Figure A-10 SII_PM_CODE_PAGE_866 (Russian)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	û	ç	ł	ë	ő	ö	î	ž	Ä	Ć	
90	É	Í	í	ô	ö	Ł	ł	Ś	ś	Ö	Ü	Ť	ť	Ł	×	č
A0	á	í	ó	ú	À	à	Ž	ž	Ę	ę	¬	ž	Č	š	«	»
B0	␣	␣	␣		†	‡	§	¶	‡	§	¶	␣	␣	␣	␣	␣
C0	␣	␣	␣		†	‡	§	¶	‡	§	¶	␣	␣	␣	␣	␣
D0	đ	Đ	Ď	Ě	ď	Ň	í	î	ě	Ĵ	␣	␣	␣	␣	␣	␣
E0	ó	ß	ô	ń	ň	š	š	ř	ú	ř	Ů	ý	Ý	ť	'	
F0	-	"	˘	˘	˘	§	÷	˘	˘	˘	Ů	Ř	ř	■		

Figure A-11 SII_PM_CODE_PAGE_852 (Eastern Europe)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	â	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ü	Ö	Ü	ø	£	Ø	×	ƒ	
A0	á	í	ó	ú	ñ	Ñ	ä	ö	¿	®	¬	½	¼	¡	«	»
B0	☐	☐	☐			Á	Â	Ã	©			¶	¶	¢	¥	₱
C0	L	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
D0	ð	Ð	Ê	Ë	È	€	Í	Î	Ï	⌋	⌋	■	■	■	■	■
E0	ó	β	ô	ò	õ	õ	μ	þ	þ	ú	û	ü	ý	ý	-	'
F0	-	±	=	¾	¶	§	÷	,	°	..	.	1	3	2		■

Figure A-12 SII_PM_CODE_PAGE_858 (Euro)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	ђ	Ђ	ѓ	Ѓ	ё	Ё	є	Є	ѕ	Ѕ	і	І	ї	Ї	ј	Ј
90	љ	Љ	њ	Њ	ћ	Ћ	ќ	Ќ	џ	џ	џ	џ	џ	џ	џ	џ
A0	а	А	б	Б	в	В	г	Г	д	Д	е	Е	ф	Ф	г	Г
B0	☐	☐	☐			х	Х	и	И			¶	¶	й	Й	₱
C0	L	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
D0	л	Л	м	М	н	Н	о	О	п	П	р	Р	■	■	П	я
E0	Я	р	Р	с	С	т	Т	у	У	ж	Ж	в	В	ь	ь	№
F0	-	ы	Ы	э	Э	ш	Ш	э	Э	щ	Щ	ч	Ч	§		■

Figure A-13 SII_PM_CODE_PAGE_855 (Cyrillic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	°	•	•	√	■	-		+	+	+	+	+	+	+	+	+
90	β	∞	φ	±	½	¼	≈	«	»	لَا	لَا	لَا	لَا	لَا	لَا	لَا
A0	-	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل
B0	•	١	٢	٣	٤	٥	٦	٧	٨	٩	ف	س	س	س	س	س
C0	¢	ء	آ	أ	ؤ	ع	ئ	ب	ا	ة	ث	ج	ح	خ	د	ذ
D0	ذ	ر	ز	س	ش	ص	ض	ط	ظ	ع	غ	ف	ق	ك	خ	ع
E0	-	ف	ق	ك	م	ل	ه	و	ي	ي	ي	ي	ي	ي	ي	ي
F0	-	ن	ه	ي	ي	ي	ي	ي	ي	ي	ي	ي	ي	ي	ي	ي

Figure A-14 SII_PM_CODE_PAGE_864 (Arabic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	’	“	”	•	-	-	™	š	Š	š	š	š	š	š
90	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘
A0	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘
B0	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘
C0	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á
D0	Đ	Ń	Ń	Ó	Ô	Ö	Ö	×	Ř	Ů	Ú	Ú	Ú	Ú	Ý	Ť
E0	ř	á	â	ä	ä	í	č	č	é	é	ë	ë	í	î	ď	
F0	đ	ń	ń	ó	ô	ö	ö	÷	ř	ů	ú	ú	ú	ú	ý	ť

Figure A-15 SII_PM_CODE_PAGE_1250 (Central European)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	ђ	ѓ	;	ѓ	„	...	†	‡	€	‰	Љ	<	Њ	ќ	ћ	џ
90	ђ	‘	;	“	”	•	-	-	™	Љ	>	њ	ќ	ћ	џ	
A0	ѳ	ѳ	Ј	Ѡ	Г	І	Ѕ	Ё	©	©	«	¬	-	®	İ	
B0	°	±	І	і	г	μ	¶	•	ё	№	е	»	ј	Ѕ	ѕ	ї
C0	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
D0	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я
E0	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
F0	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я

Figure A-16 SII_PM_CODE_PAGE_1251 (Cyrillic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	;	ƒ	„	...	†	‡	‰		<					
90		‘	;	“	”	•	-	-	™		>					
A0	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ
B0	°	±	²	³	´	μ	¶	•	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ
C0	ı	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	Μ	Ν	Ξ	Ο
D0	Π	Ρ		Σ	Τ	Υ	Φ	Χ	Ψ	Ω	İ	ÿ	ά	έ	ή	ί
E0	ύ	α	β	γ	δ	ε	ζ	η	θ	ι	κ	λ	μ	ν	ξ	ο
F0	π	ρ	ς	σ	τ	υ	φ	χ	ψ	ω	ï	ÿ	ό	ύ	ώ	

Figure A-17 SII_PM_CODE_PAGE_1253 (Greek)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	’	“	”	…	†	‡	^	‰	Š	‹	Œ			
90		‚	‚	„	„	•	-	-	~	™	š	›	œ			ÿ
A0	ı	¢	£	¤	¥	¦	§	¨	©	ª	«	¬	®	¯		
B0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾	¿
C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D0	Ğ	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	İ	Ş	ß
E0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F0	ğ	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ı	ş	ÿ

Figure A-18 SII_PM_CODE_PAGE_1254 (Turkish)

A.2 International Character Set

Print results of the specific character codes vary depending on the setting of the international character set. The following table shows the specific character codes and their print results.

	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
COUNTRY_USA	#	\$	@	[\]	^	`	{		}	~
COUNTRY_FRANCE	#	\$	à	°	ç	§	^	`	é	ù	è	..
COUNTRY_GERMANY	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß
COUNTRY_ENGLAND	£	\$	@	[\]	^	`	{		}	~
COUNTRY_DENMARK_1	#	\$	@	Æ	Ø	Å	^	`	æ	ø	å	~
COUNTRY_SWEDEN	#	α	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
COUNTRY_ITALY	#	\$	@	°	\	é	^	ù	à	ò	è	ì
COUNTRY_SPAIN	ℙ	\$	@	ı	Ñ	ı	^	`	..	ñ	}	~
COUNTRY_JAPAN	#	\$	@	[¥]	^	`	{		}	~
COUNTRY_NORWAY	#	α	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü
COUNTRY_DENMARK_2	#	\$	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü
COUNTRY_SPAIN_2	#	\$	á	ı	Ñ	ı	é	`	í	ñ	ó	ú
COUNTRY_LATIN_AMERICA	#	\$	á	ı	Ñ	ı	é	ü	í	ñ	ó	ú
COUNTRY_ARABIA	#	\$	@	[\]	^	`	{		}	~

Figure A-19 International Character Set

Appendix B

Barcode Size List

B.1 Barcode Size List

B.1.1 printBarcode



(1) Height of the barcode image

hriFont	hriPosition	Length from Top of Barcode to Reference Point	Height of Barcode Image
SII_PM_FONT_A	SII_PM_HRI_NONE	moduleHeight	moduleHeight
	SII_PM_HRI_POSITION_ABOVE	moduleHeight + 32	moduleHeight + 32
	SII_PM_HRI_POSITION_BELOW	moduleHeight	moduleHeight + 32
	SII_PM_HRI_POSITION_ABOVE_BELOW	moduleHeight + 64	moduleHeight + 64
SII_PM_FONT_B	SII_PM_HRI_NONE	moduleHeight	moduleHeight
	SII_PM_HRI_POSITION_ABOVE	moduleHeight + 24	moduleHeight + 24
	SII_PM_HRI_POSITION_BELOW	moduleHeight	moduleHeight + 24
	SII_PM_HRI_POSITION_ABOVE_BELOW	moduleHeight + 48	moduleHeight + 48

(2) Width of the barcode image

barcodeSymbol	moduleSize	Width of Barcode Image
SII_PM_BARCODE_UPC_A	SII_PM_BARCODE_MODULE_WIDTH_2	190
	SII_PM_BARCODE_MODULE_WIDTH_3	285
	SII_PM_BARCODE_MODULE_WIDTH_4	380
	SII_PM_BARCODE_MODULE_WIDTH_5	475
	SII_PM_BARCODE_MODULE_WIDTH_6	570
SII_PM_BARCODE_UPC_E	SII_PM_BARCODE_MODULE_WIDTH_2	102
	SII_PM_BARCODE_MODULE_WIDTH_3	153
	SII_PM_BARCODE_MODULE_WIDTH_4	204
	SII_PM_BARCODE_MODULE_WIDTH_5	255
	SII_PM_BARCODE_MODULE_WIDTH_6	306
SII_PM_BARCODE_EAN13	SII_PM_BARCODE_MODULE_WIDTH_2	190
	SII_PM_BARCODE_MODULE_WIDTH_3	285
	SII_PM_BARCODE_MODULE_WIDTH_4	380
	SII_PM_BARCODE_MODULE_WIDTH_5	475
	SII_PM_BARCODE_MODULE_WIDTH_6	570
SII_PM_BARCODE_JAN13	SII_PM_BARCODE_MODULE_WIDTH_2	190
	SII_PM_BARCODE_MODULE_WIDTH_3	285
	SII_PM_BARCODE_MODULE_WIDTH_4	380
	SII_PM_BARCODE_MODULE_WIDTH_5	475
	SII_PM_BARCODE_MODULE_WIDTH_6	570
SII_PM_BARCODE_EAN8	SII_PM_BARCODE_MODULE_WIDTH_2	134
	SII_PM_BARCODE_MODULE_WIDTH_3	201
	SII_PM_BARCODE_MODULE_WIDTH_4	268
	SII_PM_BARCODE_MODULE_WIDTH_5	335
	SII_PM_BARCODE_MODULE_WIDTH_6	402
SII_PM_BARCODE_JAN8	SII_PM_BARCODE_MODULE_WIDTH_2	134
	SII_PM_BARCODE_MODULE_WIDTH_3	201
	SII_PM_BARCODE_MODULE_WIDTH_4	268
	SII_PM_BARCODE_MODULE_WIDTH_5	335
	SII_PM_BARCODE_MODULE_WIDTH_6	402
SII_PM_BARCODE_CODE93	SII_PM_BARCODE_MODULE_WIDTH_2	18 × number of barcode data + 56
	SII_PM_BARCODE_MODULE_WIDTH_3	27 × number of barcode data + 84
	SII_PM_BARCODE_MODULE_WIDTH_4	36 × number of barcode data + 112
	SII_PM_BARCODE_MODULE_WIDTH_5	45 × number of barcode data + 140
	SII_PM_BARCODE_MODULE_WIDTH_6	54 × number of barcode data + 168
SII_PM_BARCODE_CODE128	SII_PM_BARCODE_MODULE_WIDTH_2	22 × number of barcode data + 26
	SII_PM_BARCODE_MODULE_WIDTH_3	33 × number of barcode data + 39
	SII_PM_BARCODE_MODULE_WIDTH_4	44 × number of barcode data + 52

barcodeSymbol	moduleSize	Width of Barcode Image
SII_PM_BARCODE_CODE128	SII_PM_BARCODE_MODULE_WIDTH_5	55 × number of barcode data + 65
	SII_PM_BARCODE_MODULE_WIDTH_6	66 × number of barcode data + 78
SII_PM_BARCODE_GS1_OMNI_DIRECTIONAL	SII_PM_BARCODE_MODULE_WIDTH_2	192
	SII_PM_BARCODE_MODULE_WIDTH_3	288
	SII_PM_BARCODE_MODULE_WIDTH_4	384
	SII_PM_BARCODE_MODULE_WIDTH_5	480
	SII_PM_BARCODE_MODULE_WIDTH_6	576
SII_PM_BARCODE_GS1_TRUNCATED	SII_PM_BARCODE_MODULE_WIDTH_2	192
	SII_PM_BARCODE_MODULE_WIDTH_3	288
	SII_PM_BARCODE_MODULE_WIDTH_4	384
	SII_PM_BARCODE_MODULE_WIDTH_5	480
	SII_PM_BARCODE_MODULE_WIDTH_6	576
SII_PM_BARCODE_GS1_LIMITED	SII_PM_BARCODE_MODULE_WIDTH_2	158
	SII_PM_BARCODE_MODULE_WIDTH_3	237
	SII_PM_BARCODE_MODULE_WIDTH_4	316
	SII_PM_BARCODE_MODULE_WIDTH_5	395
	SII_PM_BARCODE_MODULE_WIDTH_6	474
SII_PM_BARCODE_GS1_EXPANDED^{*1}	SII_PM_BARCODE_MODULE_WIDTH_2	number of barcode module × 2
	SII_PM_BARCODE_MODULE_WIDTH_3	number of barcode module × 3
	SII_PM_BARCODE_MODULE_WIDTH_4	number of barcode module × 4
	SII_PM_BARCODE_MODULE_WIDTH_5	number of barcode module × 5
	SII_PM_BARCODE_MODULE_WIDTH_6	number of barcode module × 6

*1: The number of barcode module is determined by the barcode data to be specified.

barcodeSymbol	nwRatio	moduleSize	Width of Barcode Image
SII_PM_BARCODE_CODE39	SII_PM_NWRATIO_1TO2	SII_PM_BARCODE_MODULE_WIDTH_2	26 × number of barcode data + 50
		SII_PM_BARCODE_MODULE_WIDTH_3	39 × number of barcode data + 75
		SII_PM_BARCODE_MODULE_WIDTH_4	52 × number of barcode data + 100
		SII_PM_BARCODE_MODULE_WIDTH_5	65 × number of barcode data + 125
		SII_PM_BARCODE_MODULE_WIDTH_6	78 × number of barcode data + 150
	SII_PM_NWRATIO_1TO2_5	SII_PM_BARCODE_MODULE_WIDTH_2	29 × number of barcode data + 56
		SII_PM_BARCODE_MODULE_WIDTH_3	45 × number of barcode data + 87
		SII_PM_BARCODE_MODULE_WIDTH_4	58 × number of barcode data + 112
		SII_PM_BARCODE_MODULE_WIDTH_5	74 × number of barcode data + 143
		SII_PM_BARCODE_MODULE_WIDTH_6	87 × number of barcode data + 168
	SII_PM_NWRATIO_1TO3	SII_PM_BARCODE_MODULE_WIDTH_2	32 × number of barcode data + 62
		SII_PM_BARCODE_MODULE_WIDTH_3	48 × number of barcode data + 93
		SII_PM_BARCODE_MODULE_WIDTH_4	64 × number of barcode data + 124
		SII_PM_BARCODE_MODULE_WIDTH_5	80 × number of barcode data + 155
		SII_PM_BARCODE_MODULE_WIDTH_6	96 × number of barcode data + 186
SII_PM_BARCODE_ITF	SII_PM_NWRATIO_1TO2	SII_PM_BARCODE_MODULE_WIDTH_2	14 × number of barcode data + 16
		SII_PM_BARCODE_MODULE_WIDTH_3	21 × number of barcode data + 24
		SII_PM_BARCODE_MODULE_WIDTH_4	28 × number of barcode data + 32
		SII_PM_BARCODE_MODULE_WIDTH_5	35 × number of barcode data + 40
		SII_PM_BARCODE_MODULE_WIDTH_6	42 × number of barcode data + 48
	SII_PM_NWRATIO_1TO2_5	SII_PM_BARCODE_MODULE_WIDTH_2	16 × number of barcode data + 17
		SII_PM_BARCODE_MODULE_WIDTH_3	25 × number of barcode data + 26
		SII_PM_BARCODE_MODULE_WIDTH_4	32 × number of barcode data + 34

barcodeSymbol	nwRatio	moduleSize	Width of Barcode Image
SII_PM_BARCODE_ITF	SII_PM_NWRATIO_1TO2_5	SII_PM_BARCODE_MODULE_WIDTH_5	41 × number of barcode data + 43
		SII_PM_BARCODE_MODULE_WIDTH_6	48 × number of barcode data + 51
	SII_PM_NWRATIO_1TO3	SII_PM_BARCODE_MODULE_WIDTH_2	18 × number of barcode data + 18
		SII_PM_BARCODE_MODULE_WIDTH_3	27 × number of barcode data + 27
		SII_PM_BARCODE_MODULE_WIDTH_4	36 × number of barcode data + 36
		SII_PM_BARCODE_MODULE_WIDTH_5	45 × number of barcode data + 45
SII_PM_BARCODE_CODABAR*1	SII_PM_NWRATIO_1TO2	SII_PM_BARCODE_MODULE_WIDTH_2	20 × number of data + 2 × (2 + number of wide data) - 2
		SII_PM_BARCODE_MODULE_WIDTH_3	30 × number of data + 3 × (2 + number of wide data) - 3
		SII_PM_BARCODE_MODULE_WIDTH_4	40 × number of data + 4 × (2 + number of wide data) - 4
		SII_PM_BARCODE_MODULE_WIDTH_5	50 × number of data + 5 × (2 + number of wide data) - 5
		SII_PM_BARCODE_MODULE_WIDTH_6	60 × number of data + 6 × (2 + number of wide data) - 6
	SII_PM_NWRATIO_1TO2_5	SII_PM_BARCODE_MODULE_WIDTH_2	22 × number of data + 3 × (2 + number of wide data) - 2
		SII_PM_BARCODE_MODULE_WIDTH_3	34 × number of data + 5 × (2 + number of wide data) - 3
		SII_PM_BARCODE_MODULE_WIDTH_4	44 × number of data + 6 × (2 + number of wide data) - 4
		SII_PM_BARCODE_MODULE_WIDTH_5	56 × number of data + 8 × (2 + number of wide data) - 5
		SII_PM_BARCODE_MODULE_WIDTH_6	66 × number of data + 9 × (2 + number of wide data) - 6
	SII_PM_NWRATIO_1TO3	SII_PM_BARCODE_MODULE_WIDTH_2	24 × number of data + 4 × (2 + number of wide data) - 2
		SII_PM_BARCODE_MODULE_WIDTH_3	36 × number of data + 6 × (2 + number of wide data) - 3
		SII_PM_BARCODE_MODULE_WIDTH_4	48 × number of data + 8 × (2 + number of wide data) - 4
		SII_PM_BARCODE_MODULE_WIDTH_5	60 × number of data + 10 × (2 + number of wide data) - 5
		SII_PM_BARCODE_MODULE_WIDTH_6	72 × number of data + 12 × (2 + number of wide data) - 6

*1: The number of data is the number of all characters except for the start and stop characters.
The wide data is the number of " : / . + ".

barcodeSymbol	Number of Data	moduleSize	Width of Barcode Image
SII_PM_BARCODE_EAN13_ADDON	14 or 15	SII_PM_BARCODE_MODULE_WIDTH_2	244
		SII_PM_BARCODE_MODULE_WIDTH_3	366
		SII_PM_BARCODE_MODULE_WIDTH_4	488
		SII_PM_BARCODE_MODULE_WIDTH_5	610
		SII_PM_BARCODE_MODULE_WIDTH_6	732
	17 or 18	SII_PM_BARCODE_MODULE_WIDTH_2	298
		SII_PM_BARCODE_MODULE_WIDTH_3	447
		SII_PM_BARCODE_MODULE_WIDTH_4	596
		SII_PM_BARCODE_MODULE_WIDTH_5	745
		SII_PM_BARCODE_MODULE_WIDTH_6	894
SII_PM_BARCODE_JAN13_ADDON	14 or 15	SII_PM_BARCODE_MODULE_WIDTH_2	244
		SII_PM_BARCODE_MODULE_WIDTH_3	366
		SII_PM_BARCODE_MODULE_WIDTH_4	488
		SII_PM_BARCODE_MODULE_WIDTH_5	610
		SII_PM_BARCODE_MODULE_WIDTH_6	732
	17 or 18	SII_PM_BARCODE_MODULE_WIDTH_2	298
		SII_PM_BARCODE_MODULE_WIDTH_3	447
		SII_PM_BARCODE_MODULE_WIDTH_4	596
		SII_PM_BARCODE_MODULE_WIDTH_5	745
		SII_PM_BARCODE_MODULE_WIDTH_6	894

B.1.2 printPDF417



(1) Height of the barcode image

$$\text{Height of the barcode image}^{*1} = \text{moduleHeight} \times \text{row}^{*2}$$

*1: Height of the barcode image = Length from the top of the barcode to the reference point

*2: row ≠ 0

(2) Width of the barcode image

When pdf417Symbol is **SII_PM_PDF417_STANDARD**:

$$\text{Width of the barcode image} = (17 \times \text{column}^{*1} + 69) \times \text{module size value}$$

*1: column ≠ 0

When pdf417Symbol is **SII_PM_PDF417_COMPACT**:


$$\text{Width of the barcode image} = (17 \times \text{column}^{*1} + 35) \times \text{module size value}$$

*1: column ≠ 0

Module Size Value

moduleSize	Module Size Value
SII_PM_PDF417_MODULE_WIDTH_2	2
SII_PM_PDF417_MODULE_WIDTH_3	3
SII_PM_PDF417_MODULE_WIDTH_4	4
SII_PM_PDF417_MODULE_WIDTH_5	5
SII_PM_PDF417_MODULE_WIDTH_6	6
SII_PM_PDF417_MODULE_WIDTH_7	7
SII_PM_PDF417_MODULE_WIDTH_8	8

B.1.3 printQRCode

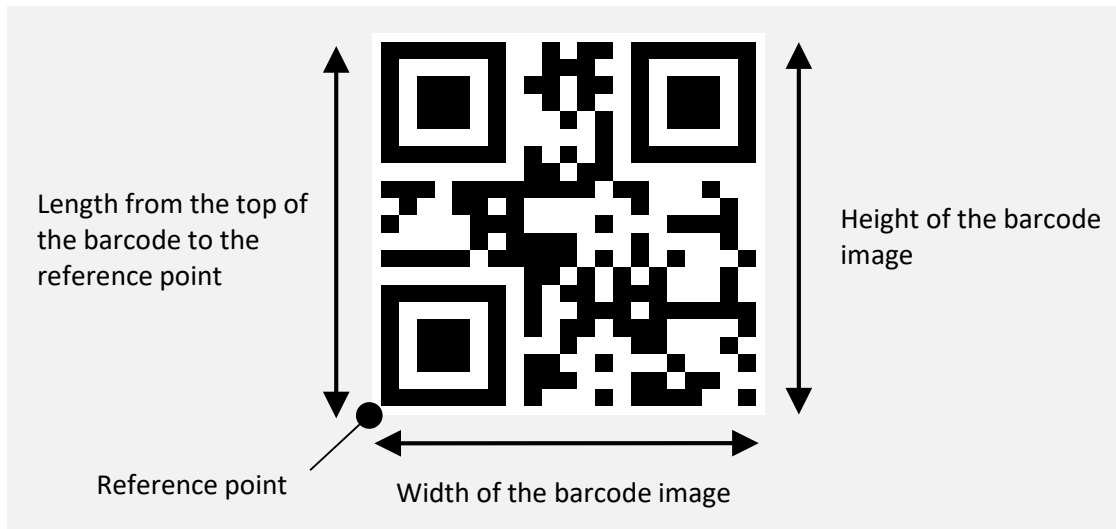

(1) Height and width of the barcode image

Height*¹ and width of the barcode image = $(4 \times \text{version}^{*2} + 17) \times \text{module size value}$


*1: Height of the barcode image = Length from the top of the barcode to the reference point

*2: The version is determined by the content of the barcode data and the error correction level.

Module Size Value

moduleSize	Module Size Value
SII_PM_QR_MODULE_SIZE_2	2
SII_PM_QR_MODULE_SIZE_3	3
SII_PM_QR_MODULE_SIZE_4	4
SII_PM_QR_MODULE_SIZE_5	5
SII_PM_QR_MODULE_SIZE_6	6
SII_PM_QR_MODULE_SIZE_7	7
SII_PM_QR_MODULE_SIZE_8	8
SII_PM_QR_MODULE_SIZE_9	9
SII_PM_QR_MODULE_SIZE_10	10
SII_PM_QR_MODULE_SIZE_11	11
SII_PM_QR_MODULE_SIZE_12	12
SII_PM_QR_MODULE_SIZE_13	13
SII_PM_QR_MODULE_SIZE_14	14
SII_PM_QR_MODULE_SIZE_15	15
SII_PM_QR_MODULE_SIZE_16	16

B.1.4 printDataMatrix

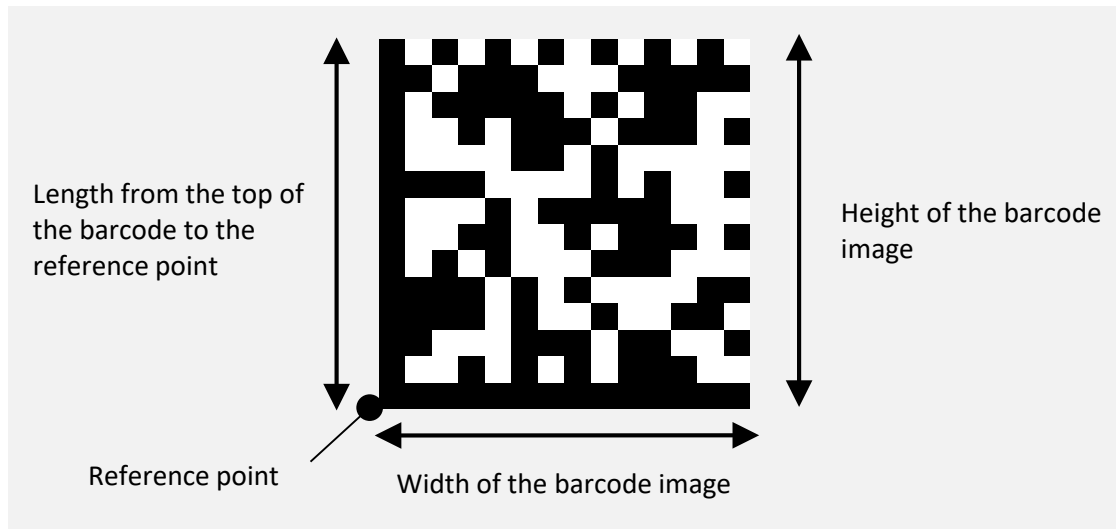

(1) Height and width of the barcode image

Height of the barcode image = number of vertical module × module size value

Width of the barcode image = number of horizontal module × module size value


dataMatrixModule	Number of Vertical Module	Number of Horizontal Module
SII_PM_DATA_MATRIX_10_10	10	10
SII_PM_DATA_MATRIX_12_12	12	12
SII_PM_DATA_MATRIX_14_14	14	14
SII_PM_DATA_MATRIX_16_16	16	16
SII_PM_DATA_MATRIX_18_18	18	18
SII_PM_DATA_MATRIX_20_20	20	20
SII_PM_DATA_MATRIX_22_22	22	22
SII_PM_DATA_MATRIX_24_24	23	23
SII_PM_DATA_MATRIX_26_26	26	26
SII_PM_DATA_MATRIX_32_32	32	32
SII_PM_DATA_MATRIX_36_36	36	36
SII_PM_DATA_MATRIX_40_40	40	40
SII_PM_DATA_MATRIX_44_44	44	44
SII_PM_DATA_MATRIX_48_48	48	48
SII_PM_DATA_MATRIX_52_52	52	52
SII_PM_DATA_MATRIX_64_64	64	64
SII_PM_DATA_MATRIX_72_72	72	72
SII_PM_DATA_MATRIX_80_80	80	80
SII_PM_DATA_MATRIX_88_88	88	88
SII_PM_DATA_MATRIX_96_96	96	96
SII_PM_DATA_MATRIX_104_104	104	104
SII_PM_DATA_MATRIX_120_120	120	120

dataMatrixModule	Number of Vertical Module	Number of Horizontal Module
SII_PM_DATA_MATRIX_132_132	132	132
SII_PM_DATA_MATRIX_144_144	144	144
SII_PM_DATA_MATRIX_8_18	8	18
SII_PM_DATA_MATRIX_8_32	8	32
SII_PM_DATA_MATRIX_12_26	12	26
SII_PM_DATA_MATRIX_12_36	12	36
SII_PM_DATA_MATRIX_16_36	16	36
SII_PM_DATA_MATRIX_16_48	16	48

Module Size Value

moduleSize	Module Size Value
SII_PM_DATAMATRIX_MODULE_SIZE_2	2
SII_PM_DATAMATRIX_MODULE_SIZE_3	3
SII_PM_DATAMATRIX_MODULE_SIZE_4	4
SII_PM_DATAMATRIX_MODULE_SIZE_5	5
SII_PM_DATAMATRIX_MODULE_SIZE_6	6
SII_PM_DATAMATRIX_MODULE_SIZE_7	7
SII_PM_DATAMATRIX_MODULE_SIZE_8	8
SII_PM_DATAMATRIX_MODULE_SIZE_9	9
SII_PM_DATAMATRIX_MODULE_SIZE_10	10
SII_PM_DATAMATRIX_MODULE_SIZE_11	11
SII_PM_DATAMATRIX_MODULE_SIZE_12	12
SII_PM_DATAMATRIX_MODULE_SIZE_13	13
SII_PM_DATAMATRIX_MODULE_SIZE_14	14
SII_PM_DATAMATRIX_MODULE_SIZE_15	15
SII_PM_DATAMATRIX_MODULE_SIZE_16	16

B.1.5 printMaxicode

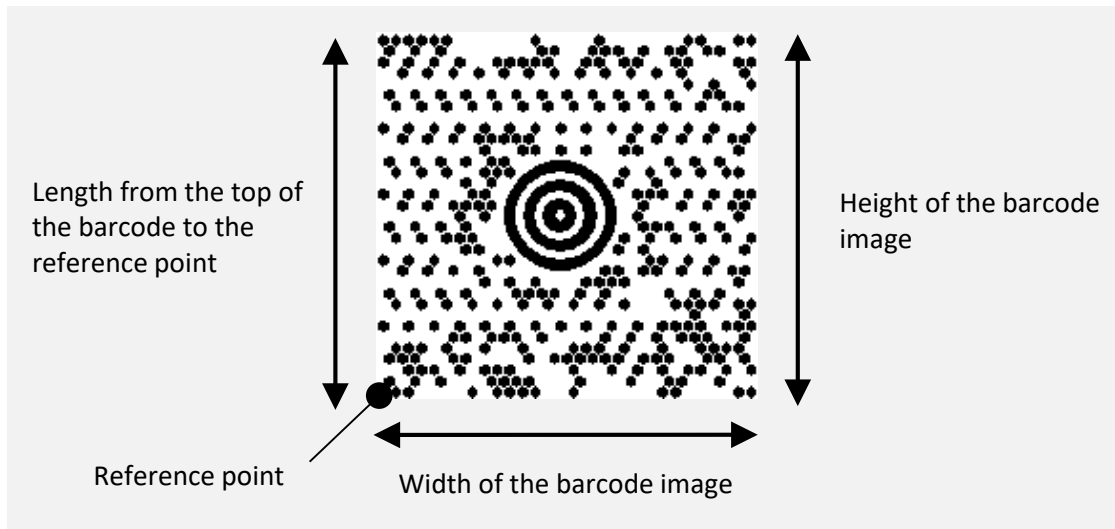

(1) Height of the barcode image

$$\text{Height of the barcode image}^{*1} = 200$$

*1: Height of the barcode image = Length from the top of the barcode to the reference point

(2) Width of the barcode image

$$\text{Width of the barcode image} = 210$$

B.1.6 printGS1DataBarStacked



(1) Height and width of the barcode image

Height of the barcode image^{*1} = 13 × module size value


^{*1}: Height of the barcode image = Length from the top of the barcode to the reference point

Width of the barcode image = 50 × module size value

Module Size Value

moduleSize	Module Size Value
SII_PM_GS1DATABAR_MODULE_SIZE_2	2
SII_PM_GS1DATABAR_MODULE_SIZE_3	3
SII_PM_GS1DATABAR_MODULE_SIZE_4	4
SII_PM_GS1DATABAR_MODULE_SIZE_5	5
SII_PM_GS1DATABAR_MODULE_SIZE_6	6
SII_PM_GS1DATABAR_MODULE_SIZE_7	7
SII_PM_GS1DATABAR_MODULE_SIZE_8	8
SII_PM_GS1DATABAR_MODULE_SIZE_9	9
SII_PM_GS1DATABAR_MODULE_SIZE_10	10
SII_PM_GS1DATABAR_MODULE_SIZE_11	11
SII_PM_GS1DATABAR_MODULE_SIZE_12	12
SII_PM_GS1DATABAR_MODULE_SIZE_13	13
SII_PM_GS1DATABAR_MODULE_SIZE_14	14
SII_PM_GS1DATABAR_MODULE_SIZE_15	15
SII_PM_GS1DATABAR_MODULE_SIZE_16	16

B.1.7 printGS1DataBarStackedOmnidirectional

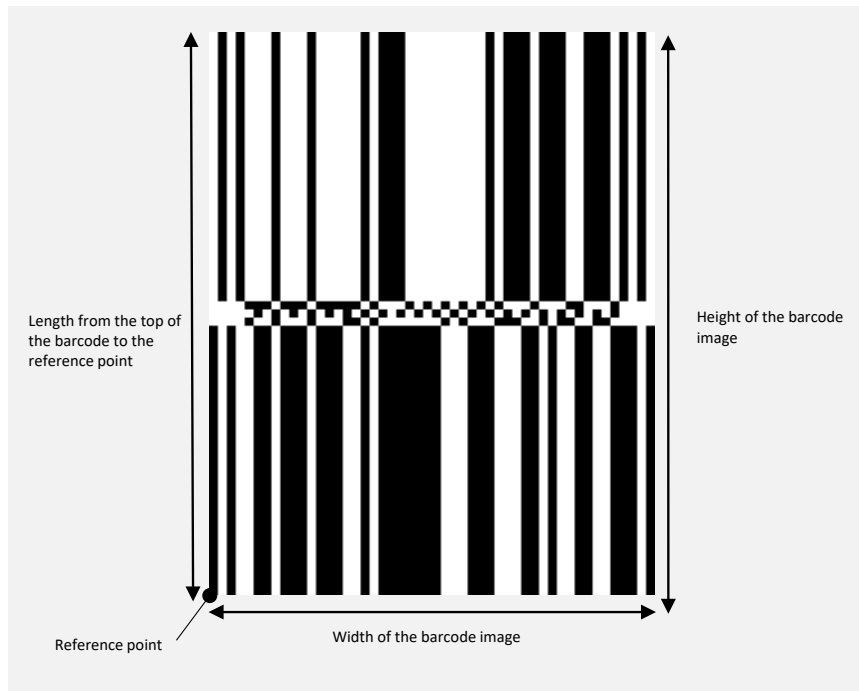

(1) Height and width of the barcode image

Height of the barcode image^{*1} = (moduleHeight × 2 + 3) × module size value


^{*1}: Height of the barcode image = Length from the top of the barcode to the reference point

Width of the barcode image = 50 × module size value

Module Size Value

moduleSize	Module Size Value
SII_PM_GS1DATABAR_MODULE_SIZE_2	2
SII_PM_GS1DATABAR_MODULE_SIZE_3	3
SII_PM_GS1DATABAR_MODULE_SIZE_4	4
SII_PM_GS1DATABAR_MODULE_SIZE_5	5
SII_PM_GS1DATABAR_MODULE_SIZE_6	6
SII_PM_GS1DATABAR_MODULE_SIZE_7	7
SII_PM_GS1DATABAR_MODULE_SIZE_8	8
SII_PM_GS1DATABAR_MODULE_SIZE_9	9
SII_PM_GS1DATABAR_MODULE_SIZE_10	10
SII_PM_GS1DATABAR_MODULE_SIZE_11	11
SII_PM_GS1DATABAR_MODULE_SIZE_12	12
SII_PM_GS1DATABAR_MODULE_SIZE_13	13
SII_PM_GS1DATABAR_MODULE_SIZE_14	14
SII_PM_GS1DATABAR_MODULE_SIZE_15	15
SII_PM_GS1DATABAR_MODULE_SIZE_16	16

B.1.8 printGS1DataBarExpandedStacked

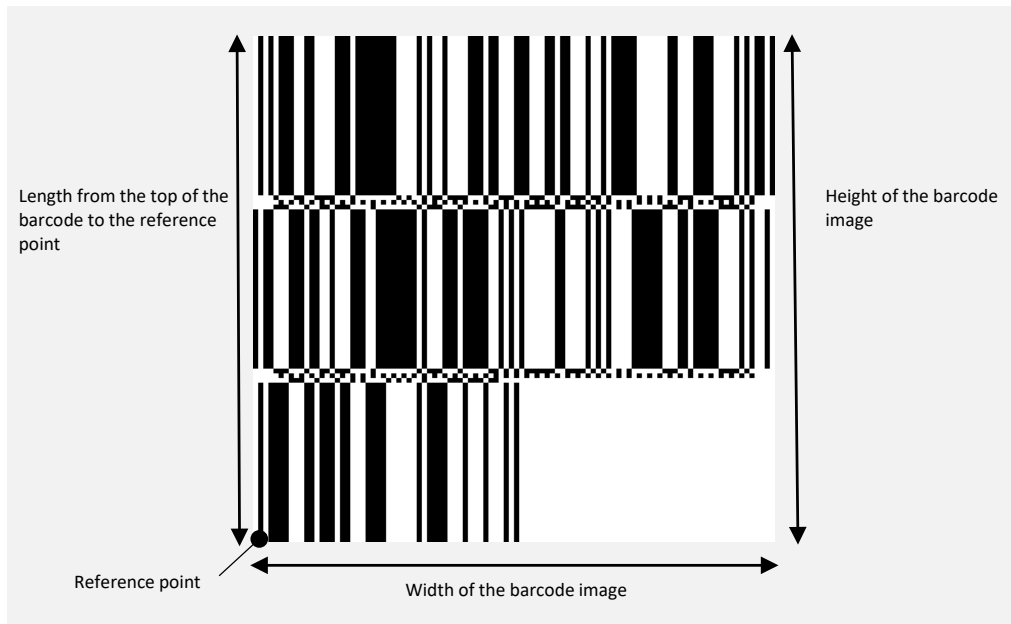

(1) Height and width of the barcode image

Height of the barcode image*1 = $((34 + 3) \times \text{number of row}^2 + 34) \times \text{module size value}$

*1: Height of the barcode image = Length from the top of the barcode to the reference point

*2: The number of row is determined by the barcode data.

Width of the barcode image = $(4 + 49 \times \text{column} / 2) \times \text{module size value}$

Module Size Value

moduleSize	Module Size Value
SII_PM_GS1DATABAR_MODULE_SIZE_2	2
SII_PM_GS1DATABAR_MODULE_SIZE_3	3
SII_PM_GS1DATABAR_MODULE_SIZE_4	4
SII_PM_GS1DATABAR_MODULE_SIZE_5	5
SII_PM_GS1DATABAR_MODULE_SIZE_6	6
SII_PM_GS1DATABAR_MODULE_SIZE_7	7
SII_PM_GS1DATABAR_MODULE_SIZE_8	8
SII_PM_GS1DATABAR_MODULE_SIZE_9	9
SII_PM_GS1DATABAR_MODULE_SIZE_10	10
SII_PM_GS1DATABAR_MODULE_SIZE_11	11
SII_PM_GS1DATABAR_MODULE_SIZE_12	12
SII_PM_GS1DATABAR_MODULE_SIZE_13	13
SII_PM_GS1DATABAR_MODULE_SIZE_14	14
SII_PM_GS1DATABAR_MODULE_SIZE_15	15
SII_PM_GS1DATABAR_MODULE_SIZE_16	16

Appendix C

Open Source Software License

This chapter describes the License of open source software used in the library.

C.1 MIT License

- **SSZipArchive**

Copyright (c) 2010-2012 Sam Soffes

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

C.2 Apache License 2.0

- **zxingify-objc**

Copyright 2012 ZXing authors

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.