



SII Print Class Library for iOS Application Programmer's Guide

Rev.05

[Products]

MP-B21L Series

Seiko Instruments Inc.

Rev.01	January 2024
Rev.02	February 2024
Rev.03	March 2024
Rev.04	November 2024
Rev.05	January 2025

Copyright © 2024-2025 Seiko Instruments Inc.
All rights reserved.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

iPad®, iPad Air®, iPad mini™, iPhone®, iPod® are trademarks of Apple Inc., registered in the U.S. and other countries.

App StoreSM is a service mark of Apple Inc.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

All other trademarks are the properties of their respective companies.

Seiko Instruments Inc. (hereinafter referred to as "SII") has prepared this manual for use by SII personnel, licensees, and customers. The information contained herein is the property of SII and shall not be reproduced in whole or in part without the prior written approval of SII.

SII reserves the right to make changes without notice to the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical, arithmetic, or listing errors.

INTRODUCTION

This manual describes "SII Print Class Library for iOS" (hereinafter referred to as "SII print class library") provided by Seiko Instruments Inc. (hereinafter referred to as "SII").

Target Printers

The printers supported by SII print class library are listed below.

Printer	Interface
MP-B21L Series	Bluetooth
	TCP/IP

Terms

The terms used in this manual are described below.

Term	Description
Printer command	Command for controlling the printer described in "MP-B21L SERIES THERMAL PRINTER TECHNICAL REFERENCE".

Table of Contents

Chapter 1	Product Overview	1-1
1.1	Functions Provided by SII Print Class Library	1-1
1.2	SII Print Class Library Overview	1-1
1.2.1	SII Print Class Library Configuration	1-1
1.2.2	Functions Provided by Library	1-2
1.2.3	Development of Application that Performs Bluetooth Communication with SII Printer	1-2
Chapter 2	Product Specifications	2-1
2.1	Operating Environment	2-1
2.1.1	Applicable iOS Devices	2-1
2.1.2	Applicable iOS Versions	2-3
2.2	Printer Settings	2-3
2.3	Precaution	2-4
Chapter 3	How to Use library	3-1
3.1	iOS Application Development Environment	3-1
3.2	Provided Files	3-2
3.3	Build the Library to Xcode Project	3-3
3.3.1	Objective-C	3-3
3.3.2	Swift	3-7
Chapter 4	Functions of Library	4-1
4.1	Standard Mode and Page Mode	4-1
4.1.1	Basic Operation	4-1
(1)	Standard mode	4-1
(2)	Page mode	4-2
4.1.2	Text Data Printing in Standard Mode	4-3
4.1.3	Mapping Position of Print Data in Page Mode	4-4
(1)	Print area of page mode	4-4
(2)	Print direction	4-4
(3)	Reference point	4-5
4.1.4	Print Data Process at Out of Print Area of Page Mode	4-6
4.2	Printing Label Function	4-7
4.2.1	Structure of Label File	4-7
(1)	Types of objects and support in the library	4-8
(2)	Precautions for printing the label file using the library	4-8
①	All object	4-8
②	Text object	4-8
③	Image object	4-8

④ Barcode object	4-8
⑤ Contact object	4-9
⑥ DateTime object	4-9
⑦ Drawing object	4-9
4.2.2 Method for using label file	4-10
(1) Print the label file as it is from the library	4-10
(2) Replace the object data in the label file and prints	4-10
4.3 Log File Output Function	4-11
4.3.1 How to Set Log Output	4-11
4.3.2 Log Output Settings	4-11
4.3.3 Log File	4-11
4.4 API Reference	4-11
4.4.1 SIIPrinterManager Class	4-13
(1) Method List	4-13
① Common method to standard mode and page mode	4-13
② Dedicated method for standard mode	4-14
③ Dedicated method for page mode	4-14
(2) Common property list to standard mode and page mode	4-15
(3) Constant List	4-16
① Printer model	4-16
② Port type	4-16
③ Response type	4-16
④ Battery remaining capacity level	4-17
⑤ International character set	4-17
⑥ Codepage	4-18
⑦ Barcode and PDF417	4-18
(4) Enumerated Constant List	4-19
① Dithering (Dithering)	4-19
② Batch processing selection (TransactionFunction)	4-19
③ Bold print (CharacterBold)	4-19
④ Underline (CharacterUnderline)	4-20
⑤ Reverse print (CharacterReverse)	4-20
⑥ Inversion print (CharacterInversion)	4-20
⑦ Character font (CharacterFont)	4-20
⑧ Character scale (CharacterScale)	4-21
⑨ Alignment (PrintAlignment)	4-22
⑩ Barcode symbol (BarcodeSymbol)	4-22
⑪ Module size (ModuleSize)	4-23
⑫ HRI character print position (HriPosition)	4-26
⑬ N:W ratio (NwRatio)	4-26
⑭ Error correction level (ErrorCorrection)	4-26
⑮ PDF417 symbol (Pdf417Symbol)	4-27
⑯ QR Code Model (QrModel)	4-27
⑰ Data Matrix module (DataMatrixModule)	4-27
⑱ MaxiCode Mode (MaxiCodeMode)	4-28
⑲ Aztec symbol (AztecSymbol)	4-28
⑳ Cutting method (CuttingMethod)	4-29
㉑ Form feed position (FeedPosition)	4-29

②②	Image rotation direction (Rotate)	4-30
②③	Image scaling (ImageScale).....	4-30
②④	Print direction (Direction).....	4-31
②⑤	Line style (LineStyle).....	4-31
(5)	Method Details	4-32
①	Common method to standard mode and page mode	4-32
	init Instance.....	4-32
	connect Start communicating with printer.....	4-32
	disconnect Stop communicating with printer.....	4-33
	openDrawer Open cash drawer.....	4-33
	buzzer Sound buzzer	4-33
	externalBuzzer Sound external buzzer	4-34
	getStatus Get printer status	4-34
	abort Abort waiting state of printer	4-35
	registerLogo Register logo	4-35
	unregisterLogo Delete registered logo	4-36
	registerStyleSheet	
	Register style sheet	4-36
	unregisterStyleSheet	
	Delete registered style sheet	4-36
	resetPrinter Reset printer.....	4-36
	getPrinterResponse	
	Get various responses from printer.....	4-37
	startDiscoveryPrinter	
	Start printer search (Bluetooth).....	4-38
	startDiscoveryPrinter	
	Start printer search (TCP/IP)	4-39
	cancelDiscoveryPrinter	
	Cancel printer search.....	4-39
	getFoundPrinter Get found printer information	4-40
	getVersion Get SDK version	4-40
	controlTransaction	
	Start/End batch processing.....	4-40
②	Dedicated method for standard mode.....	4-42
	sendText Send text data	4-42
	sendTextEx Send format specified text data	4-42
	printBarcode Print barcode.....	4-43
	printPDF417 Print PDF417.....	4-47
	printQRcode Print QR Code.....	4-48
	printDataMatrix Print Data Matrix	4-49
	printMaxiCode Print MaxiCode.....	4-50
	printGS1DataBarStacked	
	Print GS1 Databar Stacked.....	4-51
	printGS1DataBarStackedOmnidirectional	
	Print GS1 Databar Stacked Omni-directional	4-51
	printGS1DataBarExpandedStacked	
	Print GS1 Databar Expanded Stacked	4-52
	printAztecCode Print Aztec Code	4-53

cutPaper	Cut paper	4-53
feedPosition	Paper form feed	4-53
sendBinary	Send binary data	4-53
sendDataFile	Send specified file	4-54
printPDF	Print PDF page.....	4-55
printLogo	Print logo	4-56
printSmartLabelImageData		
	Print label	4-56
③ Dedicated method for page mode.....		4-57
enterPageMode	Start page mode	4-58
exitPageMode	End page mode.....	4-58
setPageModeArea		
	Specify print area of page mode	4-58
setPageModeDirection		
	Specify print direction of page mode	4-60
setPageModeLineSpacing		
	Specify line spacing of page mode	4-60
printPageMode	Print page mode.....	4-60
printPageModeText		
	Send text data of page mode	4-61
printPageModeTextEx		
	Send format specified text data of page mode	4-61
printPageModeBarcode		
	Print barcode of page mode.....	4-62
printPageModePDF417		
	Print PDF417 of page mode	4-66
printPageModeQRcode		
	Print QR Code of page mode.....	4-67
printPageModeDataMatrix		
	Print Data Matrix of page mode	4-68
printPageModeMaxiCode		
	Print MaxiCode of page mode	4-69
printPageModeGS1DataBarStacked		
	Print GS1 Databar Stacked of page mode	4-69
printPageModeGS1DataBarStackedOmnidirectional		
	Print GS1 Databar Stacked Omni-directional of page mode	4-70
printPageModeGS1DataBarExpandedStacked		
	Print GS1 Databar Expanded Stacked of page mode	4-71
printPageModeAztecCode		
	Print Aztec Code of page mode	4-71
sendPageModeBinary		
	Send binary data of page mode.....	4-72
printPageModeImageFile		
	Draw Image file of page mode	4-73
printPageModeRectangle		
	Draw rectangle image of page mode	4-73

printPageModeLine	Print ruled line of page mode	4-74
printPageModeLogo	Print logo of page mode	4-76
(6) Common property detail to standard mode and page mode		4-77
sendTimeout	Get/Set send timeout period	4-77
receiveTimeout	Get/Set receive timeout period	4-77
internationalCharacter	Get/Set international character set	4-77
codePage	Get/Set codepage	4-78
printerModel	Get printer model	4-78
portType	Get connecting port type	4-78
isConnect	Verify connection state with printer	4-78
socketKeepingTime	Get/Set socket keeping time	4-79
delegate	Register delegate	4-79
PrintSmartLabelMode	Get/Set paper when printing label file	4-79
4.4.2 SIIPrinterInfo Class		4-80
(1) Method List		4-80
(2) Property List		4-80
(3) Method Details		4-80
SIIPrinterInfo	Constructor	4-80
(4) Property Details		4-81
name	Get printer model name	4-81
mac	Get MAC address	4-81
ip	Get IP address	4-81
4.4.3 SIIPrinterException Class		4-82
(1) Method List		4-82
(2) Property List		4-82
(3) Constant List		4-83
① Error code		4-83
(4) Method Details		4-84
SIIPrinterException	Constructor	4-84
(5) Property Details		4-84
errorCode	Get error code	4-84
errorMessage	Get error message	4-84
4.4.4 SIIPrinterManagerDelegate Protocol		4-85
(1) Method List		4-85
(2) Method Details		4-85
didStatusChange	Notify printer status	4-85
4.4.5 SIISmartLabelManager Class		4-86
(1) Method List		4-86
(2) Method Details		4-87
selectSmartLabelFile	Specify label file	4-87

replaceSmartLabelTextData	
Replace text data of label	4-87
replaceSmartLabelImageData	
Replace image data of label	4-88
replaceSmartLabelBarcodeData	
Replace barcode data of label	4-89

Chapter 5	Sample Program	5-1
------------------	-----------------------	------------

5.1	Screen Layout.....	5-1
5.1.1	Main Screen	5-1
5.1.2	[Settings] Screen	5-3
5.2	Precaution.....	5-3

Appendix A	Character Set	A-1
-------------------	----------------------	------------

A.1	Codepage Table (Character Code Table)	A-1
A.2	International Character Set.....	A-11

Appendix B	Barcode Size List	B-1
-------------------	--------------------------	------------

B.1	Barcode Size List.....	B-1
B.1.1	printBarcode, printPageModeBarcode.....	B-1
B.1.2	printPDF417, printPageModePDF417	B-7
B.1.3	printQRCode, printPageModeQRCode.....	B-8
B.1.4	printDataMatrix, printPageModeDataMatrix	B-9
B.1.5	printMaxicode, printPageModeMaxicode	B-11
B.1.6	printGS1DataBarStacked, printPageModeGS1DataBarStacked.....	B-12
B.1.7	printGS1DataBarStackedOmnidirectional, printPageModeGS1DataBarStackedOmnidirectional	B-13
B.1.8	printGS1DataBarExpandedStacked, printPageModeGS1DataBarExpandedStacked	B-14
B.1.9	printAztecCode, printPageModeAztecCode	B-15

Appendix C	Open Source Software License	C-1
-------------------	-------------------------------------	------------

C.1	MIT License	C-1
C.2	Apache License 2.0	C-2

Chapter 1

Product Overview

This chapter describes the product overview of SII print class library.


1.1 Functions Provided by SII Print Class Library

The SII print class library including the library and the sample program provides the functions to use SII printer MP-B21L Series (hereinafter referred to as "printer") in iOS applications. Moreover, the SII print class library provides the library sample program in Xcode project.

1.2 SII Print Class Library Overview

1.2.1 SII Print Class Library Configuration

The library and the sample program in the SII print class library are indicated with dashed lines in the figure below.

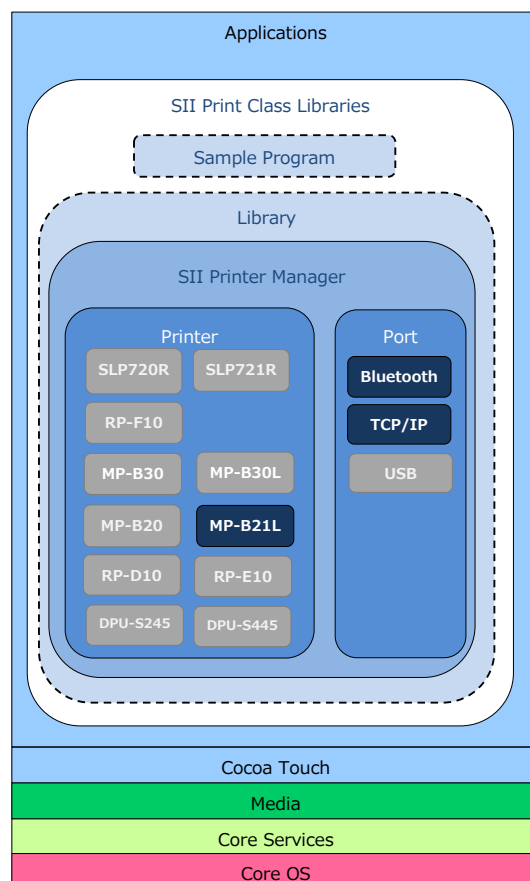

1.2.2 Functions Provided by Library

By using the library, iOS applications can easily send print data and printer commands to a printer through the communication port (Bluetooth or TCP/IP) on an iOS device. Also, the applications can get the printer status.

The library provides the following functions:

- Connecting to / disconnecting from a printer
- Sending data to a printer (print data and/or printer commands^{*1})
- Printing barcode and 2-dimensional barcode
- Sending a data file to a printer (print data and/or printer commands^{*1})
- Getting the printer status
- Aborting the waiting state of a printer
- Getting various responses from a printer
- Bulk registration of print commands
- Registering a printer status call back function
- Searching the printer by TCP/IP
- Printing a label file
- Replacing object data in a label file
- Outputting a log file

^{*1}: Commands that read the response from the printer are not supported.

In order to read responses from the printer, use **getStatus** or **getPrinterResponse**.

(NOTE) MP-B21L does not support the APIs of Display or the barcode scanner.
--

1.2.3 Development of Application that Performs Bluetooth Communication with SII Printer

When registering an application that performs Bluetooth communication with a printer to App Store, advance application from SII to Apple is necessary. For details, please contact SII.

Chapter 2

Product Specifications

This chapter describes the product specifications of the library.

2.1 Operating Environment

2.1.1 Applicable iOS Devices

Applicable iOS devices for the library are shown in the following list.

(1) iPhone models

- iPhone 14 Pro Max
- iPhone 14 Pro
- iPhone 14 Plus
- iPhone 14
- iPhone SE (3rd generation)
- iPhone 13 Pro Max
- iPhone 13 Pro
- iPhone 13
- iPhone 13 mini
- iPhone 12 Pro Max
- iPhone 12 Pro
- iPhone 12
- iPhone 12 mini
- iPhone SE (2nd generation)
- iPhone 11 Pro Max
- iPhone 11 Pro
- iPhone 11
- iPhone XS Max
- iPhone XS
- iPhone XR

(2) iPad models

- iPad Pro 12.9-inch (6th generation)
- iPad Pro 11inch (4th generation)
- iPad (10th generation)
- iPad Air (5th generation)
- iPad mini (6th generation)
- iPad (9th generation)
- iPad Pro 12.9inch (5th generation)
- iPad Pro 11inch (3rd generation)
- iPad Air (4th generation)
- iPad (8th generation)
- iPad Pro 12.9inch (4th generation)
- iPad Pro 11inch (2nd generation)
- iPad (7th generation)

- iPad Air (3rd generation)
- iPad mini (5th generation)
- iPad Pro 12.9inch (3rd generation)
- iPad (6th generation)
- iPad Pro 12.9inch (2nd generation)

2.1.2 Applicable iOS Versions

Applicable iOS versions for the library are shown in the following list.

- iOS 16 to 16.7.1
- iPadOS 16 to 16.7.1
- iOS 17 to 17.6.1
- iPadOS 17 to 17.6.1
- iOS 18 to 18.2.1
- iPadOS 18 to 18.2.1

2.2 Printer Settings

Set the memory switches and the Bluetooth communication setting of the printer to [Value] in the following table when using the library.

The printer memory switches and Bluetooth communication settings can be set in the iOS app "SII Printer Utility" on the App Store.

See "MP-B21L SERIES Thermal Printer USER'S GUIDE" for details about the memory switches and the factory default settings.

Memory Switch

MS	Function	Value
1-1	Interface Selection (Interface)	1: USB/Wireless
1-2	Mark Mode Selection (Mark Mode)	1: Disable* ¹ 0: Enable* ²
1-3 to 1-5	Command System Selection (Command System)	000B: ESC/POS
1-6	Data Discard Selection When Error Occurs (Error Through)	0: Enable
1-8	Data Discard Selection When Output Buffer Full Occurs (Response Data Discarding)	1: Disable
2-2	Realtime Command Selection (Realtime Command)	0: Enable
9-1	Automatic Status Response Selection (Auto Status Back)	0: Enable
9-2	Initialized Response Selection (Init. Response)	0: Enable

*1: Select "Disable" when using `cutPaper`.

*2: Select "Enable" when using `feedPosition`.

Bluetooth Communication Setting

Function	Value
iOS Auto Connection	Enable* ¹ Disable

*1: Select "Enable" when using `resetPrinter`.

2.3 Precaution

This library is not thread safe. When this library is used on multiple threads, abnormal termination may occur.

When using TCP/IP connection, the communication port cannot be shared with printer drivers or other libraries in this library.

When using TCP/IP connection, wireless LAN access point to which the iOS device is connected and the printer need to be connected to the same network.

A concurrent connection from multiple apps to one printer is not supported when multiple apps are worked simultaneously by Multitasking on iPad with iPadOS.

Chapter 3

How to Use Library

This chapter describes the development environment of iOS application and how to use the library.

3.1 iOS Application Development Environment

In order to develop iOS applications, the following tools are required.

- Xcode 12.0 or later

The description in and after this chapter is on the premise that the environment where each tool is available is prepared.

3.2 Provided Files

The file configuration of the SII print class library is as follows.

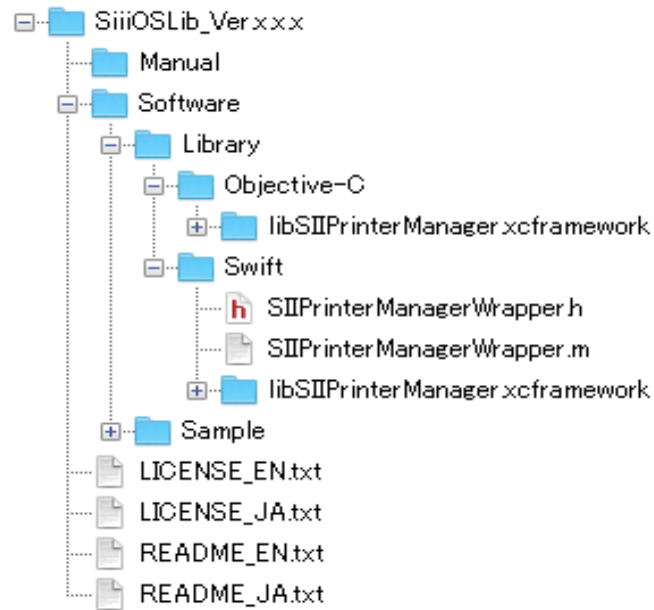


Figure 3-1

The file format of the library is XCFramework. The file name of the library is libSIIPrinterManager.xcframework.

3.3 Build the Library into Xcode Project

Using the project of the sample program (SiiLibSample) included in the SII print class library as an example, this section describes by development language how to build the library into the project.

See "Chapter 5 Sample Program" for the sample program included in the SII print class library.


Development Language	Description
Objective-C	See "3.3.1 Objective-C" for details to build the library as Objective-C.
Swift	See "3.3.2 Swift" for details to build the library as Swift.

(NOTE) If the following libraries provided SII Print Class Library for iOS Ver. 3.8.0 or earlier versions are included in the target project, delete them all.


- libSiiPrinterManager.a
- SiiPrinterEnum.h
- SiiPrinterException.h
- SiiPrinterManager.h
- SiiSmartLabelManager.h

3.3.1 Objective-C


- (1) Open the Xcode project.
- (2) Drag the following files to any hierarchy in the target project in [Project Navigator] of the navigator window.
 - libSiiPrinterManager.xcframework

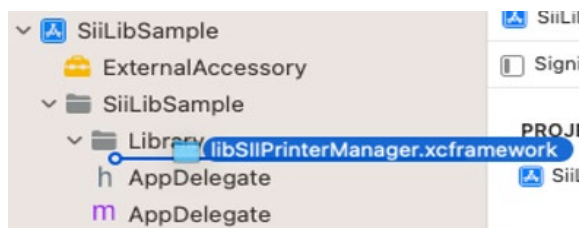


- (3) Check the box [Copy items if needed], and click the [Finish] button.

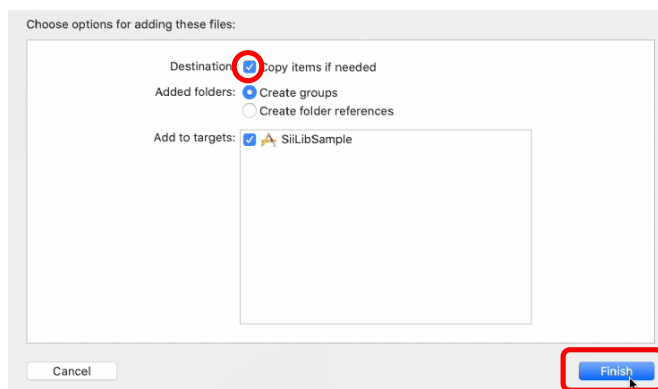



- (4) Build the ExternalAccessory.framework into the project.
Select the target project in the [TARGETS], and open the [General] - [Frameworks, Libraries and Embedded Content].

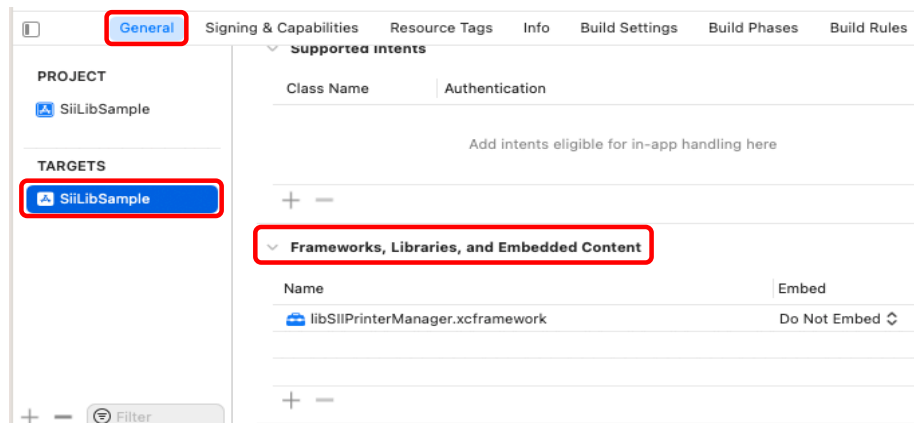


- (5) Click the [+] button opened the [Frameworks, Libraries and Embedded Content].

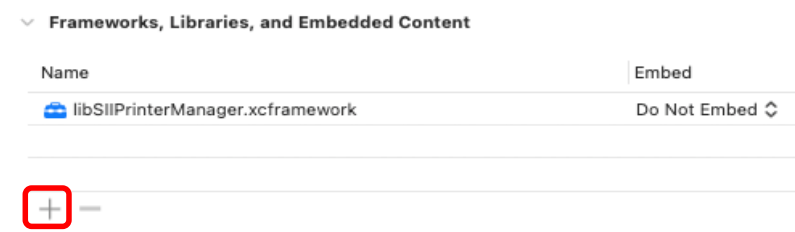

- (6) Select the ExternalAccessory.framework from the list and click the [Add] button.

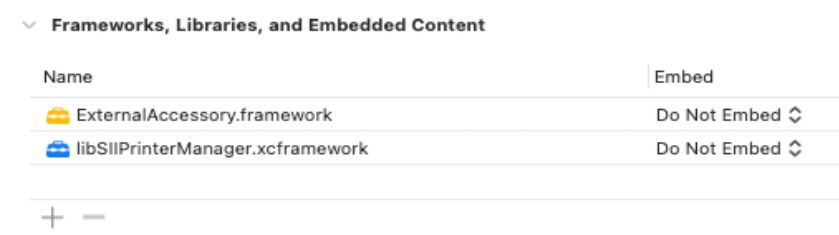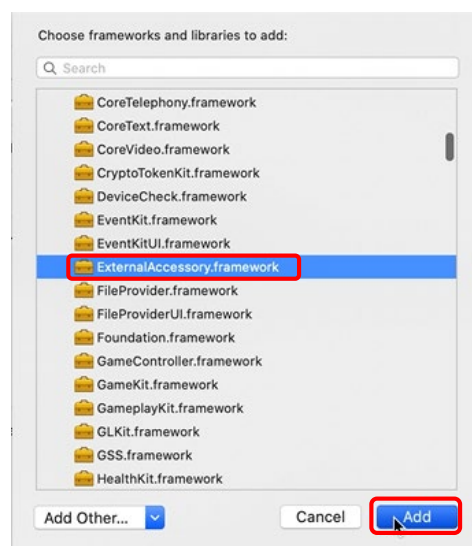

- (7) Set the protocol name to use in the ExternalAccessory.framework. Select property list (.plist) in the [Project Navigator].

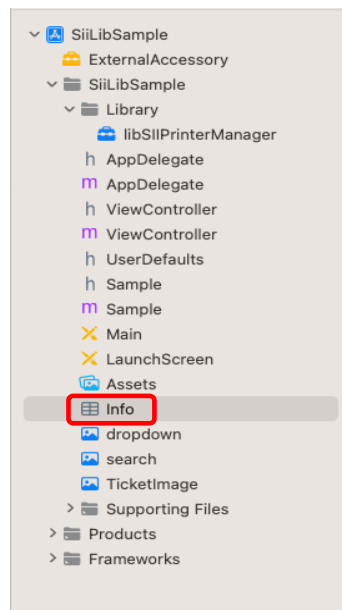


- (8) Select the [Information Property List] - ⊕.

Key	Type	Value
Information Property List	Dictionary	(15 items)
Localization native development re...	String	\$(DEVELOPMENT_LANGUAGE)
Executable file	String	\$(EXECUTABLE_NAME)
Bundle identifier	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
InfoDictionary version	String	6.0

- (9) Select the [Supported external accessory protocols] from the list.

Key	Type	Value
Information Property List	Dictionary	(16 items)
App Category	String	
Supported external accessory p...	String	\$(DEVELOPMENT_LANGUAGE)
Supported interface orientations	String	\$(EXECUTABLE_NAME)
Supported interface orientation...	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
Supported interface orientation...	String	6.0
Supports Automatic Graphics S...	String	\$(PRODUCT_NAME)
Supports Controller User Intera...	String	\$(PRODUCT_BUNDLE_PACKAGE_TYPE)
Supports Document Browser	String	1.0
Supports HDR color mode	String	1

- (10) Open the added [Supported external accessory protocols].
The [Item 0] displayed in the opened [Supported external accessory protocols], enter com.sii-ps.sieap as the Value.

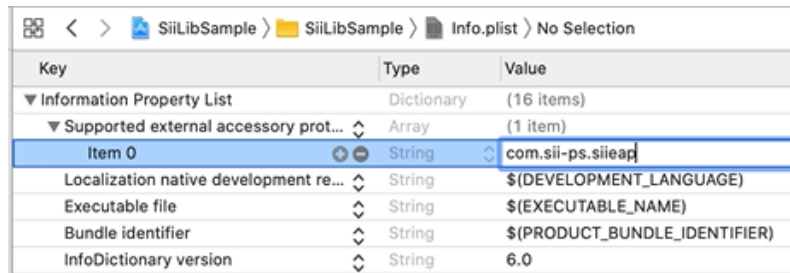


Key	Type	Value
Information Property List	Dictionary	(16 items)
Supported external accessory protocols	Array	(1 item)
Item 0	String	com.sii-ps.sieap
Localization native development region	String	\$(DEVELOPMENT_LANGUAGE)
Executable file	String	\$(EXECUTABLE_NAME)
Bundle identifier	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
InfoDictionary version	String	6.0

Use the following import statement when importing libraries.
#import <SIIPrinterManager/SIIPrinterManager.h>


By completing these procedures, the library function becomes available.

3.3.2 Swift

- (1) Open the Xcode project.
- (2) Drag the following files to any hierarchy in the target project in [Project Navigator] of the navigator window.
 - libSiiPrinterManager.xcframework
 - SiiPrinterManagerWrapper.h
 - SiiPrinterManagerWrapper.m

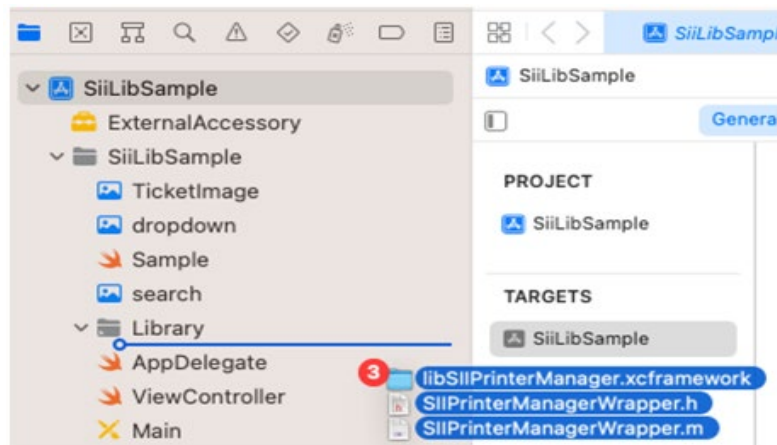


- (3) Check the box [Copy items if needed], click the [Finish] button.

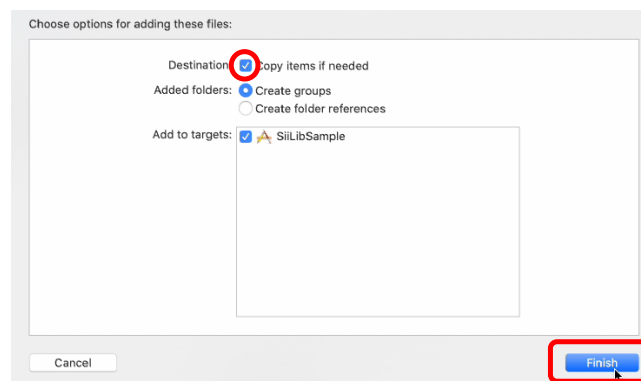

- (4) The dialog is displayed. Select the [Create Bridging Header] button and create xxxxxxxx-Bridging-Header.h.




- (5) Select the created xxxxxxxx-Bridging-Header.h.

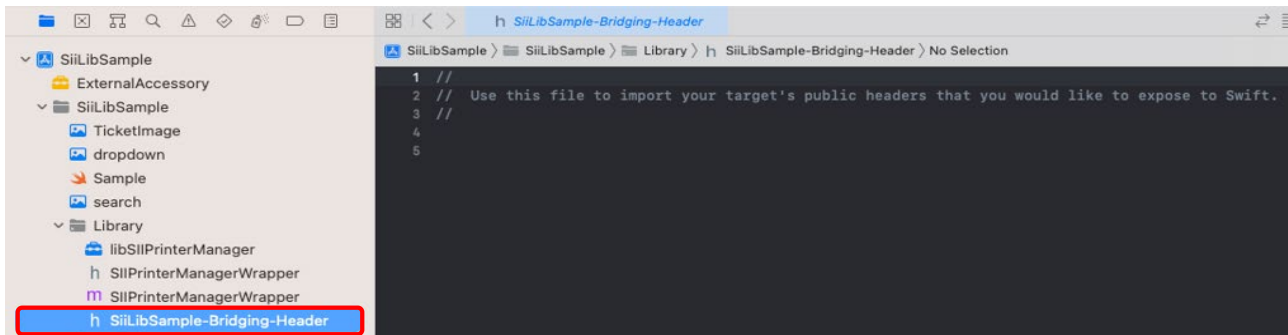


- (6) Import the SIIPrinterManager.h and the SIIPrinterManagerWrapper.h into the xxxxxxxx-Bridging-Header.h.

```
1 //
2 // Use this file to import your target's public headers that you would like to expose to Swift.
3 //
4
5 #import <SIIPrinterManager/SIIPrinterManager.h>
6 #import "SIIPrinterManagerWrapper.h"
7
```


- (7) Build the ExternalAccessory.framework.
Select the target project in the [TARGETS], and open the [General] - [Frameworks, Libraries and Embedded Content].

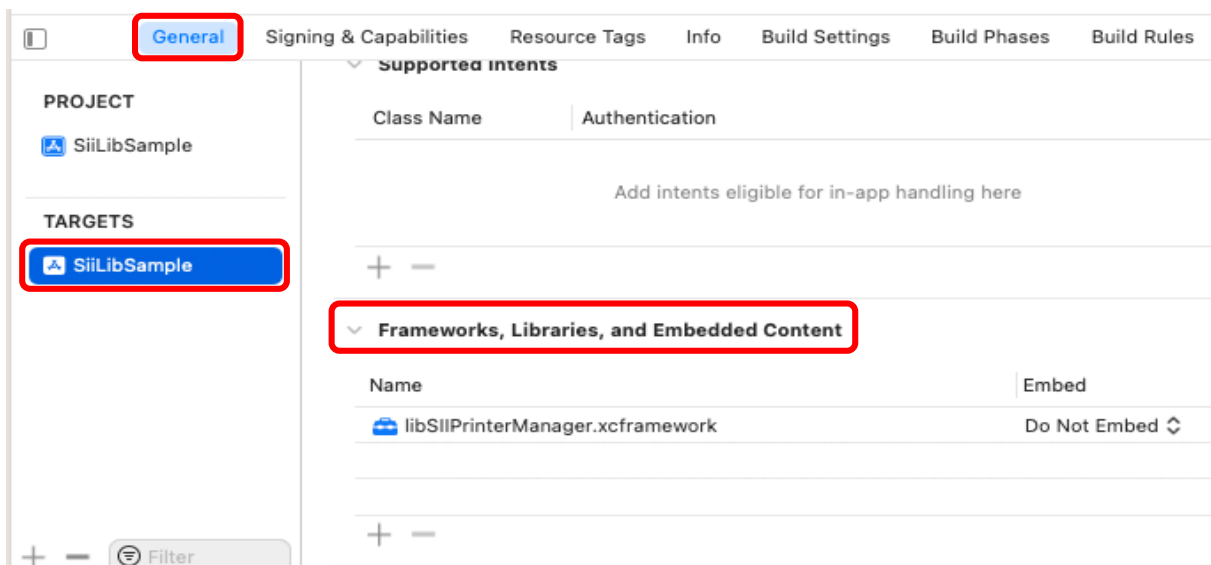

- (8) Click the [+] button opened the [Frameworks, Libraries and Embedded Content].

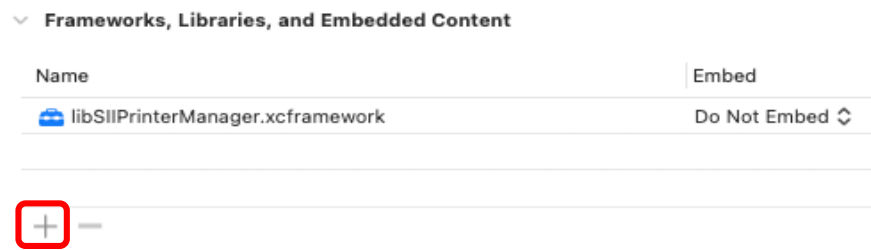


- (9) Select the ExternalAccessory.framework from the list and click the [Add] button.

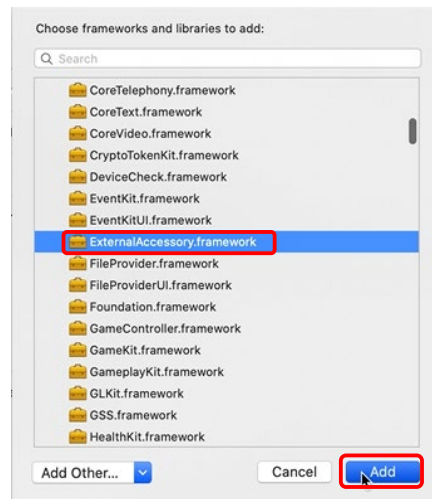

Frameworks, Libraries, and Embedded Content

Name	Embed
ExternalAccessory.framework	Do Not Embed ↕
libSiiPrinterManager.xcframework	Do Not Embed ↕


- (10) Set the protocol name to use in the ExternalAccessory.framework. Select property list (.plist) in the [Project Navigator].

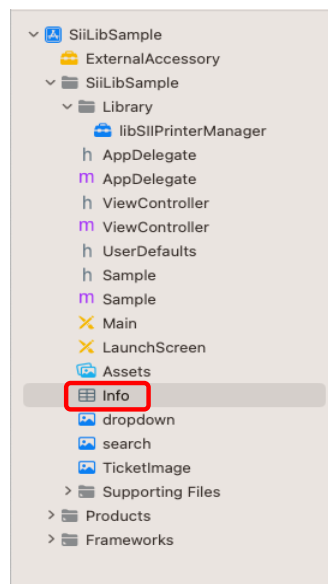

- (11) Select the [Information Property List] - ⓘ.

Key	Type	Value
Information Property List ⓘ	Dictionary	(15 items)
Localization native development re...	String	\$(DEVELOPMENT_LANGUAGE)
Executable file	String	\$(EXECUTABLE_NAME)
Bundle identifier	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
InfoDictionary version	String	6.0


(12) Select the [Supported external accessory protocols] from the list.

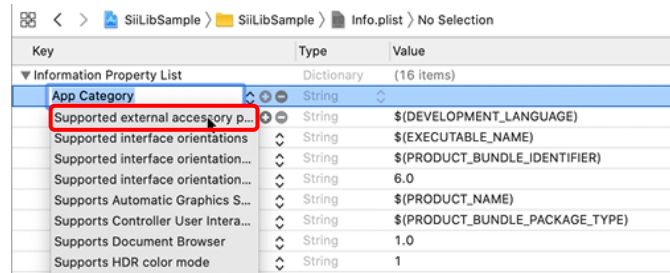

Key	Type	Value
App Category	String	
Supported external accessory p...	String	\$(DEVELOPMENT_LANGUAGE)
Supported interface orientations	String	\$(EXECUTABLE_NAME)
Supported interface orientation...	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
Supported interface orientation...	String	6.0
Supports Automatic Graphics S...	String	\$(PRODUCT_NAME)
Supports Controller User Intera...	String	\$(PRODUCT_BUNDLE_PACKAGE_TYPE)
Supports Document Browser	String	1.0
Supports HDR color mode	String	1

(13) Open the added [Supported external accessory protocols].

The [Item 0] displayed in the opened [Supported external accessory protocols], enter com.sii-ps.sieap as the Value.

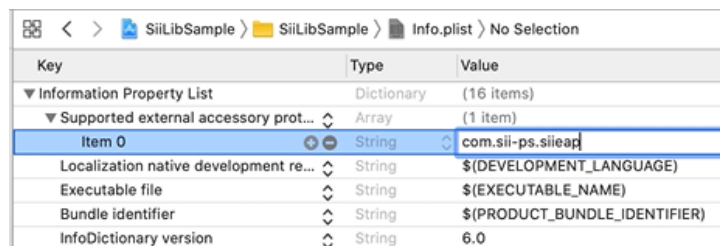

Key	Type	Value
Information Property List	Dictionary	(16 items)
Supported external accessory prot...	Array	(1 item)
Item 0	String	com.sii-ps.sieap
Localization native development re...	String	\$(DEVELOPMENT_LANGUAGE)
Executable file	String	\$(EXECUTABLE_NAME)
Bundle identifier	String	\$(PRODUCT_BUNDLE_IDENTIFIER)
InfoDictionary version	String	6.0

By completing these procedures, the library function becomes available.

Chapter 4

Functions of Library

This chapter describes the APIs of each class and protocol implemented in the library.

4.1 Standard Mode and Page Mode

4.1.1 Basic Operation


There are two printing modes "Standard mode" and "Page mode" in the library.
The "Standard mode" and "Page mode" are described below.

(1) Standard mode

Standard mode is the mode to perform the printing in sequence.

Sample print command

- ① Send text data
- ② Print barcode
- ③ Send specified file (Specify an image file)

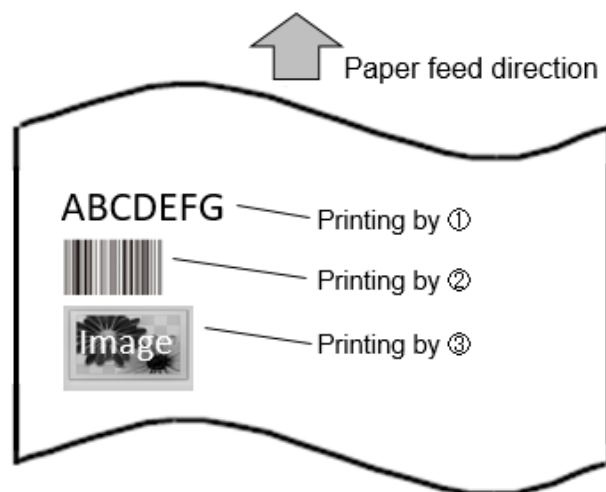

Standard mode suits the printing with an unfixed length such as a receipt.

(2) Page mode


Page mode is the mode to perform the printing on a per-page basis.

In page mode, the print area of page mode is allocated at first, and then print data is mapped on an arbitrary position of the print area.

The mapped print data is printed by the print method of page mode.

Sample print command

- ① Start page mode
- ② Specify print area of page mode
- ③ Send text data of page mode
- ④ Print barcode of page mode
- ⑤ Draw image file of page mode
- ⑥ Print page mode (print the data of ③④⑤ on the print area of ②)
- ⑦ End page mode

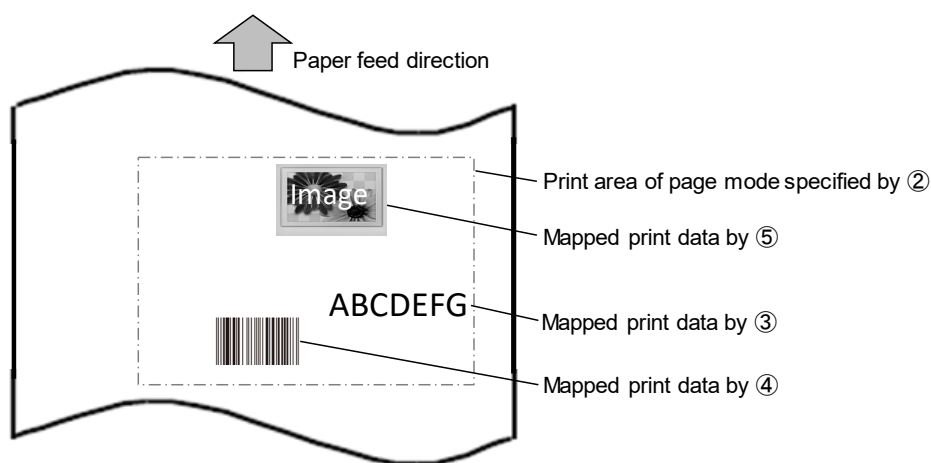

Page mode suits the printing for the followings.

- The printing with a fixed length.
- The printing with the coordinate determination of the character starting position or the ruled line printing position.


4.1.2 Text Data Printing in Standard Mode

The text data in standard mode is printed each one line.


The text data is stored in the printer when the text data less than one line is specified.

The stored text data is printed by either the following conditions.

- The text data filling for one line is specified.
 - Line Feed code is specified.
- The print process when the text data filling for one line is specified.

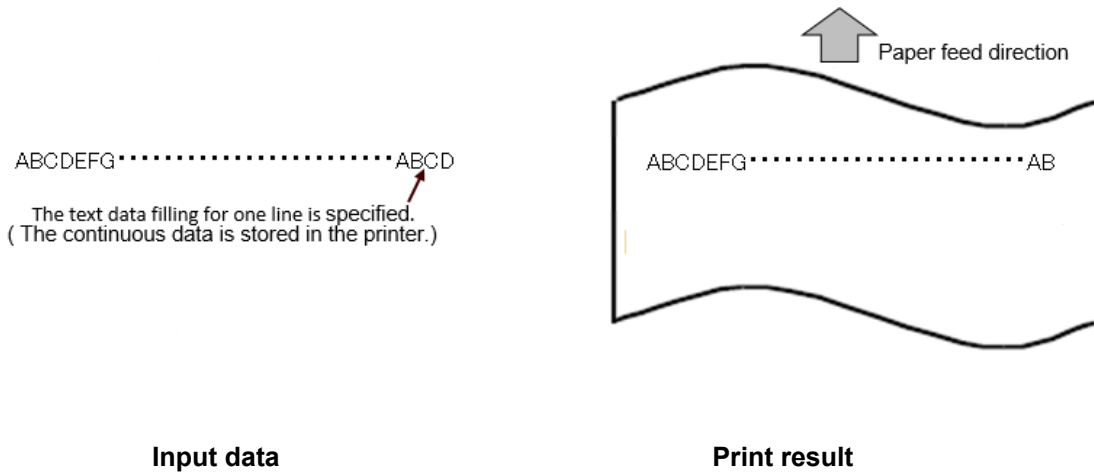

- The print process when Line Feed code is specified.

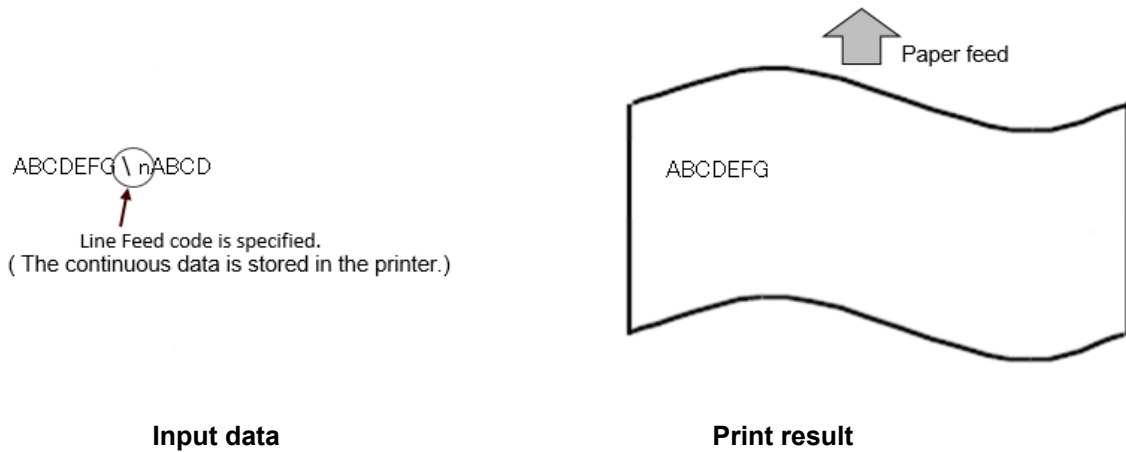

4.1.3 Mapping Position of Print Data in Page Mode


In page mode, the mapping position of print data is determined by print area, print direction, and reference point.

This section describes the print area, print direction, and reference point.

(1) Print area of page mode

The print area of page mode is specified against the print area of the printer by the print area origin, and the width and the height of page mode. The view of the print area is shown in the following figures.

The print area of page mode can be specified more than one.

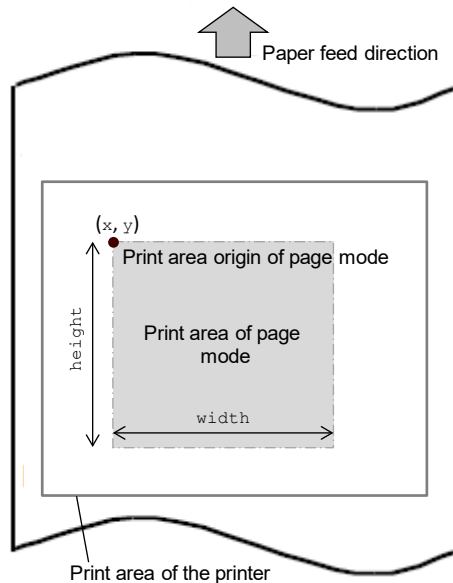


(2) Print direction

Specify the print direction at setting the print area of page mode.

The starting point is changed depending on specifying the print direction for each direction.


The relation between the print direction and the starting point is shown in the figure below.

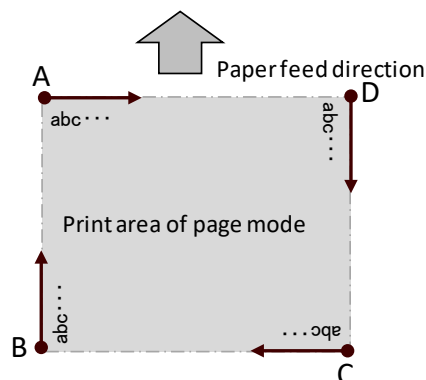

- | | |
|--|---------------------------------|
| • Starting point: Upper left (A on the figure), | Print direction: Left to Right |
| • Starting point: Left below (B on the figure), | Print direction: Below to Upper |
| • Starting point: Right below (C on the figure), | Print direction: Right to Left |
| • Starting point: Upper right (D on the figure), | Print direction: Upper to Below |

(3) Reference point

The relation between the reference point for mapping data and each print element (text, image file, logo, and barcode, etc.) is shown in the figures below.

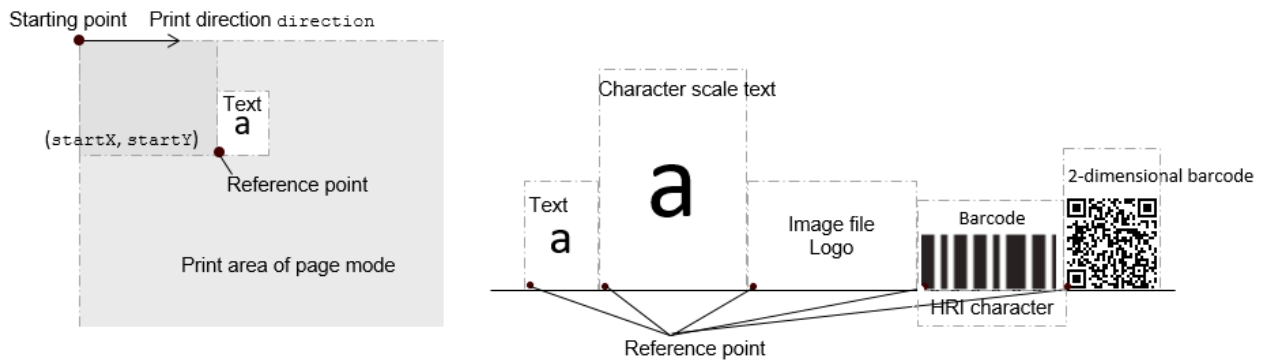

(NOTE) The reference point cannot be specified out of the print area of page mode.


4.1.4 Print Data Process at Out of Print Area of Page Mode

This section describes the process when mapped data is to be mapped on out of the print area of page mode.

Type of Print Data


Text	Barcode, 2-dimensional Barcode	Image File, Logo, Rectangle, Ruled Line
ABC		

(1) The print data is mapped on the upper of the print area of page mode.

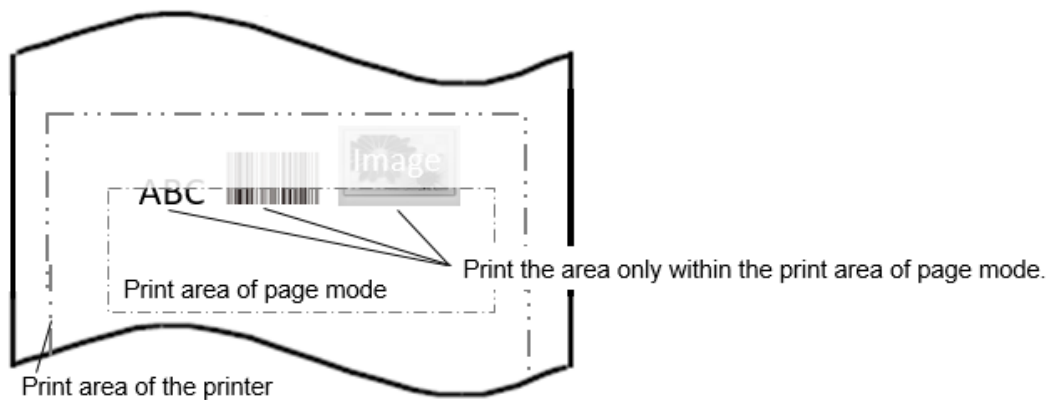

The barcode specified by **SII_PM_BARCODE_CUSTOMER_BAR_CODE_JP** is not printed when the part of the barcode is out of the print area of page mode.

(2) The print data is mapped on the right of print area of page mode.

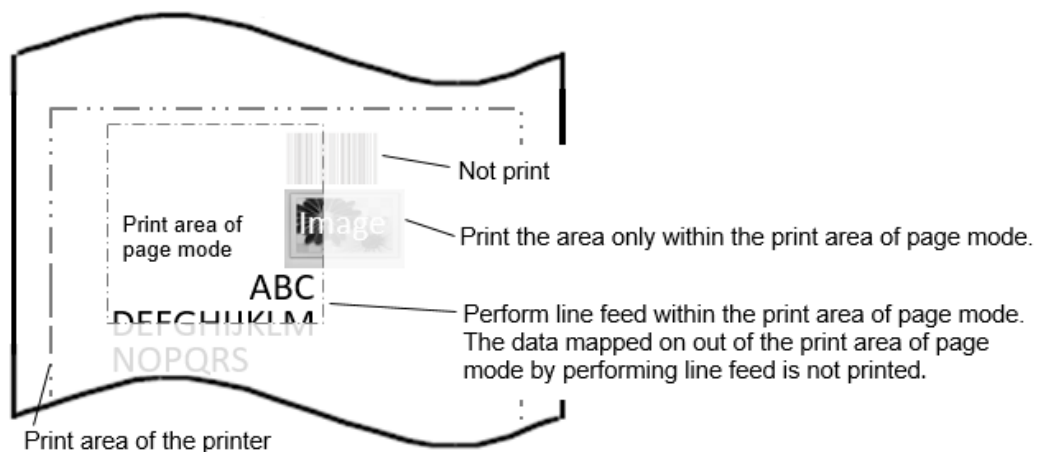

(NOTE) Read error or incorrect reading may occur when the part of mapped barcode data is out of the print area of page mode.

4.2 Printing Label Function

The label files (*.sl, *.slex) created using SII Layout Editor can be printed using the library. It also provides the function to replace text data, image data, or barcode data using the label file and print.

SII Layout Editor is software that can create labels.

In this manual, when describing SII Layout Editor, it is referred to as the "app".

iOS or Android

By scanning a QR code below with the smartphone, redirected to the store and the app can be installed.

- iOS



- Android



Windows


By clicking on the URL below or inputting it into a web browser to go to the store, the app can be installed.

<https://www.microsoft.com/store/apps/9P5G2R1PS76W>

Reference "SII Layout Editor" can also be searched and installed in App Store, Google Play, or Microsoft Store.

4.2.1 Structure of Label File

The label file is the file where objects are mapped within the print area for the label.

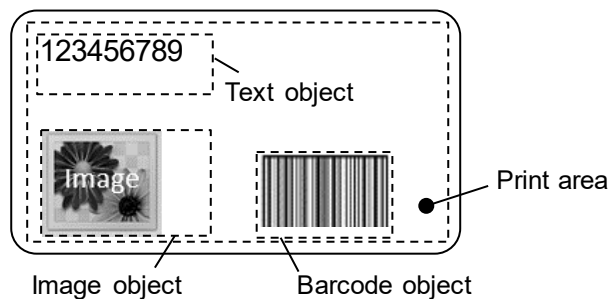

Example of label file (*.sl, *.slex)

(1) Types of objects and support in the library

Supported objects in the library are shown in the following table.

Object	Description	Supported in Library
Text object	Handle text data	✓
Image object	Handle image data	✓
Barcode object	Handle barcode data	✓
Contact object	Retrieve data from the device contact book	✓
DateTime object	Handle the data of the date and time	✓
Drawing (rectangle) object	Handle the drawn data of a figures (rectangle)	✓
Drawing (circle/oval) object	Handle the drawn data of a figures (circle/oval)	✓
Drawing (line) object	Handle the drawn data of a figures (line)	✓

(2) Precautions for printing the label file using the library

Printing the label file using the app may differ from printing the label file using the library. Verify the performance with your actual device in advance.

Note the following when printing label files using the library.

① All object

- The drawing object mapped outside the print area is not supported.

② Text object

- The "Serialization" is not supported.
- When the same font as the app is to be used, add a custom font to the Xcode project. If the custom font is not in the Xcode project, the text data will be printed in the system standard font.

③ Image object

- When the setting of dithering is set to "Burkes" or "Bayer", the "Floyd–Steinberg" is used in the library.

④ Barcode object

- Among the barcodes supported by the app, the following barcodes are supported by the library.
 - CODE39
 - CODE128
 - UPC-A
 - EAN13
 - CODABAR
 - UPC-E
 - EAN8
 - PDF417
 - Data Matrix
 - QR Code

- The "Serialization" is not supported.
- The barcode setting shown in the following is not reflected.
 - Ratio of bar width
- The barcode image created using the app and the barcode image created by the library may not become the same barcode image.
- If the height of the barcode object is specified to be lower than the bar height using the app, the barcode will be reduced to fit within the object in the library and printed.
- When the security of the PDF417 is set to "-1" using the app, it is fixed to "0" in the library and the object is drawn.
- When the same font as the app is to be used, add a custom font to the Xcode project. If the custom font is not in the Xcode project, the text data will be printed in the system standard font.

⑤ Contact object

- When the same font as the app is to be used, add a custom font to the Xcode project. If the custom font is not in the Xcode project, the text data will be printed in the system standard font.

⑥ DateTime object

- When the same font as the app is to be used, add a custom font to the Xcode project. If the custom font is not in the Xcode project, the text data will be printed in the system standard font.

⑦ Drawing object

- When "Line Width" is too thin, dashed, long dashed, or double lines may be squished.
- The drawing position of the drawing object may differ between the app and the library.

4.2.2 Method for using label file

The printing method using the label file is described below.

- (1) Print the label file as it is from the library


Print command example

- ① Specify label file
- ② Print label

- (2) Replace the object data in the label file and prints

Print command example

- ① Specify label file
- ② Replace text data of label (text object ID = 1)
- ③ Replace image data of label (image object ID = 1)
- ④ Replace barcode data of label (barcode object ID = 1)
- ⑤ Print label

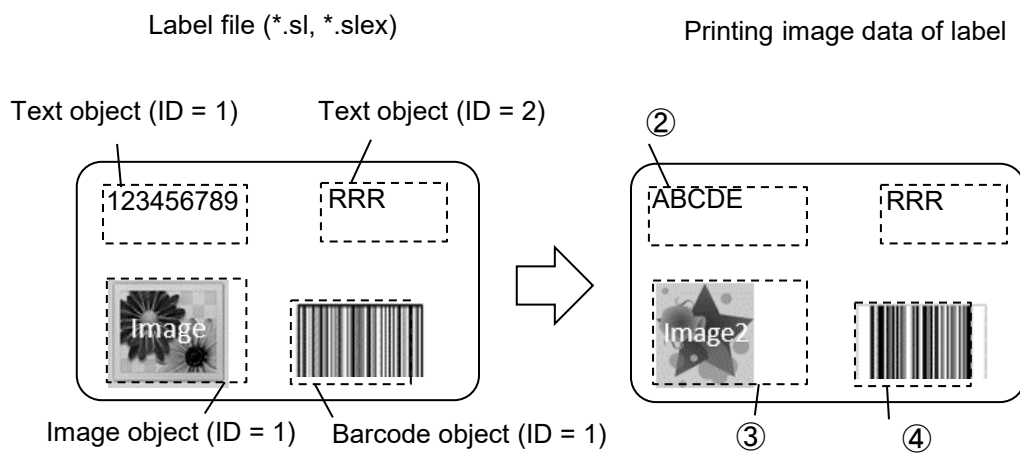

4.3 Log File Output Function

The logs can be retrieved and the log files can be output using the library.

4.3.1 How to Set Log Output

Log output settings can be configured by adding the config.ini file with the following content to the Documents folder of the ios application that incorporates the library.

```
config.ini  
  
LOGLEVEL=x  
LOGSIZEMAX=xMB  
LOGOUTPUT=x
```

Reference: See "4.3.2 Log Output Settings" for details on the settings for x.

4.3.2 Log Output Settings

Item	Description	Settings
LOGLEVEL	Log level	0 : Not record the log. 1 : Records an error log when SIIPrinterException is thrown. 2 : Records API execution history.
LOGSIZEMAX	Log file maximum size	1MB : Log file maximum size is 1 MB 5MB : Log file maximum size is 5 MB 10MB : Log file maximum size is 10 MB 50MB : Log file maximum size is 50 MB
LOGOUTPUT	Console output enabled/disabled	0 : Console output is disabled 1 : Console output is enabled

4.3.3 Log File

Log files are saved as local files in the iOS application that incorporates the library.

Log file name : PrinterManagerX.log (range of X is 0 to 4)

The 1st log file is created as PrinterManager0.log. If the log file maximum size is exceeded, changes the file name to PrinterManager1.log and creates a new PrinterManager0.log.

Up to 5 log files can be created.

4.4 API Reference

This library includes the following classes and protocol.

Name	Description	Supported*1
SIIPrinterManager	Provides the APIs used for communication with the printer and for printing. See " 4.4.1 SIIPrinterManager Class " for details.	✓
SIIPrinterInfo	Stores the printer information found by startDiscoveryPrinter .	✓
SIIPrinterException	Exception class that is thrown at API call. See " 4.4.3 SIIPrinterException Class " for details.	✓
SIIPrinterManagerDelegate	Provides the API to get notice from the printer. See " 4.4.4 SIIPrinterManagerDelegate Protocol " for details.	✓
SIISmartLabelManager	Provides the API to specify label files or replace data. See " 4.4.5 SIISmartLabelManager Class " for details.	✓

*1: ✓ : Supported, - : Not supported

(NOTE) MP-B21L does not support the APIs of Display or the barcode scanner.
--

4.4.1 SIIPrinterManager Class

(1) Method List

Methods provided by the **SIIPrinterManager** class are shown in the following table.
"Standard mode" or "Page mode" can be selected in the **SIIPrinterManager** class.

Method	Description
Common method to standard mode and page mode	The valid methods in standard mode and page mode. See "4.4.1(1) ① Common method to standard mode and page mode" for the methods.
Dedicated method for standard mode	The valid methods in standard mode. See "4.4.1(1) ② Dedicated method for standard mode" for the methods.
Dedicated method for page mode	The valid methods in page mode. See "4.4.1(1) ③ Dedicated method for page mode" for the methods.

① Common method to standard mode and page mode

Methods provided by the common method to standard mode and page mode are shown in the following table. See "4.4.1(5) ① Common method to standard mode and page mode" for details of the common methods.

Name	Description	Supported *1
init	Instance	✓
connect	Start communicating with printer	✓
disconnect	Stop communicating with printer	✓
openDrawer	Open cash drawer	-
buzzer	Sound buzzer	-
externalBuzzer	Sound external buzzer	-
getStatus	Get printer status	✓
abort	Abort waiting state of printer	✓
registerLogo	Register logo	✓
unregisterLogo	Delete registered logo	✓
registerStyleSheet	Register style sheet	-
unregisterStyleSheet	Delete registered style sheet	-
resetPrinter	Reset printer	✓
getPrinterResponse	Get various responses from printer	✓
startDiscoveryPrinter	Start printer search (Bluetooth)	✓
startDiscoveryPrinter	Start printer search (TCP/IP)	✓
cancelDiscoveryPrinter	Cancel printer search	✓
getFoundPrinter	Get found printer information	✓
getVersion	Get SDK version	✓
controlTransaction	Start/End batch processing	✓

*1: ✓: Supported, -: Not supported

(NOTE) MP-B21L does not support the APIs of Display.

② Dedicated method for standard mode

Methods provided by the dedicated method for standard mode are shown in the following table.
See "4.4.1(5)② Dedicated method for standard mode" for details of the specified methods.

Name	Description	Supported *1
sendText	Send text data	✓
sendTextEx	Send format specified text data	✓
printBarcode	Print barcode	✓
printPDF417	Print PDF417	✓
printQRcode	Print QR Code	✓
printDataMatrix	Print Data Matrix	✓
printMaxiCode	Print MaxiCode	✓
printGS1DataBarStacked	Print GS1 Databar Stacked	✓
printGS1DataBarStackedOmniDirectional	Print GS1 Databar Stacked Omni-directional	✓
printGS1DataBarExpandedStacked	Print GS1 Databar Expanded Stacked	✓
printAztecCode	Print Aztec Code	✓
cutPaper	Cut paper*2	✓
feedPosition	Paper form feed	✓
sendBinary	Send binary data	✓
sendDataFile	Send specified file	✓
printPDF	Print PDF page	✓
printLogo	Print logo	✓
printSmartLabelImageData	Print label	✓

*1: ✓: Supported, -: Not supported

*2: Only the paper feed operation to the paper cut position is performed.

③ Dedicated method for page mode

Methods provided by the dedicated method for page mode are shown in the following table.
See "4.4.1(5)③ Dedicated method for page mode" for details of the specified methods.

Name	Description	Supported *1
enterPageMode	Start page mode	✓
exitPageMode	End page mode	✓
setPageModeArea	Specify print area of page mode	✓
setPageModeDirection	Specify print direction of page mode	✓
setPageModeLineSpacing	Specify line spacing of page mode	✓
printPageMode	Print page mode	✓

Name	Description	Supported *1
printPageModeText	Send text data of page mode	✓
printPageModeTextEx	Send format specified text data of page mode	✓
printPageModeBarcode	Print barcode of page mode	✓
printPageModePDF417	Print PDF417 of page mode	✓
printPageModeQRcode	Print QR Code of page mode	✓
printPageModeDataMatrix	Print Data Matrix of page mode	✓
printPageModeMaxiCode	Print MaxiCode of page mode	✓
printPageModeGS1DataBarStacked	Print GS1 Databar Stacked of page mode	✓
printPageModeGS1DataBarStackedOmnidirectional	Print GS1 Databar Stacked Omni-directional of page mode	✓
printPageModeGS1DataBarExpandedStacked	Print GS1 Databar Expanded Stacked of page mode	✓
printPageModeAztecCode	Print Aztec Code of page mode	✓
sendPageModeBinary	Send binary data of page mode	✓
printPageModeImageFile	Draw image file of page mode	✓
printPageModeRectangle	Draw rectangle image of page mode	✓
printPageModeLine	Print ruled line of page mode	✓
printPageModeLogo	Print logo of page mode	✓

*1: ✓: Supported, -: Not supported

(2) Common property list to standard mode and page mode

Properties provided by **SIIPrinterManager** class are shown in the following table.

Name	Access	Description	Supported*1
sendTimeout	R/W	Get/Set send timeout period	✓
receiveTimeout	R/W	Get/Set receive timeout period	✓
internationalCharacter	R/W	Get/Set international character set	✓
codePage	R/W	Get/Set codepage	✓
printerModel	R	Get printer model	✓
portType	R	Get connecting port type	✓
isConnect	R	Verify connection state with printer	✓
socketKeepingTime	R/W	Get/Set socket keeping time	✓
delegate	R/W	Register delegate	✓
printSmartLabelMode	R/W	Get/Set paper when printing label file	✓

*1: ✓: Supported, -: Not supported

(3) Constant List

① Printer model

Constants used for starting communication with the printer and getting the printer model are shown in the following table.

Constant Name	Description	Value
SII_PM_PRINTER_MODEL_MP_B21L	MP-B21L	307

② Port type

Constants used for starting communication with the printer and getting the connection port type are shown in the following table.

Constant Name	Description	Value
SII_PM_PRINTER_PORT_TYPE_BLUETOOTH	Bluetooth	0
SII_PM_PRINTER_PORT_TYPE_TCP	TCP/IP	2

③ Response type

Constants used for getting various responses from the printer are shown in the following table.

Constant Name	Description	Value
SII_PM_PRINTER_RESPONSE_REQUEST	Execution response request	0
SII_PM_PRINTER_RESPONSE_USER_AREA	Send remaining capacity of user area	1
SII_PM_PRINTER_RESPONSE_ARRANGE_USER_AREA	Send remaining capacity of user area after defragment	2
SII_PM_PRINTER_RESPONSE_NV_GRAPHICS	Send NV graphics memory capacity	3
SII_PM_PRINTER_RESPONSE_KEY_CODE	Send key code list of defined NV graphics	4
SII_PM_PRINTER_RESPONSE_BATTERY_STATUS	Battery remaining capacity level	5
SII_PM_PRINTER_RESPONSE_FIRMWARE_VERSION	Send firmware version	6

④ Battery remaining capacity level

Constants of the battery remaining capacity level retrieved from the printer are shown in the following table.

Constant Name	Description	Value
SII_PM_BATTERY_STATUS_FULL	Battery remaining capacity: approx. 80%	0
SII_PM_BATTERY_STATUS_MIDDLE	Battery remaining capacity: approx. 40%	1
SII_PM_BATTERY_STATUS_LOW	Battery remaining capacity: approx. 10%	2
SII_PM_BATTERY_STATUS_EMPTY	No battery	3

⑤ International character set

Constants used for setting/getting the international character set are shown in the following table.

Constant Name	Description	Value
SII_PM_COUNTRY_USA	USA	0
SII_PM_COUNTRY_FRANCE	France	1
SII_PM_COUNTRY_GERMANY	Germany	2
SII_PM_COUNTRY_ENGLAND	United Kingdom	3
SII_PM_COUNTRY_DENMARK_1	Denmark I	4
SII_PM_COUNTRY_SWEDEN	Sweden	5
SII_PM_COUNTRY_ITALY	Italy	6
SII_PM_COUNTRY_SPAIN	Spain I	7
SII_PM_COUNTRY_JAPAN	Japan	8
SII_PM_COUNTRY_NORWAY	Norway	9
SII_PM_COUNTRY_DENMARK_2	Denmark II	10
SII_PM_COUNTRY_SPAIN_2	Spain II	11
SII_PM_COUNTRY_LATIN_AMERICA	Latin America	12
SII_PM_COUNTRY_ARABIA	Arabia	17

⑥ Codepage

Constants used for setting/getting the codepage are shown in the following table.

Constant Name	Description	Value
SII_PM_CODE_PAGE_437	USA, Standard Europe (Code Page 437)	0
SII_PM_CODE_PAGE_KATAKANA	Katakana	1
SII_PM_CODE_PAGE_850	Multilingual (Code Page 850)	2
SII_PM_CODE_PAGE_860	Portuguese (Code Page 860)	3
SII_PM_CODE_PAGE_863	Canadian-French (Code page 863)	4
SII_PM_CODE_PAGE_865	Nordic (Code Page 865)	5
SII_PM_CODE_PAGE_857* ¹	Turkish (Code Page 857)	13
SII_PM_CODE_PAGE_737	Greek (Code Page 737)	14
SII_PM_CODE_PAGE_1252	Latin (Code Page 1252)	16
SII_PM_CODE_PAGE_866	Russian (Code Page 866)	17
SII_PM_CODE_PAGE_852	Eastern Europe (CodePage 852)	18
SII_PM_CODE_PAGE_858	Euro (Code Page 858)	19
SII_PM_CODE_PAGE_855	Cyrillic (Code Page 855)	34
SII_PM_CODE_PAGE_864* ^{1*2}	Arabic (Code Page 864)	37
SII_PM_CODE_PAGE_1250	Central European (Code Page 1250)	45
SII_PM_CODE_PAGE_1251	Cyrillic (Code Page 1251)	46
SII_PM_CODE_PAGE_1253* ³	Greek (Code Page 1253)	47
SII_PM_CODE_PAGE_1254	Turkish (Code Page 1254)	48

*1: 20ACh of the Unicode cannot be printed.

*2: Font B cannot be printed.

*3: 00AAh of the Unicode cannot be printed.

⑦ Paper selection with or without mark when printing label file

Constants used for selecting the paper when printing label file.

Constant Name	Description	Value
SII_PM_PRINTSMARTLABEL_MODE_MARK	Marked paper	0
SII_PM_PRINTSMARTLABEL_MODE_NONEMARK	Paper without mark	1

⑧ Barcode and PDF417

Constants used for printing barcodes and PDF417 are shown in the following table.

Constant Name	Description	Value
SII_PM_BARCODE_HEIGHT_DEFAULT	Default value of barcode height	162
SII_PM_PDF417_MODULE_HEIGHT_DEFAULT	Default value of PDF417 height	10
SII_PM_PDF417_ROW_AUTO	Automatic selection of the number of rows	0
SII_PM_PDF417_COLUMN_AUTO	Automatic selection of the number of columns	0

(4) Enumerated Constant List

① Dithering (Dithering)

Constants of enumerated type used for dithering are shown in the following table.

Constant Name	Description
SII_PM_DITHERING_DISABLE	Dithering is disabled
SII_PM_DITHERING_ERRORDIFFUSION	Dithering is enabled

② Batch processing selection (TransactionFunction)

Constants of enumerated type used for batch processing selection are shown in the following table.

Constant Name	Description
SII_PM_TRANSACTION_CLEAR	Cancel batch processing
SII_PM_TRANSACTION_START	Start batch processing
SII_PM_TRANSACTION_PRINT	Finish batch printing and batch processing

③ Bold print (CharacterBold)

Constants of enumerated type used for bold print are shown in the following table.

Constant Name	Description
SII_PM_BOLD_CANCEL	Cancel bold print
SII_PM_BOLD	Specify bold print

④ Underline (CharacterUnderline)

Constants of enumerated type used for underline are shown in the following table.

Constant Name	Description
SII_PM_UNDERLINE_CANCEL	Cancel underline print
SII_PM_UNDERLINE_1	Specify 1-dot width underline print
SII_PM_UNDERLINE_2	Specify 2-dot width underline print

⑤ Reverse print (CharacterReverse)

Constants of enumerated type used for reverse print are shown in the following table.

Constant Name	Description
SII_PM_REVERSE_CANCEL	Cancel reverse print
SII_PM_REVERSE	Specify reverse print

⑥ Inversion print (CharacterInversion)

Constants of enumerated type used for inversion print are shown in the following table.
Inversion print cannot be added to the text data before inserting a new line feed.

Constant Name	Description
SII_PM_INVERSION_CANCEL	Cancel inversion print
SII_PM_INVERSION	Specify inversion print

⑦ Character font (CharacterFont)

Constants of enumerated type used for character fonts are shown in the following table.

Constant Name	Description
SII_PM_FONT_A	Font A (24 × 12)
SII_PM_FONT_B	Font B (16 × 8)

⑧ Character scale (CharacterScale)

Constants of enumerated type used for character scale are shown in the following table.

Constant Name	Description
SII_PM_VARTICAL_1_HORIZONTAL_1	Height × 1 and width × 1
SII_PM_VARTICAL_1_HORIZONTAL_2	Height × 1 and width × 2
SII_PM_VARTICAL_1_HORIZONTAL_3	Height × 1 and width × 3
SII_PM_VARTICAL_1_HORIZONTAL_4	Height × 1 and width × 4
SII_PM_VARTICAL_2_HORIZONTAL_1	Height × 2 and width × 1
SII_PM_VARTICAL_2_HORIZONTAL_2	Height × 2 and width × 2
SII_PM_VARTICAL_2_HORIZONTAL_3	Height × 2 and width × 3
SII_PM_VARTICAL_2_HORIZONTAL_4	Height × 2 and width × 4
SII_PM_VARTICAL_2_HORIZONTAL_6	Height × 2 and width × 6
SII_PM_VARTICAL_3_HORIZONTAL_1	Height × 3 and width × 1
SII_PM_VARTICAL_3_HORIZONTAL_2	Height × 3 and width × 2
SII_PM_VARTICAL_3_HORIZONTAL_3	Height × 3 and width × 3
SII_PM_VARTICAL_3_HORIZONTAL_4	Height × 3 and width × 4
SII_PM_VARTICAL_4_HORIZONTAL_1	Height × 4 and width × 1
SII_PM_VARTICAL_4_HORIZONTAL_2	Height × 4 and width × 2
SII_PM_VARTICAL_4_HORIZONTAL_3	Height × 4 and width × 3
SII_PM_VARTICAL_4_HORIZONTAL_4	Height × 4 and width × 4
SII_PM_VARTICAL_4_HORIZONTAL_6	Height × 4 and width × 6
SII_PM_VARTICAL_4_HORIZONTAL_8	Height × 4 and width × 8
SII_PM_VARTICAL_6_HORIZONTAL_2	Height × 6 and width × 2
SII_PM_VARTICAL_6_HORIZONTAL_4	Height × 6 and width × 4
SII_PM_VARTICAL_6_HORIZONTAL_6	Height × 6 and width × 6
SII_PM_VARTICAL_6_HORIZONTAL_8	Height × 6 and width × 8
SII_PM_VARTICAL_8_HORIZONTAL_4	Height × 8 and width × 4
SII_PM_VARTICAL_8_HORIZONTAL_6	Height × 8 and width × 6
SII_PM_VARTICAL_8_HORIZONTAL_8	Height × 8 and width × 8

⑨ Alignment (`PrintAlignment`)

Constants of enumerated type used for alignment are shown in the following table.
Alignment cannot be added to the text data before inserting a new line feed.

Constant Name	Description
<code>SII_PM_ALIGNMENT_LEFT</code>	Aligned left
<code>SII_PM_ALIGNMENT_CENTER</code>	Centered
<code>SII_PM_ALIGNMENT_RIGHT</code>	Aligned right

⑩ Barcode symbol (`BarcodeSymbol`)

Constants of enumerated type used for barcode symbols are shown in the following table.

Constant Name	Description	Syntax ^{*1}
<code>SII_PM_BARCODE_UPC_A</code>	UPC-A	(a)
<code>SII_PM_BARCODE_UPC_E</code>	UPC-E	(a)
<code>SII_PM_BARCODE_EAN13</code>	EAN13	(a)
<code>SII_PM_BARCODE_JAN13</code>	JAN13	(a)
<code>SII_PM_BARCODE_EAN8</code>	EAN8	(a)
<code>SII_PM_BARCODE_JAN8</code>	JAN8	(a)
<code>SII_PM_BARCODE_CODE39</code>	CODE39	(a), (b)
<code>SII_PM_BARCODE_CODE93</code>	CODE93	(c)
<code>SII_PM_BARCODE_CODE128</code>	CODE128	(c)
<code>SII_PM_BARCODE_ITF</code>	ITF	(a), (b)
<code>SII_PM_BARCODE_CODABAR</code>	CODABAR	(a), (b)
<code>SII_PM_BARCODE_EAN13_ADDON</code>	EAN13 add-on	(a)
<code>SII_PM_BARCODE_JAN13_ADDON</code>	JAN13 add-on	(a)
<code>SII_PM_BARCODE_CUSTOMER_BAR_CODE_JP</code>	Customer Bar Code_JP	(d)
<code>SII_PM_BARCODE_GS1_OMNI_DIRECTIONAL</code>	GS1 Databar Omni-directional	(a)
<code>SII_PM_BARCODE_GS1_TRUNCATED</code>	GS1 Databar Truncated	(a)
<code>SII_PM_BARCODE_GS1_LIMITED</code>	GS1 Databar Limited	(a)
<code>SII_PM_BARCODE_GS1_EXPANDED</code>	GS1 Databar Expanded	(a)

*1: See `printBarcode` or `printPageModeBarcode` for details of syntax.

⑪ Module size (ModuleSize)

Constants of enumerated type used for width, nominal fine element width, and module size of barcode are shown in the following table.

Constant Name	Description	Method to Use
SII_PM_BARCODE_MODULE_WIDTH_2	Fine element 2 dots Module width 0.250 mm	<ul style="list-style-type: none"> ● printBarcode ● printPageModeBarcode
SII_PM_BARCODE_MODULE_WIDTH_3	Fine element 3 dots Module width 0.375 mm	
SII_PM_BARCODE_MODULE_WIDTH_4	Fine element 4 dots Module width 0.500 mm	
SII_PM_BARCODE_MODULE_WIDTH_5	Fine element 5 dots Module width 0.625 mm	
SII_PM_BARCODE_MODULE_WIDTH_6	Fine element 6 dots Module width 0.750 mm	
SII_PM_CUSTOMERBARCODEJP_MODULE_4	Customer Bar Code_JP size 4 points*1	
SII_PM_CUSTOMERBARCODEJP_MODULE_5	Customer Bar Code_JP size 5 points*1	
SII_PM_CUSTOMERBARCODEJP_MODULE_6	Customer Bar Code_JP size 6 points*1	
SII_PM_CUSTOMERBARCODEJP_MODULE_7	Customer Bar Code_JP size 7 points*1	
SII_PM_CUSTOMERBARCODEJP_MODULE_8	Customer Bar Code_JP size 8 points*1	
SII_PM_CUSTOMERBARCODEJP_MODULE_9	Customer Bar Code_JP size 9 points*1	
SII_PM_CUSTOMERBARCODEJP_MODULE_10	Customer Bar Code_JP size 10 points*1	

*1: The structure of the bar according to the points of the Customer Bar Code_JP is as follows.

Customer Bar Code_JP Size	Structure (mm)				
	Long Bar	Timing Bar	Bar Pitch	Bar Width	Bar Space
SII_PM_CUSTOMERBARCODEJP_MODULE_4	1.500 (12 dots)	0.500 (4 dots)	0.500 (4 dots)	0.250 (2 dots)	0.250 (2 dots)
SII_PM_CUSTOMERBARCODEJP_MODULE_5	1.875 (15 dots)	0.625 (5 dots)	0.625 (5 dots)	0.375 (3 dots)	0.250 (2 dots)
SII_PM_CUSTOMERBARCODEJP_MODULE_6	2.250 (18 dots)	0.750 (6 dots)	0.750 (6 dots)	0.375 (3 dots)	0.375 (3 dots)
SII_PM_CUSTOMERBARCODEJP_MODULE_7	2.625 (21 dots)	0.875 (7 dots)	0.875 (7 dots)	0.500 (4 dots)	0.375 (3 dots)
SII_PM_CUSTOMERBARCODEJP_MODULE_8	3.000 (24 dots)	1.000 (8 dots)	1.000 (8 dots)	0.500 (4 dots)	0.500 (4 dots)
SII_PM_CUSTOMERBARCODEJP_MODULE_9	3.375 (27 dots)	1.125 (9 dots)	1.125 (9 dots)	0.625 (5 dots)	0.500 (4 dots)
SII_PM_CUSTOMERBARCODEJP_MODULE_10	3.750 (30 dots)	1.250 (10 dots)	1.250 (10 dots)	0.625 (5 dots)	0.625 (5 dots)

Constant Name	Description	Method to Use
SII_PM_PDF417_MODULE_WIDTH_2	Nominal fine element width 2 dots	<ul style="list-style-type: none"> ● <code>printPDF417</code> ● <code>printPageModePDF417</code>
SII_PM_PDF417_MODULE_WIDTH_3	Nominal fine element width 3 dots	
SII_PM_PDF417_MODULE_WIDTH_4	Nominal fine element width 4 dots	
SII_PM_PDF417_MODULE_WIDTH_5	Nominal fine element width 5 dots	
SII_PM_PDF417_MODULE_WIDTH_6	Nominal fine element width 6 dots	
SII_PM_PDF417_MODULE_WIDTH_7	Nominal fine element width 7 dots	
SII_PM_PDF417_MODULE_WIDTH_8	Nominal fine element width 8 dots	
SII_PM_QR_MODULE_SIZE_2	2 dots	<ul style="list-style-type: none"> ● <code>printQRcode</code> ● <code>printPageModeQRcode</code>
SII_PM_QR_MODULE_SIZE_3	3 dots	
SII_PM_QR_MODULE_SIZE_4	4 dots	
SII_PM_QR_MODULE_SIZE_5	5 dots	
SII_PM_QR_MODULE_SIZE_6	6 dots	
SII_PM_QR_MODULE_SIZE_7	7 dots	
SII_PM_QR_MODULE_SIZE_8	8 dots	
SII_PM_QR_MODULE_SIZE_9	9 dots	
SII_PM_QR_MODULE_SIZE_10	10 dots	
SII_PM_QR_MODULE_SIZE_11	11 dots	
SII_PM_QR_MODULE_SIZE_12	12 dots	
SII_PM_QR_MODULE_SIZE_13	13 dots	
SII_PM_QR_MODULE_SIZE_14	14 dots	
SII_PM_QR_MODULE_SIZE_15	15 dots	
SII_PM_QR_MODULE_SIZE_16	16 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_2	2 dots	<ul style="list-style-type: none"> ● <code>printDataMatrix</code> ● <code>printPageModeDataMatrix</code>
SII_PM_DATAMATRIX_MODULE_SIZE_3	3 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_4	4 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_5	5 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_6	6 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_7	7 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_8	8 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_9	9 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_10	10 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_11	11 dots	

Constant Name	Description	Method to Use
SII_PM_DATAMATRIX_MODULE_SIZE_12	12 dots	<ul style="list-style-type: none"> ● <code>printDataMatrix</code> ● <code>printPageModeDataMatrix</code>
SII_PM_DATAMATRIX_MODULE_SIZE_13	13 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_14	14 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_15	15 dots	
SII_PM_DATAMATRIX_MODULE_SIZE_16	16 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_2	2 dots	<ul style="list-style-type: none"> ● <code>printGS1DataBarStacked</code> ● <code>printGS1DataBarStackedOmnidirectional</code> ● <code>printGS1DataBarExpandedStacked</code> ● <code>printPageModeGS1DataBarStackedOmnidirectional</code> ● <code>printPageModeGS1DataBarExpandedStacked</code>
SII_PM_GS1DATABAR_MODULE_SIZE_3	3 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_4	4 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_5	5 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_6	6 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_7	7 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_8	8 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_9	9 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_10	10 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_11	11 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_12	12 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_13	13 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_14	14 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_15	15 dots	
SII_PM_GS1DATABAR_MODULE_SIZE_16	16 dots	
SII_PM_AZTECCODE_MODULE_SIZE_2	2 dots	<ul style="list-style-type: none"> ● <code>printAztecCode</code> ● <code>printPageModeAztecCode</code>
SII_PM_AZTECCODE_MODULE_SIZE_3	3 dots	
SII_PM_AZTECCODE_MODULE_SIZE_4	4 dots	
SII_PM_AZTECCODE_MODULE_SIZE_5	5 dots	
SII_PM_AZTECCODE_MODULE_SIZE_6	6 dots	
SII_PM_AZTECCODE_MODULE_SIZE_7	7 dots	
SII_PM_AZTECCODE_MODULE_SIZE_8	8 dots	
SII_PM_AZTECCODE_MODULE_SIZE_9	9 dots	
SII_PM_AZTECCODE_MODULE_SIZE_10	10 dots	
SII_PM_AZTECCODE_MODULE_SIZE_11	11 dots	
SII_PM_AZTECCODE_MODULE_SIZE_12	12 dots	
SII_PM_AZTECCODE_MODULE_SIZE_13	13 dots	
SII_PM_AZTECCODE_MODULE_SIZE_14	14 dots	
SII_PM_AZTECCODE_MODULE_SIZE_15	15 dots	
SII_PM_AZTECCODE_MODULE_SIZE_16	16 dots	

⑫ HRI character print position (`HriPosition`)

Constants of enumerated type used for HRI character print position are shown in the following table.

Constant Name	Description
<code>SII_PM_HRI_NONE</code>	Not printed
<code>SII_PM_HRI_POSITION_ABOVE</code>	Above barcode
<code>SII_PM_HRI_POSITION_BELOW</code>	Below barcode
<code>SII_PM_HRI_POSITION_ABOVE_BELOW</code>	Above and below barcode (both)

⑬ N:W ratio (`NwRatio`)

Constants of enumerated type used for N:W ratio are shown in the following table.

Constant Name	Description
<code>SII_PM_NWRATIO_1TO2</code>	1:2
<code>SII_PM_NWRATIO_1TO2_5</code>	1:2.5
<code>SII_PM_NWRATIO_1TO3</code>	1:3

⑭ Error correction level (`ErrorCorrection`)

Constants of enumerated type used for error correction level are shown in the following table.

Constant Name	Description	Method to Use
<code>SII_PM_PDF417_ERROR_CORRECTION_0</code>	Error correction level 0	<ul style="list-style-type: none"> ● <code>printPDF417</code> ● <code>printPageModePDF417</code>
<code>SII_PM_PDF417_ERROR_CORRECTION_1</code>	Error correction level 1	
<code>SII_PM_PDF417_ERROR_CORRECTION_2</code>	Error correction level 2	
<code>SII_PM_PDF417_ERROR_CORRECTION_3</code>	Error correction level 3	
<code>SII_PM_PDF417_ERROR_CORRECTION_4</code>	Error correction level 4	
<code>SII_PM_PDF417_ERROR_CORRECTION_5</code>	Error correction level 5	
<code>SII_PM_PDF417_ERROR_CORRECTION_6</code>	Error correction level 6	
<code>SII_PM_PDF417_ERROR_CORRECTION_7</code>	Error correction level 7	
<code>SII_PM_PDF417_ERROR_CORRECTION_8</code>	Error correction level 8	
<code>SII_PM_QR_ERROR_CORRECTION_L</code>	Error correction level L	<ul style="list-style-type: none"> ● <code>printQRcode</code> ● <code>printPageModeQRcode</code>
<code>SII_PM_QR_ERROR_CORRECTION_M</code>	Error correction level M	
<code>SII_PM_QR_ERROR_CORRECTION_H</code>	Error correction level H	
<code>SII_PM_QR_ERROR_CORRECTION_Q</code>	Error correction level Q	

⑮ PDF417 symbol (Pdf417Symbol)

Constants of enumerated type used for PDF417 symbols are shown in the following table.

Constant Name	Description
SII_PM_PDF417_STANDARD	PDF417
SII_PM_PDF417_COMPACT	Compact PDF417

⑯ QR Code Model (QrModel)

Constants of enumerated type used for QR Code Model are shown in the following table.

Constant Name	Description
SII_PM_QR_MODEL_1	QR Code Model 1
SII_PM_QR_MODEL_2	QR Code Model 2

⑰ Data Matrix module (DataMatrixModule)

Constants of enumerated type used for Data Matrix module are shown in the following table.

Constant Name	Description
SII_PM_DATA_MATRIX_AUTO	Number of modules: Automatic
SII_PM_DATA_MATRIX_10_10	Number of modules: 10 × 10
SII_PM_DATA_MATRIX_12_12	Number of modules: 12 × 12
SII_PM_DATA_MATRIX_14_14	Number of modules: 14 × 14
SII_PM_DATA_MATRIX_16_16	Number of modules: 16 × 16
SII_PM_DATA_MATRIX_18_18	Number of modules: 18 × 18
SII_PM_DATA_MATRIX_20_20	Number of modules: 20 × 20
SII_PM_DATA_MATRIX_22_22	Number of modules: 22 × 22
SII_PM_DATA_MATRIX_24_24	Number of modules: 24 × 24
SII_PM_DATA_MATRIX_26_26	Number of modules: 26 × 26
SII_PM_DATA_MATRIX_32_32	Number of modules: 32 × 32
SII_PM_DATA_MATRIX_36_36	Number of modules: 36 × 36
SII_PM_DATA_MATRIX_40_40	Number of modules: 40 × 40
SII_PM_DATA_MATRIX_44_44	Number of modules: 44 × 44
SII_PM_DATA_MATRIX_48_48	Number of modules: 48 × 48
SII_PM_DATA_MATRIX_52_52	Number of modules: 52 × 52
SII_PM_DATA_MATRIX_64_64	Number of modules: 64 × 64
SII_PM_DATA_MATRIX_72_72	Number of modules: 72 × 72

Constant Name	Description
SII_PM_DATA_MATRIX_80_80	Number of modules: 80 × 80
SII_PM_DATA_MATRIX_88_88	Number of modules: 88 × 88
SII_PM_DATA_MATRIX_96_96	Number of modules: 96 × 96
SII_PM_DATA_MATRIX_104_104	Number of modules: 104 × 104
SII_PM_DATA_MATRIX_120_120	Number of modules: 120 × 120
SII_PM_DATA_MATRIX_132_132	Number of modules: 132 × 132
SII_PM_DATA_MATRIX_144_144	Number of modules: 144 × 144
SII_PM_DATA_MATRIX_8_18	Number of modules: 8 × 18
SII_PM_DATA_MATRIX_8_32	Number of modules: 8 × 32
SII_PM_DATA_MATRIX_12_26	Number of modules: 12 × 26
SII_PM_DATA_MATRIX_12_36	Number of modules: 12 × 36
SII_PM_DATA_MATRIX_16_36	Number of modules: 16 × 36
SII_PM_DATA_MATRIX_16_48	Number of modules: 16 × 48

⑱ MaxiCode Mode (*MaxiCodeMode*)

Constants of enumerated type used for MaxiCode Mode are shown in the following table.

Constant Name	Description
SII_PM_MAXI_CODE_2	Mode2
SII_PM_MAXI_CODE_3	Mode3
SII_PM_MAXI_CODE_4	Mode4
SII_PM_MAXI_CODE_5	Mode5

⑲ Aztec symbol (*AztecSymbol*)

Constants of enumerated type used for Aztec symbol are shown in the following table.

Constant Name	Description
SII_PM_AZTECCODE_FULLRANGE	Full-Range mode
SII_PM_AZTECCODE_COMPACT	Compact mode

⑩ Cutting method (CuttingMethod)

Constants of enumerated type used for cutting method are shown in the following table.

Constant Name	Description
SII_PM_CUT_FULL	No cut Paper feed operation to the paper cut position
SII_PM_CUT_PARTIAL	
SII_PM_CUT_NONE ^{*1}	No cut

^{*1}: Supported only by `printPageMode`.

⑪ Form feed position (FeedPosition)


Constants of enumerated type used for the form feed position of marked paper or label are shown in the following table.

Constant Name	Description
SII_PM_FEED_CUTTER	After detecting the mark or gap, feeds the paper to the cutting position. The paper feed length is the length of the memory switches MS 21 to 22 (Mark Detection Cut Position Correction) of the printer. The default of the paper feed is 122 dots (15.2 mm).
SII_PM_FEED_NEXT_TOF	After detecting the next mark or next gap, feeds the paper to the printing position. The paper feed length is the length of the memory switches MS 26 to 27 (Mark Detection Print Position Correction) of the printer. The default of the paper feed is 122 dots (15.2 mm).

Reference See "MP-B21L SERIES Thermal Printer USER'S GUIDE" for the details of the memory switch of the printer.
The memory switch of the printer can be changed in the iOS app "SII Printer Utility" on the App Store.

The relation between the sensor position and the defaults of memory switches MS 21 to 22 (Mark Detection Cut Position Correction) of the printer and memory switches MS 26 to 27 (Mark Detection Print Position Correction) of the printer are shown in the following figure.


When the memory switch of the printer is set to the default, the cutting position of **SII_PM_FEED_CUTTER** and the next printing position of **SII_PM_FEED_NEXT_TOF** is the same paper feed length.

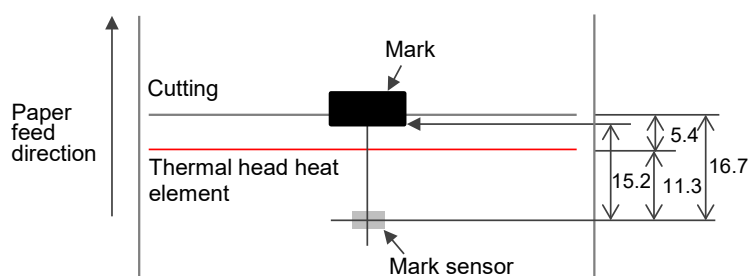

Unit : mm

To set to shorter the next print position for the mark to save paper, set the values of the memory switches MS 26 to 27 (Mark Detection Print Position Correction) of the printer shorter.

As an example, the relation of the sensor position when the values of the memory switches MS 26 to 27 of the printer are set to 103 dots (12.8 mm) and paper form feed is performed with specifying **SII_PM_FEED_NEXT_TOF** is shown in the following figure.

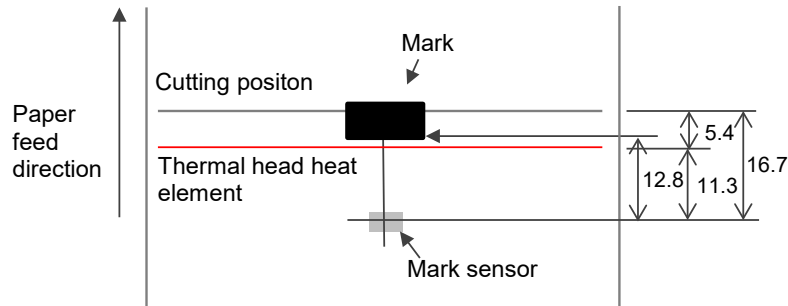

Unit : mm

Note When using label, set the values of the memory switches MS 26 to 27 (Mark Detection Print Position Correction) of the printer so that the print position can be inside the label.

② Image rotation direction (Rotate)

Constants of enumerated type used for image rotation direction are shown in the following table.

Constant Name	Description
SII_PM_ROTATE_NONE	No rotation
SII_PM_ROTATE_180	Rotate 180 degrees

③ Image scaling (ImageScale)


Constants of enumerated type used for image scaling are shown in the following table.

Constant Name	Description
SII_PM_IMAGE_SCALE_NONE	No scaling
SII_PM_IMAGE_SCALE_WIDTH_FIT	Scale to fit print width

②④ Print direction (*Direction*)

Constants of enumerated type used for print direction in page mode are shown in the following table.

Constant Name	Description
SII_PM_DIRECTION_LEFT_TO_RIGHT	Starting point: Upper left (A on the figure), Print direction: Left to Right
SII_PM_DIRECTION_BOTTOM_TO_TOP	Starting point: Left below (B on the figure), Print direction: Below to Upper
SII_PM_DIRECTION_RIGHT_TO_LEFT	Starting point: Right below (C on the figure), Print direction: Right to Left
SII_PM_DIRECTION_TOP_TO_BOTTOM	Starting point: Upper right (D on the figure), Print direction: Upper to Below

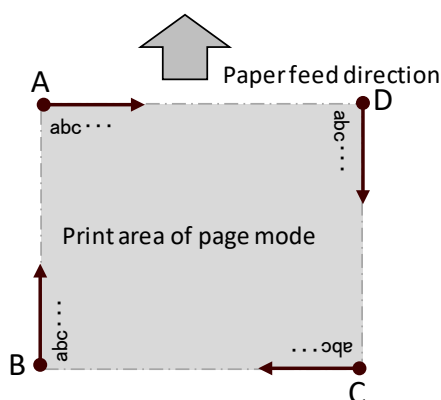

②⑤ Line style (*LineStyle*)

Constants of enumerated type used for line style in page mode are shown in the following table.

Constant Name	Description
SII_PM_LINestyle_THIN	Thin solid line (2 dots)
SII_PM_LINestyle_MEDIUM	Medium solid line (4 dots)
SII_PM_LINestyle_THICK	Thick solid line (8 dots)

(5) Method Details

① Common method to standard mode and page mode

The following methods are valid in standard mode and page mode. Standard mode is set immediately after **connect** is executed.

init		Instance
Syntax	- (id) init ;	
Description	This method initializes the instance of SIIPrinterManager class.	
Return value	When succeeded, the initialized instance of SIIPrinterManager class is returned. When failed, nil is returned.	
Example of use	<pre>SIIPrinterManager *printerManager = [[SIIPrinterManager alloc] init];</pre>	
connect		Start communicating with printer

Starts communicating with the printer.

Syntax	- (void) connect : (NSInteger)printerModel address: (NSString) address portType: (NSInteger) portType;	
Parameter	printerModel	Printer model constant. See "4.4.1(3)① Printer model" for available constants.
	address	Depends on the setting of portType. ·For SII_PM_PRINTER_PORT_TYPE_BLUETOOTH : Specify the Bluetooth device name (Bluetooth Accessory). Example: "MP-B21L" ·For SII_PM_PRINTER_PORT_TYPE_TCP : Specify the IP address of the printer. Example: "192.168.0.190"
	portType	Port type See "4.4.1(3)② Port type" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	
Description	Call this method before using other SIIPrinterManager class methods. In order to make this library work properly, this method may change the printer settings when connecting.	
	For Bluetooth connection: Communication with a printer paired with iOS device starts through Bluetooth connection. Connection is made to the paired Bluetooth device (Bluetooth accessory) specified by address.	
	For TCP/IP connection: Communication with a printer connected to the same network as the iOS device starts through TCP/IP connection. Connection is made to the IP address specified by address. TCP port 9100 and 26100 are used for communication.	

- **Creating/discarding of socket in TCP/IP connection of the library**

After **connect**, the library retains the created socket until **disconnect**. And connecting to the same printer from other applications is not possible until **disconnect**.

Based on the completion of data transmission to the printer, the socket is once discarded after elapsing the socket keeping time set by **socketKeepingTime**. Then the new socket is created immediately and used for the next connection. If the printer is receiving a connection request from another host on the same network at the time of discarding the socket, the printer establishes communication with that host, so the reconnection may fail.

Note A concurrent connection from multiple apps to one printer is not supported.

disconnect Stop communicating with printer

Stops communicating with the printer.

Syntax - (void) **disconnect**;

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "**4.4.3 SIIPrinterException Class**" for details on the error.

Note It is recommended to get execution response by **SII_PM_PRINTER_RESPONSE_REQUEST** of **getPrinterResponse** before executing this method. If not, the following problems may occur:

- The communication is disconnected before the print data sending from iOS device to the printer is completed, and a part of the data may be lost.
- In Bluetooth connection, when either **disconnect** or **connect** is executed while the printer is in the buffer full state^{*1}, the communication between iOS device and the printer may be disconnected.

^{*1}: The state of buffer full means that the buffer of the printer is filled with print data. The size to be in buffer full state is approximately 4K bytes.

If you do not execute **getPrinterResponse** in your program, please fully evaluate your program to confirm no problems arise.

openDrawer Open cash drawer

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax - (void) **openDrawer**: (DrawerNum) drawerNum
onOffTime: (PulseWidth) onOffTime;

buzzer Sound buzzer

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax - (void) **buzzer**: (NSInteger) onTime
offTime: (NSInteger) offTime;

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

```
Syntax      - (void) externalBuzzer: (BuzzerPattern)buzzerPattern
              buzzerCount: (NSInteger)buzzerCount;
```

Gets the latest printer status.

Syntax - (void) **getStatus**: (NSInteger[]) buf;

Parameter	buf	Status retrieved from the printer
-----------	-----	-----------------------------------

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "**4.4.3 SIIPrinterException Class**" for details on the error.

Description	The status retrieved from the printer is stored in an NSInteger array.
-------------	--

The printer status is shown below.

When the connection failed, the printer status is shown in 0x80000000.

Bit	Function	Value	
		0	1
0	Voltage error	No error	Error
1	Hardware error	No error	Error
2	Head temperature error	No error	Error
3	Reserved	Fixed	-
4	Out-of-paper error	No error	Error
5	Reserved	Fixed	-
6	Paper jam error while detecting mark or gap	No error	Error
7	Cover open error	No error	Error
8	FEED Switch status	OFF	ON
9	Reserved	Fixed	-
10	Paper feed status	Stop	Operating
11	Return-waiting status	Not waiting	Waiting
12	Reserved	Fixed	-
13	Reserved	-	Fixed
14	Reserved	-	Fixed
15	Reserved	-	Fixed
16	FLASH memory rewriting	Not rewriting	Rewriting
17	Reserved	-	Fixed
18	Reserved	-	Fixed
19	Reserved	-	Fixed

Bit	Function	Value	
		0	1
20 to 22	Battery remaining capacity level	000: No battery 001: Low (Battery remaining capacity: approx. 10%) 011: Middle (Battery remaining capacity: approx. 40%) 111: Full (Battery remaining capacity: approx. 80%)	
23	Battery error	No error	Error
24 to 31	Reserved	-	Fixed

abort

Abort waiting state of printer

Aborts the waiting state of the printer.

Syntax - (void) **abort**;

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "**4.4.3 SIIPrinterException Class**" for details on the error.

Description When sending of image file by **sendDataFile** is interrupted, the printer does not accept other processes until the specified image file is received completely. (Methods and transmission data are misinterpreted and recognized as a part of the image file.) To solve this situation, use this method to abort the waiting state of the printer.
Note that when executing this method, a part of unprinted image file may be printed.

registerLogo

Register logo

Registers image file to the NV graphics memory in the printer as a logo.

The method of syntax (a), dithering can be specified.

The method of syntax (b), dithering is fixed to be disabled.

Syntax (a) - (void) **registerLogo**: (NSString *)fileName
logoId: (NSString *)logoId
dithering: (Dithering)dithering;

(b) - (void) **registerLogo**: (NSString *)fileName
logoId: (NSString *)logoId;

Parameter **fileName** File path of image file to be registered as a logo
Supported image file extensions are .bmp, .jpg, .jpeg, and .png. Colored image is converted to monochrome image by binarization and registered.

logoId ID of the logo to be registered (key code)
Specify the ID of the logo to be registered as a two-character string.
Valid characters are ASCII character codes from 20h (space) to 7Eh (tilde) such as alphanumeric ('0' to '9', 'A' to 'Z', 'a' to 'z').

dithering Dithering
See "4.4.1(4)① Dithering (Dithering)" for available constants.

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "**4.4.3 SIIPrinterException Class**" for details on the error.

unregisterLogo	Delete registered logo
-----------------------	-------------------------------

Deletes the registered logo.

Syntax - (void) **unregisterLogo:** (NSString *)logoId;

Parameter logoId ID of the logo to be deleted (key code)
Specify the ID of the registered logo as a character string.

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "**4.4.3 SIIPrinterException Class**" for details on the error.

registerStyleSheet	Register style sheet
---------------------------	-----------------------------

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax - (void) **registerSytleSheet:** (NSString *)fileName
cssId: (NSInteger)cssId;

unregisterStyleSheet	Delete registered style sheet
-----------------------------	--------------------------------------

This method is not supported. When executing this method, **SIIPrinterException** is thrown.

Syntax - (void) **unregisterStyleSheet:** (NSInteger)cssId;

resetPrinter	Reset printer
---------------------	----------------------

Performs a hardware reset of the printer.

Syntax - (void) **resetPrinter;**

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "**4.4.3 SIIPrinterException Class**" for details on the error.

Description For Bluetooth connection:
The printer hardware reset is performed by the printer command "Printer Reset". When using this method, enable iOS Auto Connection in the iOS app "SII Printer Utility" on the App Store. When it is disabled, this method fails to reconnect after reset and **SIIPrinterException** is thrown.
This method takes about 10 seconds to complete reconnection with the printer after performing the reset. Use this method after setting a sufficient receive timeout period.

For TCP/IP connection:
The reset is performed to the connected printer by our proprietary command (reset request) to TCP port 26100.

The connection with the printer is retained even after this method is executed.

Gets response data from the printer.

Syntax - (void) **getPrinterResponse:** (NSInteger) responseId
 param: (NSObject *) param
 response: (void *) response;

Parameter responseId Response type constant
 See "4.4.1(3)③ Response type" for available constants.

 param Command parameter
 The value to be specified varies with the response type constant.
 See the following table for description of the value to be specified.

 response Buffer for storing the retrieved response data
 The buffer type varies with the response type constant.
 See the following table for the buffer type.

Response Type Constant	
Parameter	Description
SII_PM_PRINTER_RESPONSE_REQUEST (Execution response request)	
param	Specify 0 to 15 (00h to 0Fh) in NSData type.
response	Specify an NSInteger array of length 1. When the response is retrieved successfully, the response code of the execution response request is stored with 128 to 143 (80h to 8Fh).
SII_PM_PRINTER_RESPONSE_USER_AREA (Send remaining capacity of user area)	
param	Specify nil.
response	Specify an NSInteger array of length 1. When the response is retrieved successfully, the remaining capacity of the user area is stored as a numerical value in bytes.
SII_PM_PRINTER_RESPONSE_ARRANGE_USER_AREA (Send remaining capacity of user area after defragment)	
param	Specify nil.
response	Specify an NSInteger array of length 1. When the response is retrieved successfully, the remaining capacity of the user area after defragment is stored as a numerical value in bytes.
SII_PM_PRINTER_RESPONSE_NV_GRAPHICS (Send NV graphics memory capacity)	
param	Specify nil.
response	Specify an NSInteger array of length 1. When the response is retrieved successfully, the NV graphics memory capacity is stored as a numerical value in bytes.
SII_PM_PRINTER_RESPONSE_KEY_CODE (Send key code list of defined NV graphics)	
param	Specify nil.
response	Specify an NSMutableArray array. When the response is retrieved successfully, the key code of NV graphics is stored as a string array.

Searches for SII printer connecting to the same network.

Syntax	- (void) startDiscoveryPrinter: (NSInteger) retryCount timeout: (NSInteger) timeout completion: (SIIDiscoveryPrinterCompletion) completion;	
Parameter	retryCount	<p>Retry count (times)</p> <p>Sends the local broadcast packet the number of times set by <code>retryCount</code>.</p> <p>The valid range is 1 to 5.</p> <p>When the value is specified less than 1, the number is set to 1.</p> <p>When the value is specified more than 5, the number is set to 5.</p>
	timeout	<p>Search timeout period (millisecond: ms)</p> <p>Sets the timeout period per search. Each time the local broadcast packet is sent, this method waits for a response from the printer until the period specified by <code>timeout</code> elapses.</p> <p>The valid range is 3000 to 60000.</p> <p>When the value is specified less than 3000, the period is set to 3000 ms.</p> <p>When the value is specified more than 60000, the period is set to 60000 ms.</p>
	completion	<p>Printer search completion event</p> <p>Notifies the block set by <code>completion</code> as an event.</p>
Error	SIIPrinterException is thrown when an error occurs while this method is being called.	
Description	<p>This method searches for SII printers. The printer information of the found printer can be retrieved by getFoundPrinter.</p> <p>The definition of SIIDiscoveryPrinterCompletion is as follows:</p> <pre>typedef void(^SIIDiscoveryPrinterCompletion)(NSArray *printerList);</pre>	

Cancels **startDiscoveryPrinter** (TCP/IP) under execution.

Syntax	- (void) cancelDiscoveryPrinter;	
Description	<p>This method is available only when <code>portType</code> of connect is SII_PM_PRINTER_PORT_TYPE_TCP.</p> <p>The cancellation of the search is notified as an event to the block set to <code>completion</code> of startDiscoveryPrinter.</p>	

Returns the printer information found by **startDiscoveryPrinter** (TCP/IP) in NSArray type.

Syntax	- (NSArray *) getFoundPrinter ;
Description	This method is available only when <code>portType</code> of connect is SII_PM_PRINTER_PORT_TYPE_TCP . See " 4.4.2 SIIPrinterInfo Class " for details of the printer information.
Return value	NSArray type printer information

Gets the SDK version as a character string.

Syntax	- (NSString *) getVersion ;
Return value	SDK version character string (Example: When the SDK version is Ver.1.0.0, the return value is "1.0.0")
Description	This method can be executed regardless of whether isConnect is YES or NO.

Starts or ends batch processing.

Syntax	- (void) controlTransaction : (TransactionFunction) control;
Parameter	control Batch processing selection See "4.4.1(4)② Batch processing selection (TransactionFunction)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.
Description	The procedure of batch processing is as follows: (1) Start batch processing. Specify SII_PM_TRANSACTION_START . (2) Execute the method. In the case of the batch processing target method, buffering of transmission data is started. The transmission data of the batch processing target method executed during buffering is buffered in the transmission buffer without being sent to the printer. The maximum size of transmission data to be buffered is system dependent. If the buffered transmission data exceeds the maximum size, the batch processing target method at the time of exceeding becomes an error. If an error occurs, the transmission data up to the error is retained. As for the retained transmission data, finish the batch processing in step (3). In the case of a method other than the batch processing target method, transmission data is immediately executed without being buffered.

(3) Finish batch processing.

When **SII_PM_TRANSACTION_PRINT** is specified, the buffered transmission data is sent to the printer. The buffered transmission data is retained even after sent to the printer.

The retained transmission data is discarded by any of the following:

- Specify **SII_PM_TRANSACTION_CLEAR**
- Specify **SII_PM_TRANSACTION_START**
- Execute **disconnect**

The batch processing target methods are as follows:

- **sendText**
- **sendTextEx**
- **printBarcode**
- **printPDF417**
- **printQRcode**
- **printDataMatrix**
- **printMaxiCode**
- **printGS1DataBarStacked**
- **printGS1DataBarStackedOmnidirectional**
- **printGS1DataBarExpandedStacked**
- **printAztecCode**
- **cutPaper**
- **feedPosition**
- **openDrawer**
- **buzzer**
- **sendBinary**
- **sendDataFile**
- **printPDF**
- **printLogo**^{*1}
- **printSmartLabelImageData**
- **enterPageMode**
- **exitPageMode**
- **setPageModeArea**
- **setPageModeDirection**
- **setPageModeLineSpacing**
- **printPageMode**
- **printPageModeText**
- **printPageModeTextEx**
- **printPageModeBarcode**
- **printPageModePDF417**
- **printPageModeQRcode**
- **printPageModeDataMatrix**
- **printPageModeMaxiCode**
- **printPageModeGS1DataBarStacked**
- **printPageModeGS1DataBarStackedOmnidirectional**
- **printPageModeGS1DataBarExpandedStacked**
- **printPageModeAztecCode**
- **sendPageModeBinary**
- **printPageModeImageFile**
- **printPageModeRectangle**
- **printPageModeLine**
- **printPageModeLogo**^{*1}

*1: The method under batch processing does not notify the error even when the registered logo does not exist.

② Dedicated method for standard mode

The following methods are valid in standard mode. **SIIPrinterException** is thrown when the dedicated method for standard mode are executed in page mode.

sendText

Send text data

Sends text data.

Syntax	- (void) sendText: (NSString *)text;
Parameter	text Text data to send to the printer Data size that can be specified at one time is 16 KB (16384 bytes).
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.
Description	This method encodes the specified text data to printable text data based on internationalCharacter and codePage , and sends it to the printer. This method does not add a line feed code at the end of the text data. In order to print to the end, add a line feed code to the end of the text data.

sendTextEx

Send format specified text data

Sends format specified text data to the printer.

The method of syntax (a) can specify bold print, underline, reverse print, font, character scale and alignment to text data.

The method of syntax (b) can specify bold print, underline, font and character scale to text data.

The method of syntax (c) can specify bold print, underline, inversion print, reverse print, font, character scale and alignment to text data.

Syntax	(a) - (void) sendTextEx: (NSString *)text bold: (CharacterBold)bold underline: (CharacterUnderline)underline reverse: (CharacterReverse)reverse font: (CharacterFont)font scale: (CharacterScale)scale alignment: (PrintAlignment)alignment; (b) - (void) sendTextEx: (NSString *)text bold: (CharacterBold)bold underline: (CharacterUnderline)underline font: (CharacterFont)font scale: (CharacterScale)scale; (c) - (void) sendTextEx: (NSString *)text bold: (CharacterBold)bold underline: (CharacterUnderline)underline reverse: (CharacterReverse)reverse inversion: (CharacterInversion)inversion font: (CharacterFont)font scale: (CharacterScale)scale alignment: (PrintAlignment)alignment;
Parameter	text Text data to send to the printer Data size that can be specified at 1 time is 16 KB (16384 bytes).

<code>bold</code>	Bold print See "4.4.1(4)③ Bold print (<code>CharacterBold</code>)" for available constants.
<code>underline</code>	Underline See "4.4.1(4)④ Underline (<code>CharacterUnderline</code>)" for available constants.
<code>reverse</code>	Reverse print See "4.4.1(4)⑤ Reverse print (<code>CharacterReverse</code>)" for available constants.
<code>inversion</code>	Inversion print See "4.4.1(4)⑥ Inversion print (<code>CharacterInversion</code>)" for available constants.
<code>font</code>	Character font See "4.4.1(4)⑦ Character font (<code>CharacterFont</code>)" for available constants.
<code>scale</code>	Character scale See "4.4.1(4)⑧ Character scale (<code>CharacterScale</code>)" for available constants.
<code>alignment</code>	Alignment See "4.4.1(4)⑨ Alignment (<code>PrintAlignment</code>)" for available constants.
Error	<code>SIIPrinterException</code> is thrown when an error occurs while this method is being called. See " 4.4.3 <code>SIIPrinterException</code> Class " for details on the error.
Description	This method encodes the formatted text data to printable text data based on <code>internationalCharacter</code> and <code>codePage</code> , and sends it to the printer. This method does not add a line feed code at the end of the text data. In order to print to the end, add a line feed code to the end of the text data.

`printBarcode`

Print barcode

Prints the barcode.

The method of syntax (a) specifies the barcode data by character string.

The method of syntax (b) specifies the barcode data by character string, and specifies the alignment and N:W ratio of the barcode.

The method of syntax (c) specifies the barcode data by byte array and specifies the alignment of the barcode.

The method of syntax (d) specifies the Customer Bar Code_JP by character string and specifies the alignment of the Customer Bar Code_JP.

Syntax	(a) - (void) <code>printBarcode:</code> (<code>BarcodeSymbol</code>)barcodeSymbol <code>text:</code> (<code>NSString *</code>)text <code>moduleSize:</code> (<code>ModuleSize</code>)moduleSize <code>moduleHeight:</code> (<code>NSInteger</code>)moduleHeight <code>hriPosition:</code> (<code>HriPosition</code>)hriPosition <code>hriFont:</code> (<code>CharacterFont</code>)hriFont <code>alignment:</code> (<code>PrintAlignment</code>)alignment;
--------	--

```
(b) - (void) printBarcode: (BarcodeSymbol)barcodeSymbol
      text: (NSString *)text
      moduleSize: (ModuleSize)moduleSize
      moduleHeight: (NSInteger)moduleHeight
      hriPosition: (HriPosition)hriPosition
      hriFont: (CharacterFont)hriFont
      alignment: (PrintAlignment)alignment
      nwRatio: (NwRatio)nwRatio;
```

```
(c) - (void) printBarcode: (BarcodeSymbol)barcodeSymbol
      data: (NSData*)data
      moduleSize: (ModuleSize)moduleSize
      moduleHeight: (NSInteger)moduleHeight
      hriPosition: (HriPosition)hriPosition
      hriFont: (CharacterFont)hriFont
      alignment: (PrintAlignment)alignment;
```

```
(d) - (void) printBarcode: (BarcodeSymbol)barcodeSymbol
      text: (NSString *)text
      moduleSize: (ModuleSize)moduleSize
      alignment: (PrintAlignment)alignment;
```

Parameter barcodeSymbol Barcode symbol
See "4.4.1(4) ⑩ Barcode symbol (BarcodeSymbol)" for available constants and corresponding syntax.

text (data) Barcode data to send to the printer
The input conditions for barcode are as follows.

Barcode	Number of Data	Inputtable Data Character String (Data)	Remarks
UPC-A	11 to 12 characters	'0' to '9'	
UPC-E	11 to 12 characters	'0' to '9'	
EAN13 JAN13	12 to 13 characters	'0' to '9'	
EAN8 JAN8	7 to 8 characters	'0' to '9'	
CODE39	1 to 150 characters	'0' to '9' 'A' to 'Z' ' ', '\$', '%', '+', '-', '.', '/'	Start code and stop code ('*') are automatically added.
CODE93	1 to 150 bytes	(0x00 to 0x2E)	Input data with 0x2F or more at the end.
CODE128	2 to 150 bytes	(0x00 to 0x66)	When inputting the start code (0x67 to 0x69) of the CODE128 code set. Input data with 0x67 or more at the end.
		(0x00 to 0x7F)	When starting with a CODE128 special code start code ("A", "B", "C").
ITF	2 to 150 characters (However, an even number)	'0' to '9'	

Barcode	Number of Data	Inputtable Data Character String (Data)	Remarks
CODABAR	1 to 150 characters	'0' to '9' '\$', '+', '-', '.', '/', ':'	It is needed to specify one of 'A' to 'D' at the beginning and end.
EAN13 add-on JAN13 add-on	Add-on 2: 14 to 15 characters Add-on 5: 17 to 18 characters	'0' to '9'	
Customer Bar Code_JP	7 to 20 characters	'0' to '9' 'A' to 'Z' '.'	Start code, check digit, and stop code are automatically added. It is needed to specify one of '0' to '9' at the first 7 characters. A' to 'Z' is calculated as 2 characters.
GS1 Databar Omnidirectional	13 characters	'0' to '9'	Check digit is automatically added.
GS1 Databar Truncated	13 characters	'0' to '9'	Check digit is automatically added.
GS1 Databar Limited	13 characters	'0' to '9'	Check digit is automatically added.
GS1 Databar Expanded	2 to 255 characters	' ' to '"' '%' to '?' 'A' to 'Z' '.' '_' 'a' to 'z' '{'	

`moduleSize`

Barcode width

See "4.4.1(4) ⑪ Module size (`ModuleSize`)" for available constants.

`moduleHeight`

Barcode height (dot)

- When `barcodeSymbol` is below, the valid range is 1 to 255.

SII_PM_BARCODE_UPC_A

SII_PM_BARCODE_UPC_E

SII_PM_BARCODE_EAN13

SII_PM_BARCODE_JAN13

SII_PM_BARCODE_EAN8

SII_PM_BARCODE_JAN8

SII_PM_BARCODE_CODE39

SII_PM_BARCODE_CODE93

SII_PM_BARCODE_CODE128

SII_PM_BARCODE_ITF

SII_PM_BARCODE_CODABAR

SII_PM_BARCODE_EAN13_ADDON

SII_PM_BARCODE_JAN13_ADDON

- When `barcodeSymbol` is below, the valid range varies depending on `barcodeSymbol` and `moduleSize`.

<code>barcodeSymbol</code>		
	<code>moduleSize</code>	Valid Range
SII_PM_BARCODE_GS1_OMNI_DIRECTIONAL		
	SII_PM_BARCODE_MODULE_WIDTH_2	66 to 255
	SII_PM_BARCODE_MODULE_WIDTH_3	99 to 255
	SII_PM_BARCODE_MODULE_WIDTH_4	132 to 255
	SII_PM_BARCODE_MODULE_WIDTH_5	165 to 255
	SII_PM_BARCODE_MODULE_WIDTH_6	198 to 255
SII_PM_BARCODE_GS1_TRUNCATED		
	SII_PM_BARCODE_MODULE_WIDTH_2	26 to 255
	SII_PM_BARCODE_MODULE_WIDTH_3	39 to 255
	SII_PM_BARCODE_MODULE_WIDTH_4	52 to 255
	SII_PM_BARCODE_MODULE_WIDTH_5	65 to 255
	SII_PM_BARCODE_MODULE_WIDTH_6	78 to 255
SII_PM_BARCODE_GS1_LIMITED		
	SII_PM_BARCODE_MODULE_WIDTH_2	20 to 255
	SII_PM_BARCODE_MODULE_WIDTH_3	30 to 255
	SII_PM_BARCODE_MODULE_WIDTH_4	40 to 255
	SII_PM_BARCODE_MODULE_WIDTH_5	50 to 255
	SII_PM_BARCODE_MODULE_WIDTH_6	60 to 255
SII_PM_BARCODE_GS1_EXPANDED		
	SII_PM_BARCODE_MODULE_WIDTH_2	68 to 255
	SII_PM_BARCODE_MODULE_WIDTH_3	102 to 255
	SII_PM_BARCODE_MODULE_WIDTH_4	136 to 255
	SII_PM_BARCODE_MODULE_WIDTH_5	170 to 255
	SII_PM_BARCODE_MODULE_WIDTH_6	204 to 255

<code>hriPosition</code>	HRI character print position See "4.4.1(4) ⑫ HRI character print position (<code>HriPosition</code>)" for available constants.
<code>hriFont</code>	HRI character font See "4.4.1(4) ⑦ Character font (<code>CharacterFont</code>)" for available constants.
<code>alignment</code>	Alignment See "4.4.1(4) ⑨ Alignment (<code>PrintAlignment</code>)" for available constants.

nwRatio

N:W ratio

See "4.4.1(4) ⑬ N:W ratio (NwRatio)" for available constants.

Depending on the specified nwRatio and moduleSize, the width of the wide element is set as shown in the following table.

moduleSize	nwRatio		
	SII_PM_ NWRATIO_1TO2	SII_PM_ NWRATIO_1TO2_5	SII_PM_ NWRATIO_1TO3
SII_PM_BARCODE_MODULE_WIDTH_2	0.500 mm (4 dots)	0.625 mm (5 dots)	0.750 mm (6 dots)
SII_PM_BARCODE_MODULE_WIDTH_3	0.750 mm (6 dots)	1.000 mm (8 dots)	1.125 mm (9 dots)
SII_PM_BARCODE_MODULE_WIDTH_4	1.000 mm (8 dots)	1.250 mm (10 dots)	1.500 mm (12 dots)
SII_PM_BARCODE_MODULE_WIDTH_5	1.250 mm (10 dots)	1.625 mm (13 dots)	1.875 mm (15 dots)
SII_PM_BARCODE_MODULE_WIDTH_6	1.500 mm (12 dots)	1.875 mm (15 dots)	2.250 mm (18 dots)

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.

See "4.4.3 SIIPrinterException Class" for details on the error.

Note The quiet zone is not secured. Set the quiet zone in accordance with the standard of the barcode symbol.

Reference See "Appendix B Barcode Size List" for details of the barcode size.

printPDF417

Print PDF417

Prints PDF417.

The method of syntax (a) specifies the PDF417 symbol.

The method of syntax (b) is fixed to standard PDF417.

Syntax (a) - (void) **printPDF417**:(NSString *)text
errorCorrection:(ErrorCorrection)errorCorrection
row:(NSInteger)row
column:(NSInteger)column
moduleSize:(ModuleSize)moduleSize
moduleHeight:(NSInteger)moduleHeight
alignment:(PrintAlignment)alignment
pdf417Symbol:(Pdf417Symbol)pdf417Symbol;

(b) - (void) **printPDF417**:(NSString *)text
errorCorrection:(ErrorCorrection)errorCorrection
row:(NSInteger)row
column:(NSInteger)column
moduleSize:(ModuleSize)moduleSize
moduleHeight (NSInteger)moduleHeight
alignment:(PrintAlignment)alignment;

Parameter text Barcode data to send to the printer

errorCorrection Error correction level
See "4.4.1(4) ⑭ Error correction level (ErrorCorrection)" for available constants.

row	Number of rows (row) The valid range is 0, 3 to 90. When 0 is specified, the number of rows is automatically set.
column	Number of columns in data area The valid range is 0 to 30. When 0 is specified, the number of columns in the data area is automatically set.
moduleSize	Nominal fine element width See "4.4.1(4) ⑪ Module size (ModuleSize)" for available constants.
moduleHeight	Module height (dot) The valid range is 2 to 127. When the module height is set smaller, some barcode scanners may not read it. Set 3 or more for normal use.
alignment	Alignment See "4.4.1(4) ⑨ Alignment (PrintAlignment)" for available constants.
pdf417Symbol	PDF417 symbol See "4.4.1(4) ⑮ PDF417 symbol (Pdf417Symbol)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class" for details on the error.
Note	The quiet zone is not secured. Set the quiet zone in accordance with the standard of the barcode symbol.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

printQRcode

Print QR Code

Prints QR Code.

The method of syntax (a) specifies QR Code Model.

The method of syntax (b) is fixed to QR Code Model 2.

Syntax	(a) - (void) printQRcode :(NSString *)text errorCorrection:(ErrorCorrection)errorCorrection moduleSize:(ModuleSize)moduleSize alignment:(PrintAlignment)alignment model:(QrModel)model; (b) - (void) printQRcode :(NSString *)text errorCorrection:(ErrorCorrection)errorCorrection moduleSize:(ModuleSize)moduleSize alignment:(PrintAlignment)alignment;
Parameter	text Barcode data to send to the printer The version is automatically set depending on the number of data bytes set with text in either syntax (a) and (b). errorCorrection Error correction level See "4.4.1(4) ⑭ Error correction level (ErrorCorrection)" for available constants.

<code>moduleSize</code>	Module size See "4.4.1(4) ⑪ Module size (<code>ModuleSize</code>)" for available constants.
<code>alignment</code>	Alignment See "4.4.1(4) ⑨ Alignment (<code>PrintAlignment</code>)" for available constants.
<code>model</code>	QR Code Model See "4.4.1(4) ⑩ QR Code Model (<code>QrModel</code>)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.
Note	The quiet zone is not secured. Set the quiet zone in accordance with the standard of the barcode symbol.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

<code>printDataMatrix</code>	Print Data Matrix
------------------------------	-------------------

Prints Data Matrix.

Syntax	<pre> - (void) printDataMatrix:(NSString *)text dataMatrixModule:(DataMatrixModule) dataMatrixModule moduleSize:(ModuleSize) moduleSize alignment:(PrintAlignment) alignment; </pre>	
Parameter	<code>text</code>	Barcode data to send to the printer
	<code>dataMatrixModule</code>	Number of Data Matrix modules See "4.4.1(4) ⑪ Data Matrix module (<code>DataMatrixModule</code>)" for available constants.
	<code>moduleSize</code>	Module size See "4.4.1(4) ⑪ Module size (<code>ModuleSize</code>)" for available constants.
	<code>alignment</code>	Alignment See "4.4.1(4) ⑨ Alignment (<code>PrintAlignment</code>)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	
Note	The quiet zone is not secured. Set the quiet zone in accordance with the standard of the barcode symbol.	
Reference	See "Appendix B Barcode Size List" for details of the barcode size.	

Prints MaxiCode.

Syntax	<pre> - (void) printMaxiCode: (NSString *)text maxiCodeMode: (MaxiCodeMode)maxiCodeMode alignment: (PrintAlignment)alignment; </pre>	
Parameter	text	Barcode data to send to the printer
		<ul style="list-style-type: none"> When <code>maxiCodeMode</code> is SII_PM_MAXI_CODE_2: Add service class (3 digits), country code (3 digits), and postal code (9 digits) to the beginning of the data. When <code>maxiCodeMode</code> is SII_PM_MAXI_CODE_3: Add service class (3 digits), country code (3 digits), and postal code (6 digits) to the beginning of the data.
	maxiCodeMode	MaxiCode Mode See "4.4.1(4)⑩ MaxiCode Mode (<code>MaxiCodeMode</code>)" for available constants.
	alignment	Alignment See "4.4.1(4)⑨ Alignment (<code>PrintAlignment</code>)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class " for details on the error.	
Note	The quiet zone is not secured. Set the quiet zone in accordance with the standard of the barcode symbol.	
Reference	See "Appendix B Barcode Size List" for details of the barcode size.	

Prints GS1 Databar Stacked.

Syntax	<pre> - (void) printGS1DataBarStacked: (NSString *)text moduleSize: (ModuleSize)moduleSize alignment: (PrintAlignment)alignment; </pre>	
Parameter	text	Barcode data to send to the printer Enter 13 characters from '0' to '9'. The leading '01' is automatically added by the printer. The check digit is automatically calculated by the printer.
	moduleSize	Module size See "4.4.1(4)⑪ Module size (<code>ModuleSize</code>)" for available constants.
	alignment	Alignment See "4.4.1(4)⑨ Alignment (<code>PrintAlignment</code>)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class " for details on the error.	

Reference See "Appendix B Barcode Size List" for details of the barcode size.

```
printGS1DataBarStackedOmnidirectional
```

Print GS1 Databar Stacked Omni-directional

Prints GS1 Databar Stacked Omni-directional.

Syntax	- (void) printGS1DataBarStackedOmnidirectional: (NSString *)text moduleHeight: (NSInteger)moduleHeight moduleSize: (ModuleSize)moduleSize alignment: (PrintAlignment)alignment;
Parameter	<p>text Barcode data to send to the printer Enter 13 characters from '0' to '9'. The leading '01' is automatically added by the printer. The check digit is automatically calculated by the printer.</p> <p>moduleHeight Barcode module height (number of modules) The valid range is 33 to 255.</p> <p>moduleSize Module size See "4.4.1(4)⑪ Module size (ModuleSize)" for available constants.</p> <p>alignment Alignment See "4.4.1(4)⑨ Alignment (PrintAlignment)" for available constants.</p>
Error	<p>SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class" for details on the error.</p>
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

```
printGS1DataBarExpandedStacked
```

Print GS1 Databar Expanded Stacked

Prints GS1 Databar Expanded Stacked.

Syntax	<pre> - (void) printGS1DataBarExpandedStacked: (NSString *)text column: (NSInteger) column moduleSize: (ModuleSize) moduleSize alignment: (PrintAlignment) alignment; </pre>
Parameter	<p>text Barcode data to send to the printer</p> <p>Enter any number of characters using the following: ', !', '"', '%', '&', '(', ')', '*', '+', ',', '-', '.', '/', ':', ';', '<', '=', '>', '?', '_', '0' to '9', 'A' to 'Z', 'a' to 'z' Enter '{1' for FNC1. Be sure to input the check digit because it is not automatically calculated by the printer.</p> <p>column Number of columns Specify the number of columns in 1 line. An even number from 2 to 20 is valid.</p> <p>moduleSize Module size See "4.4.1(4)⑪ Module size (ModuleSize)" for available constants.</p>

alignment Alignment
See "4.4.1(4)⑨ Alignment (PrintAlignment)" for available constants.

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "**4.4.3 SIIPrinterException Class**" for details on the error.

Reference See "Appendix B Barcode Size List" for details of the barcode size.

printAztecCode Print Aztec Code

Supported only by MP-B21L.
Prints Aztec Code.

Syntax - (void) **printAztecCode:** (NSString *)text
 layer: (NSInteger) layer
 errorCorrection: (NSInteger) errorCorrection
 moduleSize: (ModuleSize) moduleSize
 aztecSymbol: (AztecSymbol) aztecSymbol
 alignment: (PrintAlignment) alignment;

Parameter text Barcode data to send to the printer
Encodes the data to binary in UTF-8 and sends to the printer.
When the data to be sent cannot be specified as a string, it can be specified using the following escape sequence.

Escape Sequence	Description
\nn	Control code (Specify nn as a hexadecimal number)
\\	Backslash

To specify FNC1, enter @"x1b\x30" in the data.
To specify 1Bh, enter @"x1b\x1b" in the data.

layer Number of layer
The valid range of full-range mode is 0, 4 to 32.
The valid range of compact mode is 0, 1 to 4.
When 0 is specified, layer is automatically set.

errorCorrection Error correction level (%)
The valid range is 0, 5 to 95.
When 0 is specified, the level is 23%.

moduleSize Module size
See "4.4.1(4)⑪ Module size (ModuleSize)" for available constants.

aztecSymbol Aztec symbol
See "4.4.1(4)⑲ Aztec symbol (AztecSymbol)" for available constants.

alignment Alignment
See "4.4.1(4)⑨ Alignment (PrintAlignment)" for available constants.

Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

cutPaper

Cut paper

Feeds the paper to the paper cut position. The paper is not cut.

Syntax	- (void) cutPaper: (CuttingMethod) cuttingMethod;
Parameter	cuttingMethod Cutting method See "4.4.1(4)㉑ Cutting method (CuttingMethod)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.

feedPosition

Paper form feed

Supported only by MP-B21L.

Performs the paper form feed of marked paper or label.

Syntax	- (void) feedPosition: (FeedPosition) feedPosition;
Parameter	feedPosition Form feed position See "4.4.1(4)㉑ Form feed position (FeedPosition)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.
Note	The paper form feed is not performed when this method is executed at the form feed position of the marked paper or the label.

sendBinary

Send binary data

Sends binary data to the printer.

Syntax	- (void) sendBinary: (NSData*) data;
Parameter	data Binary data to send to the printer Data size that can be specified at one time is 256 KB (262144 bytes).
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.
Description	This method sends the specified binary data to the printer without conversion. By sending printer command as binary data with this method, printer functions not supported in the library become available. However, this method does not support commands to get the response from the printer.

Sends file data.

The method of syntax (a), dithering can be specified.

The method of syntax (b), dithering is fixed to be disabled.

Syntax	(a) - (void) sendDataFile: (NSString *)fileName alignment: (PrintAlignment) alignment dithering: (Dithering) dithering;
	(b) - (void) sendDataFile: (NSString *)fileName alignment: (PrintAlignment) alignment;
Parameter	<p>fileName</p> <p>File path of data to sent to the printer The maximum file size that can be specified is 1 MB (1048576 bytes). The file extensions that can be sent and the file transmission are described below.</p> <ul style="list-style-type: none"> • .bmp, .jpg, .jpeg, .png Data is sent to the printer as image file. Colored image file is converted to monochrome image by binarization and sent to the printer. Printing is performed in batch after mapping the image file on the memory of the printer. • .txt Data is sent to the printer as text data. Text data format supports UTF-8. This method encodes the text data to printable text data based on the settings of internationalCharacter and codePage, and then sends it to the printer. This method does not add a line feed code at the end of the text data. In order to print to the end, add a line feed code at the end of the text data. • .bin, .dat Data is sent to the printer as binary data without conversion. <p>alignment</p> <p>Alignment It is valid when the extension of the file specified by <i>fileName</i> is .bmp, .jpg, .jpeg, .png, or .txt. See "4.4.1(4)⑨ Alignment (PrintAlignment)" for available constants.</p> <p>dithering</p> <p>Dithering It is valid when the extension of the file specified by <i>fileName</i> is .bmp, .jpg, .jpeg, or .png. See "4.4.1(4)① Dithering (Dithering)" for available constants.</p>
Error	<p>SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class" for details on the error.</p>

Prints the specified page of the selected PDF file.

Syntax	-	(void) printPDF: (NSString *)fileName startIndex: (NSInteger) startIndex endIndex: (NSInteger) endIndex rotate: (Rotate) rotate imageScale: (ImageScale) imageScale bottomMargin: (NSInteger) bottomMargin alignment: (PrintAlignment) alignment dithering: (Dithering) dithering;
Parameter	fileName	Path of the PDF file The file extension for supporting PDF is .pdf. The maximum file size that can be specified is 1 MB (1048576 bytes).
	startIndex	Start number of the printed page The range is -1, 1 to the number of pages in the PDF file. When -1 is specified for <code>startIndex</code> , all pages are printed. When -1 is specified for <code>startIndex</code> , the value of <code>endIndex</code> is ignored. When 1 or more is specified for <code>startIndex</code> , pages from the page number specified in <code>startIndex</code> to the page number specified in <code>endIndex</code> are printed. When a value more than the value specified for <code>endIndex</code> is specified for <code>startIndex</code> , an error occurs. When an out-of-range value is specified for <code>startIndex</code> or <code>endIndex</code> , an error occurs.
	endIndex	End number of the printed page The range is 1 to 2147483647. When a value more than the number of pages in the PDF file is specified for <code>endIndex</code> , pages from the page number specified in <code>startIndex</code> to the last page of the PDF file are printed.
	rotate	Rotation direction of the image See "4.4.1(4)② Image rotation direction (Rotate)" for available constants.
	imageScale	Image scaling See "4.4.1(4)③ Image scaling (ImageScale)" for available constants. When <code>SII_PM_IMAGE_SCALE_WIDTH_FIT</code> is specified for <code>imageScale</code> , the image width is converted to the print width of the printer while maintaining the aspect ratio.
	bottomMargin	Bottom margin (dot) The range is -1, 0 to 2400. When -1 is specified for <code>bottomMargin</code> , the image is created and printed while maintaining the bottom margin. When a value between 0 and 2400 is specified for <code>bottomMargin</code> , the bottom margin is changed to the specified size. When a value between 0 and 2400 is specified for <code>bottomMargin</code> , blank pages are not printed.
	dithering	Dithering See "4.4.1(4)① Dithering (Dithering)" for available constants.

	alignment	Alignment See "4.4.1(4)⑨ Alignment (PrintAlignment)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	
Description	PDF is converted to printable format for the printer and is sent to the printer. The color image data is converted to monochrome image by binarization. When the memory switches MS 1-2 (Mark/Gap Mode Selection) of the printer is set to "Enable", form feed of marked paper or label is performed after printing the PDF page.	
Note	No guarantee of printing operation when more than 100 pages are printed at a time.	

printLogo Print logo

Prints the registered logo.

Syntax	- (void) printLogo: (NSString *)logoId alignment (PrintAlignment) alignment;	
Parameter	logoId	ID of the logo to be printed (key code) Specify the ID of the registered logo as a character string.
	alignment	Alignment See "4.4.1(4)⑨ Alignment (PrintAlignment)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	


printSmartLabelImageData Print label

Prints labels.

Syntax	- (void *) printSmartLabelImageData: (SIISmartLabelManager *)labelManager;	
Parameter	labelManager	The class to provide the function in which converts the label file into the printable data from the printer.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	
Description	See " 4.4.5 SIISmartLabelManager Class " for the print example using this method.	

③ Dedicated method for page mode

The following methods are dedicated methods to use page mode. An example for the print process in page mode is shown below.

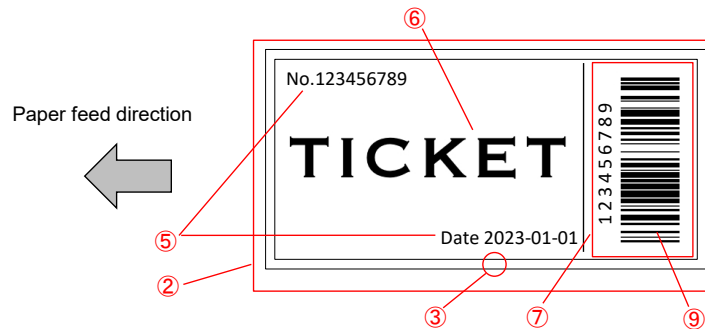

① Start page mode

```
[printerManager enterPageMode];
```

② Specify print area of page mode

```
[printerManager setPageModeArea:0 y:0 width:355 height:576];
```

③ Specify a rectangle and a ruled line

```
[printerManager printPageModeRectangle:0 startY:0 endX:344 endY:575 lineStyle:SII_PM_LINESTYLE_THIN];  
[printerManager printPageModeRectangle:7 startY:7 endX:336 endY:567 lineStyle:SII_PM_LINESTYLE_THIN];  
[printerManager printPageModeLine:11 startY:404 endX:334 endY:404 lineStyle:SII_PM_LINESTYLE_THIN];
```

④ Specify print direction of page mode

```
[printerManager setPageModeDirection: SII_PM_DIRECTION_TOP_TO_BOTTOM];
```

⑤ Specify a character

```
[printerManager printPageModeText:21 startY:47 text:@"NO.123456789"];  
[printerManager printPageModeText:212 startY:340 text:@"Date 2023-01-01"];
```

⑥ Specify an image file

```
[NSString *filePath = [[NSBundle mainBundle] pathForResource:@"TicketImage" ofType:@"jpg"];  
[printerManager printPageModeImageFile:10 startY:222 fileName:filePath  
dithering:SII_PM_DITHERING_DISABLE];
```

⑦ Specify print area of page mode

```
[printerManager setPageModeArea:0 y:404 width:345 height:163];
```

⑧ Specify print direction

```
[printerManager setPageModeDirection:SII_PM_DIRECTION_LEFT_TO_RIGHT];
```

⑨ Specify a barcode

```
[printerManager printPageModeBarcode:20 startY:132 barcodeSymbol:SII_PM_BARCODE_CODE128  
data:[@"{B123456789" dataUsingEncoding:NSUTF8StringEncoding]  
moduleSize:SII_PM_BARCODE_MODULE_WIDTH_2 moduleHeight:80  
hriPosition:SII_PM_HRI_POSITION_ABOVE hriFont:SII_PM_FONT_A];
```

⑩ Print in page mode

```
[printerManager printPageMode:SII_PM_CUT_PARTIAL];
```

⑪ Ends page mode

```
[printerManager exitPageMode];
```

Starts page mode.

Syntax	- (void) enterPageMode ;
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class" for details on the error.
Description	This method starts page mode. The dedicated method for page mode and common methods to standard mode and page mode can be used after this method execution. Executing exitPageMode discards the print data kept in the page data buffer and changes the mode to standard mode. Executing printPageMode prints the print data kept in the page data buffer.


Ends page mode and changes the mode to standard mode.

Syntax	- (void) exitPageMode ;
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class" for details on the error.
Description	Discards the print data kept in the page data buffer and changes the mode to standard mode.

Specifies print area of page mode.

Syntax	- (void) setPageModeArea : (NSInteger)x y: (NSInteger)y width: (NSInteger)width height: (NSInteger)height;
Parameter	<div>x</div> <div>The horizontal origin (dot) of the print area of page mode The valid range is 0 to 575. 0 represents the left edge on the print area of the printer.</div> <div>y</div> <div>The vertical origin (dot) of the print area of page mode The valid range is 0 to 2399. 0 represents the position where paper feed has not been performed.</div> <div>width</div> <div>The print area width (dot) of page mode The valid range is 1 to (576-x).</div> <div>height</div> <div>The print area height (dot) of page mode The valid range is 1 to (2400-y).</div>

The relation between the print area of page mode and the print area of the printer is shown in figure below using an example of a print width of 384 dots.

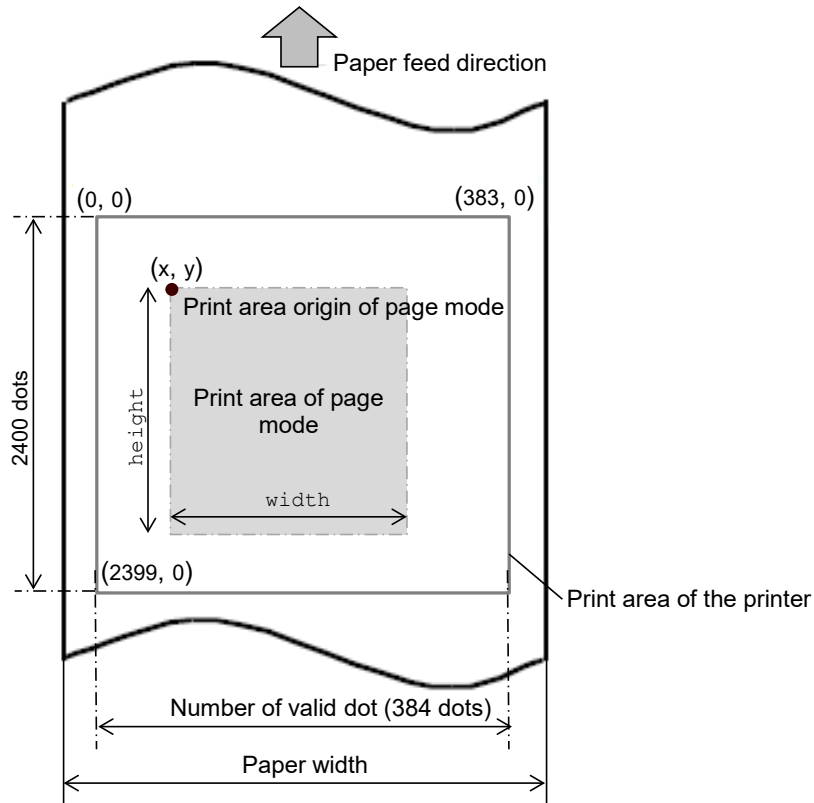

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.

See "**4.4.3 SIIPrinterException Class**" for details on the error.

Description Start page mode by **enterPageMode** before executing this method.

Starting page mode by **enterPageMode** and executing this method after the dedicated method for page mode is executed, the print area of page mode can be additionally specified. The data that has been mapped is kept.

The data of the dedicated method for page mode is mapped to the print area of page mode added by this method after executing this method.

The print area of page mode is $x = 0$, $y = 0$, $width = \text{print width}$, $height = 2400$ after executing **enterPageMode**.

Reference The print width is the width of the memory switch MS 3 (Print Width) of the printer.

Specifies print direction of page mode.

Syntax	- (void) setPageModeDirection: (Direction)direction;	
Parameter	direction	Print direction See "4.4.1(4)②④ Print direction (Direction)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	
Description	Start page mode by enterPageMode before executing this method. The print direction is left to right after executing enterPageMode .	

Specifies line spacing of page mode.

Syntax	- (void) setPageModeLineSpacing: (NSInteger)lineSpacing;	
Parameter	lineSpacing	Line spacing (dot) of page mode The valid range is 0 to 255.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	
Description	Start page mode by enterPageMode before executing this method. The line spacing is 34 dots after executing enterPageMode .	

Prints the print data kept in page data buffer.

Syntax	- (void) printPageMode: (CuttingMethod)CuttingMethod;	
Parameter	cuttingMethod	Cutting method See "4.4.1(4)②④ Cutting method (CuttingMethod)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	
Description	The print data is kept after printing. The print data is discarded at the timing of the following: <ul style="list-style-type: none"> •Execute enterPageMode •Execute disconnect •Execute exitPageMode 	

Maps the text data on the print area of page mode.

Syntax	- (void) printPageModeText: (NSInteger) startX startY: (NSInteger) startY text: (NSString *) text;	
Parameter	startX	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
	startY	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
	text	Text data Data size that can be specified at 1 time is 16 KB (16384 bytes).
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class" for details on the error.	
Description	This method encodes the specified text data to printable text data based on internationalCharacter and codePage . Start page mode by enterPageMode before executing this method.	

Maps the format specified text data on the print area of page mode.

Syntax	- (void) printPageModeTextEx: (NSInteger) startX startY: (NSInteger) startY text: (NSString *) text bold: (CharacterBold) bold underline: (CharacterUnderline) underline reverse: (CharacterReverse) reverse font: (CharacterFont) font scale: (CharacterScale) scale;	
Parameter	startX	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
	startY	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
	text	Text data Data size that can be specified at 1 time is 16 KB (16384 bytes).
	bold	Bold print See "4.4.1(4)③ Bold print (CharacterBold)" for available constants.
	underline	Underline See "4.4.1(4)④ Underline (CharacterUnderline)" for available constants.

reverse	Reverse print See "4.4.1(4)⑤ Reverse print (CharacterReverse)" for available constants.
font	Font See "4.4.1(4)⑦ Character font (CharacterFont)" for available constants.
scale	Character scale See "4.4.1(4)⑧ Character scale (CharacterScale)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.
Description	This method encodes the specified text data to printable text data based on internationalCharacter and codePage . Start page mode by enterPageMode before executing this method.

printPageModeBarcode

Print barcode of page mode

Maps the barcode on the print area of page mode.

The method of syntax (a) specifies the barcode data by character string.

The method of syntax (b) specifies the barcode data by character string and specifies N:W ratio of the barcode.

The method of syntax (c) specifies the barcode data by the array of bytes.

The method of syntax (d) specifies the Customer Bar Code_JP data by character string.

Syntax	<pre> (a) - (void) printPageModeBarcode: (NSInteger) startX startY: (NSInteger) startY barcodeSymbol: (BarcodeSymbol) barcodeSymbol text: (NSString *) text moduleSize: (ModuleSize) moduleSize moduleHeight: (NSInteger) moduleHeight hriPosition: (HriPosition) hriPosition hriFont: (CharacterFont) hriFont; (b) - (void) printPageModeBarcode: (NSInteger) startX startY: (NSInteger) startY barcodeSymbol: (BarcodeSymbol) barcodeSymbol text: (NSString *) text moduleSize: (ModuleSize) moduleSize moduleHeight: (NSInteger) moduleHeight hriPosition: (HriPosition) hriPosition hriFont: (CharacterFont) hriFont nwRatio: (NwRatio) nwRatio; (c) - (void) printPageModeBarcode: (NSInteger) startX startY: (NSInteger) startY barcodeSymbol: (BarcodeSymbol) barcodeSymbol data: (NSData *) data moduleSize: (ModuleSize) moduleSize moduleHeight: (NSInteger) moduleHeight hriPosition: (HriPosition) hriPosition hriFont: (CharacterFont) hriFont; </pre>
--------	--

```
(d) - (void) printPageModeBarcode: (NSInteger) startX
      startY: (NSInteger) startY
      barcodeSymbol: (BarcodeSymbol) barcodeSymbol
      text: (NSString *) text
      moduleSize: (ModuleSize) moduleSize;
```

Parameter	startX	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
	startY	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
	barcodeSymbol	BarcodeSymbol See "4.4.1(4)⑩ Barcode symbol (BarcodeSymbol)" for available constants and correspondent syntax.
	text (data)	Barcode data to send to the printer The input conditions for barcode are as follows.

Barcode	Number of Data	Inputtable Data Character String (Data)	Remarks
UPC-A	11 to 12 characters	'0' to '9'	
UPC-E	11 to 12 characters	'0' to '9'	
EAN13 JAN13	12 to 13 characters	'0' to '9'	
EAN8 JAN8	7 to 8 characters	'0' to '9'	
CODE39	1 to 150 characters	'0' to '9' 'A' to 'Z' ' ', '\$', '%', '+', '-', '.', '/',	Start code and stop code ('*') are automatically added.
CODE93	1 to 150 bytes	(0x00 to 0x2E)	Input data with 0x2F or more at the end.
CODE128	2 to 150 bytes	(0x00 to 0x66)	When inputting the start code (0x67 to 0x69) of the CODE128 code set. Input data with 0x67 or more at the end.
		(0x00 to 0x7F)	When starting with a CODE128 special code start code ("A", "B", "C").
ITF	2 to 150 characters (However, an even number)	'0' to '9'	
CODABAR	1 to 150 characters	'0' to '9' '\$', '+', '-', '.', '/', ':',	It is needed to specify one of 'A' to 'D' at the beginning and end.
EAN13 add-on JAN13 add-on	Add-on 2: 14 to 15 characters Add-on 5: 17 to 18 characters	'0' to '9'	

Barcode	Number of Data	Inputtable Data Character String (Data)	Remarks
Customer Bar Code_JP	7 to 20 characters	'0' to '9' 'A' to 'Z' ' '	Start code, check digit, and stop code are automatically added. It is needed to specify one of '0' to '9' at the first 7 characters. A' to 'Z' is calculated as 2 characters.
GS1 Databar Omnidirectional	13 characters	'0' to '9'	Check digit is automatically added.
GS1 Databar Truncated	13 characters	'0' to '9'	Check digit is automatically added.
GS1 Databar Limited	13 characters	'0' to '9'	Check digit is automatically added.
GS1 Databar Expanded	2 to 255 characters	' ' to '"' '%' to '?' 'A' to 'Z' ' ' '_' 'a' to 'z' '{'	

moduleSize

Barcode width

See "4.4.1(4)⑪ Module size (ModuleSize)" for available constants.

moduleHeight

Barcode height (dot)

- When barcodeSymbol is set to the following, the valid range is 1 to 255.

SII_PM_BARCODE_UPC_A
 SII_PM_BARCODE_UPC_E
 SII_PM_BARCODE_EAN13
 SII_PM_BARCODE_JAN13
 SII_PM_BARCODE_EAN8
 SII_PM_BARCODE_JAN8
 SII_PM_BARCODE_CODE39
 SII_PM_BARCODE_CODE93
 SII_PM_BARCODE_CODE128
 SII_PM_BARCODE_ITF
 SII_PM_BARCODE_CODABAR
 SII_PM_BARCODE_EAN13_ADDON
 SII_PM_BARCODE_JAN13_ADDON

- When barcodeSymbol is set to the following, the valid range is different by barcodeSymbol and moduleSize.

barcodeSymbol		
	moduleSize	Valid Range
SII_PM_BARCODE_GS1_OMNI_DIRECTIONAL		
	SII_PM_BARCODE_MODULE_WIDTH_2	66 to 255
	SII_PM_BARCODE_MODULE_WIDTH_3	99 to 255
	SII_PM_BARCODE_MODULE_WIDTH_4	132 to 255

barcodeSymbol		
	moduleSize	Valid Range
	SII_PM_BARCODE_MODULE_WIDTH_5	165 to 255
	SII_PM_BARCODE_MODULE_WIDTH_6	198 to 255
SII_PM_BARCODE_GS1_TRUNCATED		
	SII_PM_BARCODE_MODULE_WIDTH_2	26 to 255
	SII_PM_BARCODE_MODULE_WIDTH_3	39 to 255
	SII_PM_BARCODE_MODULE_WIDTH_4	52 to 255
	SII_PM_BARCODE_MODULE_WIDTH_5	65 to 255
	SII_PM_BARCODE_MODULE_WIDTH_6	78 to 255
SII_PM_BARCODE_GS1_LIMITED		
	SII_PM_BARCODE_MODULE_WIDTH_2	20 to 255
	SII_PM_BARCODE_MODULE_WIDTH_3	30 to 255
	SII_PM_BARCODE_MODULE_WIDTH_4	40 to 255
	SII_PM_BARCODE_MODULE_WIDTH_5	50 to 255
	SII_PM_BARCODE_MODULE_WIDTH_6	60 to 255
SII_PM_BARCODE_GS1_EXPANDED		
	SII_PM_BARCODE_MODULE_WIDTH_2	68 to 255
	SII_PM_BARCODE_MODULE_WIDTH_3	102 to 255
	SII_PM_BARCODE_MODULE_WIDTH_4	136 to 255
	SII_PM_BARCODE_MODULE_WIDTH_5	170 to 255
	SII_PM_BARCODE_MODULE_WIDTH_6	204 to 255

hriPosition

HRI character print position

See "4.4.1(4)⑫ HRI character print position (HriPosition)" for available constants.

hriFont

HRI character font

See "4.4.1(4)⑦ Character font (CharacterFont)" for available constants.

nwRatio

N:W ratio

See "4.4.1(4)⑬ N:W ratio (NwRatio)" for available constants. Depending on specified nwRatio and moduleSize, the wide element width is set as shown in the following table.

moduleSize	nwRatio		
	SII_PM_NWRATIO_1TO2	SII_PM_NWRATIO_1TO2_5	SII_PM_NWRATIO_1TO3
SII_PM_BARCODE_MODULE_WIDTH_2	0.500 mm (4 dots)	0.625 mm (5 dots)	0.750 mm (6 dots)
SII_PM_BARCODE_MODULE_WIDTH_3	0.750 mm (6 dots)	1.000 mm (8 dots)	1.125 mm (9 dots)
SII_PM_BARCODE_MODULE_WIDTH_4	1.000 mm (8 dots)	1.250 mm (10 dots)	1.500 mm (12 dots)
SII_PM_BARCODE_MODULE_WIDTH_5	1.250 mm (10 dots)	1.625 mm (13 dots)	1.875 mm (15 dots)

moduleSize	nwRatio		
	SII_PM_NWRATIO_1TO2	SII_PM_NWRATIO_1TO2_5	SII_PM_NWRATIO_1TO3
SII_PM_BARCODE_MODULE_WIDTH_6	1.500 mm (12 dots)	1.875 mm (15 dots)	2.250 mm (18 dots)

Error	SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class" for details on the error.
Description	Start page mode by enterPageMode before executing this method.
Note	Map the print data of the barcode not to overlap the other print data. The quiet zone is not secured. Set the quiet zone in accordance with the standard of the barcode symbol.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

printPageModePDF417

Print PDF417 of page mode

Maps PDF417 on the print area of page mode.

The method of syntax (a) specifies PDF417 symbol.

The method of syntax (b) is fixed to standard PDF417.

Syntax	(a) - (void) printPageModePDF417: (NSInteger) startX startY: (NSInteger) startY text: (NSString *) text errorCorrection: (ErrorCorrection) errorCorrection row: (NSInteger) row column: (NSInteger) column moduleSize: (ModuleSize) moduleSize moduleHeight: (NSInteger) moduleHeight pdf417Symbol: (Pdf417Symbol) pdf417Symbol; (b) - (void) printPageModePDF417: (NSInteger) startX startY: (NSInteger) startY text: (NSString *) text errorCorrection: (ErrorCorrection) errorCorrection row: (NSInteger) row column: (NSInteger) column moduleSize: (ModuleSize) moduleSize moduleHeight: (NSInteger) moduleHeight;
Parameter	startX startY text errorCorrection row
	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399. The vertical reference point (dot) from the starting point The valid range is 0 to 2399. Barcode data Error correction level See "4.4.1(4)⑭ Error correction level (ErrorCorrection)" for available constants. The number of rows (row) The valid range is 0, 3 to 90. When 0 is specified, the number of rows is automatically set.

<code>column</code>	The number of columns in data area The valid range is 0 to 30. When 0 is specified, the number of columns in the data area is automatically set.
<code>moduleSize</code>	Nominal fine element width See "4.4.1(4)⑪ Module size (<code>ModuleSize</code>)" for available constants.
<code>moduleHeight</code>	Module height (dot) The valid range is 2 to 127. When the module height is set smaller, some barcode scanners may not read it. Set 3 or more for normal use.
<code>pdf417Symbol</code>	Symbol of PDF417 See "4.4.1(4)⑮ PDF417 symbol (<code>Pdf417Symbol</code>)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.
Description	Start page mode by enterPageMode before executing this method.
Note	Map the print data of the barcode not to overlap the other print data. The quiet zone is not secured. Set the quiet zone in accordance with the standard of the barcode symbol.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

printPageModeQRcode

Print QR Code of page mode

Maps QR Code on the print area of page mode.
The method of syntax (a) specifies QR Code Model.
The method of syntax (b) is fixed to QR Code Model 2.

Syntax	(a) - (void) printPageModeQRcode: (NSInteger) startX startY: (NSInteger) startY text: (NSString *)text errorCorrection: (ErrorCorrection)errorCorrection moduleSize: (ModuleSize)moduleSize model: (QrModel)model; (b) - (void) printPageModeQRcode: (NSInteger) startX startY: (NSInteger) startY text: (NSString *)text errorCorrection: (ErrorCorrection)errorCorrection moduleSize: (ModuleSize)moduleSize;
Parameter	startX The horizontal reference point (dot) from the starting point The valid range is 0 to 2399. startY The vertical reference point (dot) from the starting point The valid range is 0 to 2399. text Barcode data The version for either syntax (a) or (b) is automatically set depending on the number of data specified on <code>text</code> .

<code>errorCorrection</code>	Error correction level See "4.4.1(4)⑭ Error correction level (<code>ErrorCorrection</code>)" for available constants.
<code>moduleSize</code>	Module size See "4.4.1(4)⑪ Module size (<code>ModuleSize</code>)" for available constants.
<code>model</code>	QR Code Model See "4.4.1(4)⑯ QR Code Model (<code>QrModel</code>)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.
Description	Start page mode by enterPageMode before executing this method.
Note	Map the print data of the barcode not to overlap the other print data. The quiet zone is not secured. Set the quiet zone in accordance with the standard of the barcode symbol.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

`printPageModeDataMatrix`

Print Data Matrix of page mode

Maps Data Matrix on the print area of page mode.

Syntax	<pre> - (void) printPageModeDataMatrix: (NSInteger) startX startY: (NSInteger) startY text: (NSString *) text dataMatrixModule: (DataMatrixModule) dataMatrixModule moduleSize: (ModuleSize) moduleSize; </pre>	
Parameter	<code>startX</code>	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
	<code>startY</code>	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
	<code>text</code>	Barcode data
	<code>dataMatrixModule</code>	The number of Data Matrix modules See "4.4.1(4)⑰ Data Matrix module (<code>DataMatrixModule</code>)" for available constants.
	<code>moduleSize</code>	Module size See "4.4.1(4)⑪ Module size (<code>ModuleSize</code>)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	
Description	Start page mode by enterPageMode before executing this method.	
Note	Map the print data of the barcode not to overlap the other print data. The quiet zone is not secured. Set the quiet zone in accordance with the standard of the barcode symbol.	
Reference	See "Appendix B Barcode Size List" for details of the barcode size.	

Maps MaxiCode on the print area of page mode.

Syntax	<pre> - (void) printPageModeMaxiCode: (NSInteger) startX startY: (NSInteger) startY text: (NSString *) text maxiCodeMode: (MaxiCodeMode) maxiCodeMode; </pre>	
Parameter	startX	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
	startY	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
	text	Barcode data <ul style="list-style-type: none"> When maxiCodeMode is SII_PM_MAXI_CODE_2 Add the service class (3 digits), the country code (3 digits), and the postal code (9 digits) to the beginning of the data. When maxiCodeMode is SII_PM_MAXI_CODE_3 Add the service class (3 digits), the country code (3 digits), and the postal code (6 digits) to the beginning of the data.
	maxiCodeMode	MaxiCode Mode See "4.4.1(4)⑩ MaxiCode Mode (MaxiCodeMode)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	
Description	Start page mode by enterPageMode before executing this method.	
Note	Map the print data of the barcode not to overlap the other print data. The quiet zone is not secured. Set the quiet zone in accordance with the standard of the barcode symbol.	
Reference	See "Appendix B Barcode Size List" for details of the barcode size.	

Maps GS1 Databar Stacked on the print area of page mode.

Syntax	<pre> - (void) printPageModeGS1DataBarStacked: (NSInteger) startX startY: (NSInteger) startY text: (NSString *) text moduleSize: (ModuleSize) moduleSize; </pre>	
Parameter	startX	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
	startY	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
	text	Barcode data Enter 13 characters from '0' to '9'. The leading '01' is automatically added by the printer. The check digit is automatically calculated by the printer.

	<div> <div>moduleSize</div> <div>Module size</div> <div>See "4.4.1(4)⑪ Module size (ModuleSize)" for available constants.</div> </div>
Error	<div> <div> SIIPrinterException is thrown when an error occurs while this method is being called. </div> <div>See "4.4.3 SIIPrinterException Class" for details on the error.</div> </div>
Description	Start page mode by enterPageMode before executing this method.
Note	Map the print data of the barcode not to overlap the other print data.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

printPageModeGS1DataBarStackedOmnidirectional

Print GS1 Databar Stacked Omni-directional of page mode

Maps GS1 Databar Stacked Omni-directional on the print area of page mode.

Syntax	<div> <div>- (void) printPageModeGS1DataBarStackedOmnidirectional:</div> <div>(NSInteger) startX</div> <div>startY: (NSInteger) startY</div> <div>text: (NSString *)text</div> <div>moduleHeight: (ModuleHeight) moduleHeight</div> <div>moduleSize: (ModuleSize) moduleSize;</div> </div>	
Parameter	startX	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
	startY	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
	text	Barcode data Enter 13 characters from '0' to '9'. The leading '01' is automatically added by the printer. The check digit is automatically calculated by the printer.
	moduleHeight	Barcode module height (the number of the modules) The valid range is 33 to 255.
	moduleSize	Module size See "4.4.1(4)⑪ Module size (ModuleSize)" for available constants.
Error	<div> <div> SIIPrinterException is thrown when an error occurs while this method is being called. </div> <div>See "4.4.3 SIIPrinterException Class" for details on the error.</div> </div>	
Description	Start page mode by enterPageMode before executing this method.	
Note	Map the print data of the barcode not to overlap the other print data.	
Reference	See "Appendix B Barcode Size List" for details of the barcode size.	

```
printPageModeGS1DataBarExpandedStacked
Print GS1 Databar Expanded Stacked of page mode
```

```
printPageModeGS1DataBarExpandedStacked
Print GS1 Databar Expanded Stacked of page mode
```

Maps GS1 Databar Expanded Stacked on the print area of page mode.

Syntax	<pre> - (void) printPageGS1DataBarExpandedStacked: (NSInteger) startX startY: (NSInteger) startY text: (NSString *)text column: (NSInteger) column moduleSize: (ModuleSize) moduleSize; </pre>
Parameter	<p>startX The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.</p> <p>startY The vertical reference point (dot) from the starting point The valid range is 0 to 2399.</p> <p>text Barcode data Enter any number of characters using the following: ' ', '!', '"', '%', '&', '(', ')', '*', '+', ',', '-', '.', '/', ':', ';', '<', '=', '>', '?', '_', '0' to '9', 'A' to 'Z', 'a' to 'z'. Enter '{1' to FNC1. Be sure to input the check digit because it is not automatically calculated by the printer.</p> <p>column The number of columns Specifies the number of the columns in 1 line. The valid range is the even number from 2 to 20.</p> <p>moduleSize Module size See "4.4.1(4)⑪ Module size (ModuleSize)" for available constants.</p>
Error	<p>SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class" for details on the error.</p>
Description	Start page mode by enterPageMode before executing this method.
Note	Map the print data of the barcode not to overlap the other print data.
Reference	See "Appendix B Barcode Size List" for details of the barcode size.

printPageModeAztecCode

Print Aztec Code of page mode

printPageModeAztecCode

Print Aztec Code of page mode

Maps Aztec Code on the print area of page mode.

Syntax	- (void) printPageModeAztecCode: (NSInteger)startX startY: (NSInteger)startY text: (NSString *)text layer: (NSInteger)layer errorCorrection: (NSInteger)errorCorrection moduleSize: (ModuleSize)moduleSize aztecSymbol: (AztecSymbol)aztecSymbol;
Parameter	startX The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
	startY The vertical reference point (dot) from the starting point The valid range is 0 to 2399.

text

Barcode data to send to the printer
Encodes the data to binary in UTF-8 and sends to the printer.
When the data to be sent cannot be specified as a string, it can be specified using the following escape sequence.

Escape Sequence	Description
\nn	Control code (Specify nn as a hexadecimal number)
\\	Backslash

To specify FNC1, enter @"x1b\x30" in the data.

To specify 1Bh, enter @"x1b\x1b" in the data.

layer

Number of layer
The valid range of full-range mode is 0, 4 to 32.
The valid range of compact mode is 0, 1 to 4.
When 0 is specified, layer is automatically set.

errorCorrection

Error correction level (%)
The valid range is 0, 5 to 95.
When 0 is specified, the level is 23%.

moduleSize

Module size
See "4.4.1(4)⑪ Module size (ModuleSize)" for available constants.

aztecSymbol

Aztec symbol
See "4.4.1(4)⑲ Aztec symbol (AztecSymbol)" for available constants.

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.

See "4.4.3 SIIPrinterException Class" for details on the error.

Description Start page mode by **enterPageMode** before executing this method.

Note Map the print data of the barcode not to overlap the other print data.

Reference See "Appendix B Barcode Size List" for details of the barcode size.

sendPageModeBinary

Send binary data of page mode

Maps binary data on the print area of page mode.

Syntax - (void) **sendPageModeBinary**: (NSData*) data;

Parameter binary Binary data
Data size that can be specified at 1 time is 16 KB (16384 bytes).

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "4.4.3 SIIPrinterException Class" for details on the error.

Description Start page mode by **enterPageMode** before executing this method.

This method sends the specified binary data to the printer without conversion.

By sending printer commands as binary data with this method, printer functions which are not supported in the library become available.

Note This method may execute unexpected performance depending on the data to send. Please ensure the performance with your actual device in advance.

printPageModeImageFile Draw image file of page mode

Maps the image file on the print area of page mode.

Syntax	<pre> - (void) printPageModeImageFile: (NSInteger) startX startY: (NSInteger) startY fileName: (NSString *) fileName dithering: (Dithering) dithering; </pre>	
Parameter	<code>startX</code>	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
	<code>startY</code>	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
	<code>fileName</code>	Path of the image file The maximum file size that can be specified is 1 MB (1048576 bytes). The image files that can be sent are .bmp, .jpg, .jpeg, .png. Colored image file is converted to monochrome image by binarization and registered.
	<code>dithering</code>	Dithering See "4.4.1(4)① Dithering (Dithering)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.	
Description	Start page mode by enterPageMode before executing this method.	

printPageModeRectangle Draw rectangle image of page mode

Maps the rectangle image on the print area of page mode.

Syntax	<pre> - (void) printPageModeRectangle: (NSInteger) startX startY: (NSInteger) startY endX: (NSInteger) endX endY: (NSInteger) endY lineStyle: (LineStyle) lineStyle; </pre>	
	<code>startX</code>	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
	<code>startY</code>	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
	<code>endX</code>	The horizontal reference point (dot) from the ending point The valid range is 0 to 2399.
	<code>endY</code>	The vertical reference point (dot) from the ending point The valid range is 0 to 2399.

Line style


See "4.4.1(4)Ⓔ Line style (LineStyle)" for available constants.

Error	<code>SIIPrinterException</code> is thrown when an error occurs while this method is being called.
-------	--

See **"4.4.3 SIIPrinterException Class"** for details on the error.

Description	Start page mode by enterPageMode before executing this method.
-------------	---

The rectangle is mapped to `direction` of `setPageModeDirection` as shown in the figure below.

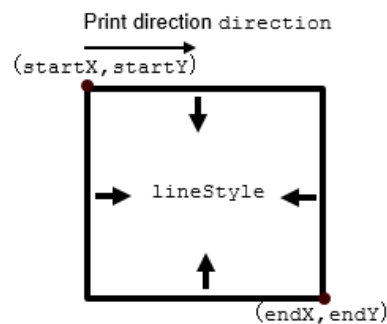

The example of the parameter setting to the image is shown below.

Example: Draw a square with a medium solid line (4 dots) at 240 dots (30 mm) from the starting point.

Image	Parameter
<p>Diagram illustrating the line style parameter. A square box is shown with arrows indicating the direction of the line style. The box is labeled with "lineStyle=SHI_PM_LINestyle_MEDIUM (4 dots)". The coordinates of the box are given as (startX=0, startY=0) and (endX=239, endY=239).</p>	<pre>startX 0 startY 0 endX 239 endY 239 lineStyle SHI_PM_LINestyle_MEDIUM</pre>

```
printPageModeLine
```

Print ruled line of page mode

Maps the ruled line on the print area of page mode.


```
Syntax      - (void) printPageModeLine: (NSInteger) startX
              startY: (NSInteger) startY
              endX: (NSInteger) endX
              endY: (NSInteger) endY
              lineStyle: (LineStyle) lineStyle;
```

Parameter	startX	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
-----------	--------	---

<code>startY</code>	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
---------------------	---

endX	The horizontal reference point (dot) from the ending point The valid range is 0 to 2399.
------	---

endY	The vertical reference point (dot) from the ending point The valid range is 0 to 2399.
lineStyle	Line style See "4.4.1(4)② Line style (LineStyle)" for available constants.
Error	SIIPrinterException is thrown when an error occurs while this method is being called. See "4.4.3 SIIPrinterException Class" for details on the error.
Description	Start page mode by enterPageMode before executing this method. A diagonal stroke cannot be drawn by this method. The ruled line is mapped to the direction of setPageModeDirection as shown in the figure below.

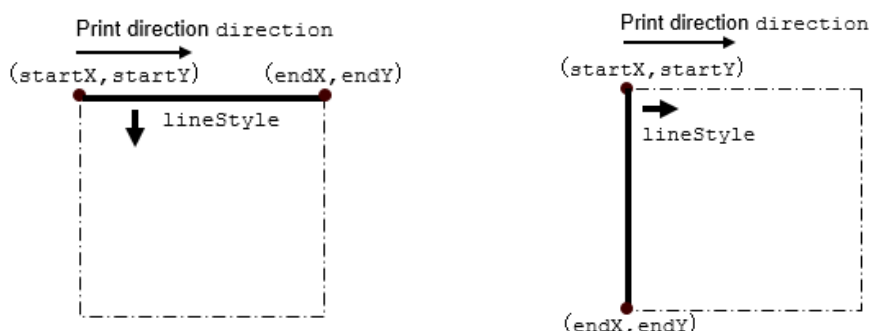

Mapping direction of horizontal ruled line Mapping direction of vertical ruled line

The setting example of the parameter to the image is shown below.

Example: Draw a horizontal ruled line of a square with a medium solid line (4 dots) at 240 dots (30 mm) from the starting point.

Image	Parameter
	① startX 0 startY 0 endX 239 endY 0 lineStyle SII_PM_LINestyle_MEDIUM
	② startX 0 startY 236 endX 239 endY 236 lineStyle SII_PM_LINestyle_MEDIUM

Example: Draw a vertical ruled line of a square with a medium solid line (4 dots) at 240 dots (30 mm) from the starting point.

Image	Parameter
<p>Diagram illustrating the parameters for the SII_PM_LINestyle_MEDIUM line style. The diagram shows two vertical lines, labeled 1 and 2, representing the start and end of the line style. Line 1 is at (startX=0, startY=0) and Line 2 is at (startX=236, startY=0). Both lines have a length of 239 units, ending at (endX=0, endY=239) and (endX=236, endY=239) respectively. The lines are labeled "lineStyle= SII_PM_LINestyle_MEDIUM (4 dots)".</p>	<p>①</p> <p>startX 0</p> <p>startY 0</p> <p>endX 0</p> <p>endY 239</p> <p>lineStyle SII_PM_LINestyle_MEDIUM</p> <p>②</p> <p>startX 236</p> <p>startY 0</p> <p>endX 236</p> <p>endY 239</p> <p>lineStyle SII_PM_LINestyle_MEDIUM</p>

```
printPageModeLogo
```

Print logo of page mode

Maps the registered logo on the print area of page mode.

```
Syntax      - (void) printPageModeLogo:(NSInteger) startX
              startY:(NSInteger) startY
              logoId:(NSString *) logoId;
```

Parameter	startX	The horizontal reference point (dot) from the starting point The valid range is 0 to 2399.
-----------	--------	---

<code>startY</code>	The vertical reference point (dot) from the starting point The valid range is 0 to 2399.
---------------------	---

logoId	Logo ID to print (key code) Specify the ID of the registered logo as a character string
--------	--

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "**4.4.3 SIIPrinterException Class**" for details on the error.

Description	Start page mode by <code>enterPageMode</code> before executing this method.
-------------	---

(6) Common property detail to standard mode and page mode

sendTimeout

Get/Set send timeout period

Gets or sets the timeout period in sending data.

Syntax	@property NSInteger sendTimeout ;
Valid range	100 to 300000 (millisecond: ms) When the value is specified less than 100, the period is set to 100 ms. When the value is specified more than 300000, the period is set to 300000 ms.
Default	10000
Description	This property can get or set the timeout period regardless of whether isConnect is YES or NO. The set timeout period becomes effective at the next data sending.

receiveTimeout

Get/Set receive timeout period

Gets or sets the timeout period in receiving data.

Syntax	@property NSInteger receiveTimeout ;
Valid range	100 to 300000 (millisecond: ms) When the value is specified less than 100, the period is set to 100 ms. When the value is specified more than 300000, the period is set to 300000 ms.
Default	10000
Description	This property can get or set the timeout period regardless of whether isConnect is YES or NO. The set timeout period becomes effective at the next data receiving.

internationalCharacter

Get/Set international character set

Gets or sets the value of international character set.

Syntax	@property NSInteger internationalCharacter ;
Description	See "4.4.1(3)⑤ International character set" for configurable constants. When an invalid value is specified, it is ignored. When this property is not set, the international character set is as follows depending on the language setting of iOS device. When the language setting of iOS device is Japanese: SII_PM_COUNTRY_JAPAN When the language setting of iOS device is other than Japanese: SII_PM_COUNTRY_USA When text data is sent by sendText , sendTextEx , sendDataFile , printPageModeText , or printPageModeTextEx , the print result of the following character codes varies. See "Appendix A Character Set" for details of the characters to be printed. Character codes with the varying print result depending on the configuration of the international character: 0x23, 0x24, 0x40, 0x5B, 0x5C, 0x5D, 0x5E, 0x60, 0x7B, 0x7C, 0x7D, 0x7E

Gets or sets the value of codepage.

Syntax	<code>@property NSInteger codePage;</code>
Description	<p>See "4.4.1(3)⑥ Codepage" for configurable constants. When an invalid value is specified, it is ignored.</p> <p>When this property is not set, the codepage is as follows depending on the language setting of iOS device.</p> <p>When the language setting of iOS device is Japanese: <code>SHI_PM_CODE_PAGE_KATAKANA</code></p> <p>When the language setting of iOS device is other than Japanese: <code>SHI_PM_CODE_PAGE_1252</code></p> <p>The encoder used for sending the text data by <code>sendText</code>, <code>sendTextEx</code>, <code>sendDataFile</code>, <code>printPageModeText</code>, or <code>printPageModeTextEx</code> is changed. See "Appendix A Character Set" for characters to be printed.</p>

Gets the value of the connecting printer model.

Syntax	<code>@property(readonly) NSInteger printerModel;</code>
Default	-1
Return value	<p>See "4.4.1(3)① Printer model" for available constants.</p> <p>When <code>isConnect</code> is NO, -1 is returned.</p>

Gets the value of the port type used for connection with the printer.

Syntax	<code>@property(readonly) NSInteger portType;</code>
Default	-1
Return value	<p>See "4.4.1(3)② Port type" for available constants.</p> <p>When <code>isConnect</code> is NO, -1 is returned.</p>

Verifies connection state with the printer.

Syntax	<code>@property(readonly) BOOL isConnect;</code>
Return value	<p>YES Connected to the printer</p> <p>NO Not connected to the printer</p>
Description	<p>This property retains the <code>connect</code> state as a BOOL value.</p> <p>When <code>connect</code> succeeds, this property is YES. After <code>connect</code>, when <code>disconnect</code> succeeds, this property becomes NO.</p>

Gets or sets the socket keeping time.

Syntax	@property NSInteger socketKeepingTime ;
Valid range	60000 to 300000 (millisecond: ms) When the value is specified less than 60000, the time is set to 60000 ms. When the value is specified more than 300000, the time is set to 300000 ms.
Default	300000
Description	This property can get or set the socket keeping time regardless of whether isConnect is YES or NO. For the socket keeping time, specify a time equal to Receive Timeout of the printer to be connected. The setting of Receive Timeout can be changed in "SII Printer Utility" with the iOS app on the App Store. The set socket keeping time becomes effective at the next connect execution.

Registers a delegate object that receives notifications from the printer.

Syntax	@property(weak, nonatomic) id<SIIPrinterManagerDelegate> delegate ;
Description	Specify an object conforming to SIIPrinterManagerDelegate protocol. When this property is executed with the delegate object registered, the already registered delegate object becomes disabled, and a new delegate object is registered. When nil is specified for this property, the notification of the printer status is stopped.

Gets or sets the paper when printing label file.

Syntax	@property NSInteger printSmartLabelMode ;
Description	See "4.4.1(3)⑦ Paper selection with or without mark when printing label file" for details of the value. When an invalid value is specified, it is ignored. When this property is not set, SII_PM_PRINTSMARTLABEL_MODE_MARK is set. This property can get or set the paper regardless of whether isConnect is YES or NO. When specifying the marked paper, feeds the paper to the print start position at printSmartLabelImageData execution. When specifying the paper without the mark, the paper is not fed to the print start position at printSmartLabelImageData execution.

4.4.2 SIIPrinterInfo Class

This class stores the printer information found by printer searching method. It gets the printer model name, MAC address, and IP address from the found printer information.

(1) Method List

Methods provided by **SIIPrinterInfo** class are shown in the following table.

Name	Description
SIIPrinterInfo	Constructor of the printer information class

(2) Property List

Properties provided by **SIIPrinterInfo** class are shown in the following table.

Name	Access	Description
name	R	Get printer model name
mac	R	Get MAC address
ip	R	Get IP address

(3) Method Details

SIIPrinterInfo	Constructor
-----------------------	--------------------

Syntax **SIIPrinterInfo**

Description This method stores the printer information found by **startDiscoveryPrinter**.

(4) Property Details

name	Get printer model name
------	------------------------

Syntax @property NSString ***name**;

Description This property gets the printer model name from the printer information found by **startDiscoveryPrinter**.

mac	Get MAC address
-----	-----------------

Syntax @property NSString ***mac**;

Description This property gets the MAC address from the printer information found by **startDiscoveryPrinter**.

ip	Get IP address
----	----------------

Syntax @property NSString ***ip**;

Description This property gets the IP address from the printer information found by **startDiscoveryPrinter**.

4.4.3 SIIPrinterException Class

(1) Method List

Methods provided by **SIIPrinterException** class are shown in the following table.

Name	Description
SIIPrinterException	Constructor

(2) Property List

Properties provided by **SIIPrinterException** class are shown in the following table.

Name	Access	Description
errorCode	R	Get error code
errorMessage	R	Get error message

(3) Constant List

① Error code

Constants used for getting error codes are shown in the following table.

Constant Name	Description	Value
SII_PM_ERROR_ACCESS_DENIED	Failed to get the handle.*1	-1
	An unavailable port was specified.	
	An unsupported method was specified.	
SII_PM_ERROR_SHARING_VIOLATION	An already opened port was specified.	-11
SII_PM_ERROR_PORT_NOT_OPENED	The port is not open.	-12
SII_PM_ERROR_DEVICE_NOT_CONNECTED	There is a problem with the Bluetooth connection between the iOS device and the printer.	-21
SII_PM_ERROR_OFFLINE	Disconnected state or the printer is offline.	-22
SII_PM_ERROR_DEVICE_INITIALIZE_FAILED	Failed to change the printer settings. Data sending to the printer is not completed within the send timeout period, or data receiving from the printer is not completed within the receive timeout period.	-31
SII_PM_ERROR_DATA_SIZE_ZERO	0-byte data was specified.	-101
SII_PM_ERROR_OVER_MAX_DATA_SIZE	Maximum data size is exceeded.	-102
SII_PM_ERROR_ENCODE_FAILED	An error occurred in encoding text data.*1	-111
SII_PM_ERROR_TIMEOUT	Send timeout occurred.	-201
	Receive timeout occurred.	
SII_PM_ERROR_FILE_NOT_FOUND	The specified file is not found.	-301
SII_PM_ERROR_FILE_USED	The specified file is in use by another process.	-302
SII_PM_ERROR_FILE_INVALID	The specified file is invalid.	-303
SII_PM_ERROR_LOW_MEMORY	Memory shortage occurred when loading image file.	-311
SII_PM_ERROR_OVER_MAX_IMAGE	Either or both of width and height of image file exceeds the number of printable maximum dots.	-312
SII_PM_ERROR_LOGO_NOT_DEFINED	The logo is not registered.	-313
SII_PM_ERROR_LOW_USER_AREA	Remaining user area is insufficient.	-401
SII_PM_ERROR_LOW_EXTERNAL_RAM	Remaining RAM capacity is insufficient.	-402
SII_PM_ERROR_INVALID_NO	The specified value for the logo ID is invalid.	-501
SII_PM_ERROR_PAGE_MODE_SPECIFIED	Page mode is specified.	-511
SII_PM_ERROR_PAGE_MODE_NOT_SPECIFIED	Page mode is not specified.	-512
SII_PM_ERROR_LABEL_FILE_NOT_SELECTED	The label file is not selected.	-521
SII_PM_ERROR_GET_LABEL_IMAGE	Failed to create the label image.	-522
SII_PM_ERROR_INVALID_PARAM	The specified parameter is invalid.	-9999

*1: Abnormal processing might have occurred.

(4) Method Details

`SIIPrinterException`

Constructor

This is the exception class that is thrown when API of `SIIPrinterManager` class is called.

Syntax `SIIPrinterException`

(5) Property Details

`errorCode`

Get error code

Gets the error code of the thrown exception.

Syntax `@property NSInteger errorCode;`

Return value See "4.4.3(3) Constant List".

`errorMessage`

Get error message

Gets the error message of the thrown exception.

Syntax `@property NSString *errorMessage;`

Description A character string that supplements the contents of `errorCode` can be retrieved.

4.4.4 SIIPrinterManagerDelegate Protocol

(1) Method List

Methods provided by **SIIPrinterManagerDelegate** protocol are shown in the following table.

Name	Description
didStatusChange	Notify printer status

(NOTE) MP-B21L does not support the APIs of the barcode scanner.

(2) Method Details

```
didStatusChange                                Notify printer status
```

Notifies changes in the printer status.

```
Syntax      - (void) didStatusChange: (SIIPrinterManager *)printerManager
              status: (NSInteger)status;
```

Parameter	printerManager	Calling SIIPrinterManager object
	status	Printer status

Description	<p>This method is called the latest status at the following timing.</p> <ul style="list-style-type: none"> ·When connect is executed. ·When the printer status is changed.
-------------	---

This method is called when `isConnect` is YES.

The notification of the printer status is stopped by `disconnect`.

The notification of the printer status is stopped by setting nil to `delegate`.

When communication with the printer is disconnected, this method notifies 0x80000000. After disconnection from the printer, the library attempts to resume communication with the printer until **disconnect** is executed. When communication with the printer becomes possible, this method notifies the latest printer status. See **getStatus** for description of the printer status.

Do not execute the APIs of `SIIPrinterManager` within this method.

4.4.5 SIISmartLabelManager Class


SIISmartLabelManager class provides the function to covert the label file (*.sl, *.slex) created using the app into the printable data from the printer.

(1) Method List

Methods provided by the **SIISmartLabelManager** class are shown in the following table.

Name	Description
selectSmartLabelFile	Specify label file
replaceSmartLabelTextData	Replace text data of label
replaceSmartLabelImageData	Replace image data of label
replaceSmartLabelBarcodeData	Replace barcode data of label

The example of the procedure for replacing and printing data using the label file is described below.

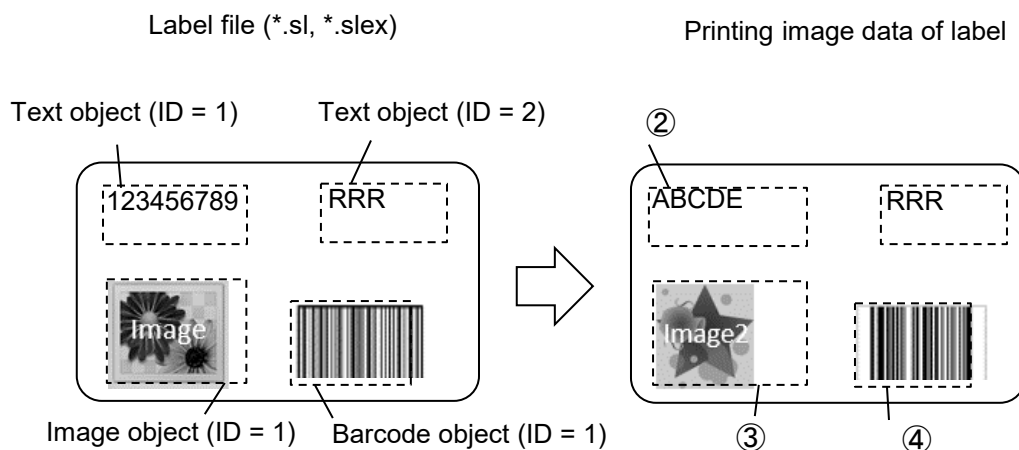

① Specify a label file to print or replace data.

```
[labelManager selectSmartLabelFile:filePath];
```

② Replace text data.

```
[labelManager replaceSmartLabelTextData:1 text:@"ABCDE"];
```

③ Replace image data.

```
[labelManager replaceSmartLabelImageData:1 image:SeasonImage];
```

④ Replace barcode data.

```
[labelManager replaceSmartLabelBarcodeData:1 text:@"123456789"];
```

⑤ Print labels.

```
[printerManager printSmartLabelImageData:labelManager];
```

(2) Method Details

```
selectSmartLabelFile
```

Specify label file

Specifies a label file (*.sl, *.slex).

Syntax - (void) **selectSmartLabelFile**: (NSString *) fileName;

Parameter	fileName	Path of label file (*.sl, *.slex) to use (*.sl is deprecated.) Specify the label file (*.sl, *.slex) created in the app.
-----------	----------	---

Error `SIIPrinterException` is thrown when an error occurs while this method is being called.
See "[4.4.3 SIIPrinterException Class](#)" for details on the error.

Description	The specified label file (*.sl, *.slex) is retained internally. After specifying the label file, the data of each object can be replaced.
-------------	--

The label files that can be used are restricted. See **"4.2.1 Structure of Label File"** for restrictions.

Note The label files (*.sl) are label file that will not be supported in the future.
Use label files (*.slex) that can be created using SII Layout Editor (app version 1.5.0 or later).

```
replaceSmartLabelTextData
```

Replace text data of label

Replaces the value of the text object of the label file (*.sl, *.slex).

Syntax

```
- (void) replaceSmartLabelTextData: (NSInteger)mapID  
                                text:(NSString *)text;
```

Parameter	mapID	ID of text object Specify the ID of the text object mapped on the label file (*.sl, *.slex) of the app. The ID of the text object can be confirmed on the UI display of the app.
-----------	-------	---




UI display of app

text	Text data to replace
------	----------------------

Error **SIIPrinterException** is thrown when an error occurs while this method is being called.
See "**4.4.3 SIIPrinterException Class**" for details on the error.

Replaces the image object of the label file (*.sl, *.slex).

Syntax	- (void) replaceSmartLabelImageData: (NSInteger)mapID image:(UIImage *)image;	
Parameter	mapID	ID of the image object Specify the ID of the image object mapped on the label file (*.sl, *.slex) of the app. The ID of the image object can be confirmed on the UI display of the app.

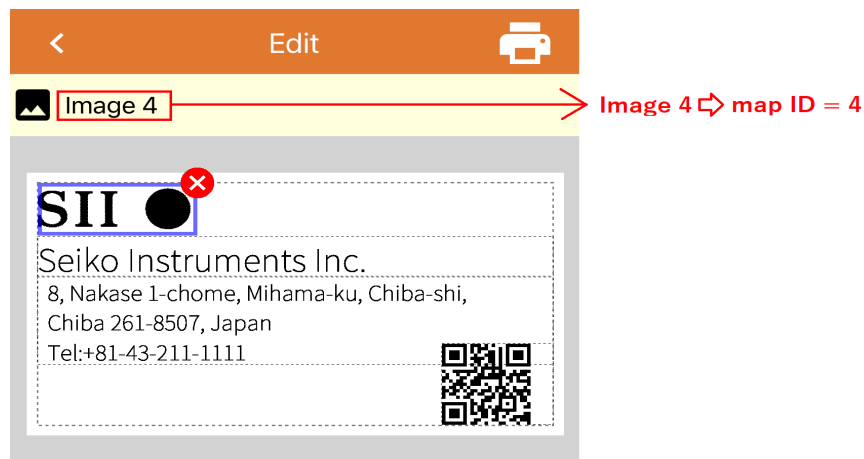

UI display of app

image Image data to replace


Error	SIIPrinterException is thrown when an error occurs while this method is being called. See " 4.4.3 SIIPrinterException Class " for details on the error.
-------	--

Replaces the value of the barcode object of the label file (*.sl, *.slex).

Syntax

```
- (void) replaceSmartLabelBarcodeData: (NSInteger)mapID  
                                text:(NSString *)text
```

Parameter	mapID	ID of the barcode object Specify the ID of the barcode object mapped on the label file (*.sl, *.slx) of the app. The ID of the barcode object can be confirmed on the UI display of the app.
-----------	-------	---

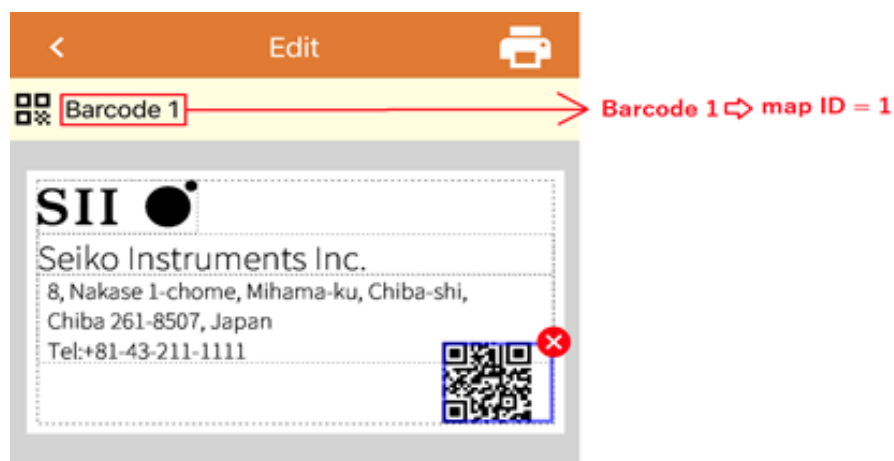

UI display of app

text Text data to replace
Even if the text data to be replaced is invalid barcode data, an error is not caused. Make sure that the barcode data is valid before specifying it.

Error `SIIPrinterException` is thrown when an error occurs while this method is being called.
See "[4.4.3 SIIPrinterException Class](#)" for details on the error.

Chapter 5


Sample Program

This chapter describes the sample program provided by SII print class library.

5.1 Screen Layout

SII print class library includes SiiLibSample, a sample program in Xcode project format. This section describes the screen of SiiLibSample.

5.1.1 Main Screen

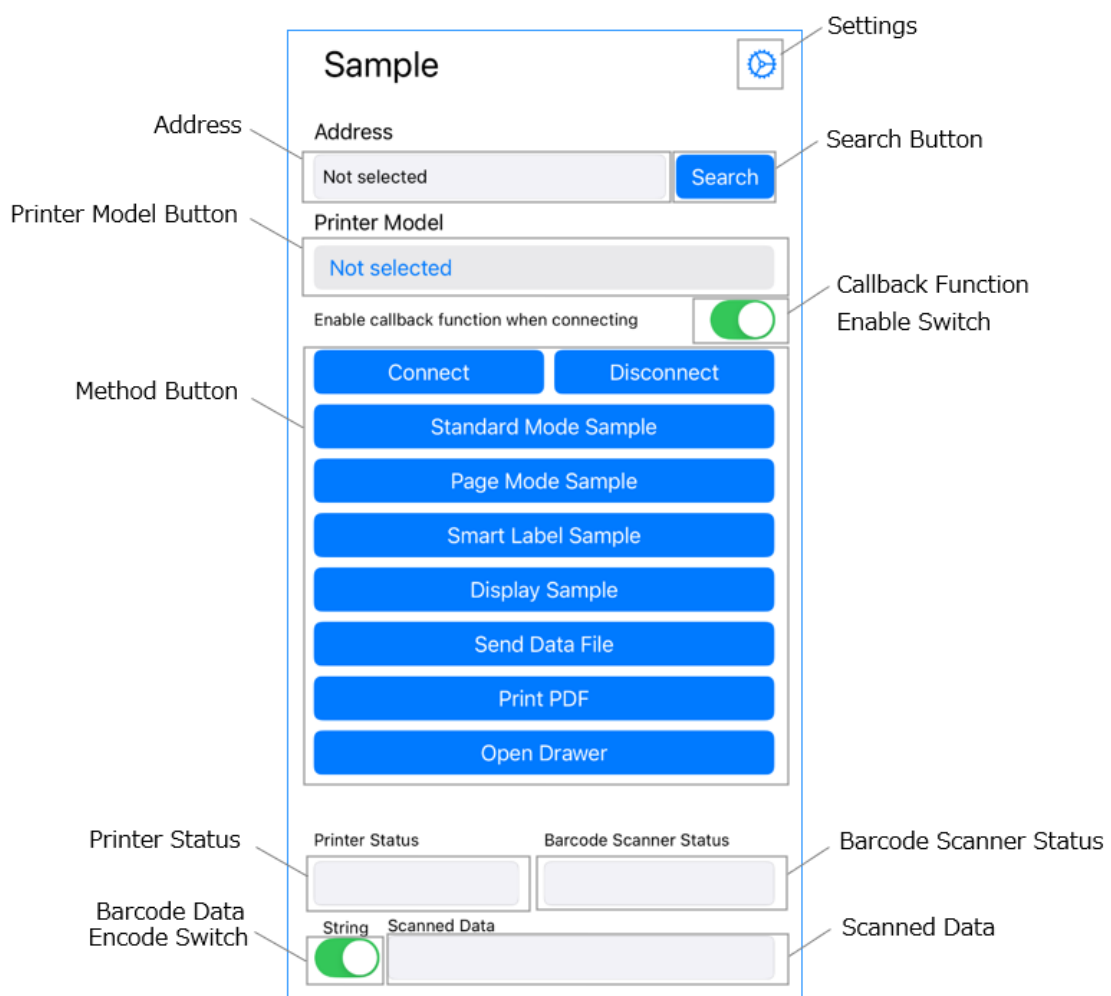


Item	Description
Settings	Tapping the [Settings] button opens the function setting screen. In order to go back to the main screen, tap [close] on the top left of the screen.
Address	Displays the information about the selected printer.
Printer Model Button	Specifies the printer model. When tapping [Printer Model Button], a list of printer models is displayed. By selecting from the list, the printer model can be entered. When the printer is selected from the printer search screen, the printer model is automatically displayed.
Search Button	Starts searching for printers. Transits to the printer search screen. A list of the searched printers is displayed. The printer is selected by tapping the searched printer and returns to the main screen.
Callback Function Enable Switch	Select whether to enable the callback function when connecting to the printer. On : Starts the callback function when connecting. Off : The callback function does not respond.
Method Button ^{*1}	In addition to the method buttons for executing connect and disconnect , the sample by the combination of some methods can be printed and checked for the operation of peripheral devices.
Printer Status	Displays the printer status. When [Callback Function Enable Switch] is On, the latest status is displayed.
Barcode Scanner Status	Displays the connection status of the barcode scanner. MP-B21L does not support the barcode scanner.
Barcode Data Encode Switch	Selects the conversion of barcode data read by the barcode scanner. MP-B21L does not support the barcode scanner.
Scanned Data	Displays the barcode data read by the barcode scanner. MP-B21L does not support the barcode scanner.

^{*1}: Supported functions vary by model. Only supported functions can be operated.

5.1.2 [Settings] Screen

Various setting functions are displayed in [Settings].

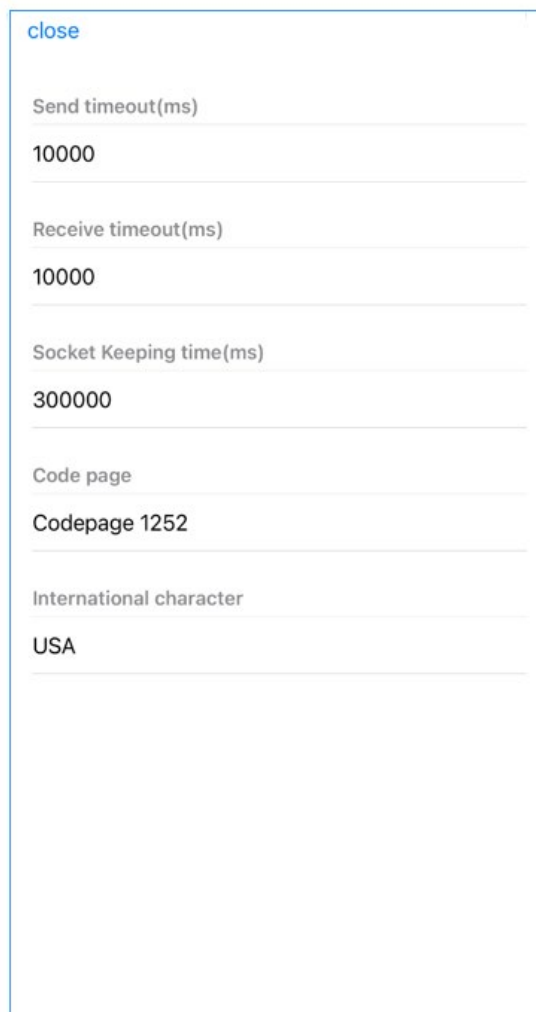

The screenshot displays a settings menu with a 'close' link at the top left. Below it are five settings, each with a label and a value field:

- Send timeout(ms)**: 10000
- Receive timeout(ms)**: 10000
- Socket Keeping time(ms)**: 300000
- Code page**: Codepage 1252
- International character**: USA

5.2 Precaution

The sample program is subject to change without notice.

No guarantee of proper operation and support are provided for the sample program.

Appendix A

Character Set

A.1 Codepage Table (Character Code Table)

The codepages when **SII_PM_COUNTRY_USA** is set for the international character set are shown below. Print results of the specific character codes vary depending on the setting of the international character set. See "A.2 International Character Set" for the specific character codes.

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	φ	£	¥	℔	ƒ
A0	á	í	ó	ú	ñ	Ñ	ä	ö	¿	¬	½	¼	¾	¼	¾	¾
B0	☐	☐	☐		†	‡	§	¶	§	§	§	§	§	§	§	§
C0	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
D0	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	∩
F0	≡	±	≥	≤	∫	∫	÷	≈	°	°	°	√	n	2	■	■

Figure A-1 SII_PM_CODE_PAGE_437 (USA, Standard Europe)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80																
90																
A0	。	「	」	、	・	ヲ	ア	イ	ウ	エ	オ	ヤ	ユ	ヨ	ッ	
B0	ー	ア	イ	ウ	エ	オ	カ	キ	ク	ケ	コ	サ	シ	ス	セ	ソ
C0	タ	チ	ツ	テ	ト	ナ	ニ	ヌ	ネ	ノ	ハ	ヒ	フ	ヘ	ホ	マ
D0	ミ	ム	メ	モ	ヤ	ユ	ヨ	ラ	リ	ル	レ	ロ	ワ	ン	ゝ	。
E0																
F0																

Figure A-2 SH_PM_CODE_PAGE_KATAKANA

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	â	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	Ø	×	f
A0	á	í	ó	ú	ñ	Ñ	ä	ö	¿	®	¬	½	¼	¡	«	»
B0	☐	☐	☐			Á	Â	À	©	¶	¶	¶	¶	¢	¥	₱
C0	⊥	⊥	⊥	⊥	⊥	ã	Ã	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	α
D0	ð	Đ	Ê	Ë	È	Í	Î	Ï	⌋	⌋	■	■	■	■	■	■
E0	ó	β	ô	ò	õ	õ	μ	þ	þ	ú	û	ù	ý	ý	-	´
F0	-	±	=	¾	¶	§	÷	,	°	…	.	¹	³	²	■	

Figure A-3 SH_PM_CODE_PAGE_850 (Multilingual)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ã	à	Á	ç	ê	Ê	è	Í	Ô	ì	Ã	Â
90	É	À	È	ô	õ	ò	Ú	ù	Ì	Õ	Ü	¢	£	Ù	Þ	Ó
A0	á	í	ó	ú	ñ	Ñ	ä	ö	ï	ò	¬	½	¼	¡	«	»
B0	⌘	⌘	⌘													
C0	L	L	T		-	+	+	+	+	+	+	+	+	+	+	+
D0	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	Π
F0	≡	±	≥	≤		J	÷	≈	°	•	•	√	n	2	■	

Figure A-4 SII_PM_CODE_PAGE_860 (Portuguese)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	Â	à	¶	ç	ê	ë	è	ï	î	≡	À	§
90	É	È	Ê	ô	Ë	Ï	Ô	Ù	⊗	Ô	Ü	¢	£	Ù	û	f
A0	í	´	ó	ú	¨	³	-	î	¬	¬	½	¼	¾	«	»	
B0	⌘	⌘	⌘													
C0	L	L	T		-	+	+	+	+	+	+	+	+	+	+	+
D0	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	Π
F0	≡	±	≥	≤		J	÷	≈	°	•	•	√	n	2	■	

Figure A-5 SII_PM_CODE_PAGE_863 (Canadian-French)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	Ø	Pt	f
A0	á	í	ó	ú	ñ	Ñ	ä	ö	í	í	½	¼	í	«	»	
B0	☐	☐	☐													
C0	L	L	T													
D0	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	∩
F0	≡	±	≥	≤		J	÷	≈	°	.	.	√	n	2	■	

Figure A-6 SII_PM_CODE_PAGE_865 (Nordic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	Ø	Ş	ş
A0	á	í	ó	ú	ñ	Ñ	Ğ	ğ	ı	®	¬	½	¼	ı	«	»
B0	☐	☐	☐			Á	Â	À	©							
C0	L	L	T			ã	Ã	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌	⌌
D0	o	a	Ê	Ë	È	Í	Î	Ï	J	Γ	■	■		İ	■	
E0	ó	β	ô	ò	õ	Ö	μ	×	ú	û	ü	ì	ÿ	-	'	
F0	-	±	¾	¶	§	÷	,	°	..	.	1	3	2	■		

Figure A-7 SII_PM_CODE_PAGE_857 (Turkish)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	A	B	Γ	Δ	E	Z	H	Θ	I	K	Λ	M	N	Ξ	O	Π
90	P	Σ	T	Υ	Φ	X	Ψ	Ω	α	β	γ	δ	ε	ζ	η	θ
A0	ι	κ	λ	μ	ν	ξ	ο	π	ρ	σ	ς	τ	υ	φ	χ	ψ
B0	⋈	⋈	⋈		†	‡		π	‡			π			‡	‡
C0	L	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
D0	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
E0	ω	ά	έ	ή	ϊ	ί	ό	ύ	ϋ	ώ	Ά	Έ	Ή	Ί	Ό	Υ
F0	Ω	±	≥	≤	İ	ÿ	÷	≈	°	.	.	√	n	2		

Figure A-8 SHI_PM_CODE_PAGE_737 (Greek)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	’	“	”	•	-	-	~	™	š	<	œ		ž	
90											š	>	œ		ž	ÿ
A0	ı	¢	£	¤	¥	¦	§	¨	©	ª	«	¬	®	¯		
B0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾	¿
C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D0	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
E0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F0	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ

Figure A-9 SHI_PM_CODE_PAGE_1252 (Latin)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
90	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я
A0	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
B0	␣	␣	␣													
C0	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣
D0	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣
E0	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я
F0	Ё	ё	Є	є	İ	ı	Ÿ	ÿ	°	•	•	√	№	α	■	

Figure A-10 SII_PM_CODE_PAGE_866 (Russian)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	û	ç	ł	ë	ő	ö	î	ž	Ä	Ć	
90	É	Í	í	ô	ö	Ĺ	ĺ	Ś	ś	Ö	Ü	Ť	ť	Ł	×	č
A0	á	í	ó	ú	À	à	Ž	ž	Ę	ę	¬	ž	Č	š	«	»
B0	␣	␣	␣			Á	Â	Ě	Š					Ž	ž	ı
C0	␣	␣	␣	␣	␣	Ä	ä	Ľ	ľ	␣	␣	␣	␣	␣	␣	␣
D0	ď	Đ	Ď	Ě	ď	Ň	í	î	ě	ı	ı	ı	ı	ı	ı	ı
E0	ó	ß	ô	ń	ň	š	š	ř	ú	ř	ú	ý	ý	ı	ı	ı
F0	-	"	˘	˘	˘	§	÷	˚	˚	˚	˚	ú	ř	ř	ı	ı

Figure A-11 SII_PM_CODE_PAGE_852 (Eastern Europe)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	â	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	Ø	×	f
A0	á	í	ó	ú	ñ	Ñ	ä	ö	¿	®	¬	½	¼	¡	«	»
B0	☐	☐	☐			Á	Â	Ã	©	¶		¶	¶	¶	¢	¥
C0	L	⊥	T	└	├	⊥	ã	Ã	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	α
D0	ð	Ð	Ê	Ë	È	€	Í	Î	Ï	Ј	Г	■	■	■	İ	■
E0	ó	β	ô	ò	õ	õ	μ	þ	þ	ú	û	ü	ý	ý	-	'
F0	-	±	=	¾	¶	§	÷	,	°	..	.	1	3	2		■

Figure A-12 SII_PM_CODE_PAGE_858 (Euro)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	ђ	Ђ	ѓ	Ѓ	ё	Ё	є	Є	ѕ	Ѕ	і	І	ї	Ї	ј	Ј
90	љ	Љ	њ	Њ	ћ	Ћ	ќ	Ќ	џ	Џ	џ	џ	џ	џ	џ	џ
A0	а	А	б	Б	в	В	г	Г	д	Д	е	Е	ф	Ф	г	Г
B0	☐	☐	☐			x	X	и	И							
C0	L	⊥	T	└	├	⊥	к	К	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	α
D0	л	Л	м	М	н	Н	о	О	п	П	г	■	■	■	П	я
E0	Я	р	Р	с	С	т	Т	у	У	ж	Ж	в	В	ь	ь	№
F0	-	ы	Ы	э	Э	ш	Ш	э	Э	щ	Щ	ч	Ч	§		■

Figure A-13 SII_PM_CODE_PAGE_855 (Cyrillic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	°	•	•	√	■	-		+	+	+	+	+	+	+	+	+
90	β	∞	φ	±	½	¼	≈	«	»	لَا	لَا	لَا	لَا	لَا	لَا	لَا
A0	-	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل	ل
B0	•	١	٢	٣	٤	٥	٦	٧	٨	٩	ف	س	س	س	س	س
C0	¢	ء	آ	أ	ؤ	ع	ئ	ب	ا	ث	ة	ج	ح	خ	د	ذ
D0	ذ	ر	ز	س	ش	ص	ض	ط	ظ	ع	غ	ف	ق	ك	خ	ع
E0	-	ف	ق	ك	م	ل	ه	و	ي	ي	ي	ي	ي	ي	ي	ي
F0	-	ن	ه	ي	ي	ي	ي	ي	ي	ي	ي	ي	ي	ي	ي	ي

Figure A-14 SII_PM_CODE_PAGE_864 (Arabic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	’	“	”	•	-	-	™	š	Š	š	Š	š	Š	š
90	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘
A0	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘
B0	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘	˘
C0	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á	Á
D0	Đ	Đ	Đ	Đ	Đ	Đ	Đ	Đ	Đ	Đ	Đ	Đ	Đ	Đ	Đ	Đ
E0	ř	ř	ř	ř	ř	ř	ř	ř	ř	ř	ř	ř	ř	ř	ř	ř
F0	đ	đ	đ	đ	đ	đ	đ	đ	đ	đ	đ	đ	đ	đ	đ	đ

Figure A-15 SII_PM_CODE_PAGE_1250 (Central European)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	ђ	ѓ	;	ѓ	„	...	†	‡	€	‰	Љ	<	Њ	ќ	ћ	џ
90	ђ	‘	;	“	”	•	-	-	™	Љ	>	њ	ќ	ћ	џ	
A0	ÿ	ÿ	Ј	Ѡ	Г	І	Š	Ě	©	©	«	¬	-	®	İ	
B0	°	±	İ	ı	г	μ	¶	•	ё	№	е	»	ј	Š	s	ı
C0	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
D0	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я
E0	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
F0	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я

Figure A-16 SH_PM_CODE_PAGE_1251 (Cyrillic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	;	ƒ	„	...	†	‡	‰		<					
90		‘	;	“	”	•	-	-	™		>					
A0	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ
B0	°	±	²	³	´	μ	¶	•	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ
C0	ı	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	Μ	Ν	Ξ	Ο
D0	Π	Ρ		Σ	Τ	Υ	Φ	Χ	Ψ	Ω	İ	ÿ	ά	έ	ή	ί
E0	ύ	α	β	γ	δ	ε	ζ	η	θ	ι	κ	λ	μ	ν	ξ	ο
F0	π	ρ	ς	σ	τ	υ	φ	χ	ψ	ω	ï	ÿ	ό	ύ	ώ	

Figure A-17 SH_PM_CODE_PAGE_1253 (Greek)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	’	“	”	•	-	-	~	™	š	<	Œ			
90		‘	’	“	”	•	-	-	~	™	š	>	œ			ÿ
A0	ı	¢	£	¤	¥	¦	§	¨	©	ª	«	¬	®	¯		
B0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾	¿
C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D0	Ğ	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	İ	Ş	ß
E0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F0	ğ	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ı	ş	ÿ

Figure A-18 SII_PM_CODE_PAGE_1254 (Turkish)

A.2 International Character Set

Print results of the specific character codes vary depending on the setting of the international character set. The following table shows the specific character codes and their print results.

	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
COUNTRY_USA	#	\$	@	[\]	^	`	{		}	~
COUNTRY_FRANCE	#	\$	à	°	ç	§	^	`	é	ù	è	..
COUNTRY_GERMANY	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß
COUNTRY_ENGLAND	£	\$	@	[\]	^	`	{		}	~
COUNTRY_DENMARK_1	#	\$	@	Æ	Ø	Å	^	`	æ	ø	å	~
COUNTRY_SWEDEN	#	α	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
COUNTRY_ITALY	#	\$	@	°	\	é	^	ù	à	ò	è	ì
COUNTRY_SPAIN	ℙ	\$	@	ı	Ñ	ı	^	`	..	ñ	}	~
COUNTRY_JAPAN	#	\$	@	[¥]	^	`	{		}	~
COUNTRY_NORWAY	#	α	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü
COUNTRY_DENMARK_2	#	\$	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü
COUNTRY_SPAIN_2	#	\$	á	ı	Ñ	ı	é	`	í	ñ	ó	ú
COUNTRY_LATIN_AMERICA	#	\$	á	ı	Ñ	ı	é	ü	í	ñ	ó	ú
COUNTRY_ARABIA	#	\$	@	[\]	^	`	{		}	~

Figure A-19 International Character Set

Appendix B

Barcode Size List

B.1 Barcode Size List

B.1.1 `printBarcode`, `printPageModeBarcode`



(1) Height of the barcode image

<code>barcodeSymbol</code>	<code>hriFont</code>	<code>hriPosition</code>	Length from Top of Barcode to Reference Point	Height of Barcode Image
SII_PM_BARCODE_UPC_A SII_PM_BARCODE_UPC_B SII_PM_BARCODE_EAN13 SII_PM_BARCODE_JAN13 SII_PM_BARCODE_EAN8 SII_PM_BARCODE_JAN8 SII_PM_BARCODE_CODE39 SII_PM_BARCODE_CODE93 SII_PM_BARCODE_CODE128 SII_PM_BARCODE_ITF SII_PM_BARCODE_CODABAR SII_PM_BARCODE_EAN13_ADDON SII_PM_BARCODE_JAN13_ADDON SII_PM_BARCODE_GS1_OMNI_DIRECTIONAL SII_PM_BARCODE_GS1_TRUNCATED SII_PM_BARCODE_GS1_LIMITED SII_PM_BARCODE_GS1_EXPANDED	SII_PM_FONT_A	SII_PM_HRI_NONE	<code>moduleHeight</code>	<code>moduleHeight</code>
		SII_PM_HRI_POSITION_ABOVE	<code>moduleHeight + 32</code>	<code>moduleHeight + 32</code>
		SII_PM_HRI_POSITION_BELOW	<code>moduleHeight</code>	<code>moduleHeight + 32</code>
		SII_PM_HRI_POSITION_ABOVE_BELOW	<code>moduleHeight + 64</code>	<code>moduleHeight + 64</code>
	SII_PM_FONT_B	SII_PM_HRI_NONE	<code>moduleHeight</code>	<code>moduleHeight</code>
		SII_PM_HRI_POSITION_ABOVE	<code>moduleHeight + 24</code>	<code>moduleHeight + 24</code>
		SII_PM_HRI_POSITION_BELOW	<code>moduleHeight</code>	<code>moduleHeight + 24</code>
		SII_PM_HRI_POSITION_ABOVE_BELOW	<code>moduleHeight + 48</code>	<code>moduleHeight + 48</code>

barcodeSymbol	moduleSize	Height of Barcode Image
SII_PM_BARCODE_CUSTOMER _BAR_CODE_JP	SII_PM_CUSTOMERBARCODEJP_MODULE_4	12
	SII_PM_CUSTOMERBARCODEJP_MODULE_5	15
	SII_PM_CUSTOMERBARCODEJP_MODULE_6	18
	SII_PM_CUSTOMERBARCODEJP_MODULE_7	21
	SII_PM_CUSTOMERBARCODEJP_MODULE_8	24
	SII_PM_CUSTOMERBARCODEJP_MODULE_9	27
	SII_PM_CUSTOMERBARCODEJP_MODULE_10	30

(2) Width of the barcode image

barcodeSymbol	moduleSize	Width of Barcode Image
SII_PM_BARCODE_UPC_A	SII_PM_BARCODE_MODULE_WIDTH_2	190
	SII_PM_BARCODE_MODULE_WIDTH_3	285
	SII_PM_BARCODE_MODULE_WIDTH_4	380
	SII_PM_BARCODE_MODULE_WIDTH_5	475
	SII_PM_BARCODE_MODULE_WIDTH_6	570
SII_PM_BARCODE_UPC_E	SII_PM_BARCODE_MODULE_WIDTH_2	102
	SII_PM_BARCODE_MODULE_WIDTH_3	153
	SII_PM_BARCODE_MODULE_WIDTH_4	204
	SII_PM_BARCODE_MODULE_WIDTH_5	255
	SII_PM_BARCODE_MODULE_WIDTH_6	306
SII_PM_BARCODE_EAN13	SII_PM_BARCODE_MODULE_WIDTH_2	190
	SII_PM_BARCODE_MODULE_WIDTH_3	285
	SII_PM_BARCODE_MODULE_WIDTH_4	380
	SII_PM_BARCODE_MODULE_WIDTH_5	475
	SII_PM_BARCODE_MODULE_WIDTH_6	570
SII_PM_BARCODE_JAN13	SII_PM_BARCODE_MODULE_WIDTH_2	190
	SII_PM_BARCODE_MODULE_WIDTH_3	285
	SII_PM_BARCODE_MODULE_WIDTH_4	380
	SII_PM_BARCODE_MODULE_WIDTH_5	475
	SII_PM_BARCODE_MODULE_WIDTH_6	570
SII_PM_BARCODE_EAN8	SII_PM_BARCODE_MODULE_WIDTH_2	134
	SII_PM_BARCODE_MODULE_WIDTH_3	201
	SII_PM_BARCODE_MODULE_WIDTH_4	268
	SII_PM_BARCODE_MODULE_WIDTH_5	335
	SII_PM_BARCODE_MODULE_WIDTH_6	402

barcodeSymbol	moduleSize	Width of Barcode Image
SII_PM_BARCODE_JAN8	SII_PM_BARCODE_MODULE_WIDTH_2	134
	SII_PM_BARCODE_MODULE_WIDTH_3	201
	SII_PM_BARCODE_MODULE_WIDTH_4	268
	SII_PM_BARCODE_MODULE_WIDTH_5	335
	SII_PM_BARCODE_MODULE_WIDTH_6	402
SII_PM_BARCODE_CODE93	SII_PM_BARCODE_MODULE_WIDTH_2	18 × number of barcode data + 56
	SII_PM_BARCODE_MODULE_WIDTH_3	27 × number of barcode data + 84
	SII_PM_BARCODE_MODULE_WIDTH_4	36 × number of barcode data + 112
	SII_PM_BARCODE_MODULE_WIDTH_5	45 × number of barcode data + 140
	SII_PM_BARCODE_MODULE_WIDTH_6	54 × number of barcode data + 168
SII_PM_BARCODE_CODE128	SII_PM_BARCODE_MODULE_WIDTH_2	22 × number of barcode data + 26
	SII_PM_BARCODE_MODULE_WIDTH_3	33 × number of barcode data + 39
	SII_PM_BARCODE_MODULE_WIDTH_4	44 × number of barcode data + 52
	SII_PM_BARCODE_MODULE_WIDTH_5	55 × number of barcode data + 65
	SII_PM_BARCODE_MODULE_WIDTH_6	66 × number of barcode data + 78
SII_PM_BARCODE_CUSTOMER _BAR_CODE_JP	SII_PM_CUSTOMERBARCODEJP_MODULE_4	266
	SII_PM_CUSTOMERBARCODEJP_MODULE_5	333
	SII_PM_CUSTOMERBARCODEJP_MODULE_6	399
	SII_PM_CUSTOMERBARCODEJP_MODULE_7	466
	SII_PM_CUSTOMERBARCODEJP_MODULE_8	532
	SII_PM_CUSTOMERBARCODEJP_MODULE_9	599
	SII_PM_CUSTOMERBARCODEJP_MODULE_10	665
SII_PM_BARCODE_GS1_OMNI_ DIRECTIONAL	SII_PM_BARCODE_MODULE_WIDTH_2	192
	SII_PM_BARCODE_MODULE_WIDTH_3	288
	SII_PM_BARCODE_MODULE_WIDTH_4	384
	SII_PM_BARCODE_MODULE_WIDTH_5	480
	SII_PM_BARCODE_MODULE_WIDTH_6	576
SII_PM_BARCODE_GS1_TRUN CATED	SII_PM_BARCODE_MODULE_WIDTH_2	192
	SII_PM_BARCODE_MODULE_WIDTH_3	288
	SII_PM_BARCODE_MODULE_WIDTH_4	384
	SII_PM_BARCODE_MODULE_WIDTH_5	480
	SII_PM_BARCODE_MODULE_WIDTH_6	576
SII_PM_BARCODE_GS1_LIMIT ED	SII_PM_BARCODE_MODULE_WIDTH_2	158
	SII_PM_BARCODE_MODULE_WIDTH_3	237
	SII_PM_BARCODE_MODULE_WIDTH_4	316
	SII_PM_BARCODE_MODULE_WIDTH_5	395
	SII_PM_BARCODE_MODULE_WIDTH_6	474

barcodeSymbol	moduleSize	Width of Barcode Image
SII_PM_BARCODE_GS1_EXPANDED ^{*1}	SII_PM_BARCODE_MODULE_WIDTH_2	number of barcode module × 2
	SII_PM_BARCODE_MODULE_WIDTH_3	number of barcode module × 3
	SII_PM_BARCODE_MODULE_WIDTH_4	number of barcode module × 4
	SII_PM_BARCODE_MODULE_WIDTH_5	number of barcode module × 5
	SII_PM_BARCODE_MODULE_WIDTH_6	number of barcode module × 6

*1: The number of barcode module is determined by the barcode data to be specified.

barcodeSymbol	nwRatio	moduleSize	Width of Barcode Image
SII_PM_BARCODE_CODE39	SII_PM_NWRATIO_1TO2	SII_PM_BARCODE_MODULE_WIDTH_2	26 × number of barcode data + 50
		SII_PM_BARCODE_MODULE_WIDTH_3	39 × number of barcode data + 75
		SII_PM_BARCODE_MODULE_WIDTH_4	52 × number of barcode data + 100
		SII_PM_BARCODE_MODULE_WIDTH_5	65 × number of barcode data + 125
		SII_PM_BARCODE_MODULE_WIDTH_6	78 × number of barcode data + 150
	SII_PM_NWRATIO_1TO2_5	SII_PM_BARCODE_MODULE_WIDTH_2	29 × number of barcode data + 56
		SII_PM_BARCODE_MODULE_WIDTH_3	45 × number of barcode data + 87
		SII_PM_BARCODE_MODULE_WIDTH_4	58 × number of barcode data + 112
		SII_PM_BARCODE_MODULE_WIDTH_5	74 × number of barcode data + 143
		SII_PM_BARCODE_MODULE_WIDTH_6	87 × number of barcode data + 168
	SII_PM_NWRATIO_1TO3	SII_PM_BARCODE_MODULE_WIDTH_2	32 × number of barcode data + 62
		SII_PM_BARCODE_MODULE_WIDTH_3	48 × number of barcode data + 93
		SII_PM_BARCODE_MODULE_WIDTH_4	64 × number of barcode data + 124
		SII_PM_BARCODE_MODULE_WIDTH_5	80 × number of barcode data + 155
		SII_PM_BARCODE_MODULE_WIDTH_6	96 × number of barcode data + 186

barcodeSymbol	nwRatio	moduleSize	Width of Barcode Image
SII_PM_BARCODE_ITSF	SII_PM_NWRATIO_1TO2	SII_PM_BARCODE_MODULE_WIDTH_2	14 × number of barcode data + 16
		SII_PM_BARCODE_MODULE_WIDTH_3	21 × number of barcode data + 24
		SII_PM_BARCODE_MODULE_WIDTH_4	28 × number of barcode data + 32
		SII_PM_BARCODE_MODULE_WIDTH_5	35 × number of barcode data + 40
		SII_PM_BARCODE_MODULE_WIDTH_6	42 × number of barcode data + 48
	SII_PM_NWRATIO_1TO2_5	SII_PM_BARCODE_MODULE_WIDTH_2	16 × number of barcode data + 17
		SII_PM_BARCODE_MODULE_WIDTH_3	25 × number of barcode data + 26
		SII_PM_BARCODE_MODULE_WIDTH_4	32 × number of barcode data + 34
		SII_PM_BARCODE_MODULE_WIDTH_5	41 × number of barcode data + 43
		SII_PM_BARCODE_MODULE_WIDTH_6	48 × number of barcode data + 51
	SII_PM_NWRATIO_1TO3	SII_PM_BARCODE_MODULE_WIDTH_2	18 × number of barcode data + 18
		SII_PM_BARCODE_MODULE_WIDTH_3	27 × number of barcode data + 27
		SII_PM_BARCODE_MODULE_WIDTH_4	36 × number of barcode data + 36
		SII_PM_BARCODE_MODULE_WIDTH_5	45 × number of barcode data + 45
		SII_PM_BARCODE_MODULE_WIDTH_6	54 × number of barcode data + 54
SII_PM_BARCODE_CODABAR*1	SII_PM_NWRATIO_1TO2	SII_PM_BARCODE_MODULE_WIDTH_2	20 × number of data + 2 × (2 + number of wide data) - 2
		SII_PM_BARCODE_MODULE_WIDTH_3	30 × number of data + 3 × (2 + number of wide data) - 3
		SII_PM_BARCODE_MODULE_WIDTH_4	40 × number of data + 4 × (2 + number of wide data) - 4
		SII_PM_BARCODE_MODULE_WIDTH_5	50 × number of data + 5 × (2 + number of wide data) - 5
		SII_PM_BARCODE_MODULE_WIDTH_6	60 × number of data + 6 × (2 + number of wide data) - 6

barcodeSymbol	nwRatio	moduleSize	Width of Barcode Image
SII_PM_BARCODE_CODABAR*1	SII_PM_NWRATIO_1TO2_5	SII_PM_BARCODE_MODULE_WIDTH_2	$22 \times \text{number of data} + 3 \times (2 + \text{number of wide data}) - 2$
		SII_PM_BARCODE_MODULE_WIDTH_3	$34 \times \text{number of data} + 5 \times (2 + \text{number of wide data}) - 3$
		SII_PM_BARCODE_MODULE_WIDTH_4	$44 \times \text{number of data} + 6 \times (2 + \text{number of wide data}) - 4$
		SII_PM_BARCODE_MODULE_WIDTH_5	$56 \times \text{number of data} + 8 \times (2 + \text{number of wide data}) - 5$
		SII_PM_BARCODE_MODULE_WIDTH_6	$66 \times \text{number of data} + 9 \times (2 + \text{number of wide data}) - 6$
	SII_PM_NWRATIO_1TO3	SII_PM_BARCODE_MODULE_WIDTH_2	$24 \times \text{number of data} + 4 \times (2 + \text{number of wide data}) - 2$
		SII_PM_BARCODE_MODULE_WIDTH_3	$36 \times \text{number of data} + 6 \times (2 + \text{number of wide data}) - 3$
		SII_PM_BARCODE_MODULE_WIDTH_4	$48 \times \text{number of data} + 8 \times (2 + \text{number of wide data}) - 4$
		SII_PM_BARCODE_MODULE_WIDTH_5	$60 \times \text{number of data} + 10 \times (2 + \text{number of wide data}) - 5$
		SII_PM_BARCODE_MODULE_WIDTH_6	$72 \times \text{number of data} + 12 \times (2 + \text{number of wide data}) - 6$

*1: The number of data is the number of all characters except for the start and stop characters.
The wide data is the number of " : / . + ".

barcodeSymbol	Number of Data	moduleSize	Width of Barcode Image
SII_PM_BARCODE_EAN13_ADDON	14 or 15	SII_PM_BARCODE_MODULE_WIDTH_2	244
		SII_PM_BARCODE_MODULE_WIDTH_3	366
		SII_PM_BARCODE_MODULE_WIDTH_4	488
		SII_PM_BARCODE_MODULE_WIDTH_5	610
		SII_PM_BARCODE_MODULE_WIDTH_6	732
	17 or 18	SII_PM_BARCODE_MODULE_WIDTH_2	298
		SII_PM_BARCODE_MODULE_WIDTH_3	447
		SII_PM_BARCODE_MODULE_WIDTH_4	596
		SII_PM_BARCODE_MODULE_WIDTH_5	745
		SII_PM_BARCODE_MODULE_WIDTH_6	894
SII_PM_BARCODE_JAN13_ADDON	14 or 15	SII_PM_BARCODE_MODULE_WIDTH_2	244
		SII_PM_BARCODE_MODULE_WIDTH_3	366
		SII_PM_BARCODE_MODULE_WIDTH_4	488
		SII_PM_BARCODE_MODULE_WIDTH_5	610
		SII_PM_BARCODE_MODULE_WIDTH_6	732
	17 or 18	SII_PM_BARCODE_MODULE_WIDTH_2	298
		SII_PM_BARCODE_MODULE_WIDTH_3	447
		SII_PM_BARCODE_MODULE_WIDTH_4	596
		SII_PM_BARCODE_MODULE_WIDTH_5	745
		SII_PM_BARCODE_MODULE_WIDTH_6	894

B.1.2 printPDF417, printPageModePDF417



(1) Height of the barcode image

$$\text{Height of the barcode image}^{*1} = \text{moduleHeight} \times \text{row}^{*2}$$

*1: Height of the barcode image = Length from the top of the barcode to the reference point

*2: row ≠ 0

(2) Width of the barcode image

When pdf417Symbol is **SII_PM_PDF417_STANDARD**:

$$\text{Width of the barcode image} = (17 \times \text{column}^{*1} + 69) \times \text{module size value}$$

*1: column ≠ 0

When pdf417Symbol is **SII_PM_PDF417_COMPACT**:


$$\text{Width of the barcode image} = (17 \times \text{column}^{*1} + 35) \times \text{module size value}$$

*1: column ≠ 0

Module Size Value

moduleSize	Module Size Value
SII_PM_PDF417_MODULE_WIDTH_2	2
SII_PM_PDF417_MODULE_WIDTH_3	3
SII_PM_PDF417_MODULE_WIDTH_4	4
SII_PM_PDF417_MODULE_WIDTH_5	5
SII_PM_PDF417_MODULE_WIDTH_6	6
SII_PM_PDF417_MODULE_WIDTH_7	7
SII_PM_PDF417_MODULE_WIDTH_8	8

B.1.3 printQRCode, printPageModeQRCode

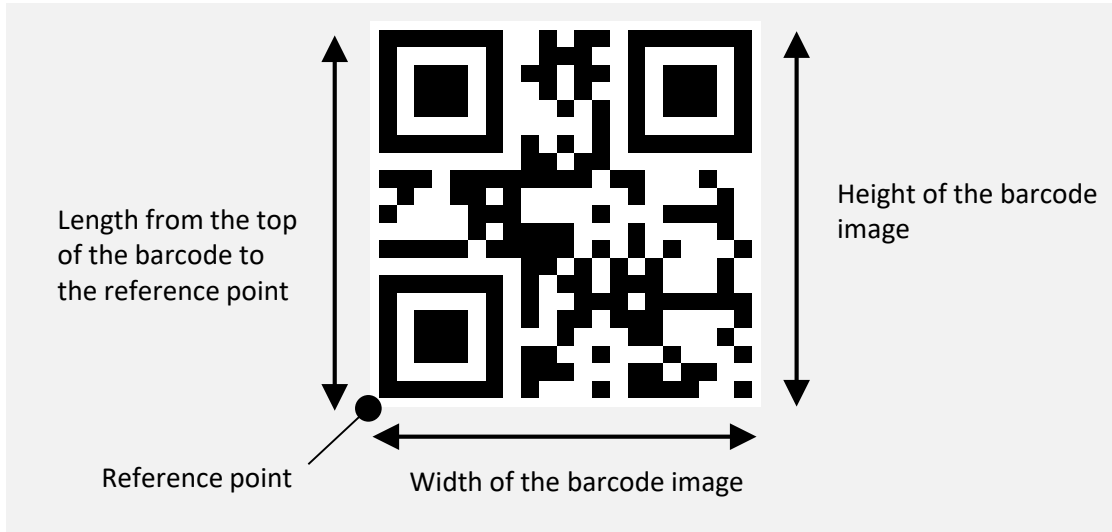

(1) Height and width of the barcode image

Height*¹ and width of the barcode image = $(4 \times \text{version}^2 + 17) \times \text{module size value}$


*1: Height of the barcode image = Length from the top of the barcode to the reference point

*2: The version is determined by the content of the barcode data and the error correction level.

Module Size Value

moduleSize	Module Size Value
SII_PM_QR_MODULE_SIZE_2	2
SII_PM_QR_MODULE_SIZE_3	3
SII_PM_QR_MODULE_SIZE_4	4
SII_PM_QR_MODULE_SIZE_5	5
SII_PM_QR_MODULE_SIZE_6	6
SII_PM_QR_MODULE_SIZE_7	7
SII_PM_QR_MODULE_SIZE_8	8
SII_PM_QR_MODULE_SIZE_9	9
SII_PM_QR_MODULE_SIZE_10	10
SII_PM_QR_MODULE_SIZE_11	11
SII_PM_QR_MODULE_SIZE_12	12
SII_PM_QR_MODULE_SIZE_13	13
SII_PM_QR_MODULE_SIZE_14	14
SII_PM_QR_MODULE_SIZE_15	15
SII_PM_QR_MODULE_SIZE_16	16

B.1.4 printDataMatrix, printPageModeDataMatrix

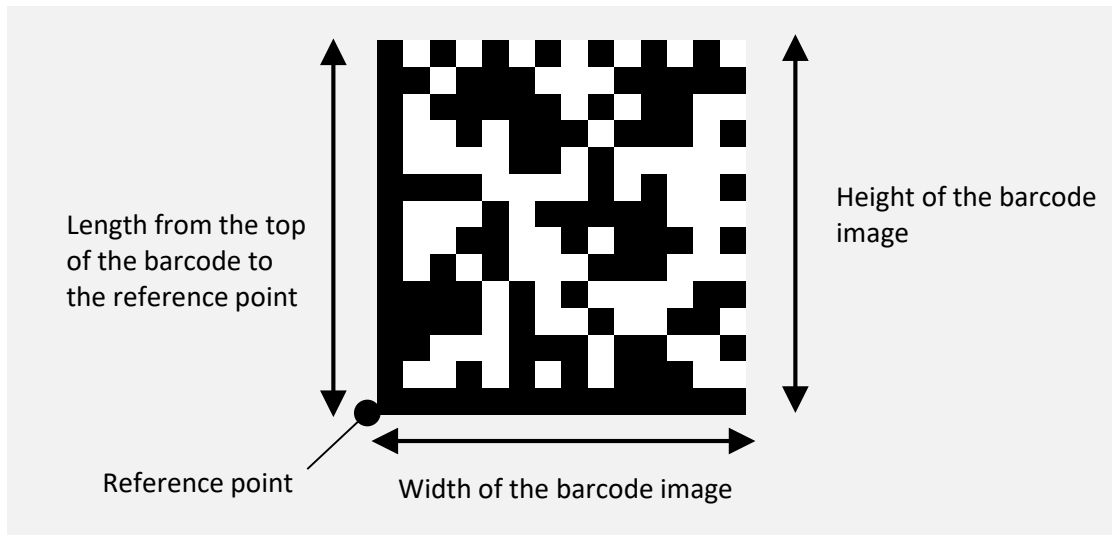

(1) Height and width of the barcode image

Height of the barcode image = number of vertical module × module size value

Width of the barcode image = number of horizontal module × module size value


dataMatrixModule	Number of Vertical Module	Number of Horizontal Module
SII_PM_DATA_MATRIX_10_10	10	10
SII_PM_DATA_MATRIX_12_12	12	12
SII_PM_DATA_MATRIX_14_14	14	14
SII_PM_DATA_MATRIX_16_16	16	16
SII_PM_DATA_MATRIX_18_18	18	18
SII_PM_DATA_MATRIX_20_20	20	20
SII_PM_DATA_MATRIX_22_22	22	22
SII_PM_DATA_MATRIX_24_24	23	23
SII_PM_DATA_MATRIX_26_26	26	26
SII_PM_DATA_MATRIX_32_32	32	32
SII_PM_DATA_MATRIX_36_36	36	36
SII_PM_DATA_MATRIX_40_40	40	40
SII_PM_DATA_MATRIX_44_44	44	44
SII_PM_DATA_MATRIX_48_48	48	48
SII_PM_DATA_MATRIX_52_52	52	52
SII_PM_DATA_MATRIX_64_64	64	64
SII_PM_DATA_MATRIX_72_72	72	72
SII_PM_DATA_MATRIX_80_80	80	80
SII_PM_DATA_MATRIX_88_88	88	88
SII_PM_DATA_MATRIX_96_96	96	96
SII_PM_DATA_MATRIX_104_104	104	104
SII_PM_DATA_MATRIX_120_120	120	120

dataMatrixModule	Number of Vertical Module	Number of Horizontal Module
SII_PM_DATA_MATRIX_132_132	132	132
SII_PM_DATA_MATRIX_144_144	144	144
SII_PM_DATA_MATRIX_8_18	8	18
SII_PM_DATA_MATRIX_8_32	8	32
SII_PM_DATA_MATRIX_12_26	12	26
SII_PM_DATA_MATRIX_12_36	12	36
SII_PM_DATA_MATRIX_16_36	16	36
SII_PM_DATA_MATRIX_16_48	16	48

Module Size Value

moduleSize	Module Size Value
SII_PM_DATAMATRIX_MODULE_SIZE_2	2
SII_PM_DATAMATRIX_MODULE_SIZE_3	3
SII_PM_DATAMATRIX_MODULE_SIZE_4	4
SII_PM_DATAMATRIX_MODULE_SIZE_5	5
SII_PM_DATAMATRIX_MODULE_SIZE_6	6
SII_PM_DATAMATRIX_MODULE_SIZE_7	7
SII_PM_DATAMATRIX_MODULE_SIZE_8	8
SII_PM_DATAMATRIX_MODULE_SIZE_9	9
SII_PM_DATAMATRIX_MODULE_SIZE_10	10
SII_PM_DATAMATRIX_MODULE_SIZE_11	11
SII_PM_DATAMATRIX_MODULE_SIZE_12	12
SII_PM_DATAMATRIX_MODULE_SIZE_13	13
SII_PM_DATAMATRIX_MODULE_SIZE_14	14
SII_PM_DATAMATRIX_MODULE_SIZE_15	15
SII_PM_DATAMATRIX_MODULE_SIZE_16	16

B.1.5 printMaxicode, printPageModeMaxicode

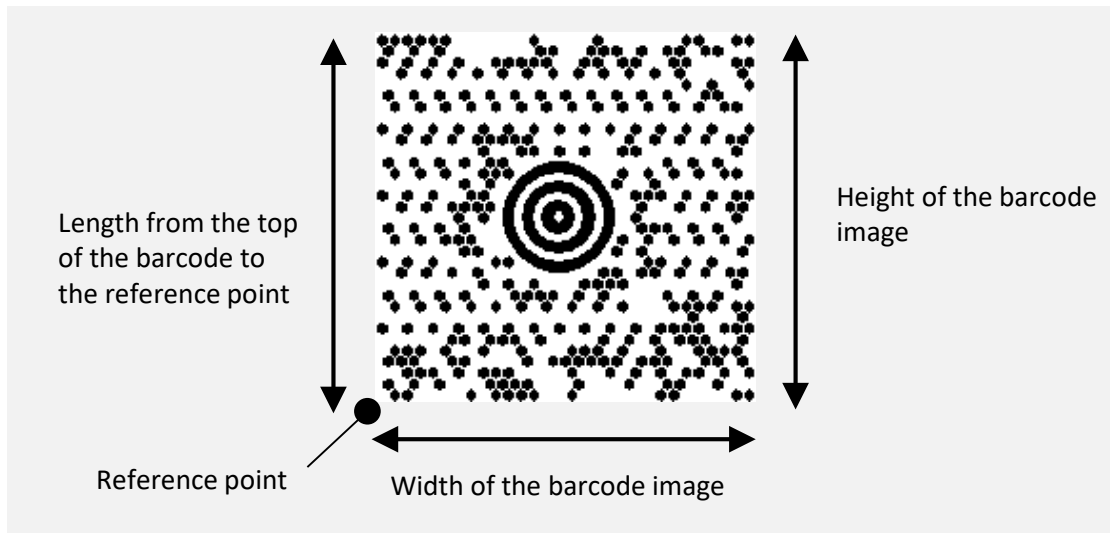

(1) Height of the barcode image


Height of the barcode image*1 = 200

*1: Height of the barcode image = Length from the top of the barcode to the reference point

(2) Width of the barcode image

Width of the barcode image = 210

B.1.6 printGS1DataBarStacked, printPageModeGS1DataBarStacked

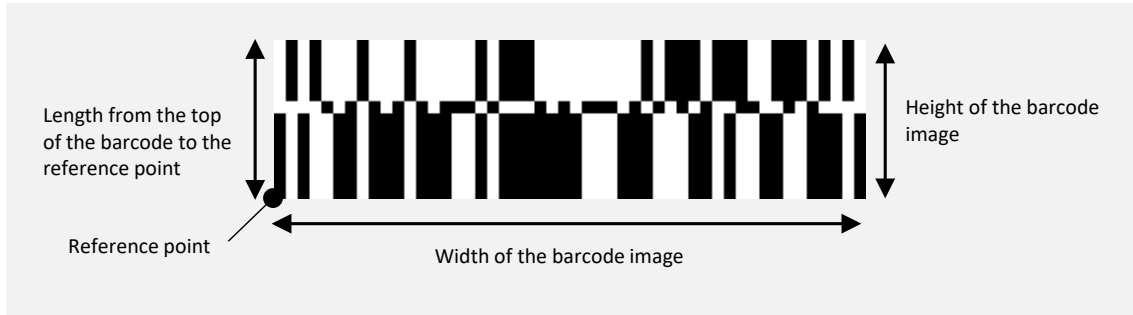

(1) Height and width of the barcode image

Height of the barcode image*1 = $13 \times \text{module size value}$


*1: Height of the barcode image = Length from the top of the barcode to the reference point

Width of the barcode image = $50 \times \text{module size value}$

Module Size Value

moduleSize	Module Size Value
SII_PM_GS1DATABAR_MODULE_SIZE_2	2
SII_PM_GS1DATABAR_MODULE_SIZE_3	3
SII_PM_GS1DATABAR_MODULE_SIZE_4	4
SII_PM_GS1DATABAR_MODULE_SIZE_5	5
SII_PM_GS1DATABAR_MODULE_SIZE_6	6
SII_PM_GS1DATABAR_MODULE_SIZE_7	7
SII_PM_GS1DATABAR_MODULE_SIZE_8	8
SII_PM_GS1DATABAR_MODULE_SIZE_9	9
SII_PM_GS1DATABAR_MODULE_SIZE_10	10
SII_PM_GS1DATABAR_MODULE_SIZE_11	11
SII_PM_GS1DATABAR_MODULE_SIZE_12	12
SII_PM_GS1DATABAR_MODULE_SIZE_13	13
SII_PM_GS1DATABAR_MODULE_SIZE_14	14
SII_PM_GS1DATABAR_MODULE_SIZE_15	15
SII_PM_GS1DATABAR_MODULE_SIZE_16	16

B.1.7 `printGS1DataBarStackedOmnidirectional,`
`printPageModeGS1DataBarStackedOmnidirectional`

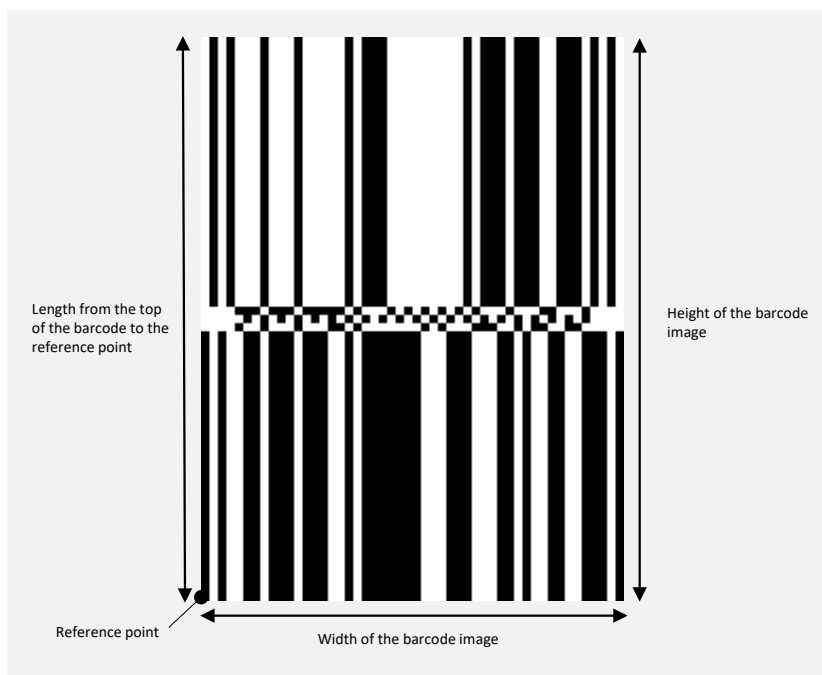

(1) Height and width of the barcode image

Height of the barcode image^{*1} = (moduleHeight × 2 + 3) × module size value


*1: Height of the barcode image = Length from the top of the barcode to the reference point

Width of the barcode image = 50 × module size value

Module Size Value

moduleSize	Module Size Value
SII_PM_GS1DATABAR_MODULE_SIZE_2	2
SII_PM_GS1DATABAR_MODULE_SIZE_3	3
SII_PM_GS1DATABAR_MODULE_SIZE_4	4
SII_PM_GS1DATABAR_MODULE_SIZE_5	5
SII_PM_GS1DATABAR_MODULE_SIZE_6	6
SII_PM_GS1DATABAR_MODULE_SIZE_7	7
SII_PM_GS1DATABAR_MODULE_SIZE_8	8
SII_PM_GS1DATABAR_MODULE_SIZE_9	9
SII_PM_GS1DATABAR_MODULE_SIZE_10	10
SII_PM_GS1DATABAR_MODULE_SIZE_11	11
SII_PM_GS1DATABAR_MODULE_SIZE_12	12
SII_PM_GS1DATABAR_MODULE_SIZE_13	13
SII_PM_GS1DATABAR_MODULE_SIZE_14	14
SII_PM_GS1DATABAR_MODULE_SIZE_15	15
SII_PM_GS1DATABAR_MODULE_SIZE_16	16

B.1.8 `printGS1DataBarExpandedStacked,`
`printPageModeGS1DataBarExpandedStacked`

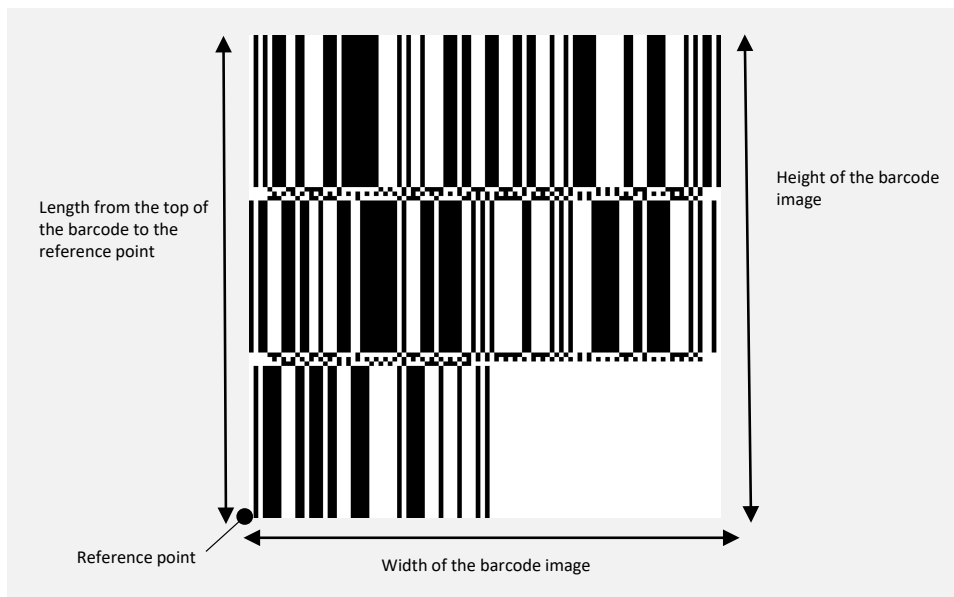

(1) Height and width of the barcode image

Height of the barcode image*1 = $((34 + 3) \times \text{number of row}^*2 + 34) \times \text{module size value}$

*1: Height of the barcode image = Length from the top of the barcode to the reference point


*2: The number of row is determined by the barcode data.

Width of the barcode image = $(4 + 49 \times \text{column} / 2) \times \text{module size value}$

Module Size Value

moduleSize	Module Size Value
SII_PM_GS1DATABAR_MODULE_SIZE_2	2
SII_PM_GS1DATABAR_MODULE_SIZE_3	3
SII_PM_GS1DATABAR_MODULE_SIZE_4	4
SII_PM_GS1DATABAR_MODULE_SIZE_5	5
SII_PM_GS1DATABAR_MODULE_SIZE_6	6
SII_PM_GS1DATABAR_MODULE_SIZE_7	7
SII_PM_GS1DATABAR_MODULE_SIZE_8	8
SII_PM_GS1DATABAR_MODULE_SIZE_9	9
SII_PM_GS1DATABAR_MODULE_SIZE_10	10
SII_PM_GS1DATABAR_MODULE_SIZE_11	11
SII_PM_GS1DATABAR_MODULE_SIZE_12	12
SII_PM_GS1DATABAR_MODULE_SIZE_13	13
SII_PM_GS1DATABAR_MODULE_SIZE_14	14
SII_PM_GS1DATABAR_MODULE_SIZE_15	15
SII_PM_GS1DATABAR_MODULE_SIZE_16	16

B.1.9 printAztecCode, printPageModeAztecCode

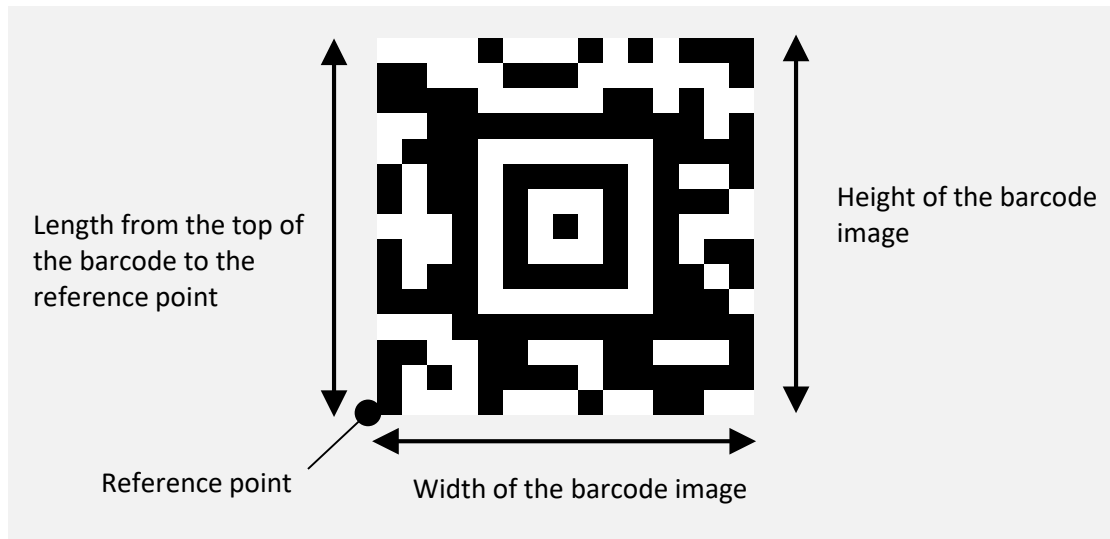

(1) Height and width of the barcode image

Height*1 and width of the barcode image = number of module size × module size value

*1: Height of the barcode image = Length from the top of the barcode to the reference point

Example: When `aztecSymbol` is `SII_PM_AZTECCODE_COMPACT` and `layer` is 1 and `moduleSize` is `SII_PM_AZTECCODE_MODULE_SIZE_6`:

Height and width of the barcode image = $15 \times 6 = 90$

Number of Module

aztecSymbol	layer	Number of Module
SII_PM_AZTECCODE_FULLRANGE	4	31
	5	37
	6	41
	7	45
	8	49
	9	53
	10	57
	11	61
	12	67
	13	71
	14	75
	15	79
	16	83
	17	87
	18	91
	19	95
	20	101
	21	105

aztecSymbol	layer	Number of Module
SII_PM_AZTECCODE_FULLRANGE	22	109
	23	113
	24	117
	25	121
	26	125
	27	131
	28	135
	29	139
	30	143
	31	147
	32	151
SII_PM_AZTECCODE_COMPACT	1	15
	2	19
	3	23
	4	27

Module Size Value

moduleSize	Module Size Value
SII_PM_AZTECCODE_MODULE_SIZE_2	2
SII_PM_AZTECCODE_MODULE_SIZE_3	3
SII_PM_AZTECCODE_MODULE_SIZE_4	4
SII_PM_AZTECCODE_MODULE_SIZE_5	5
SII_PM_AZTECCODE_MODULE_SIZE_6	6
SII_PM_AZTECCODE_MODULE_SIZE_7	7
SII_PM_AZTECCODE_MODULE_SIZE_8	8
SII_PM_AZTECCODE_MODULE_SIZE_9	9
SII_PM_AZTECCODE_MODULE_SIZE_10	10
SII_PM_AZTECCODE_MODULE_SIZE_11	11
SII_PM_AZTECCODE_MODULE_SIZE_12	12
SII_PM_AZTECCODE_MODULE_SIZE_13	13
SII_PM_AZTECCODE_MODULE_SIZE_14	14
SII_PM_AZTECCODE_MODULE_SIZE_15	15
SII_PM_AZTECCODE_MODULE_SIZE_16	16

Appendix C

Open Source Software License

This chapter describes the License of open source software used in the library.

C.1 MIT License

- **SSZipArchive**

Copyright (c) 2010-2012 Sam Soffes

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

C.2 Apache License 2.0

- **zxingify-objc**

Copyright 2012 ZXing authors

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.